

Child Size Easel Chalkboard



By **The Creative Mom**

Difficulty

Easy

This is a small, child size easel chalkboard. It is perfect for kids to play with and enjoy. It is a very simple build, using basic tools and knowledge. This would be a great build for a beginner.



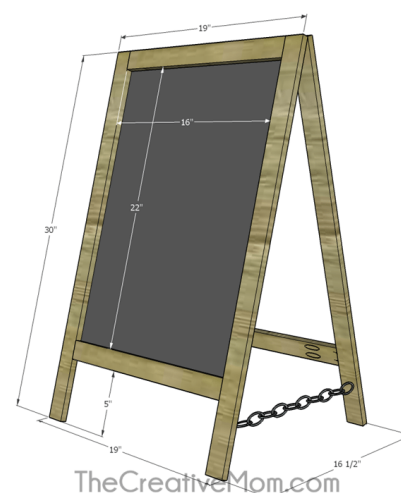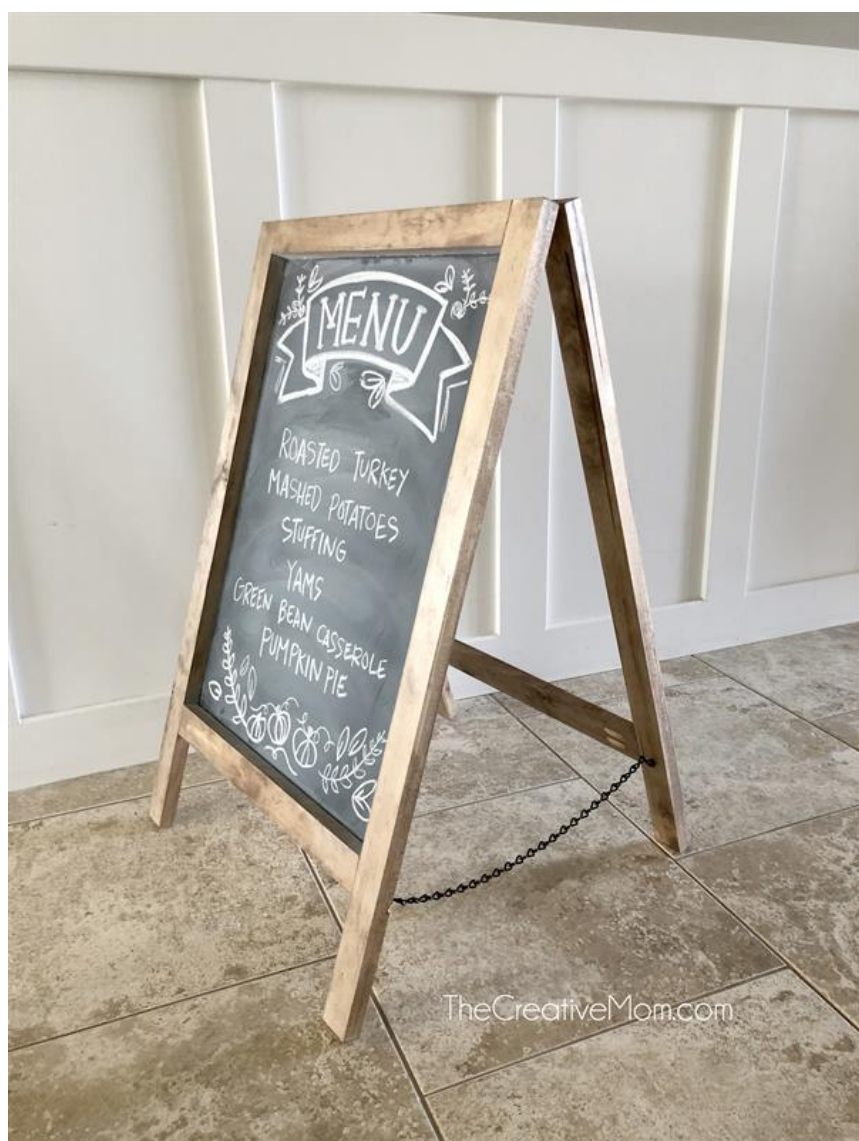

Tools

Kreg Tools

Wood Project Clamp - [Wood Project Clamp - 6"](#)
6

Other Tools

Miter Saw

Tape Measure

Drill (cordless)

Stapler

Sander

Materials

Wood Products

- 2** Board , 1x2 , 96"
- 1** Plywood , 1/4" Thick , Quarter Sheet

Hardware & Supplies

- 16** 1 1/4" Pocket Hole Screws
- 2** Chain Or Rope- About 16 Inches
- 1** Paint Or Stain
- 1** Chalkboard Paint



Cut List & Parts

- 4 Horizontal Boards , 16" (1x2)
- 4 Legs , 30" (1x2)
- 1 Chalkboard , 18" X 24" (1/4" Plywood)

Directions

1

Cut lumber, drill pocket holes

Using the cut list provided, cut the lumber. Drill pocket holes in each end of the 4 smaller (16") boards.

2

Sand, stain, or paint


You will need to prepare your chalkboard. You can either buy the chalkboard already finished, and cut to size, or paint a piece of plywood with chalkboard paint.

I found that it was easiest to finish my boards after I cut and drilled pocket holes, but before I started building. Sand, then paint or stain your wood. The stain used in the example photos is Minwax Special Walnut.

3

Build easel frames


Using wood glue and 1 1/4" pocket hole screws, attach the smaller (16") boards to the larger (30") boards to create a frame. One board will be flush with the ends of the legs, and the other will be 5" from the ends. Build TWO of these.

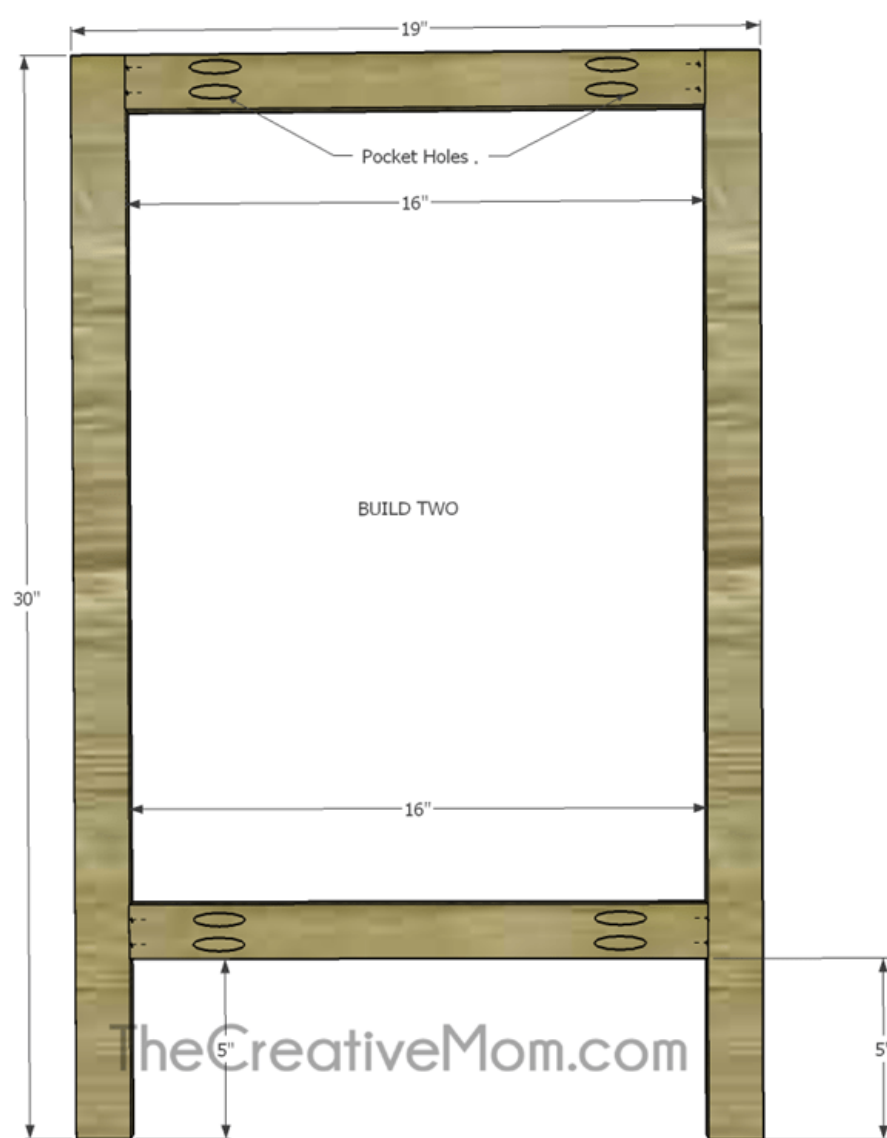

4

Attach Chalkboard

Before this step, you should have prepared your chalkboard (18" x 24"). You can either buy the chalkboard already finished, and cut to size, or paint a piece of plywood with chalkboard paint. Using wood glue and staples, attach your chalkboard to the backside of one of your frames. Make sure you put the front of the chalkboard facing out, and attach from behind.

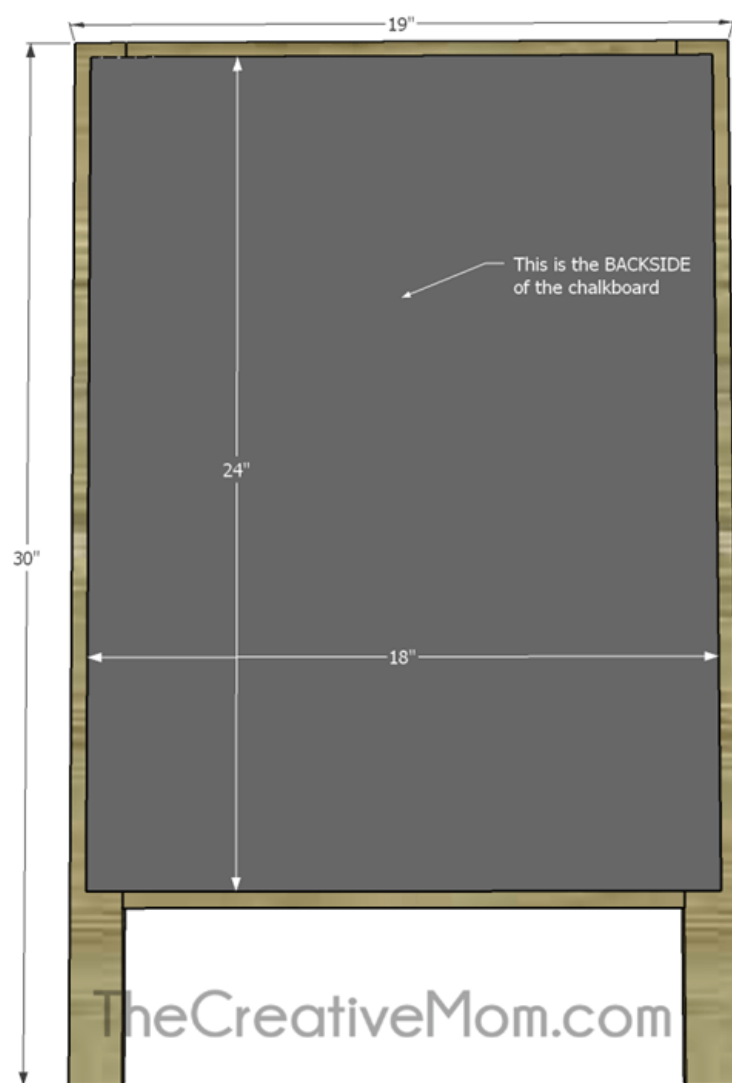

5

Add hinges

Add hinges to the tops of your frames, about 3 1/2 inches from each side.



6**Add chain or rope**

To prevent the chalkboard from falling, attach chain or rope to the legs. You will need one chain for each side of your easel. You can make it as long or as short as you want. My chain was 16 inches long.



7**Finish**

Fill or plug pocket holes, if desired. Enjoy!



TheCreativeMom.com