


# Upholstered Top Storage Coffee Table

By **lfrost**

Difficulty

Moderate

Upholster top storage coffee table. 30" wide x 48" long x 19" high. Knock-off of a storage coffee table constructed for approx. \$125.00 rather than the \$999.00 one that our daughter liked for her living room.

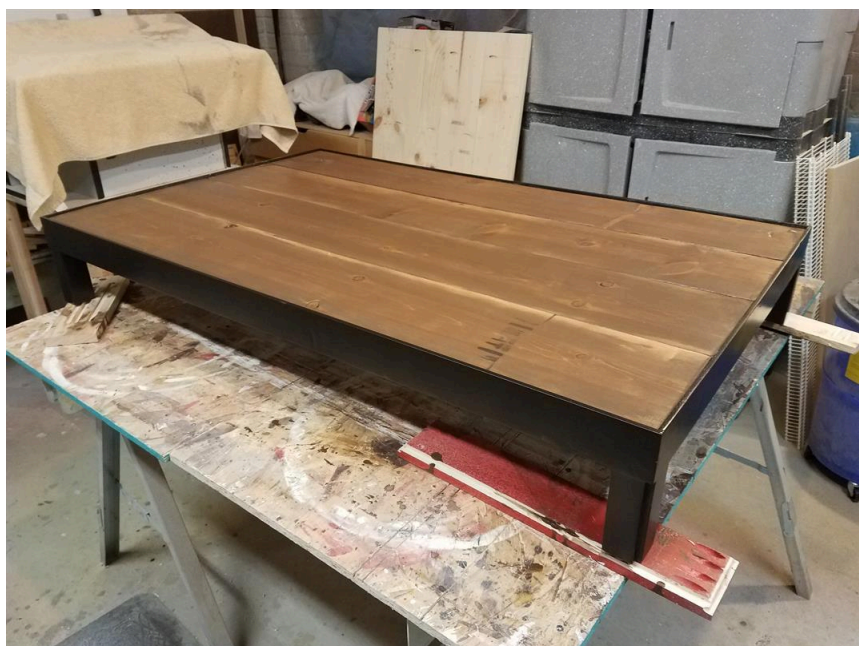









# Tools

## Kreg Tools



[Kreg® Pocket-Hole Jig 720](#)

## Other Tools

Miter Saw

Square

Table Saw

Tape Measure

Drill (cordless)

Nail Gun

Stapler

Sander

# Materials

## Wood Products

**2** Board , 2x2 , 96"

**2** Board , 1x12 , 96"

**8** Board , 1x8 , 48"


## Hardware & Supplies

**1** Pair - Rockler 6" Medium-Duty Quiet Action Lid Support

**1** 30" Continuous Hinge

# Cut List & Parts

- 2 Box Part , 13/16" X 11 1/4" X 96"
- 8 Top And Bottom Parts , 3/4" X 7 1/4"" X 48"
- 2 Base Parts , 1 1/2" X 1 1/2" X 96"

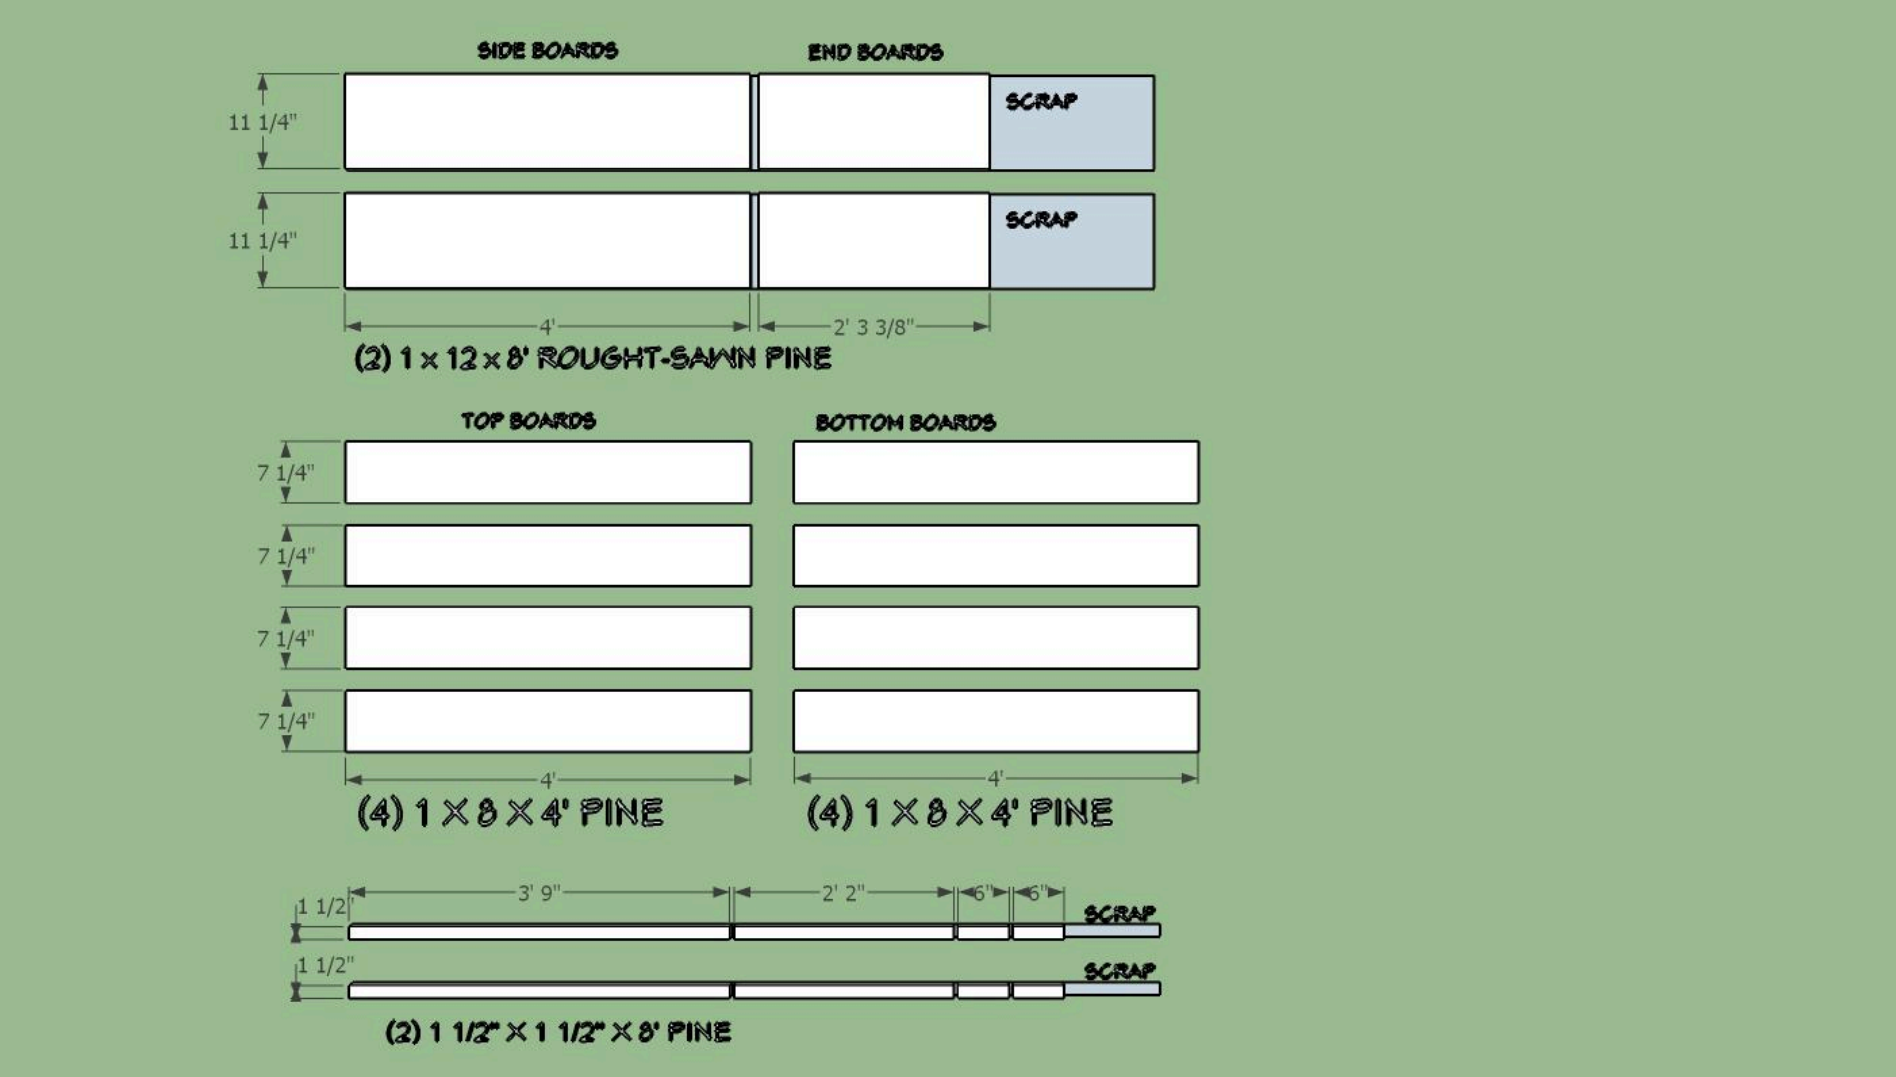


# Directions

1

## Drill holes in top and bottom board

Drill holes for 1 1/4" pocket hole screws as shown to create the top and bottom of the coffee table storage box and assemble the panels as shown

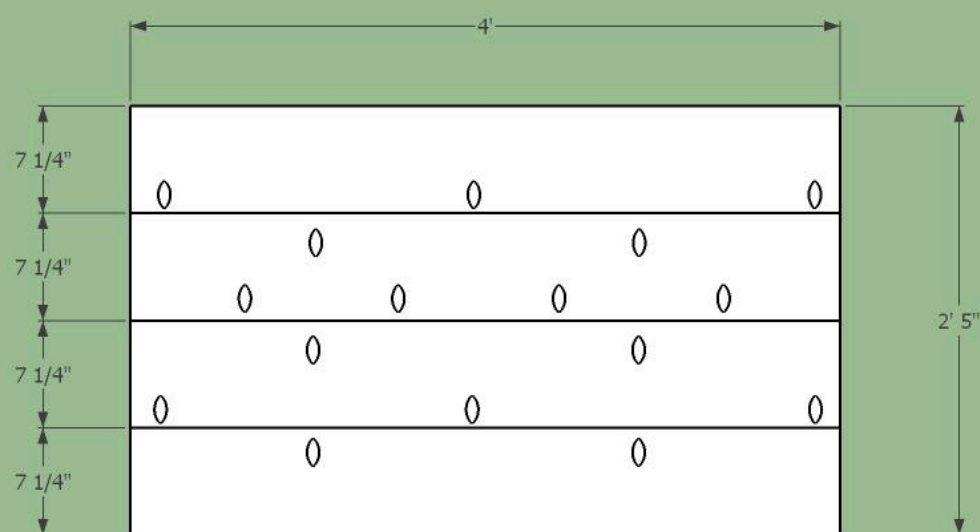

TOP AND BOTTOM

2

## Drill holes in side and end boards

Drill holes for 1 1/4" pocket hole screws as shown on the side and end boards




3

## Assemble the side and end boards


Attach the side and end boards together with 1 1/4" pocket hole screws and then attach the end assembly to the side assemblies to create the box as shown with 1 1/4" pocket hole screws

It is recommended that you stain and finish the box at this time.

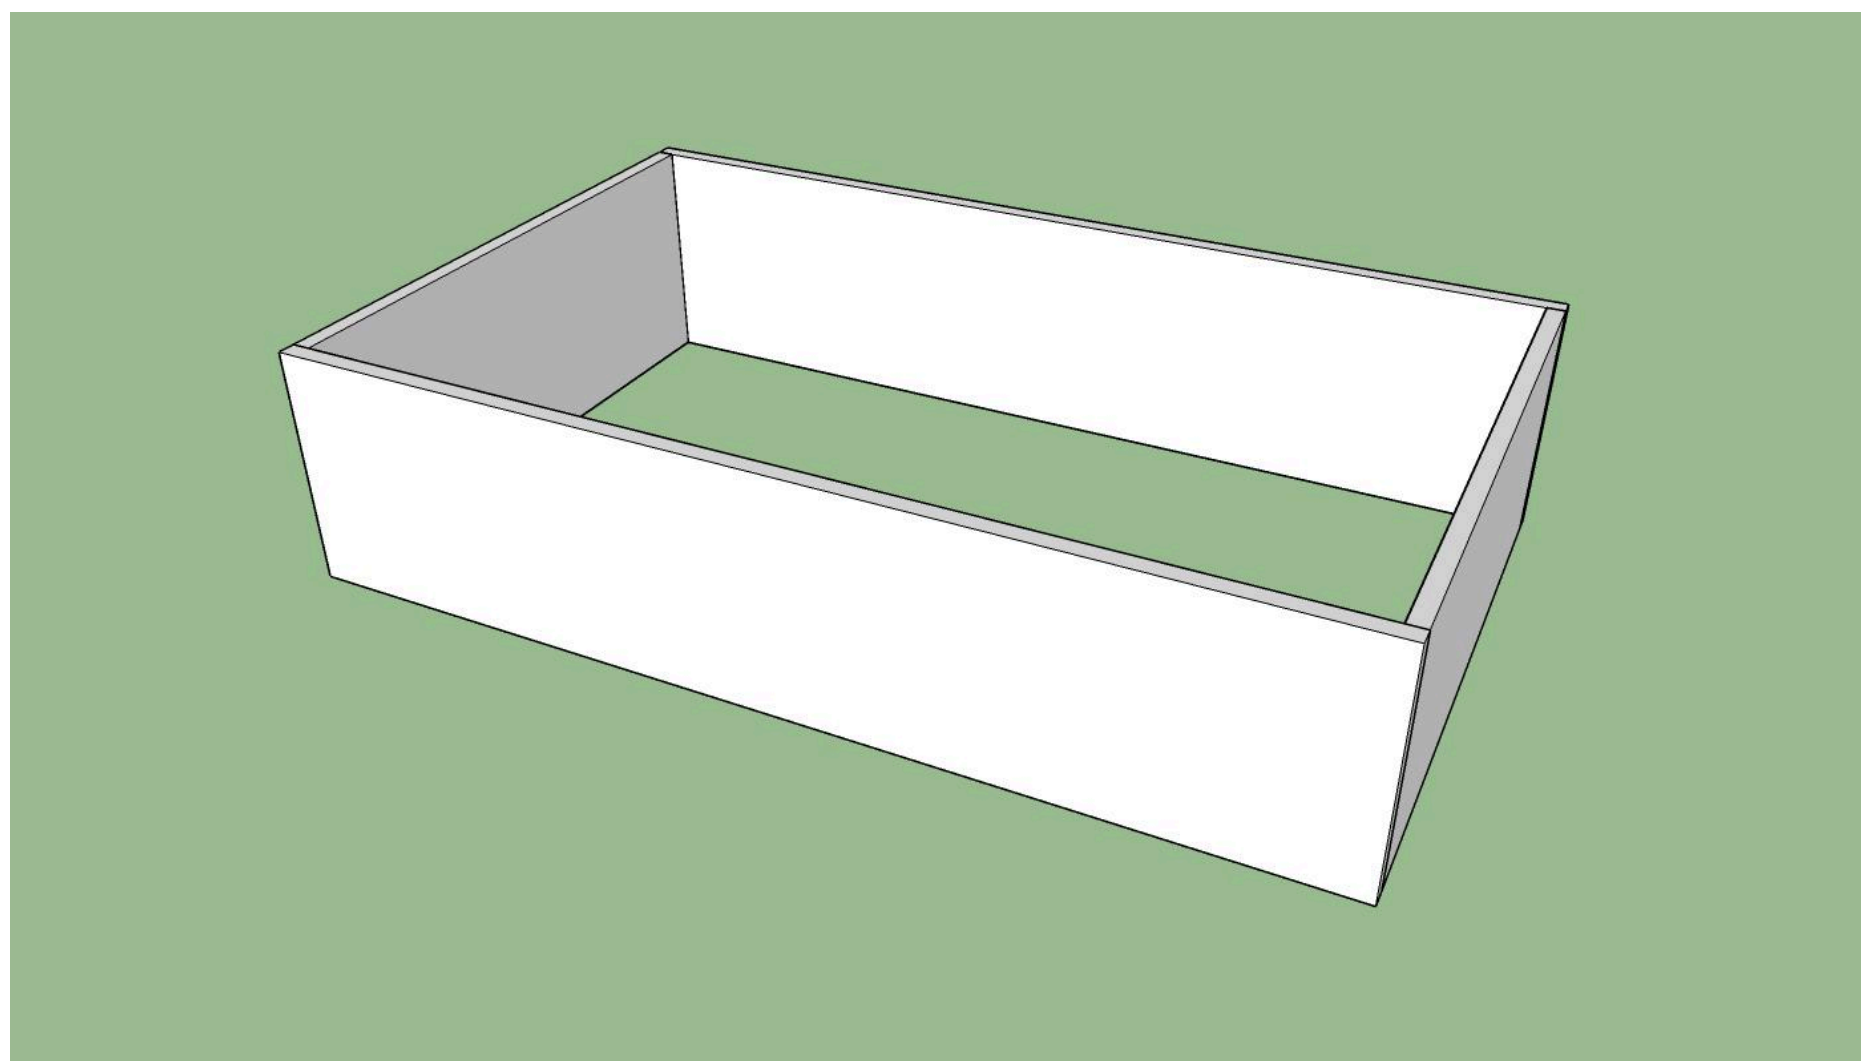

**4****Assemble the base components**


Assemble the base utilizing 1 1/4" pocket hole screws

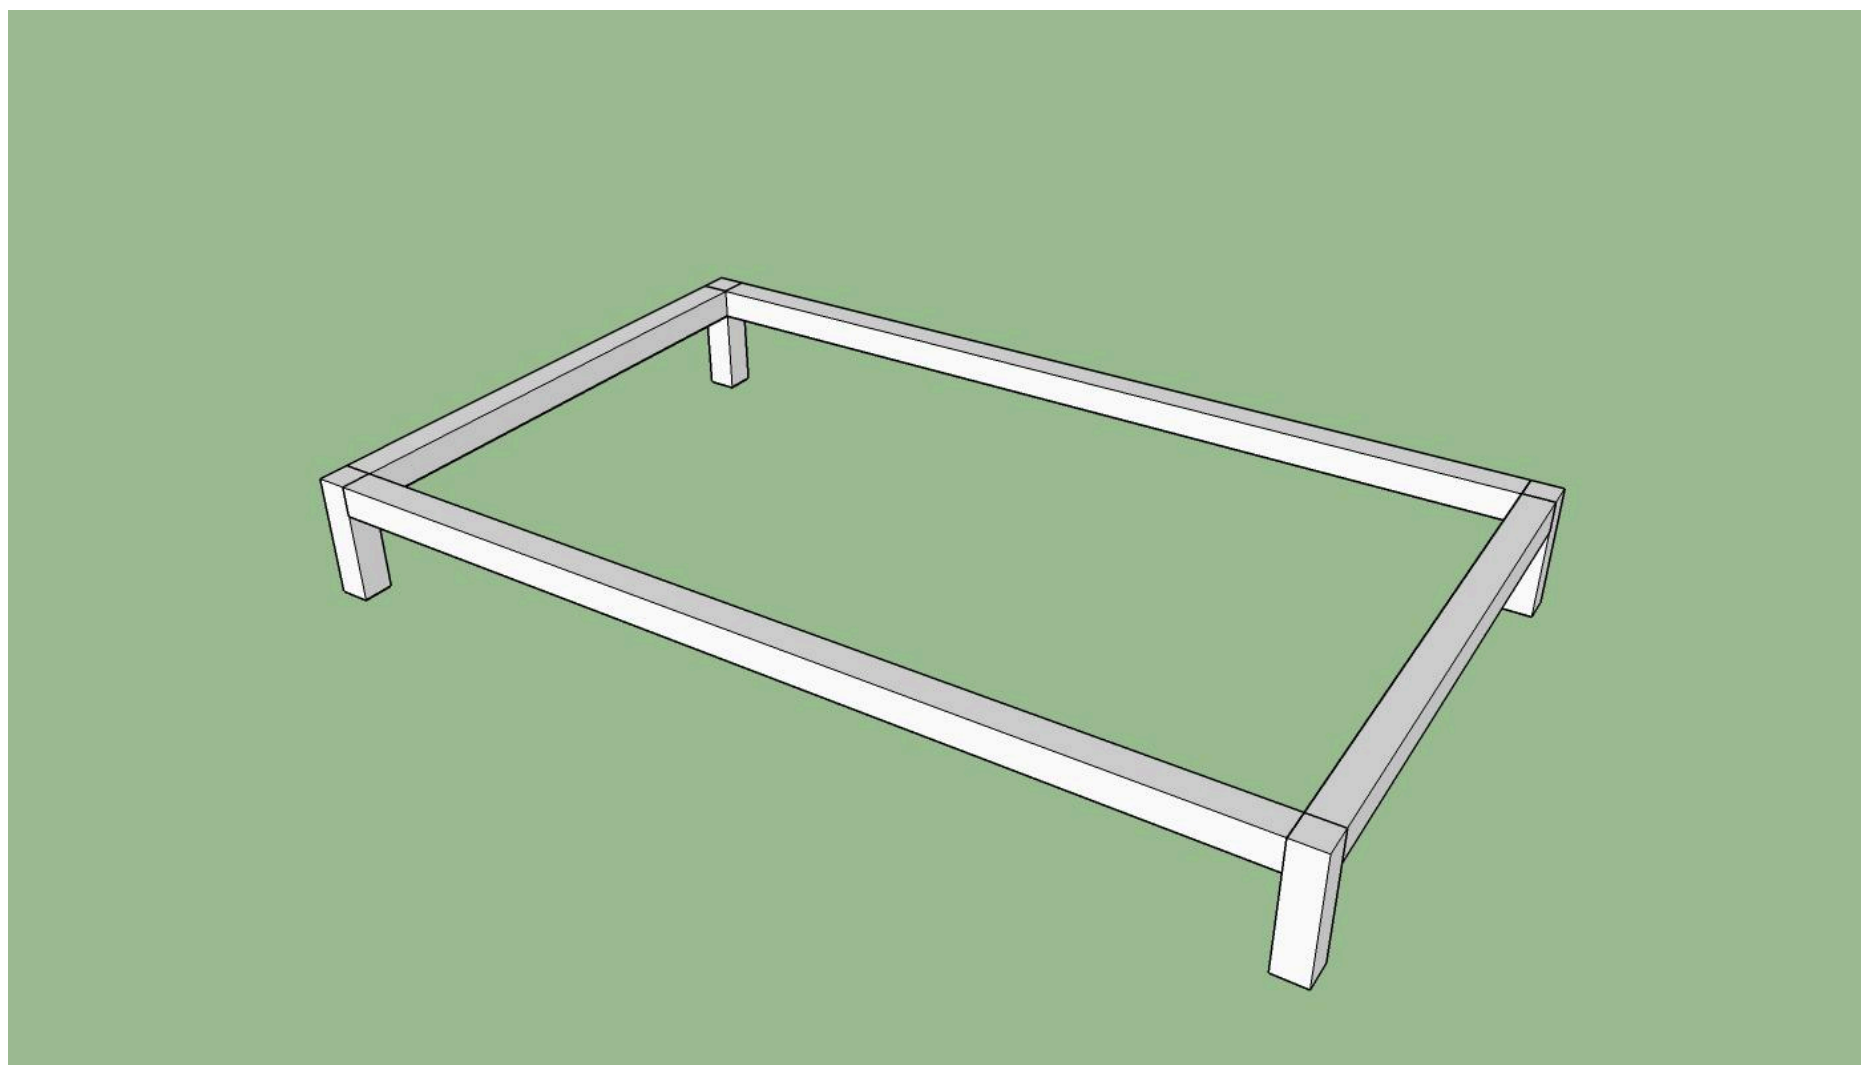**5****Add trim pieces to the base**

Add 2 1/2" high x 1/4" horizontal trim pieces and 1 1/2" wide x 4 1/2" high trim pieces to each leg.

These trim pieces hide the bottom panel and give the base the appearance as being made of metal.

It is recommended that you paint the base assembly at this time.

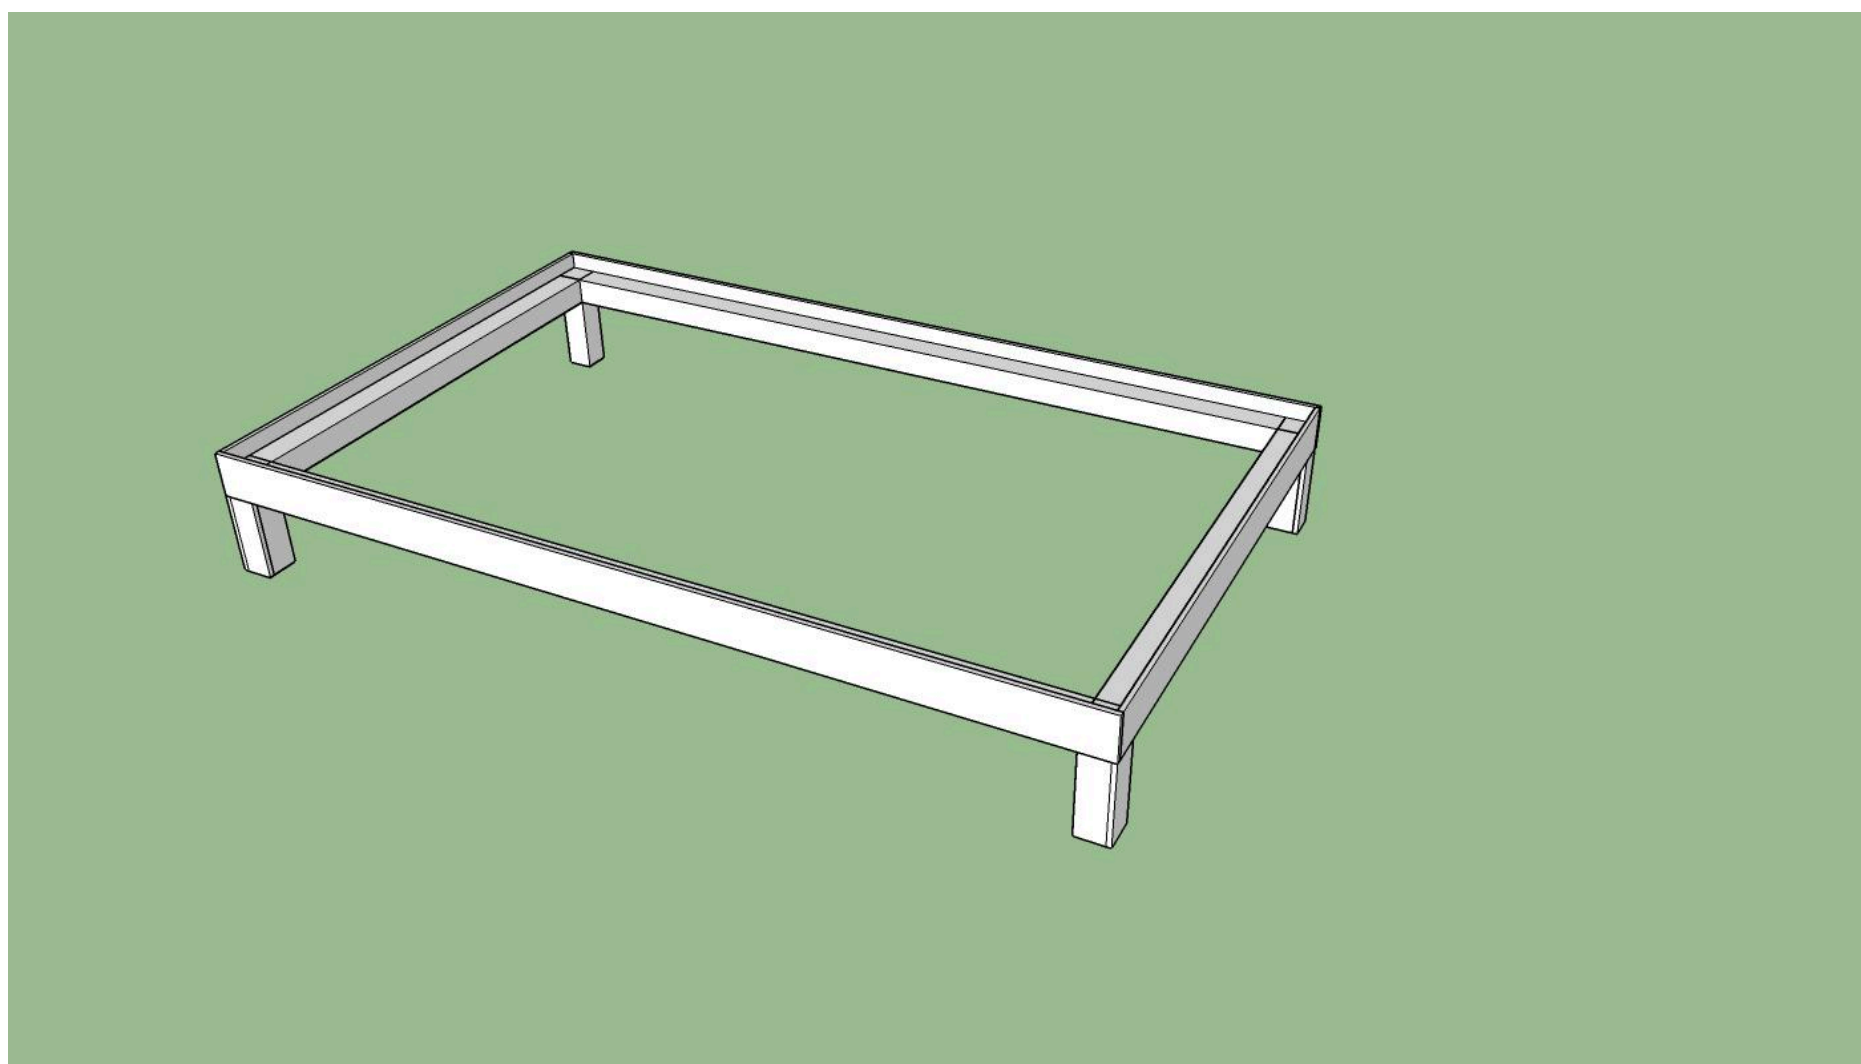




**6****Add bottom assembly to base**

It is recommended that you stain and finish the bottom assembly prior to installing on the base


Install the bottom assembly to the base.

Utilize 1 1/2" nails to attach to the base.

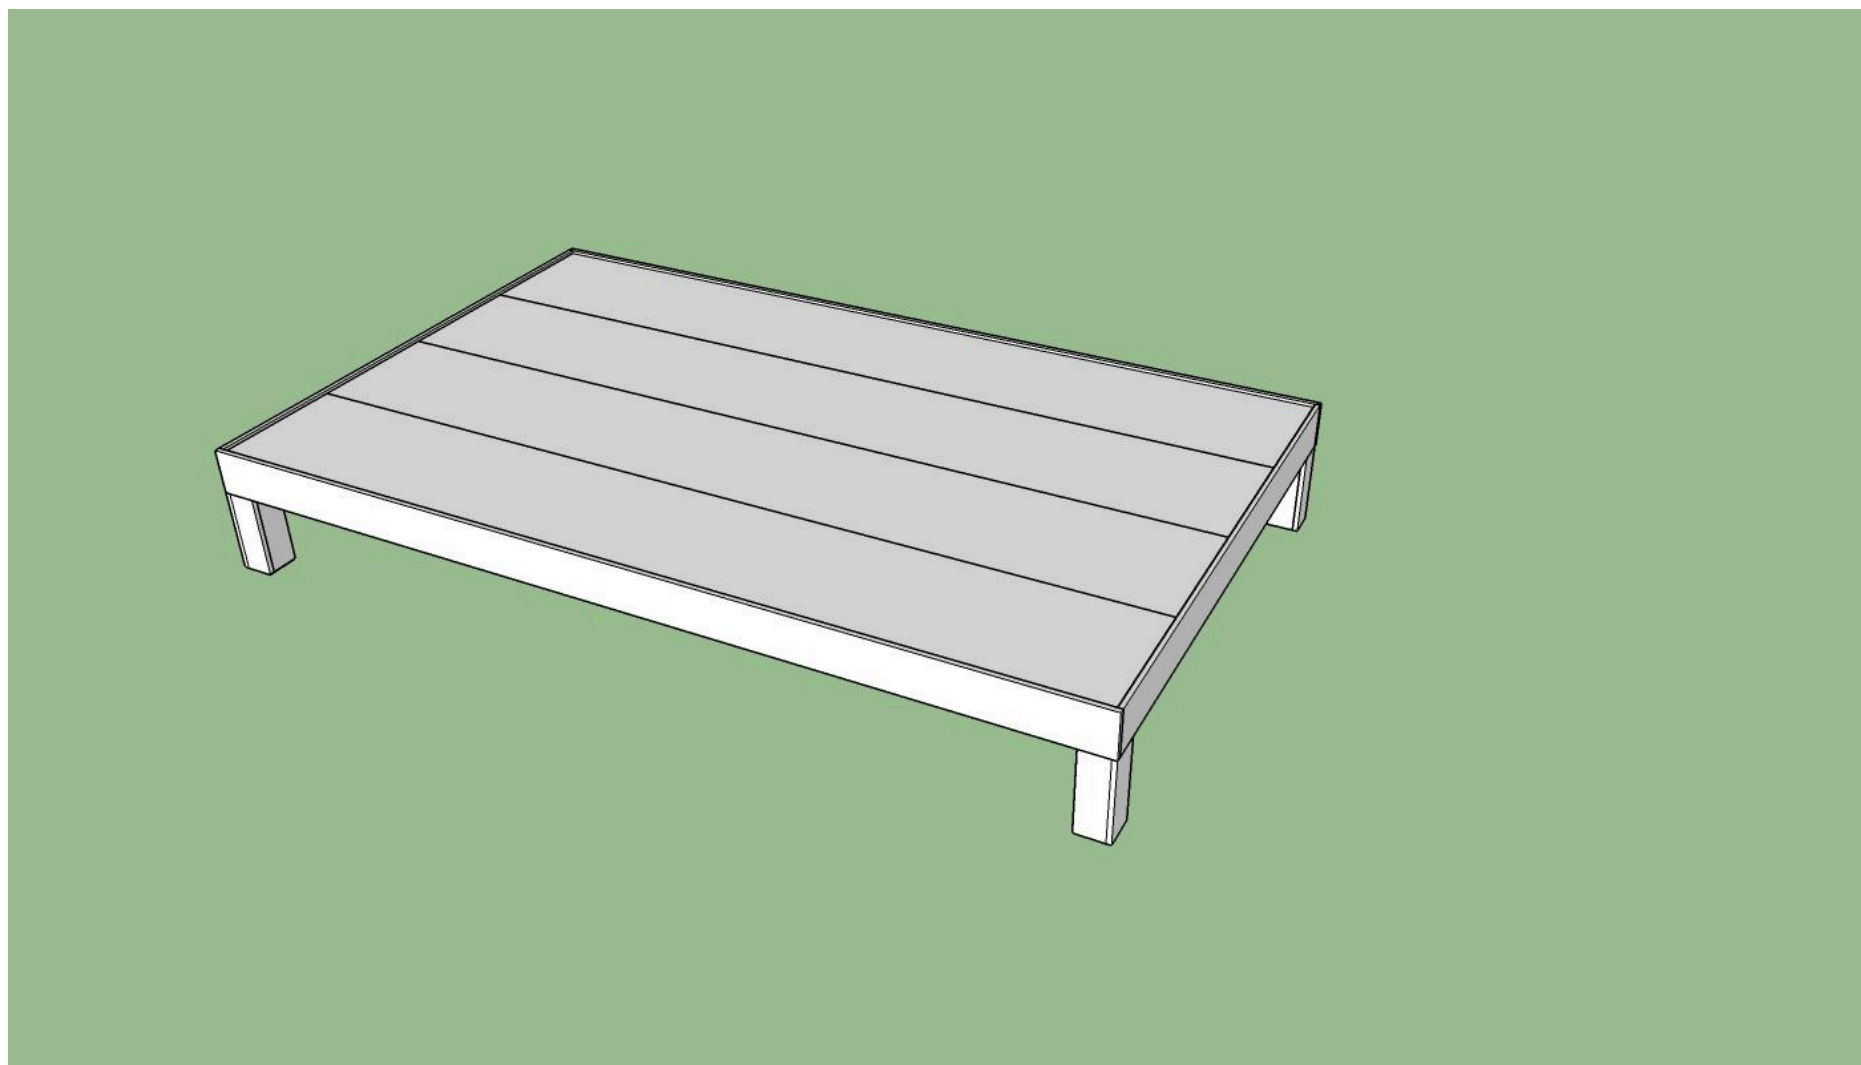


**7****Add the box assembly to the base**

Screw the box assembly thru the bottom boards into the base assembly with 1 1/4" pocket hole screws

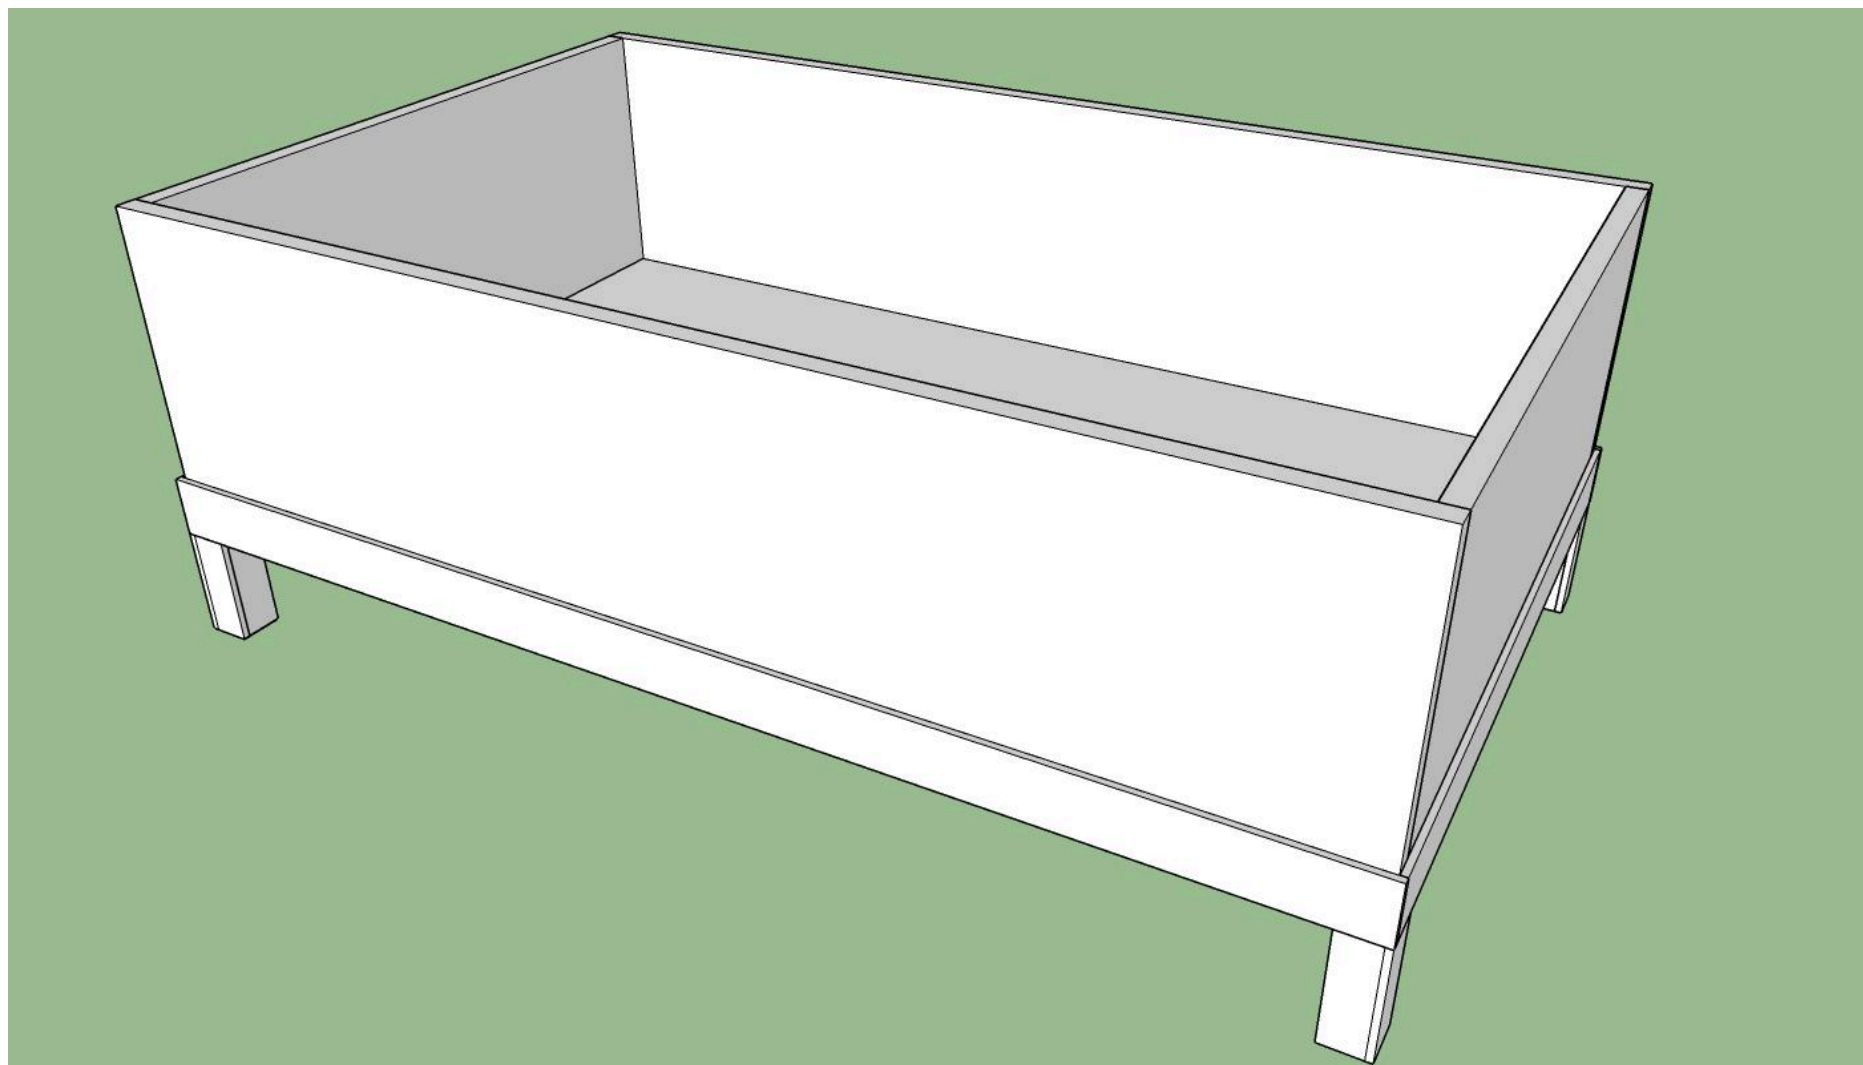**8****Install pad and fabric**

Spray glue the foam to the top assembly. Add a layer of fleece over the foam and staple to the top edges. Install fabric and staple to the inside of the top assembly. Staple a piece of fabric on the inside of the lid to hide the top board assembly.

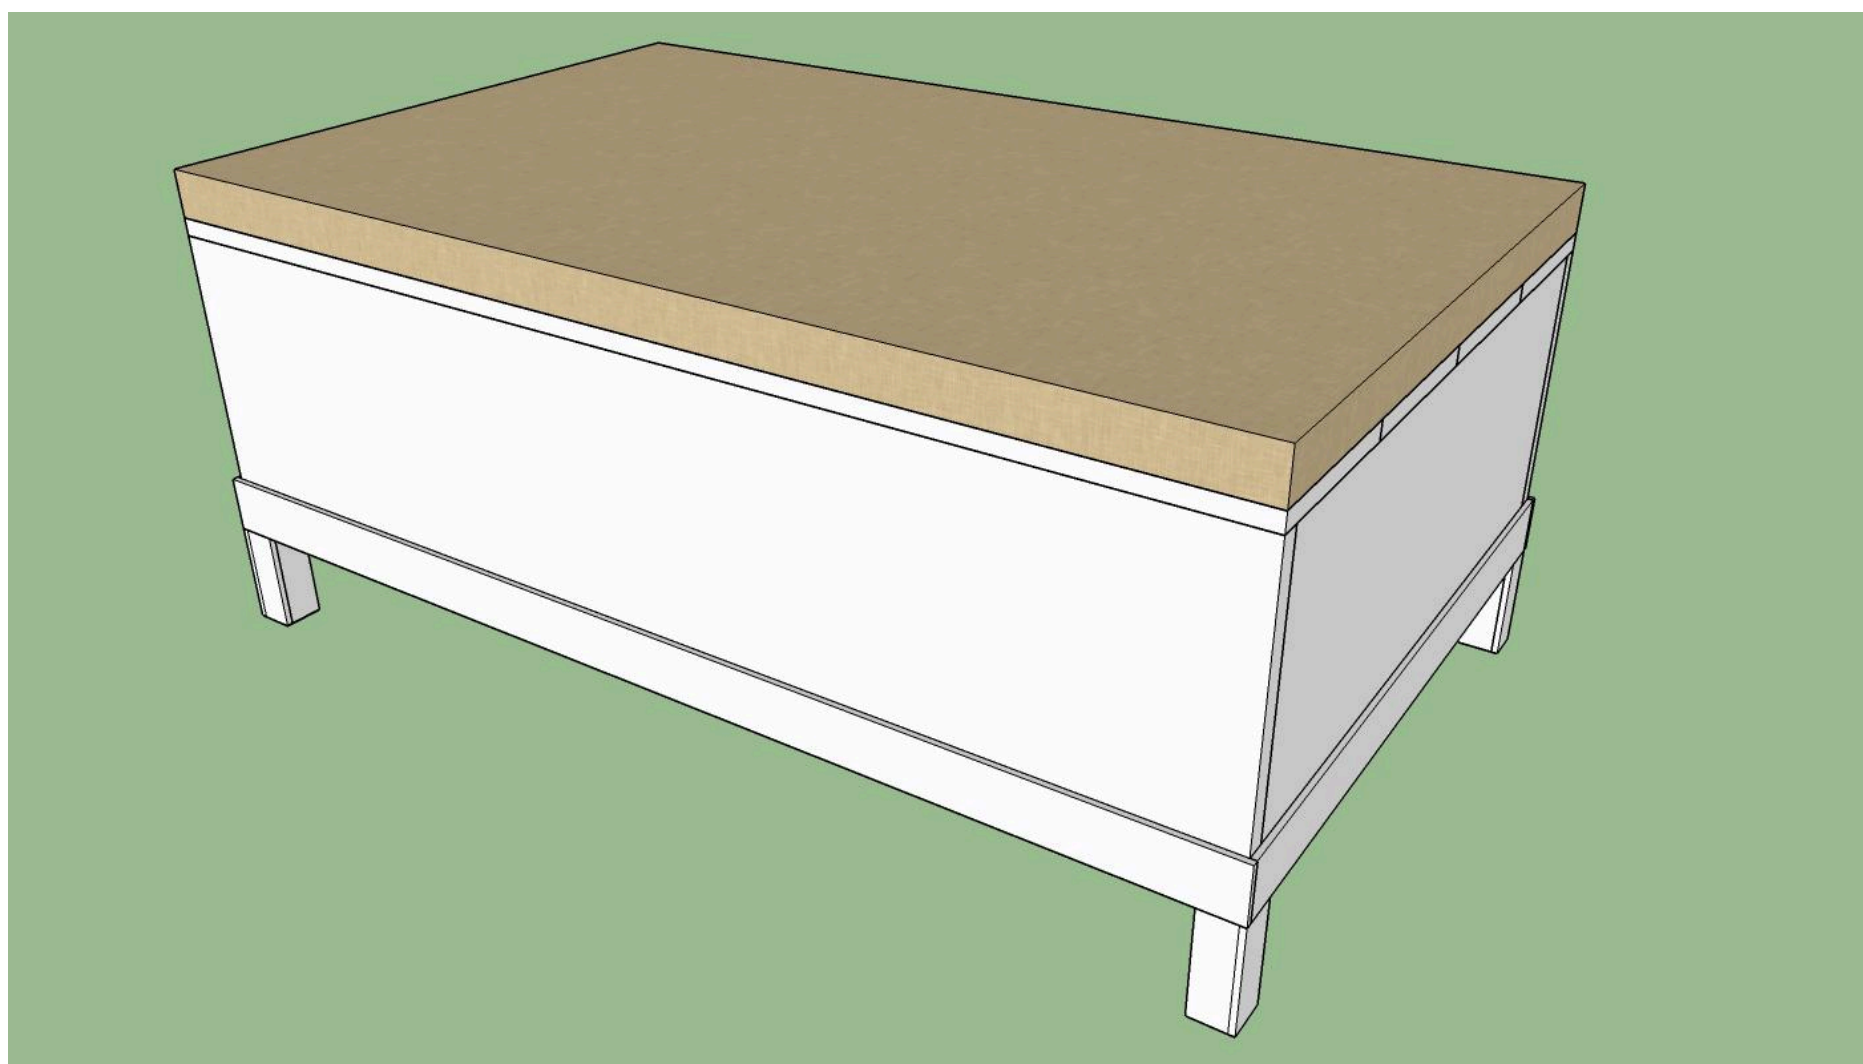

9

## Install hinges

Install the top assembly to the box with a 30" continuous hinge and a lid support hinge at each end.

---