

Fluted Bathroom Vanity

By **Built by Bec Designs**

Difficulty

Moderate

Want to bring your building skills up a level? Try this vanity build!





Tools

Kreg Tools

- Kreg®
Pocket-Hole Jig 720PRO
[Kreg® Pocket-Hole Jig 720PRO](#)
- Zinc
Pocket-Hole Screws
[Zinc Pocket-Hole Screws](#)
- Concealed
Hinge Jig
[Concealed Hinge Jig](#)
- Concealed
Hinge Jig
[Concealed Hinge Jig](#)

Other Tools

- Table saw
- Router
- Nail Gun
- Drill
- Sander

Materials

Wood Products

- 60 3/4" Thick Wood , Board Feet

Hardware & Supplies

- 50 1 1/4" Pocket Hole Screws
- 50 1 1/2" Brad Nails
- Wood Glue
- Variation Of 80, 120, 150 And 220 Sandpaper
- Stain Of Choice
- CA Glue
- Roundover Bit
- Triple Beaded Bit
- 4 Inset Door Hinges

Cut List & Parts

- 2** Sides Of Cabinet , 35"x19.75"x.75"
- 1** Bottom Of Cabinet , 25.5"x20.5"x.75"
- 3** Face Frame Center , 25.5"x1.5"x.75"
- 2** Face Frame Sides , 35"x1.5"x.75"
- 1** Fluting Detail , 25.5"x3.75"x.75"
- 2** Doors , 24"x12.875"x.75"
- 1** Baseboard Front , 29.25"x4.5"x.75"
- 2** Baseboard Sides , 21.5"x4.5"x.75"
- 8** Door Trim , .25"x.25"x.25"
- 1** Upper Trim Front , 30.25"x.25"x.50"
- 2** Upper Trim Sides , 22"x.50"x.25"

Directions

1**1**


Cut and attach the side panels together using wood glue and 1 1/4" pocket hole screws.



- 2** 2
Cut the panel to size using a table saw, track saw or circular saw.
-

- 3** 3
Attach the bottom panel of the cabinet to the sides of the cabinet using wood glue and 1 1/4" pocket hole screws. Make sure the bottom of the cabinet is 3.5" inches off the floor.
-

- 4** 4
Cut the face frame to size and attach together using 1 1/4" pocket hole screws and wood glue.

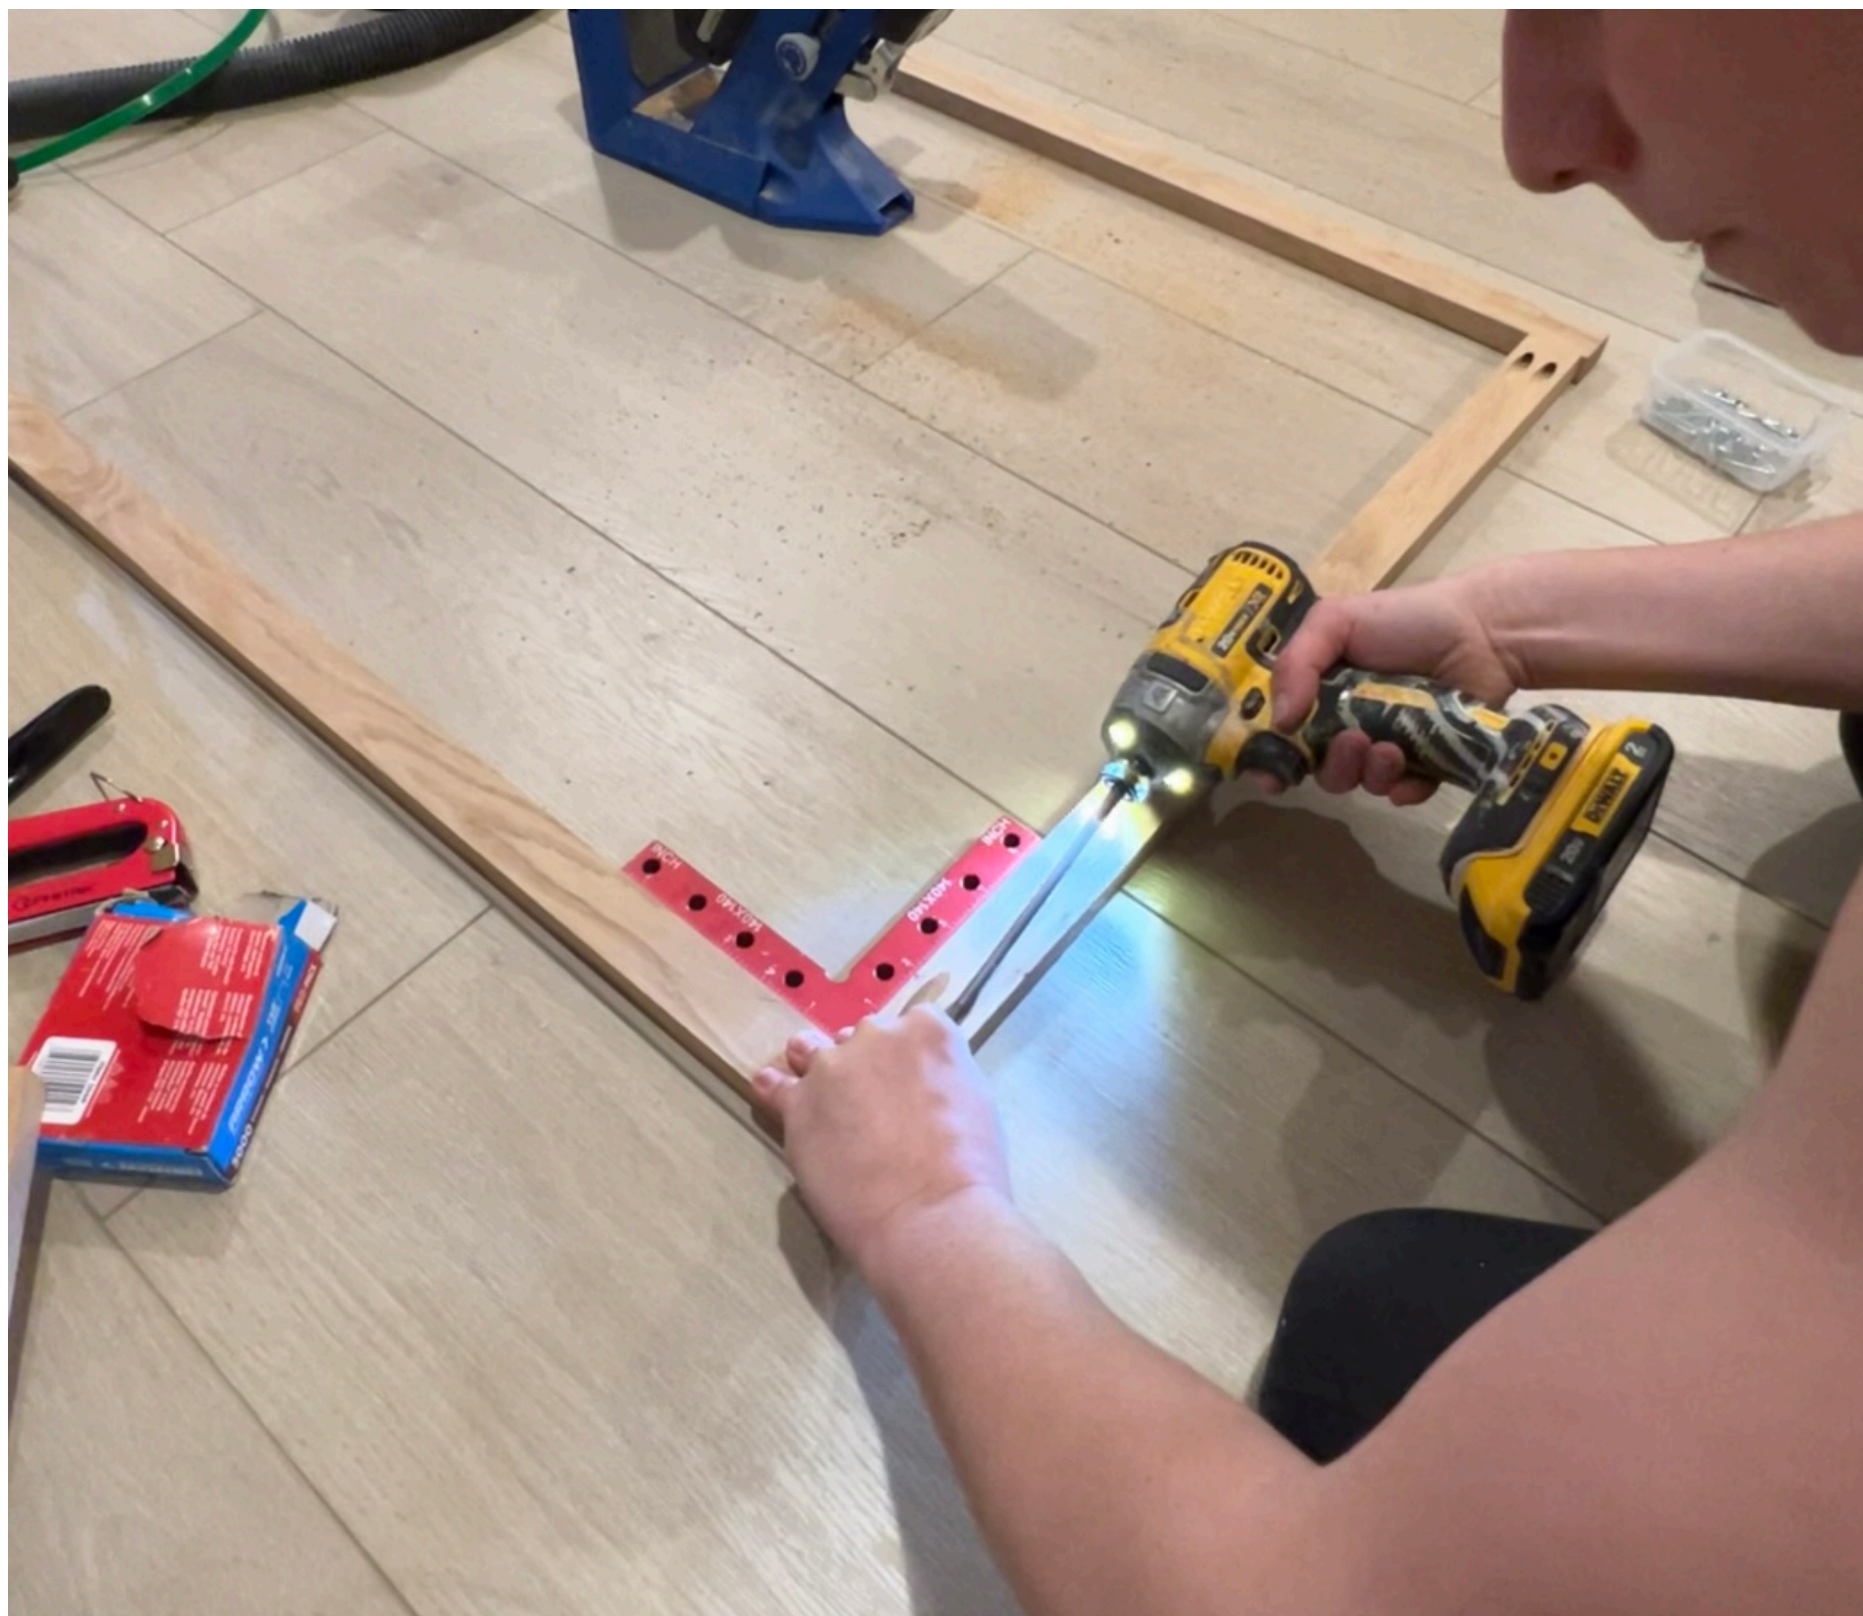

5**5**

Nail the face frame onto the cabinet box using 1 1/2" brad nails.



6**6**

After routing the fluted trim and cutting it to size, use CA glue and glue the trim onto the backboard.



7**7**

Cut the doors to size and using the Kreg Hinge Jig drill the cup holes for the hinges.



8**8**

Add trim to the door fronts, using CA Glue. (optional)

**9****9**

Attach the doors to the cabinet. Make sure to have an even reveal on all sides.

10**10**

Use a roundover bit to route the trim for underneath the countertop. Cut to size and attach with CA glue. (optional)

11

11

Sand and stain the color of your choice!
