

Contemporary End Table

By **Designs by Studio C**


Difficulty

Easy

An easy plan to build an end table using plywood and square dowels. Perfect for those new to woodworking!

build a
contemporary
end table

DESIGNS BY
STUDIO C

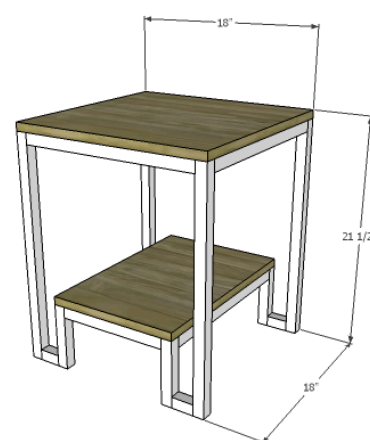

DESIGNS BY
STUDIO C

Tools

Kreg Tools

Kreg®
Pocket-
Hole Jig
720

[Kreg® Pocket-Hole Jig 720](#)

Other Tools

Miter Saw

Square

Table Saw

Tape Measure

Drill (cordless)

Nail Gun

Sander

Air Compressor

Materials

Wood Products

- 1** Plywood , 3/4" Thick , Quarter Sheet
- 7** Pine, Oak Or Poplar , 1" Square Dowels , 48"

Hardware & Supplies

- 16** 1-1/2" Pocket Hole Screws
- 8** 2-1/2" Wood Screws
- 16** 1-1/2" Brad Nails
- 1** Wood Glue
- 1** Edge Banding
- 1** Primer & Paint, Or Stain & Sealer
- 1** Sandpaper - 80, 100, 220 Grits


Cut List & Parts

- 4 Legs , 1" Square Dowels At 20-3/4"
- 4 Inner Legs , 1" Square Dowels At 6"
- 4 Side Framing , 1" Square Dowels At 16"
- 2 Upper Stretchers , 1" Square Dowels At 16"
- 2 Lower Stretchers , 1" Square Dowels At 10"
- 1 Shelf , 3/4" Plywood At 12" X 18"
- 1 Top , 3/4" Plywood At 18" X 18"

Directions

1**Step One**


Cut the pieces for the leg assemblies. With the pocket hole jig set for 1" material, drill a pocket hole in each end of the 16" pieces. Secure the 16" pieces to the legs using glue and 1-1/2" pocket hole screws.

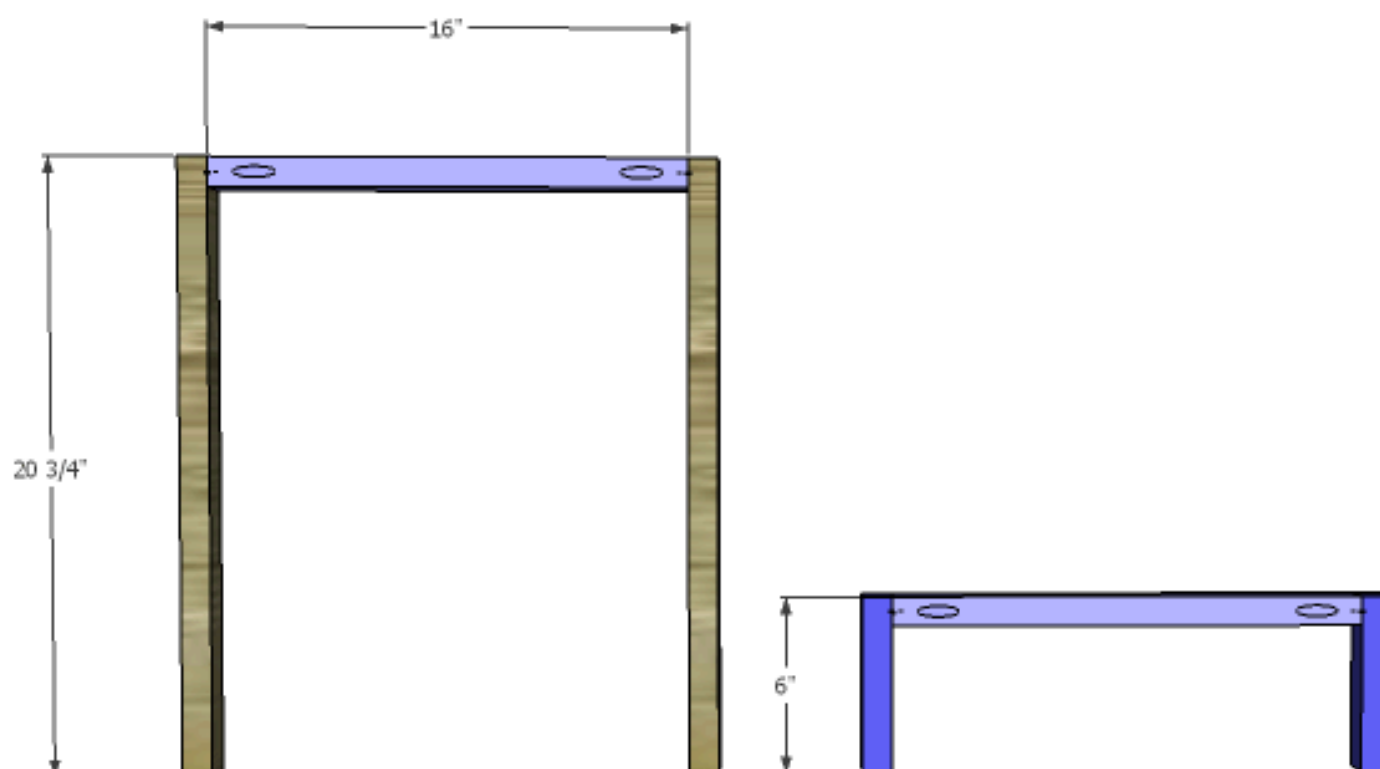

DESIGNS BY
STUDIO C

2**Step Two**

Cut the pieces for the leg connectors. Drill a countersunk hole in the lower end of each leg and secure the connectors using glue and 2-1/2" screws.

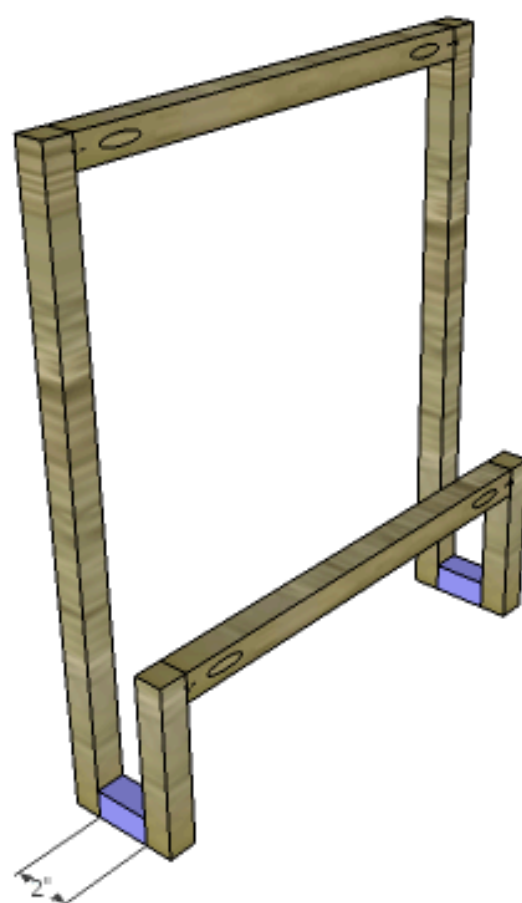


DESIGNS BY
STUDIO C

3

Step Three

Cut the pieces for the stretchers and drill a pocket hole in each end of each piece. Secure the stretchers to the legs as shown using glue and 1-1/2" pocket hole screws.

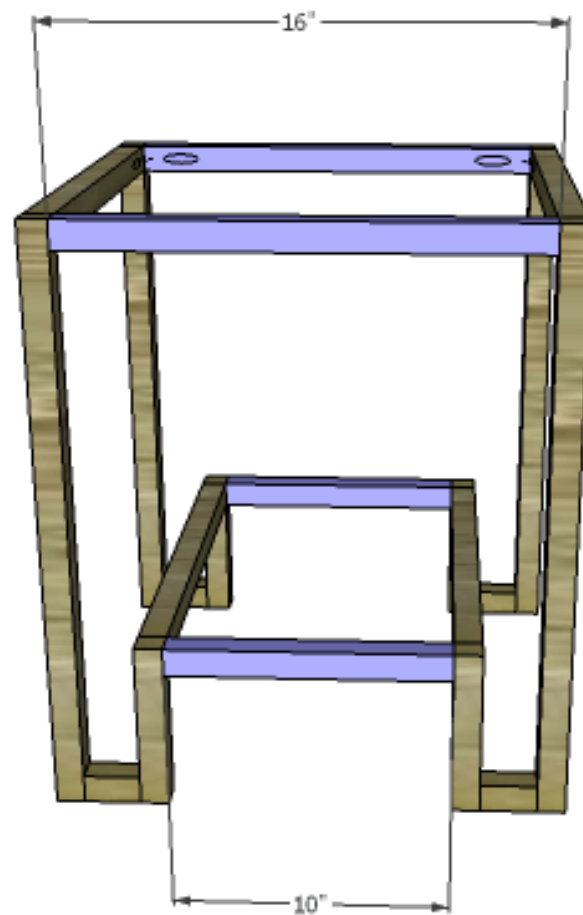


DESIGNS BY
STUDIO C

4

Step Four


Cut the piece for the shelf. If using plywood and edge banding, the banding will be applied to the exposed edges of the plywood prior to assembly. Secure the shelf to the shelf platform area (all sides will be flush) using glue and 1-1/2" brad nails.

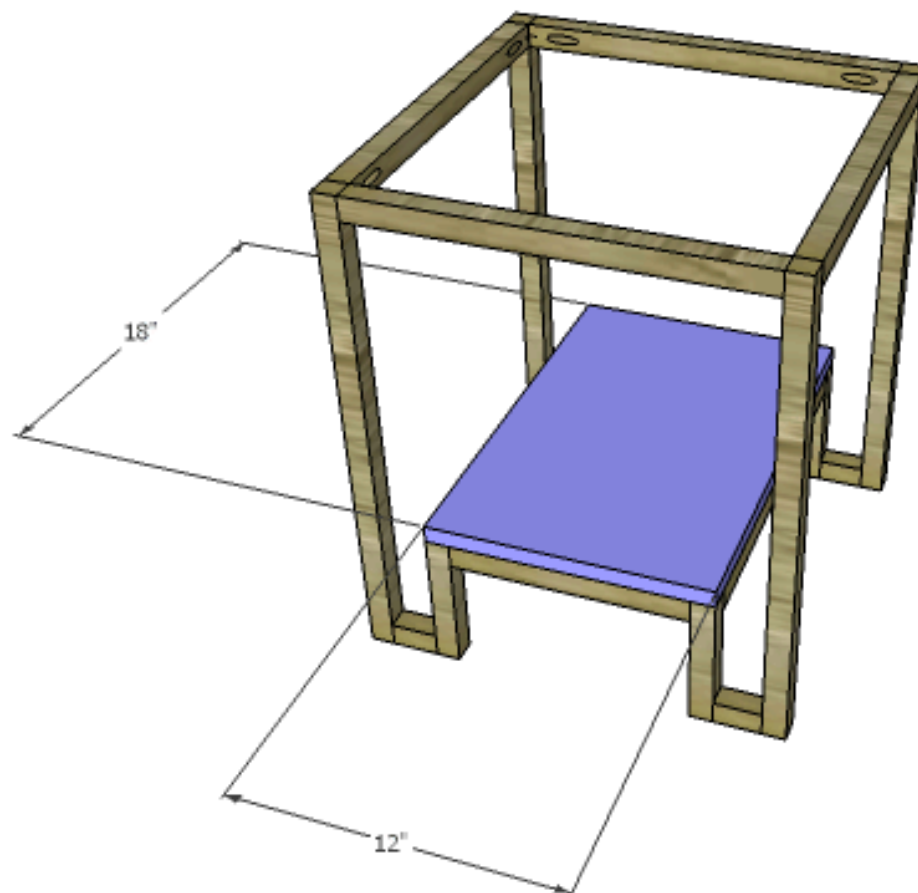

DESIGNS BY
STUDIO C

5**Step Five**

Cut the piece for the top. Again, if using plywood and edge banding, the banding will be applied to the exposed edges prior to assembly. Secure the top using glue and 1-1/2" brad nails.

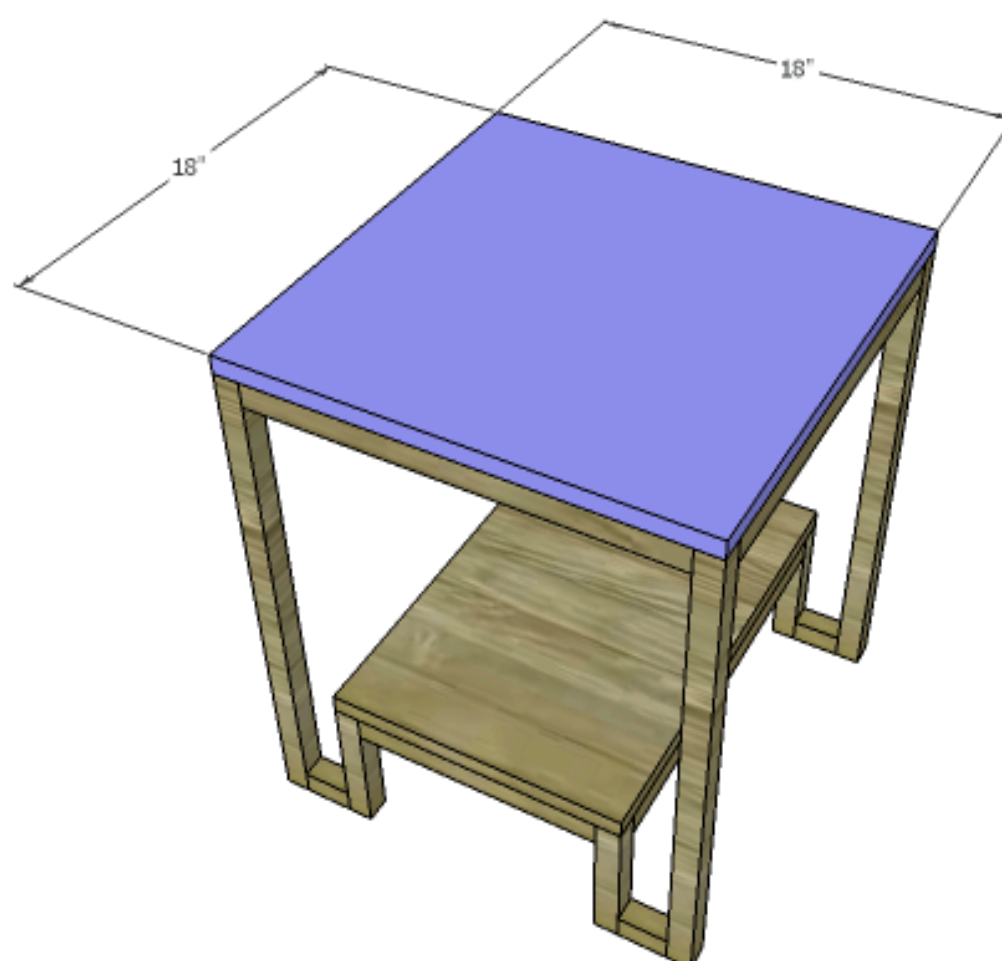

DESIGNS BY
STUDIO C

6**Finishing**

Thoroughly sand the pieces (I like to do this before assembly) using a sander and 80 grit, 100, grit, and 220 grit sandpapers. Once the table is assembled, fill the pocket holes and countersunk holes, if desired. Stain and seal or prime and paint as desired. Once the top and shelf have a finish on them, use a wax filler pencil to fill the brad nails holes.