

Dining Room Sideboard

By **Jaime Costiglio**

Difficulty

Moderate

A smaller scale sideboard perfect for your average dining room. Plenty of storage with three drawers and counter space for serving food or drinks.





Tools

Kreg Tools



Other Tools

Miter Saw

Tape Measure

Drill (cordless)

Nail Gun

Sander

Materials

Wood Products

- 2** Board , 2x2 , 72"
- 3** Board , 1x2 , 96"
- 1** Board , 1x3 , 72"
- 1** Board , 1x8 , 72"
- 1** Board , 1x12 , 96"
- 2** Board , 1x6 , 96"
- 1** Plywood , 1/4" Thick , Quarter Sheet

Hardware & Supplies

- 50** 1 1/4" Pocket Hole Screws
- 6** 1 1/4" Wood Screws
- 4** 2" Wood Screws
- 50** 1 1/4" Finish Nails
- 1** Wood Glue

Cut List & Parts


- 4 Legs , 2x2 @ 35 1/4", One End Tapered
- 4 Side Top Trim & Top Cross Support , 1x2 @ 7 1/4"
- 4 Side Bottom Trim & Bottom Cross Support , 1x3 @ 7 1/4"
- 2 Sides , 1x8 @ 7 3/8"
- 4 Cross Supports , 1x2 @ 35 5/8"
- 4 Drawer Dividers & Drawer Stops , 1x2 @ 7 3/8"
- 2 Drawer Stops , 1x3 @ 7 3/8"
- 4 Drawer Guides , 1x2 @ 8"
- 1 Top , 1x12 @ 40 1/8"
- 1 Backing , 1/4" Plywood @ 8 7/8" X 38 5/8"
- 6 Drawer Short Sides , 1x6 @ 8 3/4"
- 6 Drawer Front & Back , 1x6 @ 9 5/8"
- 3 Drawer Base , 1/4" Plywood @ 11 1/8" X 8 3/4"
- 3 Drawer Front , 1x12 @ 11 1/4"

Directions

1

Dimensions

40 1/8" w x 11 1/4" d x 36" h

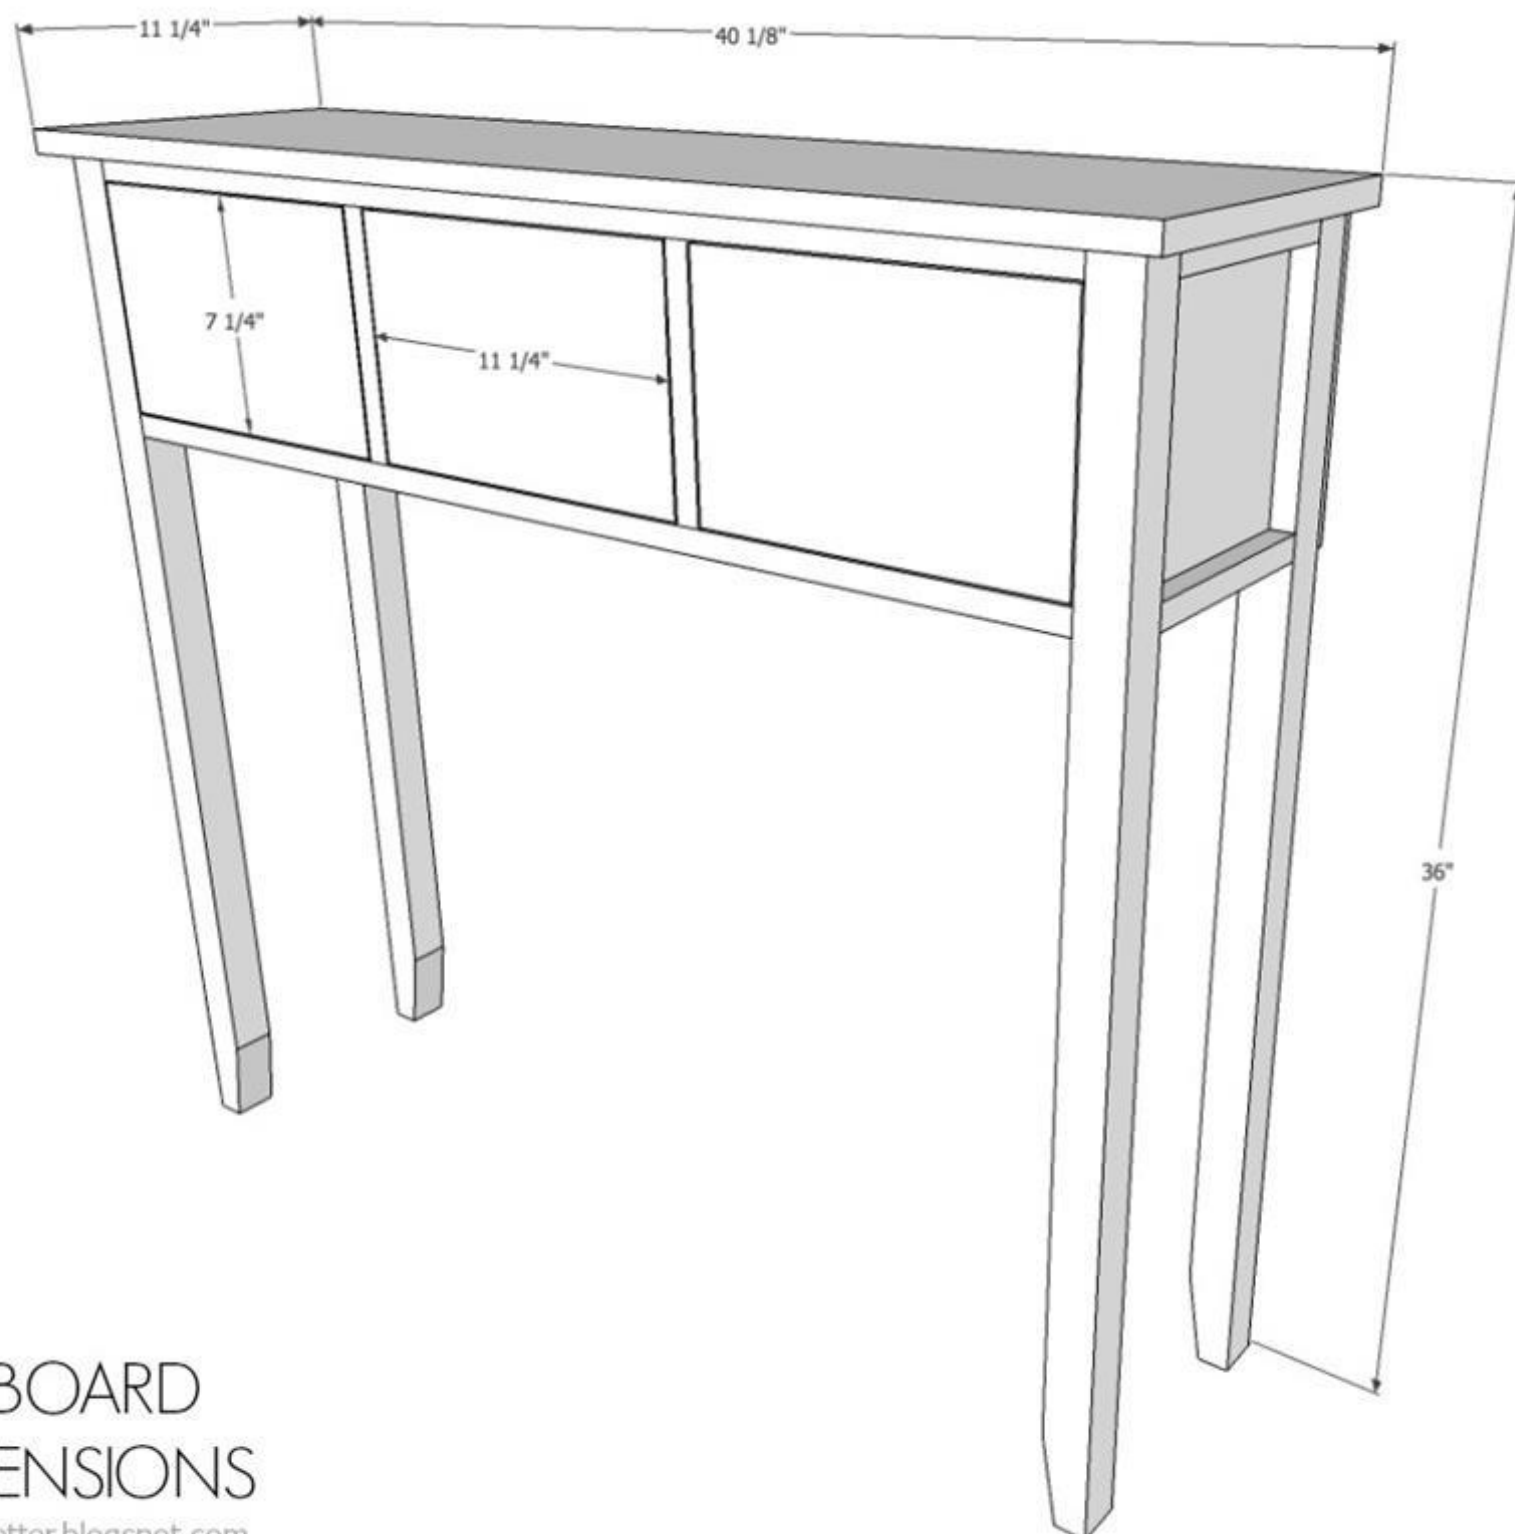


SIDEBOARD
DIMENSIONS
thatsmyletter.blogspot.com

2

Step 1

Step 1: Build the side panel as per the diagram. Predrill pocket holes in trim pieces for later attaching to legs. Use wood glue and 1 1/4" pocket hole screws to attach top and bottom trim.

Make 2 mirror copies.

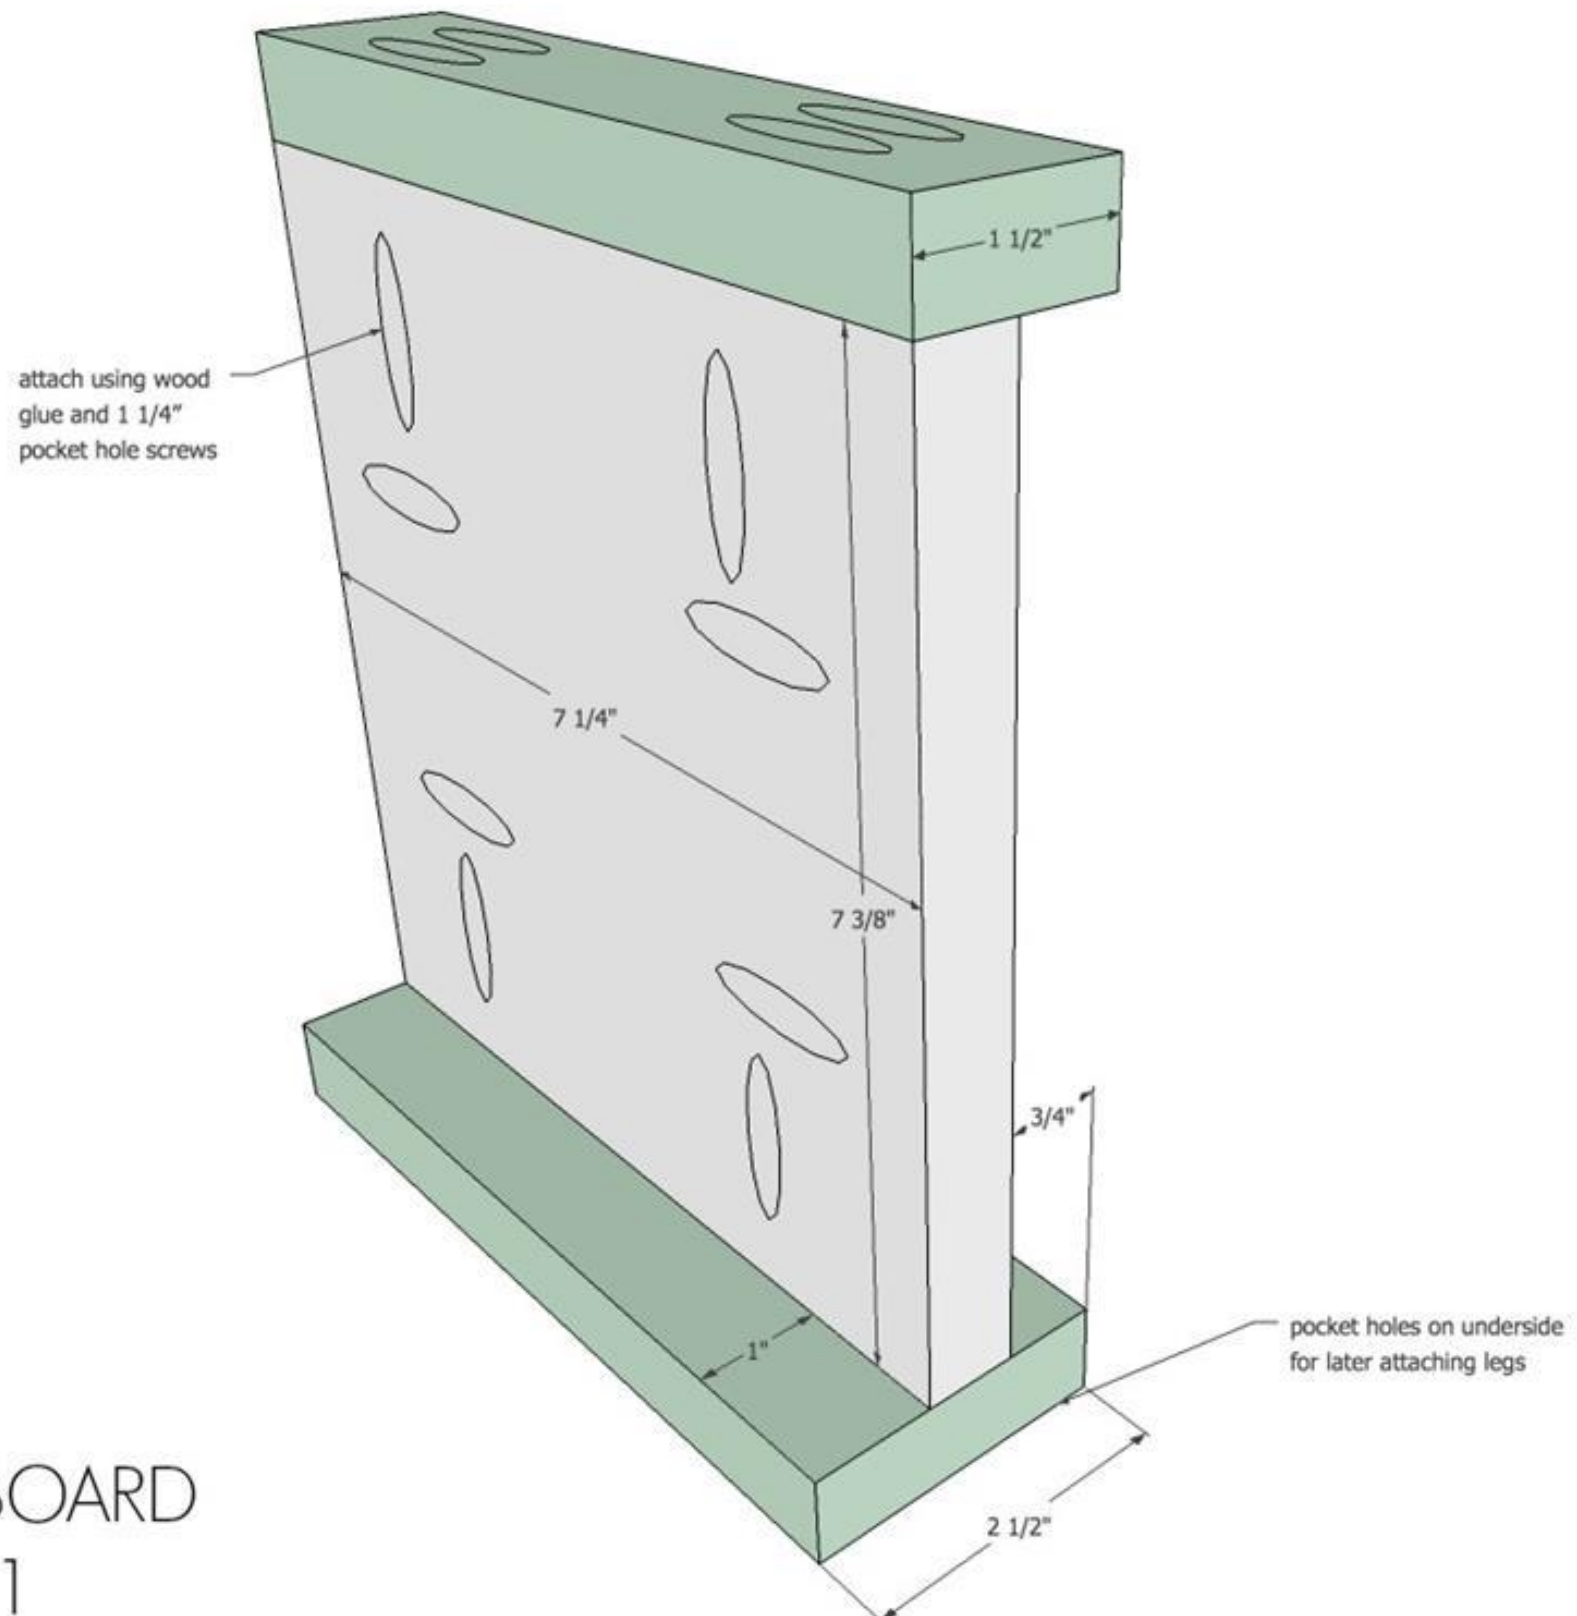

SIDEBOARD STEP 1

thatsmyletter.blogspot.com

3

Step 2

Step 2: Attach the legs using wood glue and 1 1/4" pocket hole screws.

attach using
wood glue and 1 1/4"
pocket hole screws


35 1/4"

SIDEBOARD STEP 2

thatsmyletter.blogspot.com

4**Step 3**

Step 3: Attach cross supports using wood glue and 1 1/4" pocket hole screws.

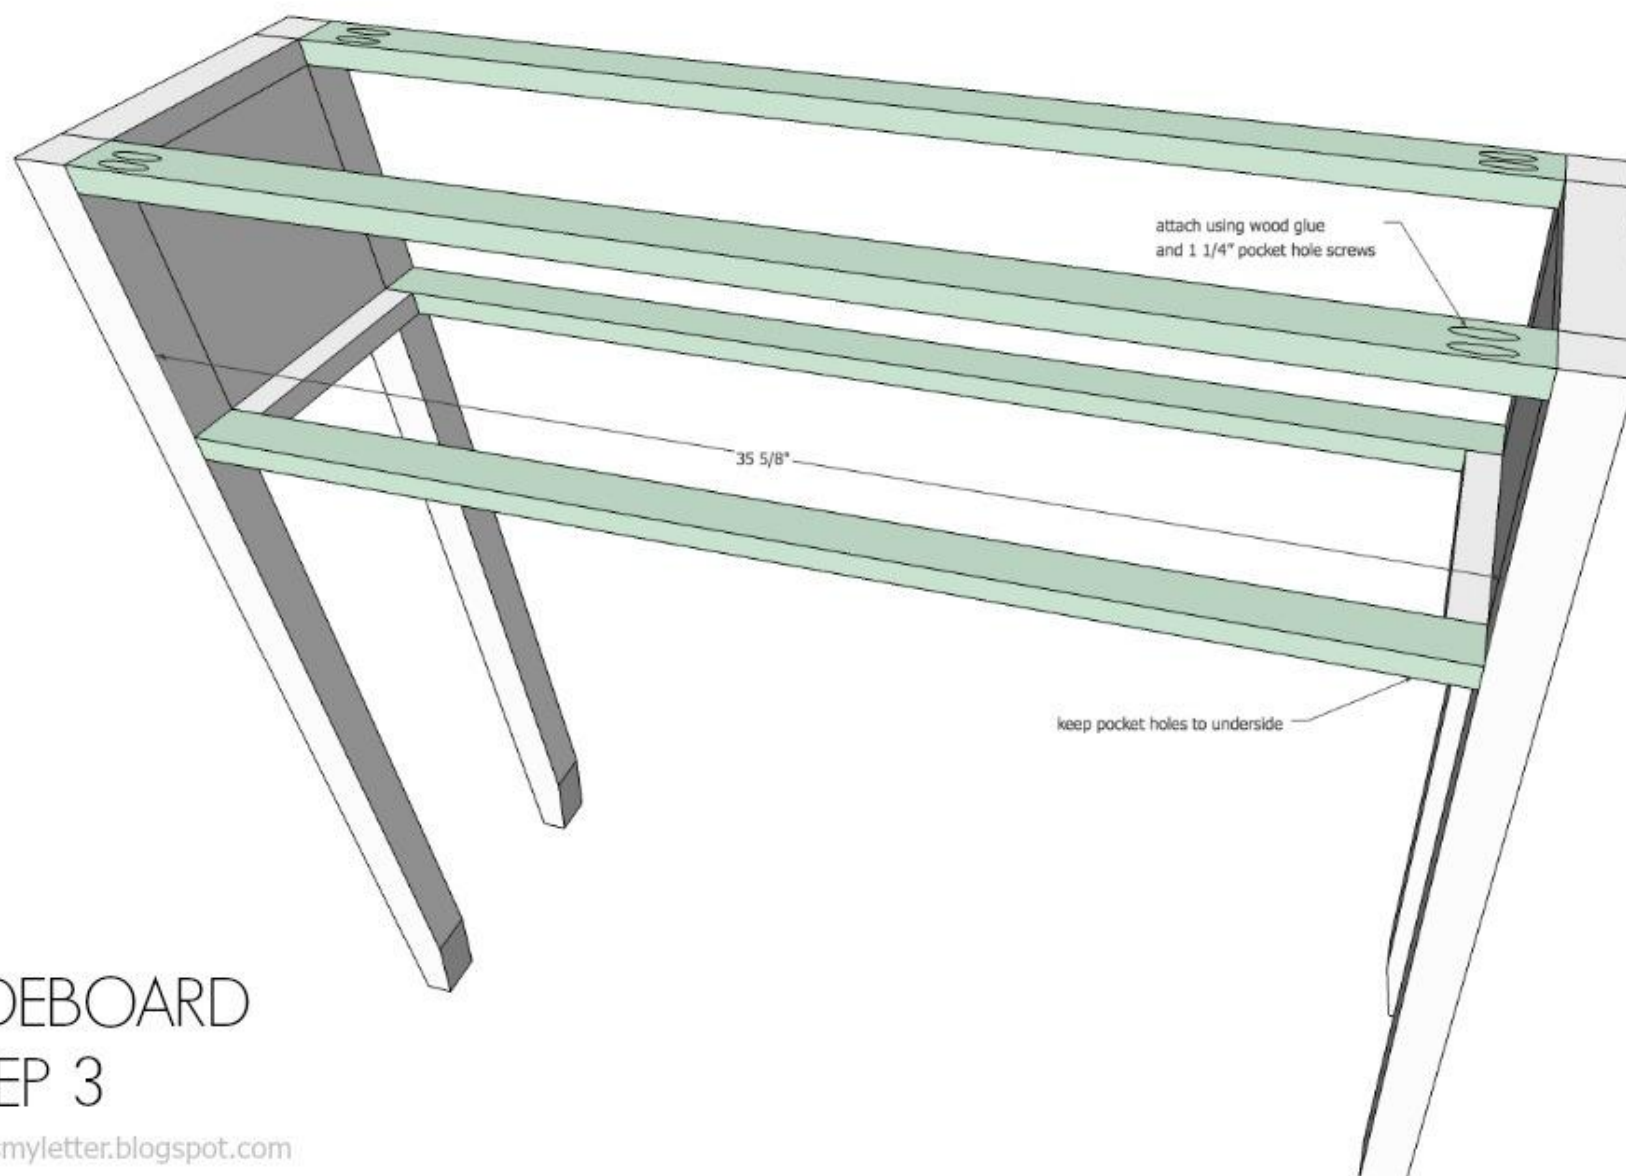


SIDEBOARD
STEP 3

thatsmyletter.blogspot.com

5**Step 4**

Step 4: Attach drawer dividers using wood glue and countersunk 2" wood screws.

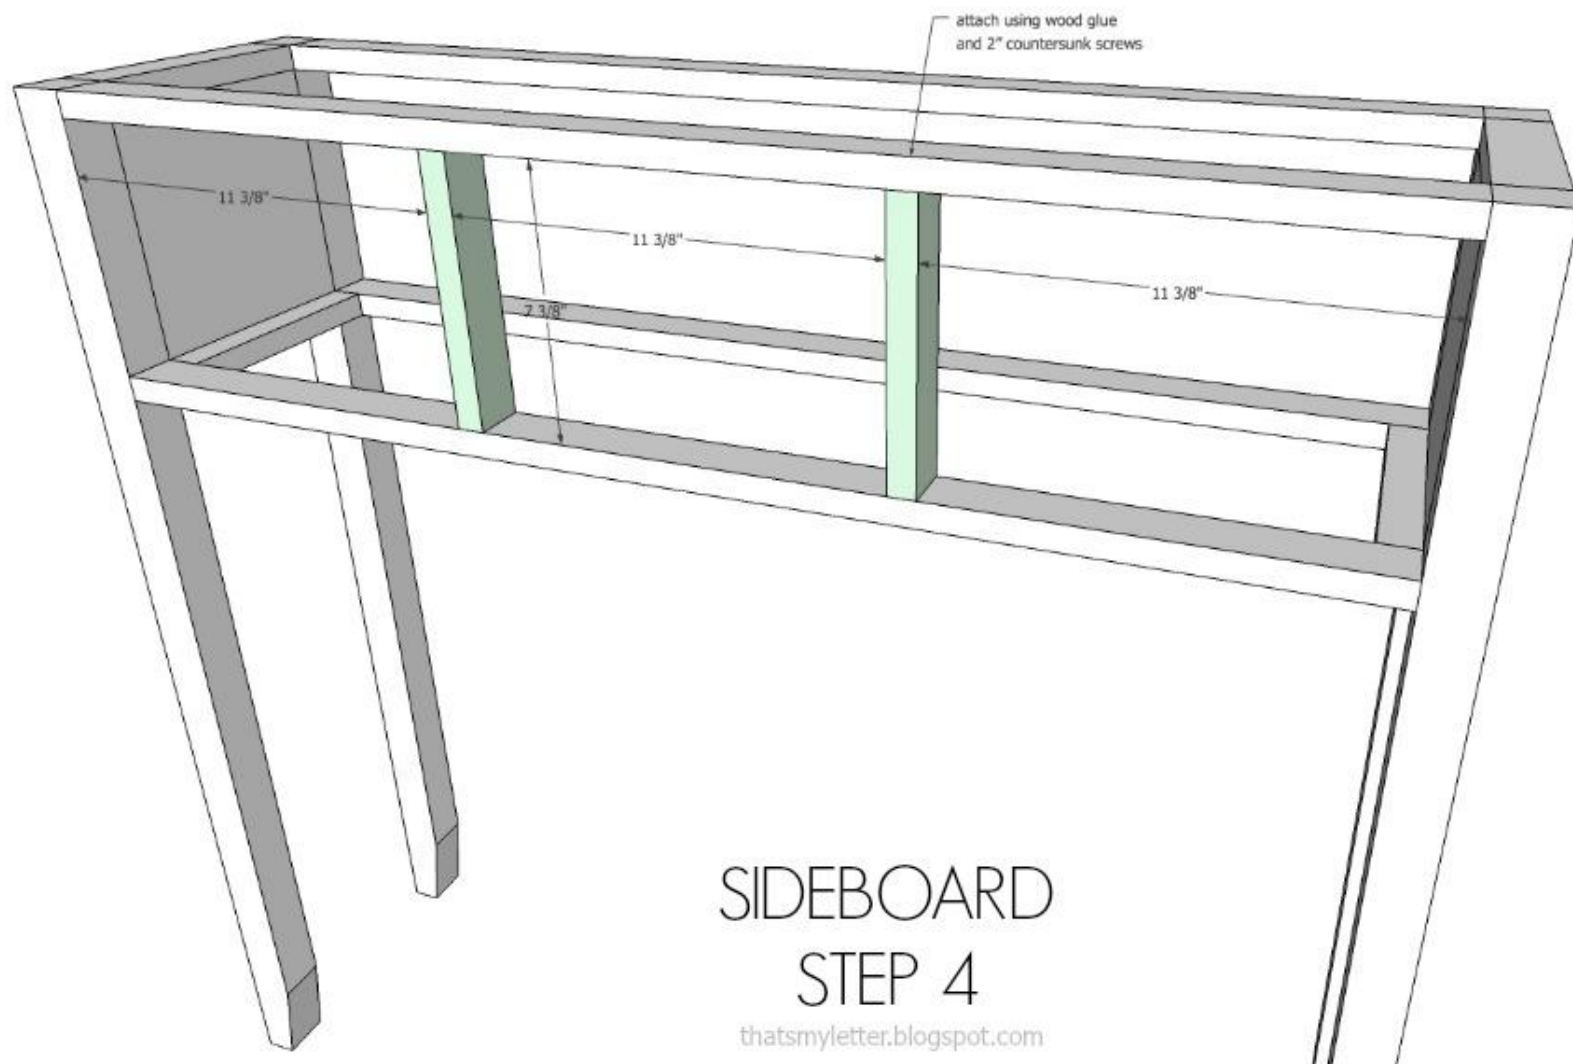


6

Step 5

Step 5: Attach back drawer stops using wood glue and 1 1/4" pocket hole screws.


thatsmyletter.blogspot.com

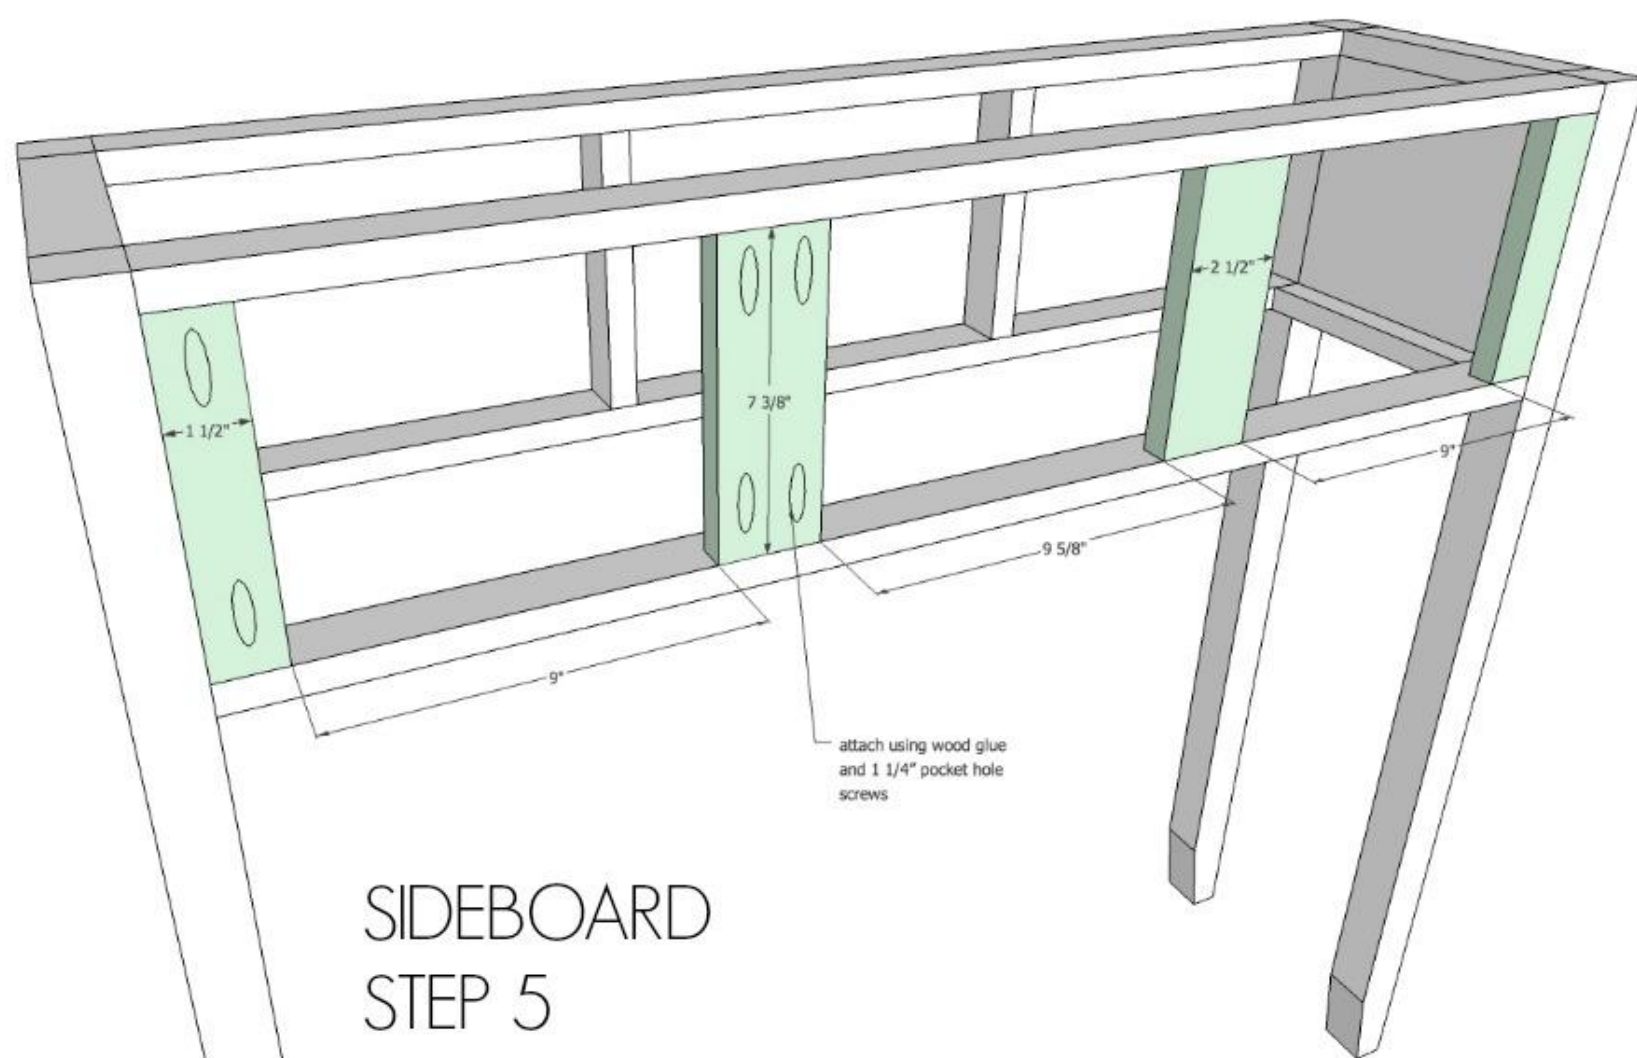

7**Step 6**

Step 6: Attach top and bottom cross supports using wood glue and 1 1/4" pocket hole screws.


thatsmyletter.blogspot.com

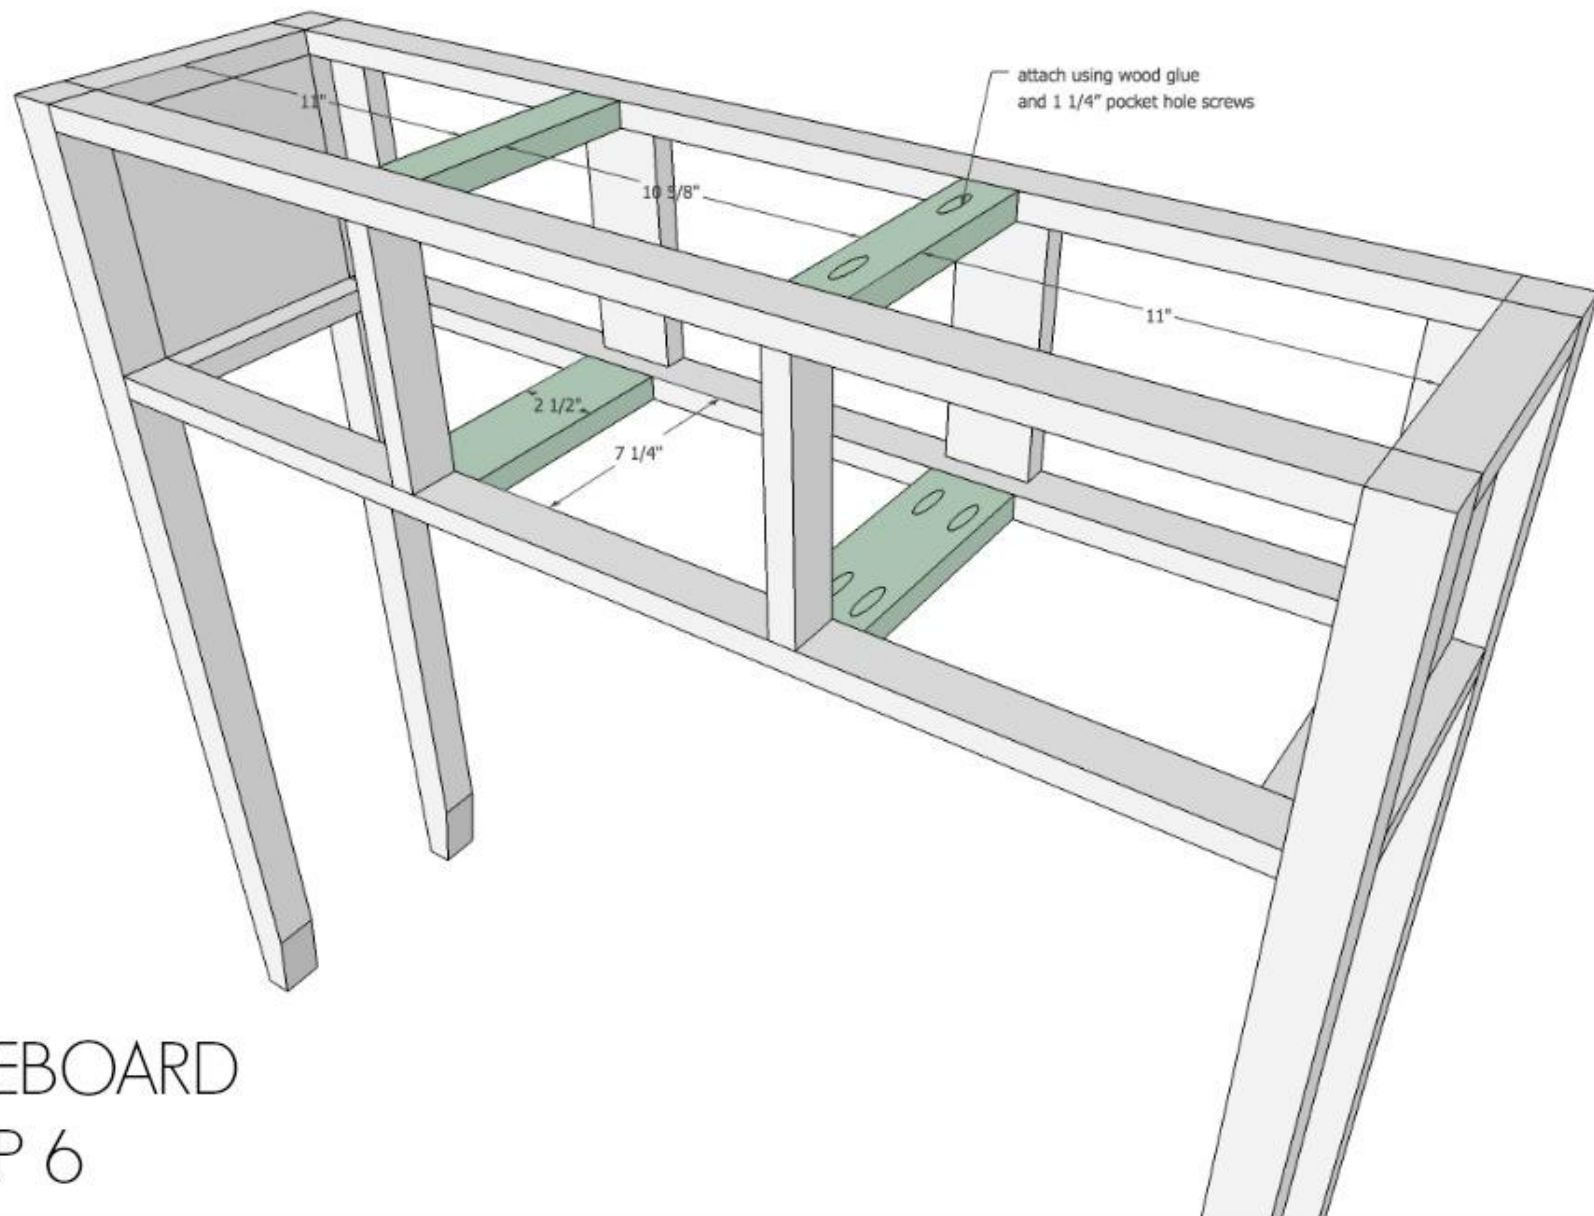

SIDEBOARD
STEP 6

8**Step 7**

Step 7: Attach drawer guides using wood glue and 1 1/4" pocket hole screws.

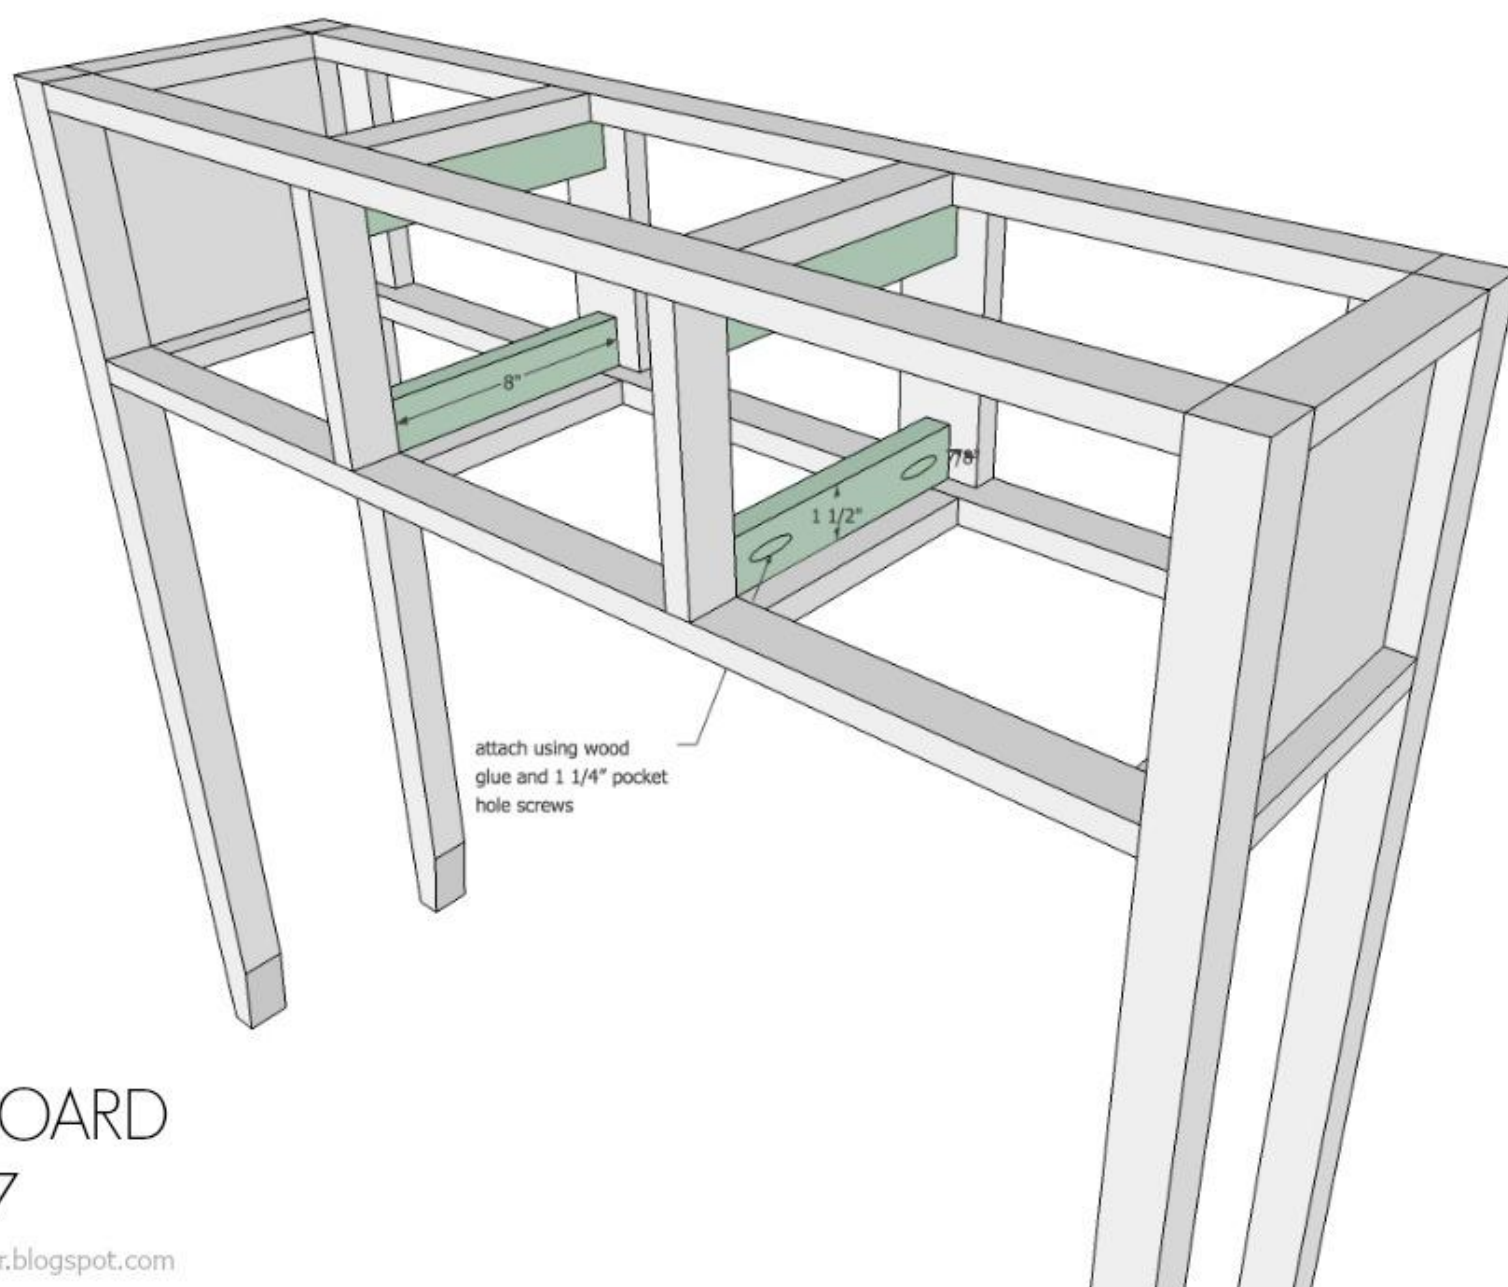


SIDEBOARD
STEP 7

thatsmyletter.blogspot.com

9

Step 8

Step 8: Attach top to frame using wood glue and 1 1/4" countersunk screws. Keep 3/4" overhang on all sides except back is 1/4".

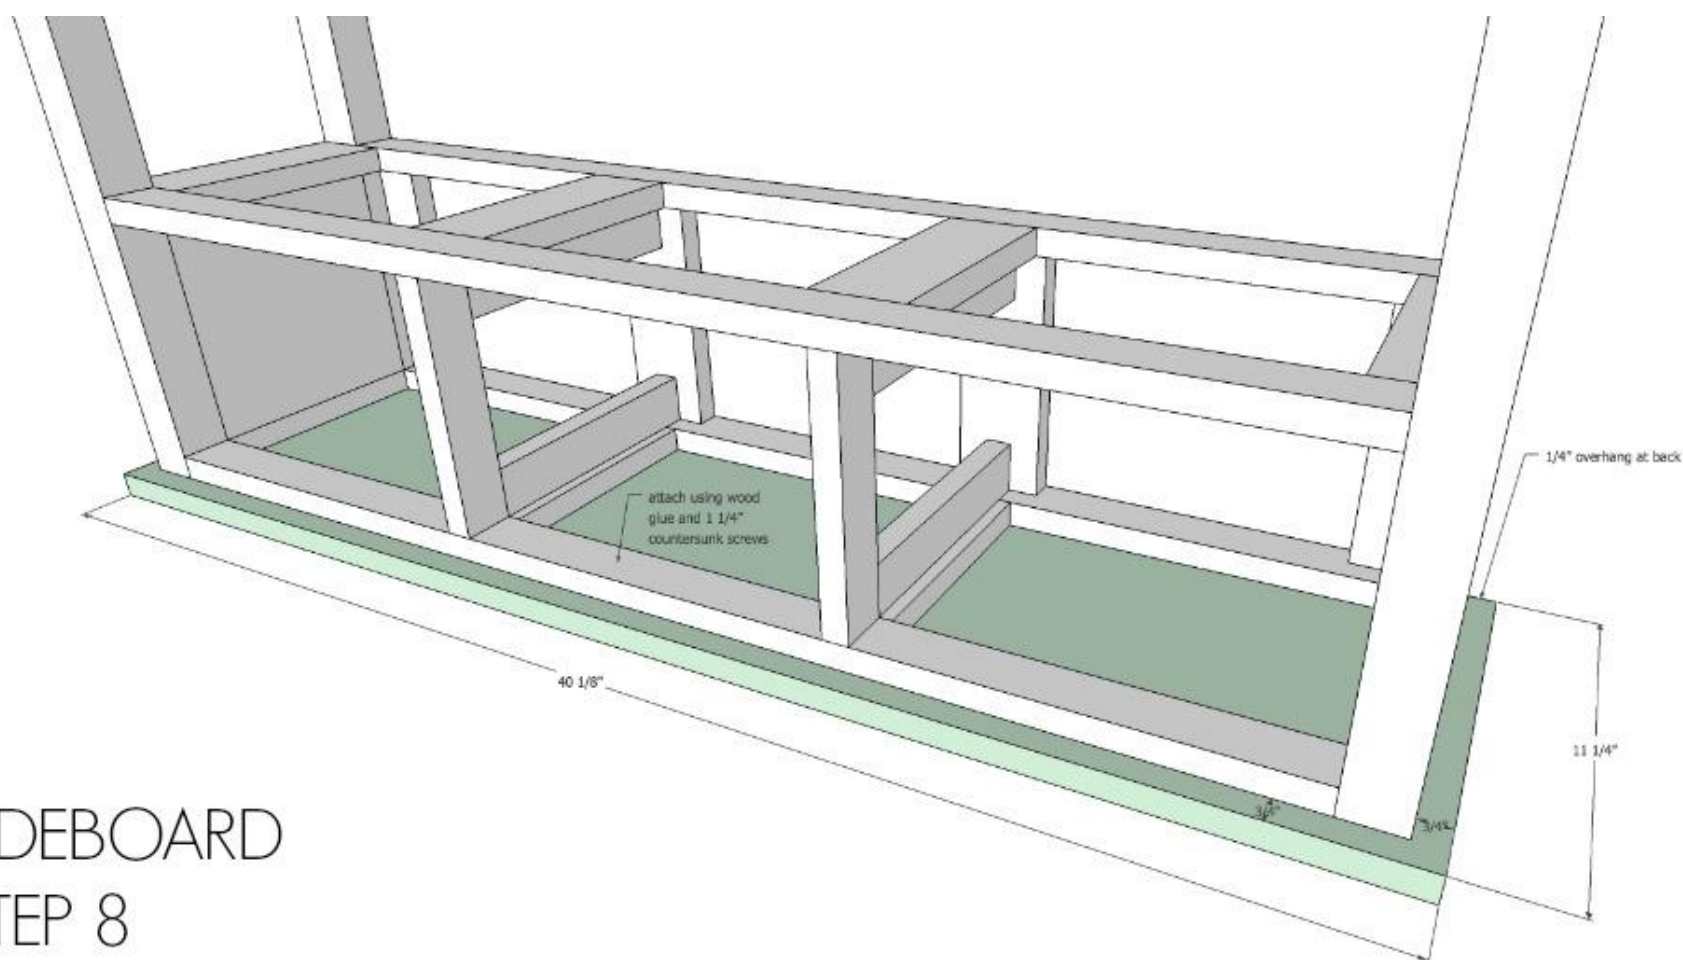


SIDEBOARD
STEP 8

thatsmyletter.blogspot.com

10**Step 9**

Step 9: Attach backing to frame using wood glue and 1 1/4" finish nails.

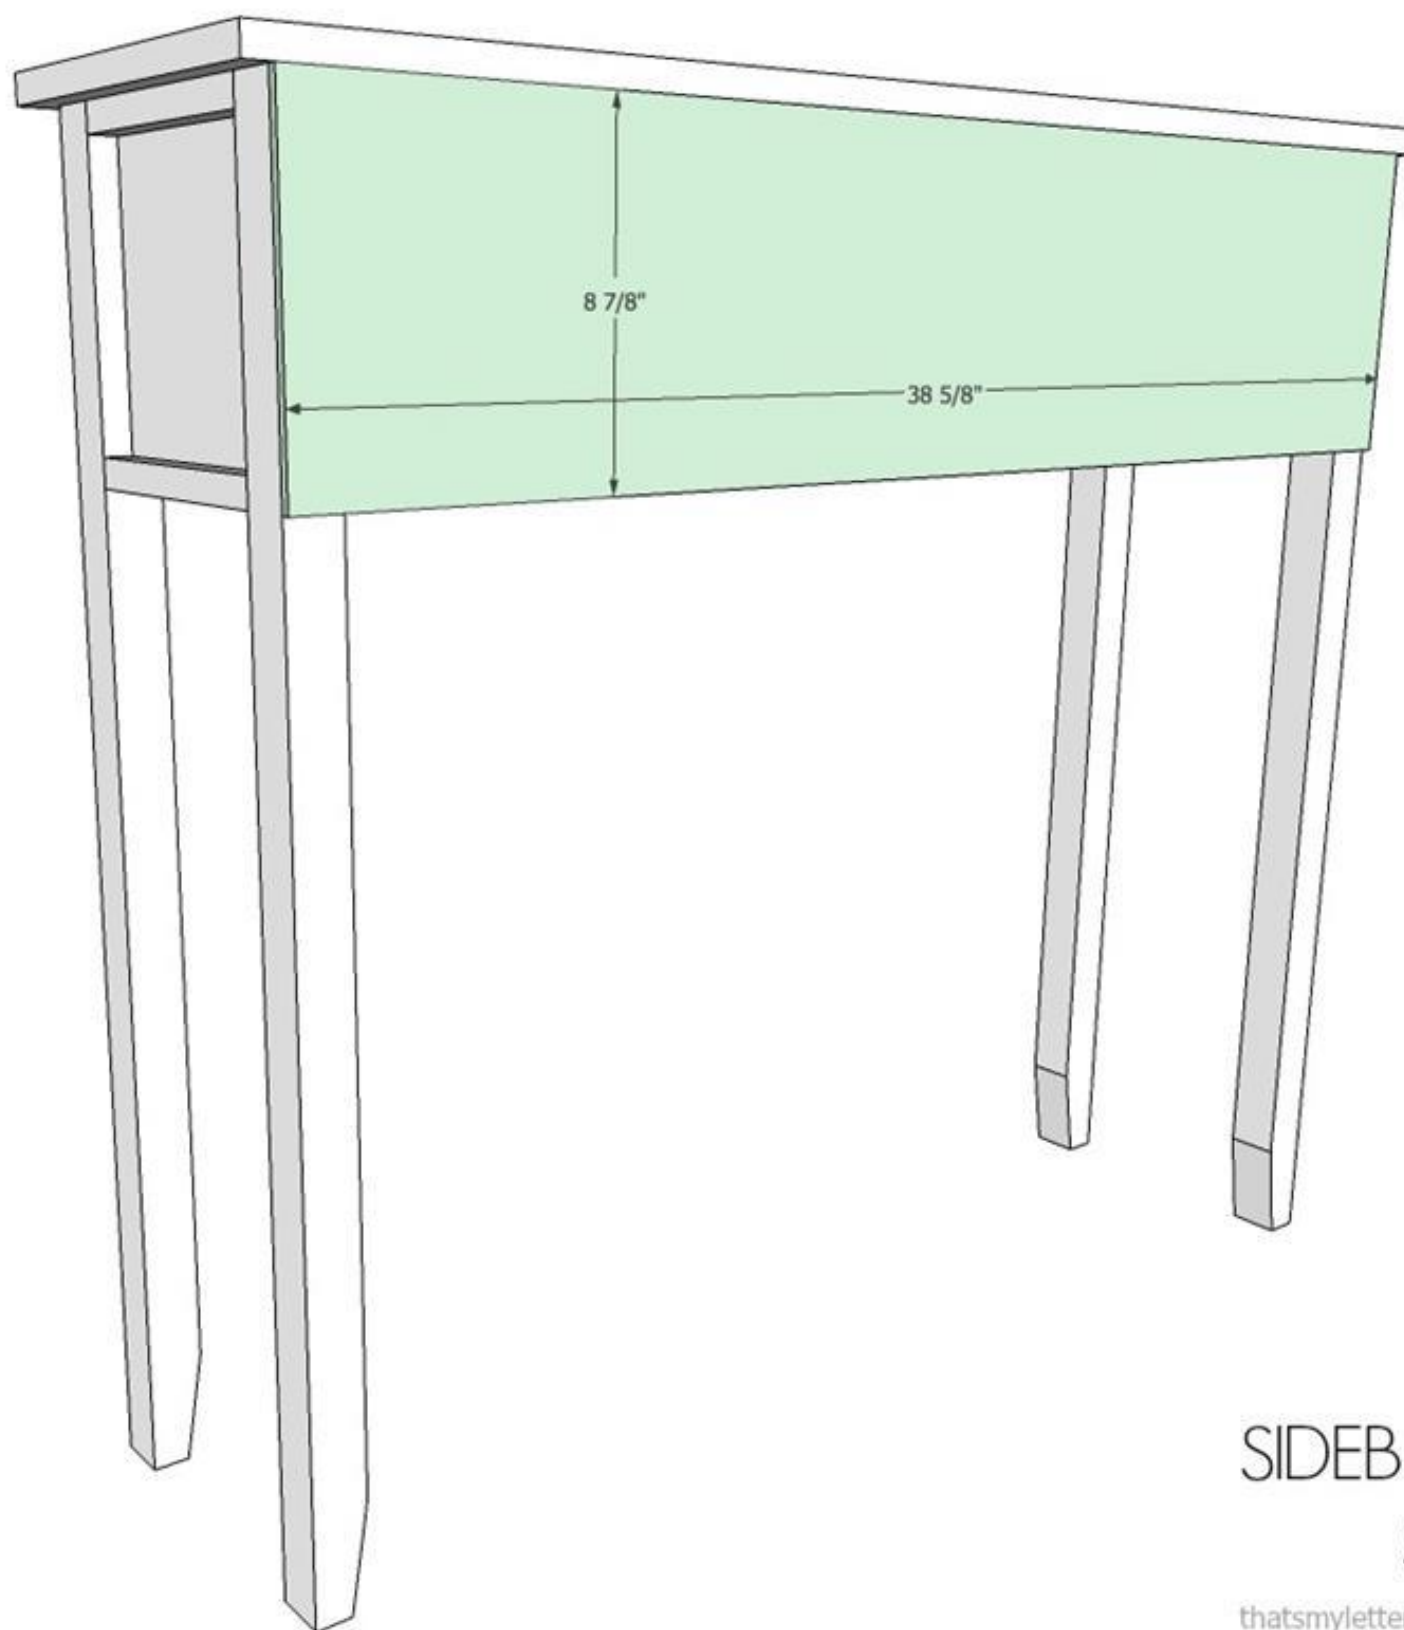


SIDEBOARD
STEP 9

thatsmyletter.blogspot.com

11**Step 10**

Step 10: Make drawer boxes using wood glue and 1 1/4" finish nails. Attach drawer base using wood glue and 1 1/4" finish nails.

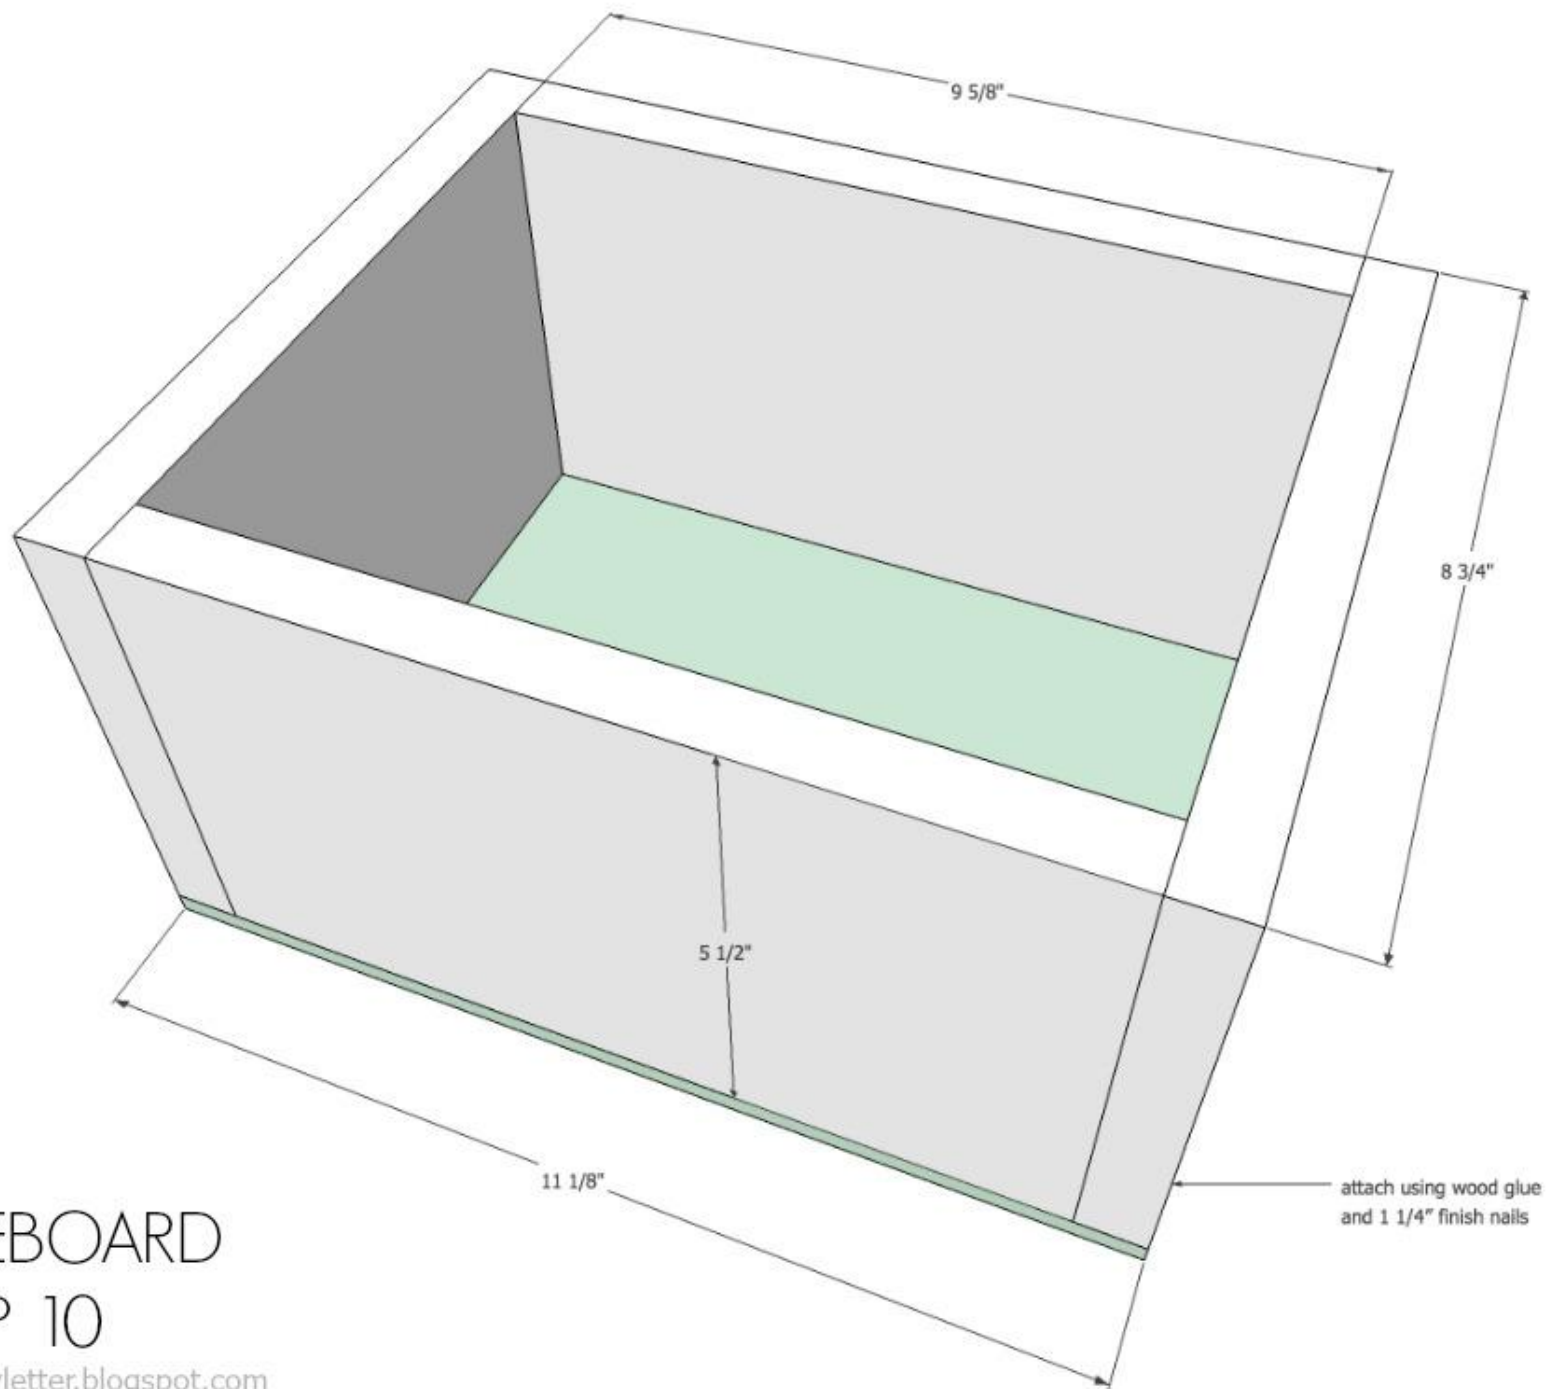

SIDEBOARD
STEP 10
thatsmyletter.blogspot.com

12**Step 11**

Step 11: Place drawer box in position and center drawer front keeping 1/16" spacing on all sides. Use wood glue and finish nails to attach then pull out drawer and attach from interior using countersunk 1 1/4" wood screws.

