

three drawer dresser

By **Jaime Costiglio**

Difficulty

Moderate

A three drawer dresser with three open cubby shelves. Intended as a large nightstand between to bed for a shared bedroom but can be used as a stand along dresser or behind a sofa, etc.





Tools

Kreg Tools

Wood Project Clamp - 6" [Wood Project Clamp - 6"](#)
Kreg® Pocket-Hole Jig 720 [Kreg® Pocket-Hole Jig 720](#)

Other Tools

Circular Saw (corded)
Jigsaw
Miter Saw
Square
Tape Measure
Drill (cordless)
Impact Driver
Nail Gun
Sander

Materials

Wood Products

- 2 Plywood , 3/4" Thick , Full Sheet
- 5 Board , 1x5 , 72"
- 2 Board , 1x6 , 96"
- 1 Board , 1x8 , 72"
- 1 Plywood , 1/4" Thick , Full Sheet

Hardware & Supplies

- 1 Box 1 1/4" Kreg Pocket Hole Screws
- 6 2" Wood Screws
- 36 1 1/4" Wood Screws
- 1 Sleeve 2" Finish Nails
- 1 Sleeve 3/4" Finish Nails
- 3 21" Drawer Glides

Cut List & Parts


- 5** Top , 1x5 @ 66"
- 1** Cubby Shelf , 3/4" X 22 1/2" X 64 1/2"
- 2** Sides , 3/4" X 22 1/2" X 27 1/4"
- 5** Dividers & Drawer Support , 3/4" X 22 1/2" X 21"
- 2** Cubby Dividers , 3/4" X 22 1/2" X 5 1/2"
- 1** Backing , 1/4" X 66" X 14 1/2"
- 3** Drawer Fronts , 1x8 @ 20 3/4"
- 6** Drawer Sides , 1x6 @ 21 3/4"
- 6** Drawer Fronts & Backs , 1x6 @ 18 1/4"
- 3** Drawer Base , 1/4"x 21 3/4" X 19 3/4"

Directions

1

Dimensions

Overall dimensions 66"w x 22 1/2"d x 28"h

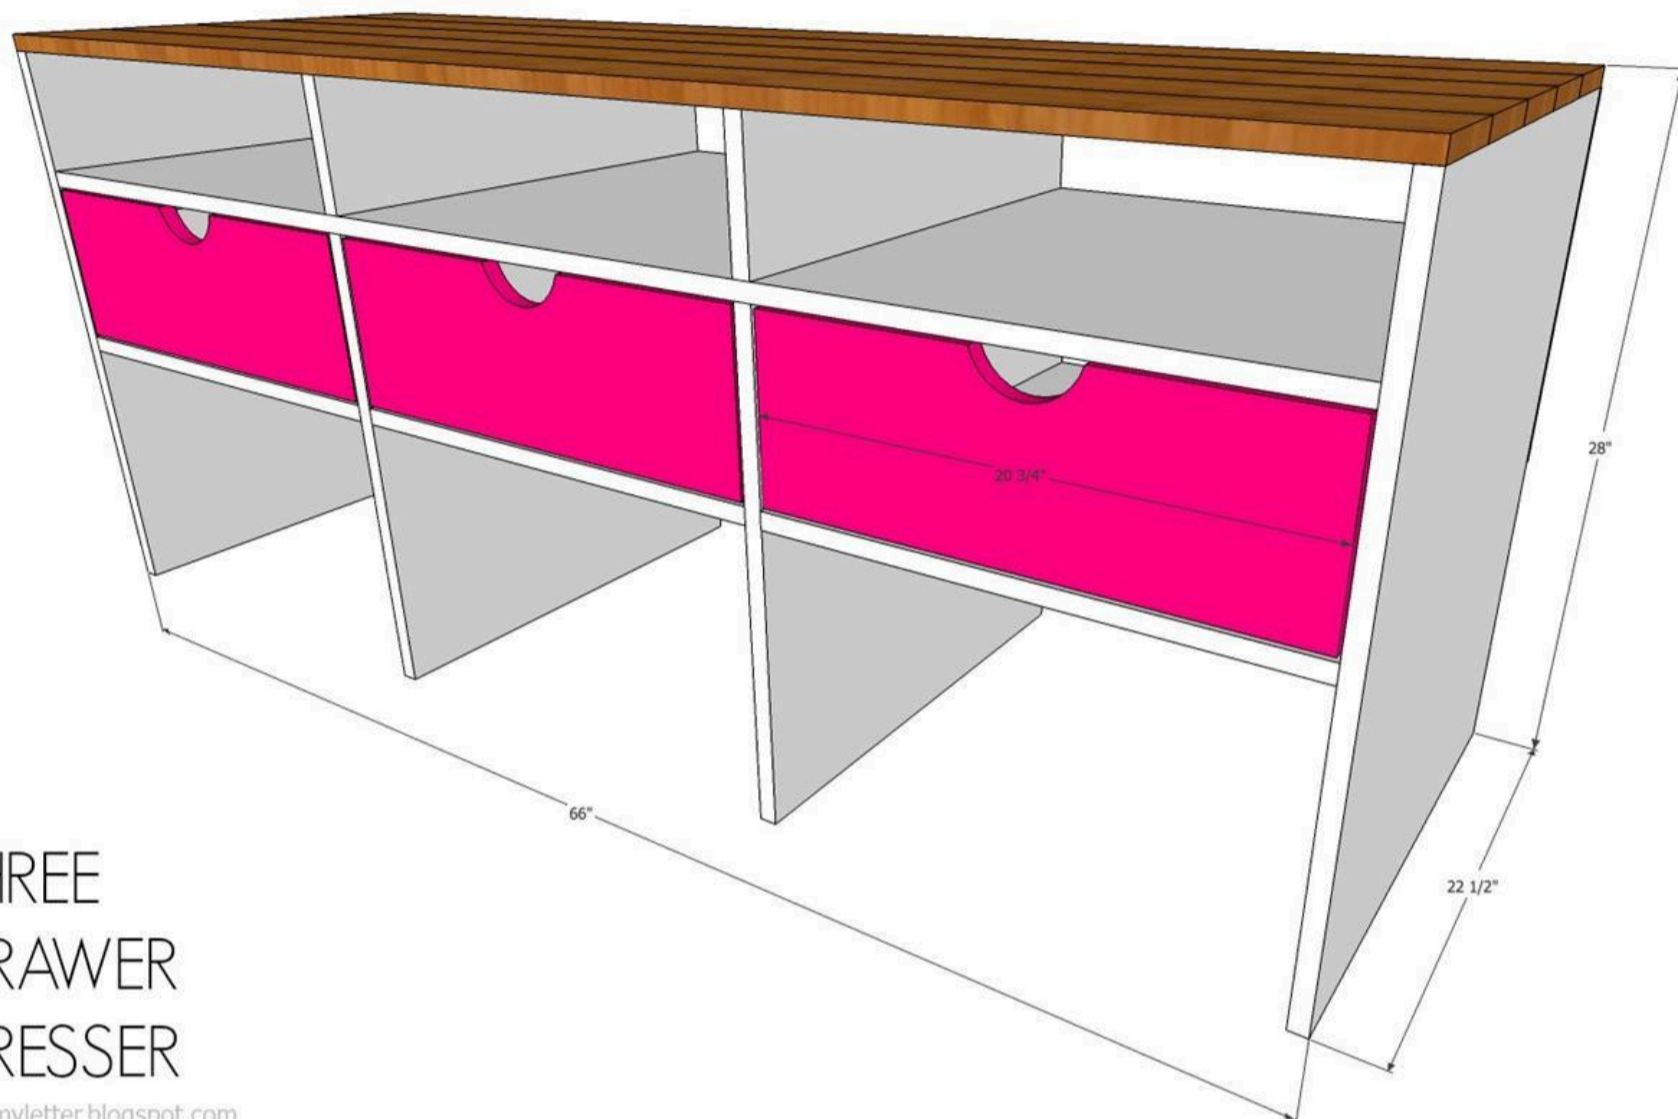


THREE
DRAWER
DRESSER

thatsmyletter.blogspot.com

2

Step 1: top

Attach the top boards using wood glue, pocket holes and 1 1/4" pocket hole screws. Keep boards flush to form one smooth surface. Once all boards are attached measure the width to confirm 22 1/2" before cutting plywood sheets for remaining steps as 1x5 boards can vary in width.

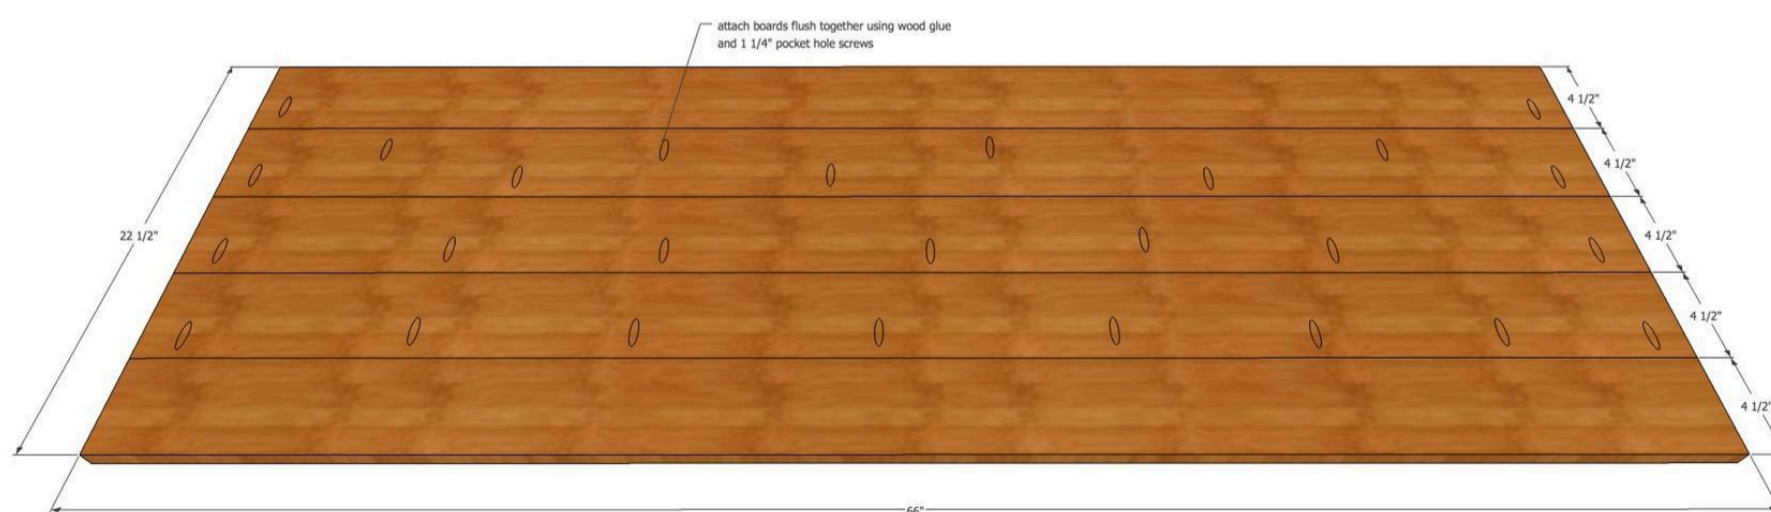


THREE DRAWER DRESSER
STEP 1: TOP

thatsmyletter.blogspot.com

3

Step 2: sides

Attach sides to underside of top using wood glue, pocket holes and 1 1/4" pocket hole screws.

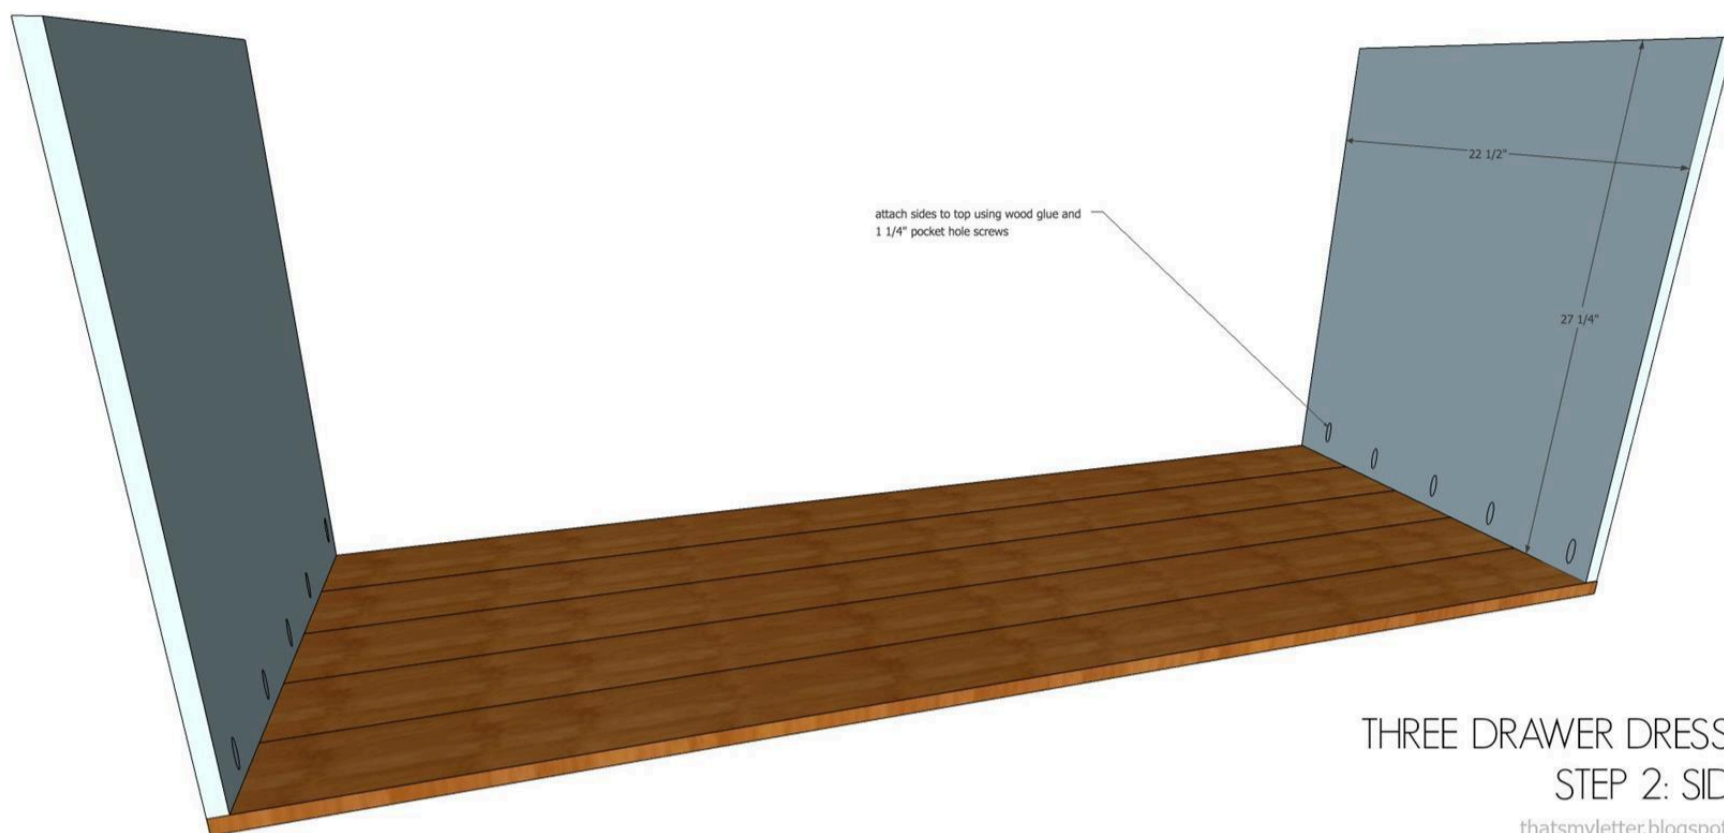


THREE DRAWER DRESSER
STEP 2: SIDES

thatsmyletter.blogspot.com

4

Step 3: cubby shelf

Attach cubby shelf to sides using wood glue, pocket holes and 1 1/4" pocket hole screws.

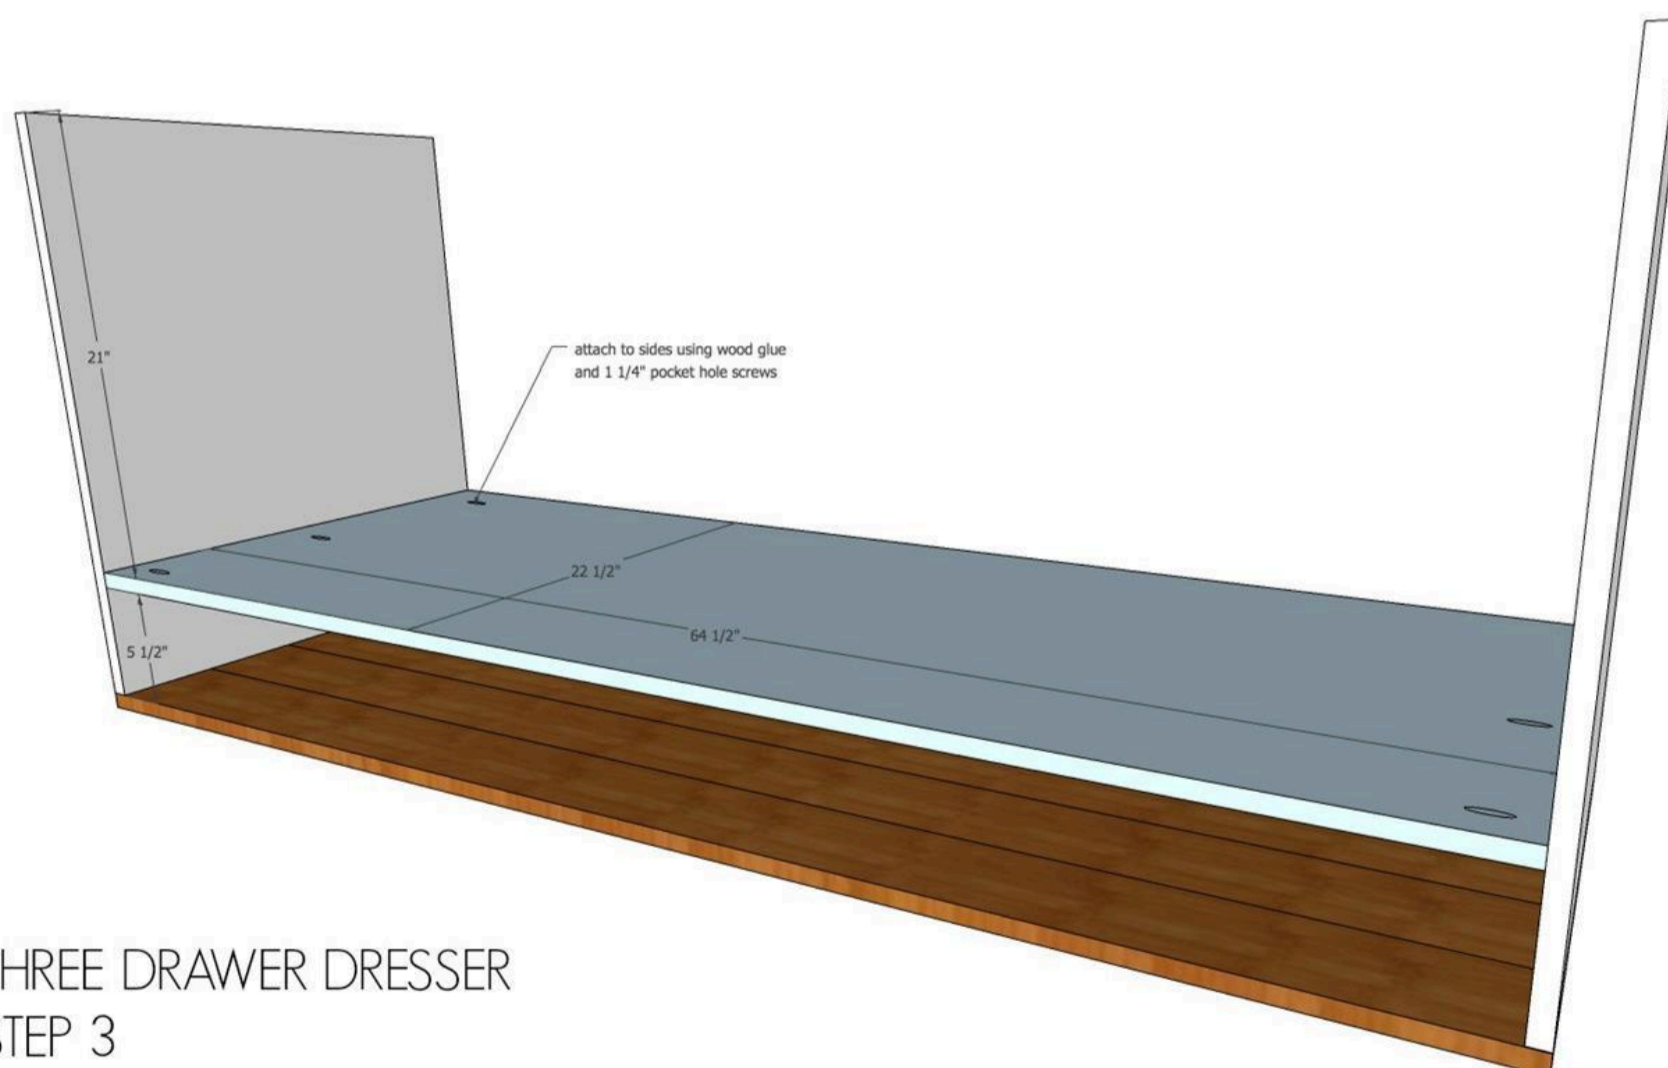

THREE DRAWER DRESSER
STEP 3


thatsmyletter.blogspot.com

5

Step 4: cubby dividers

Attach cubby dividers using countersunk 2" wood screws from underneath and 2" finish nails from the top.

THREE DRAWER DRESSER STEP 4

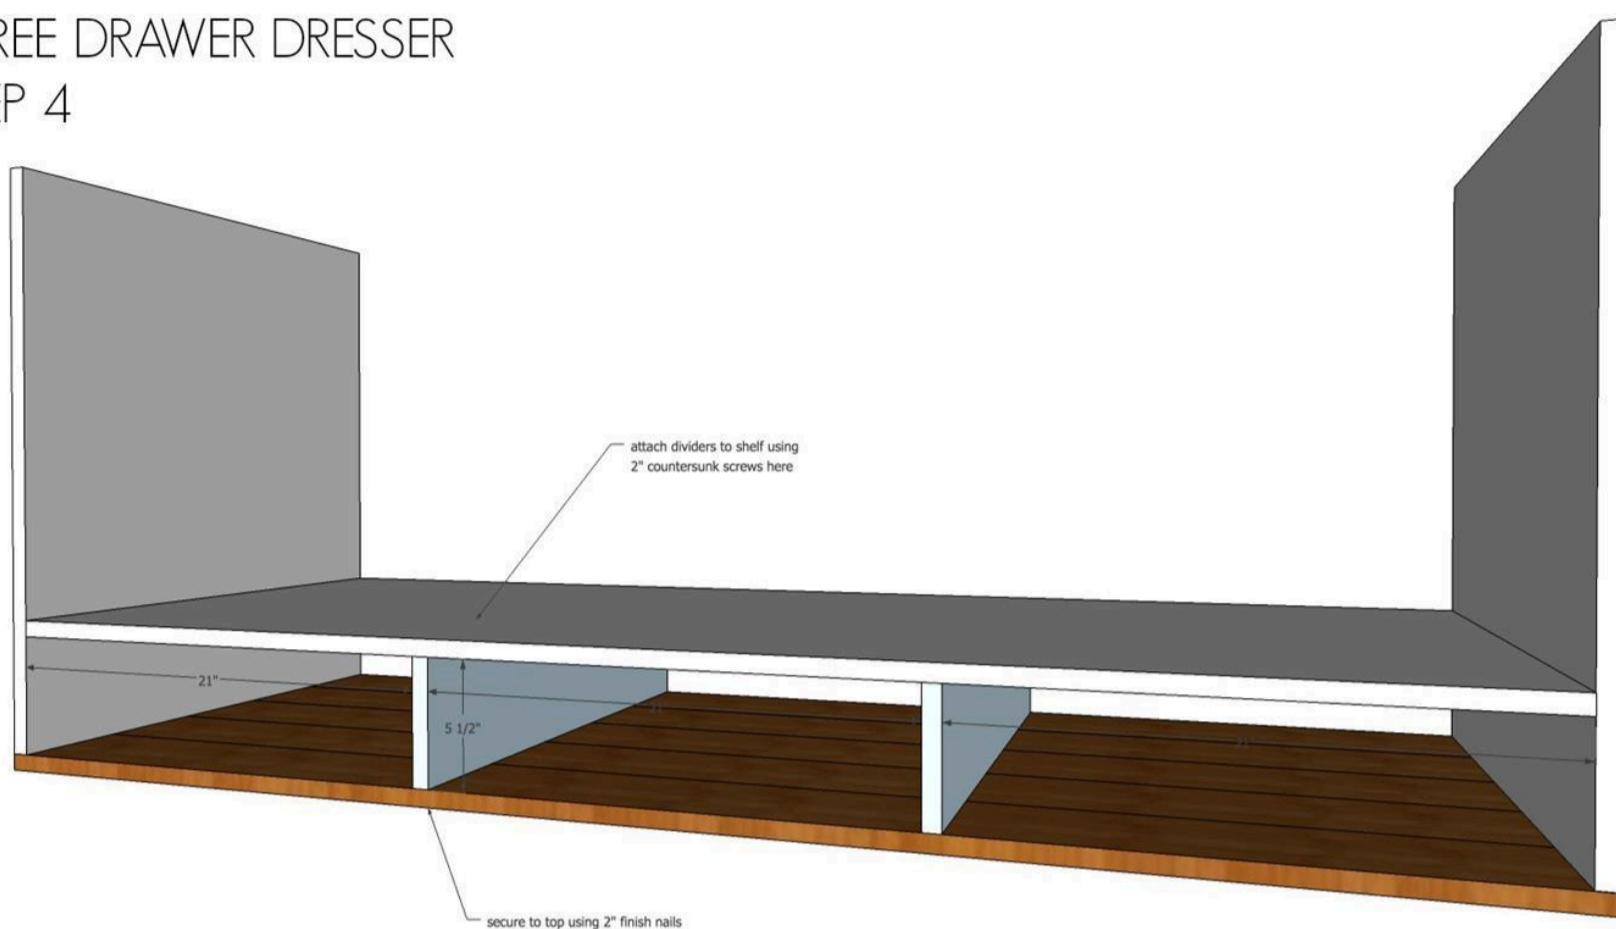


thatsmyletter.blogspot.com

6

Step 5: drawer dividers

Attach drawer dividers to shelf using wood glue, pocket holes and 1 1/4" pocket hole screws.

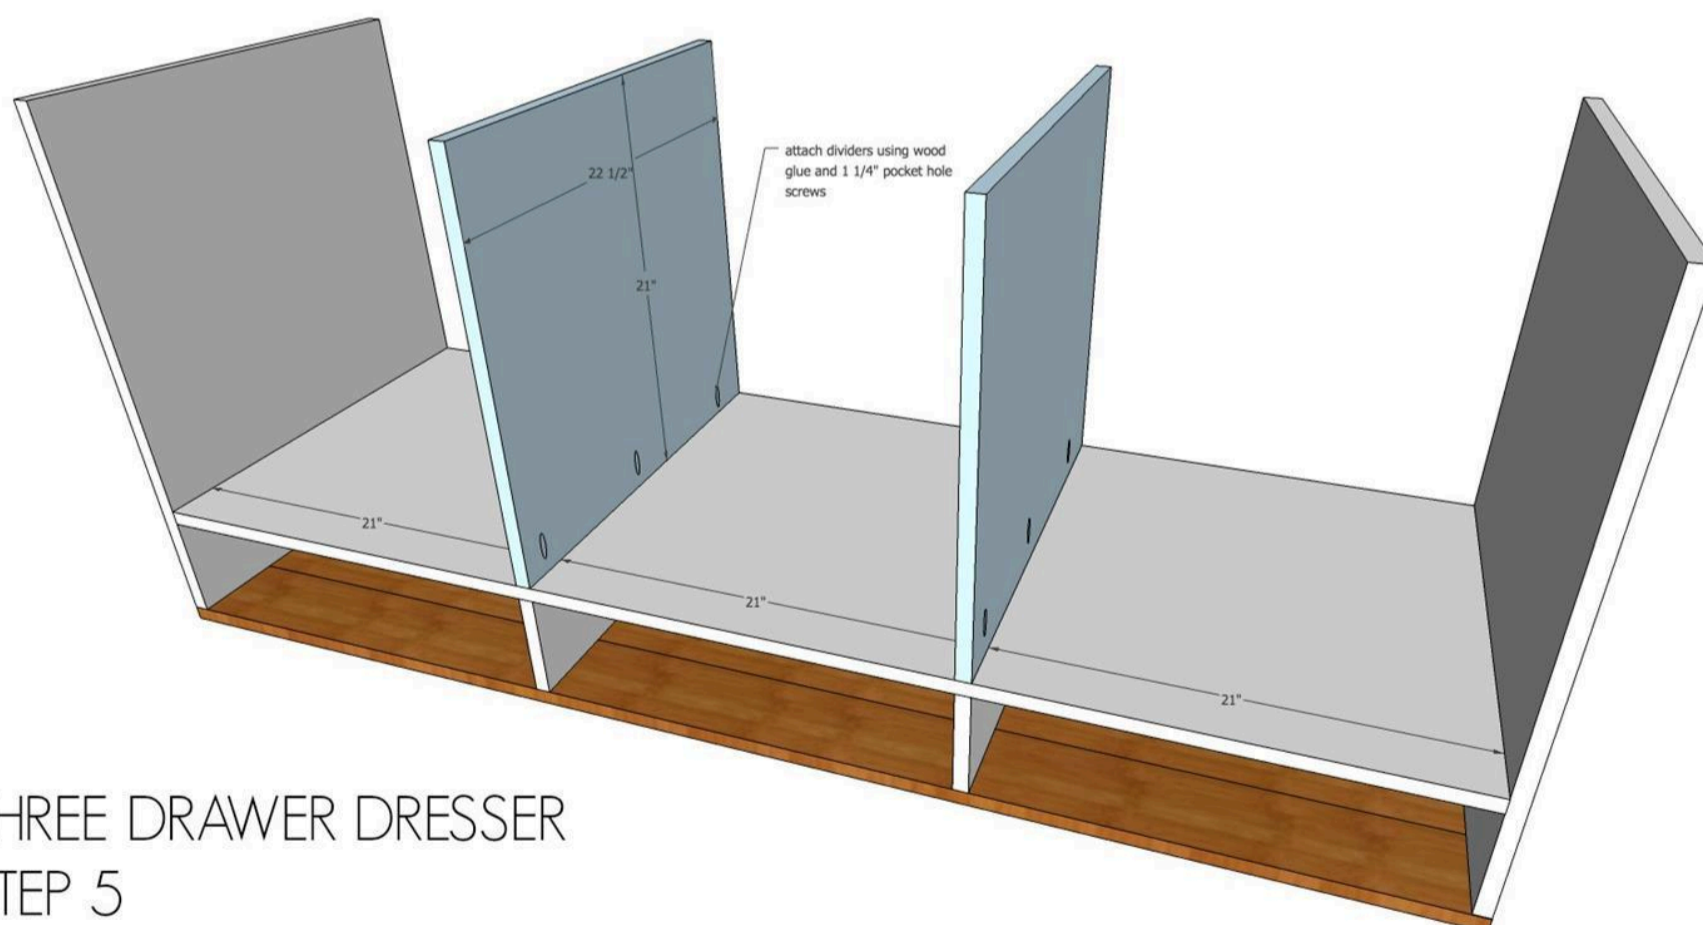


THREE DRAWER DRESSER STEP 5

thatsmyletter.blogspot.com

7

Step 6: drawer supports

Attach drawer supports using wood glue, pocket holes and 1 1/4" pocket hole screws.

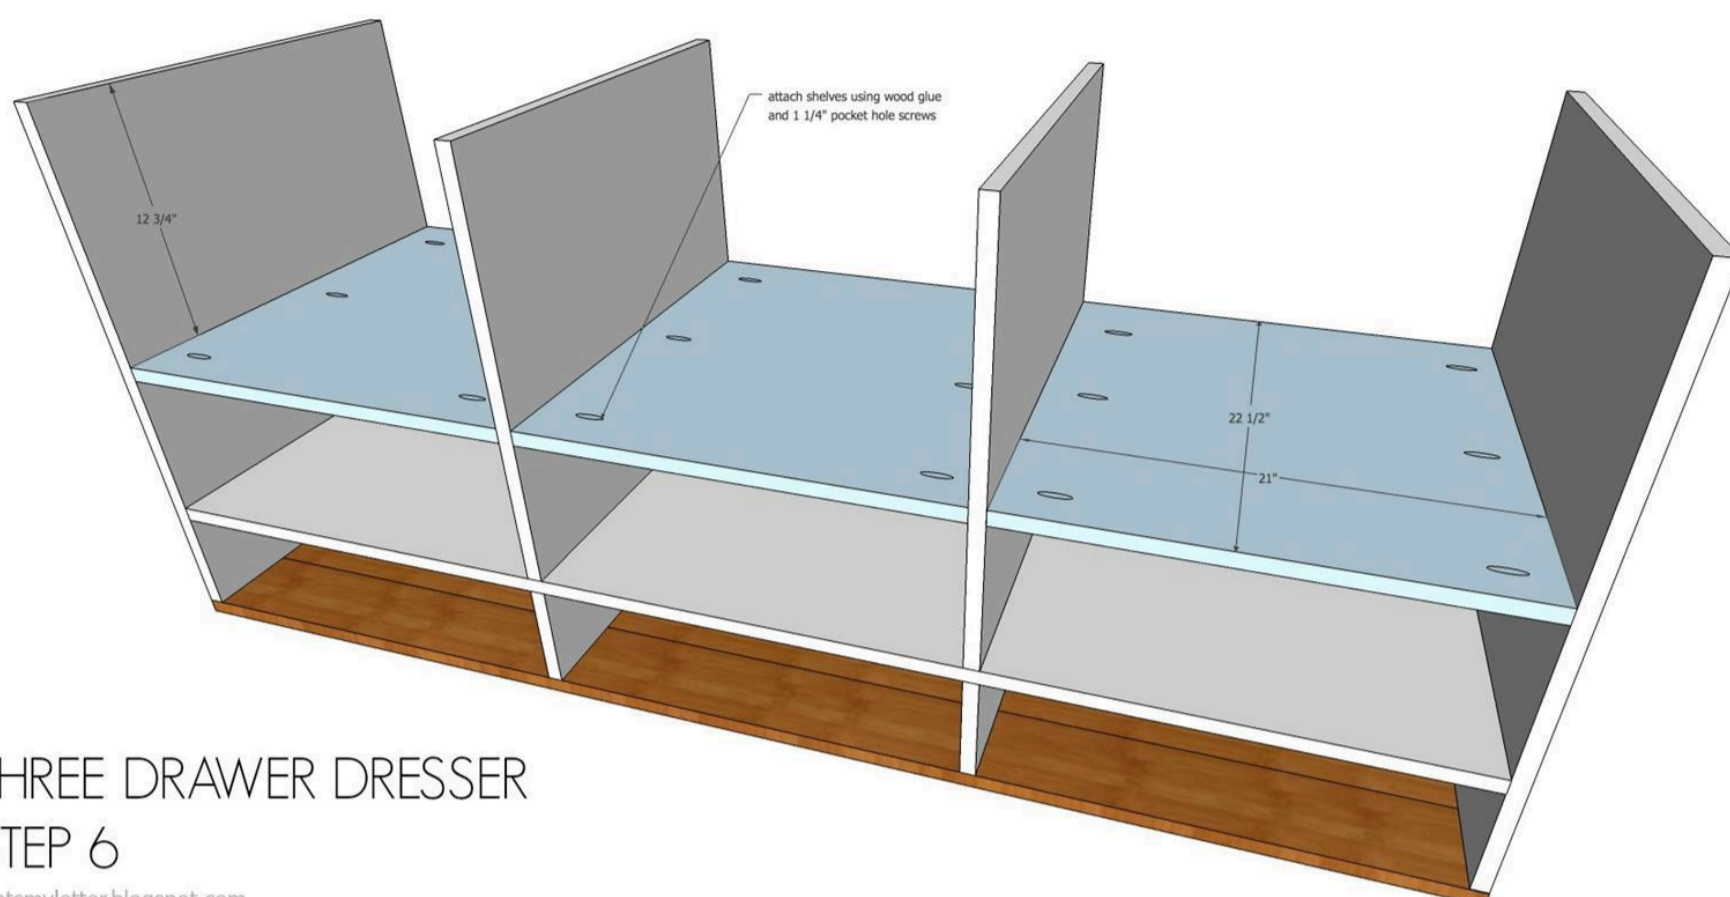


THREE DRAWER DRESSER STEP 6

thatsmyletter.blogspot.com

8

Step 7: drawer box

Construct drawer box using wood glue, pocket holes and 1 1/4" pocket hole screws.

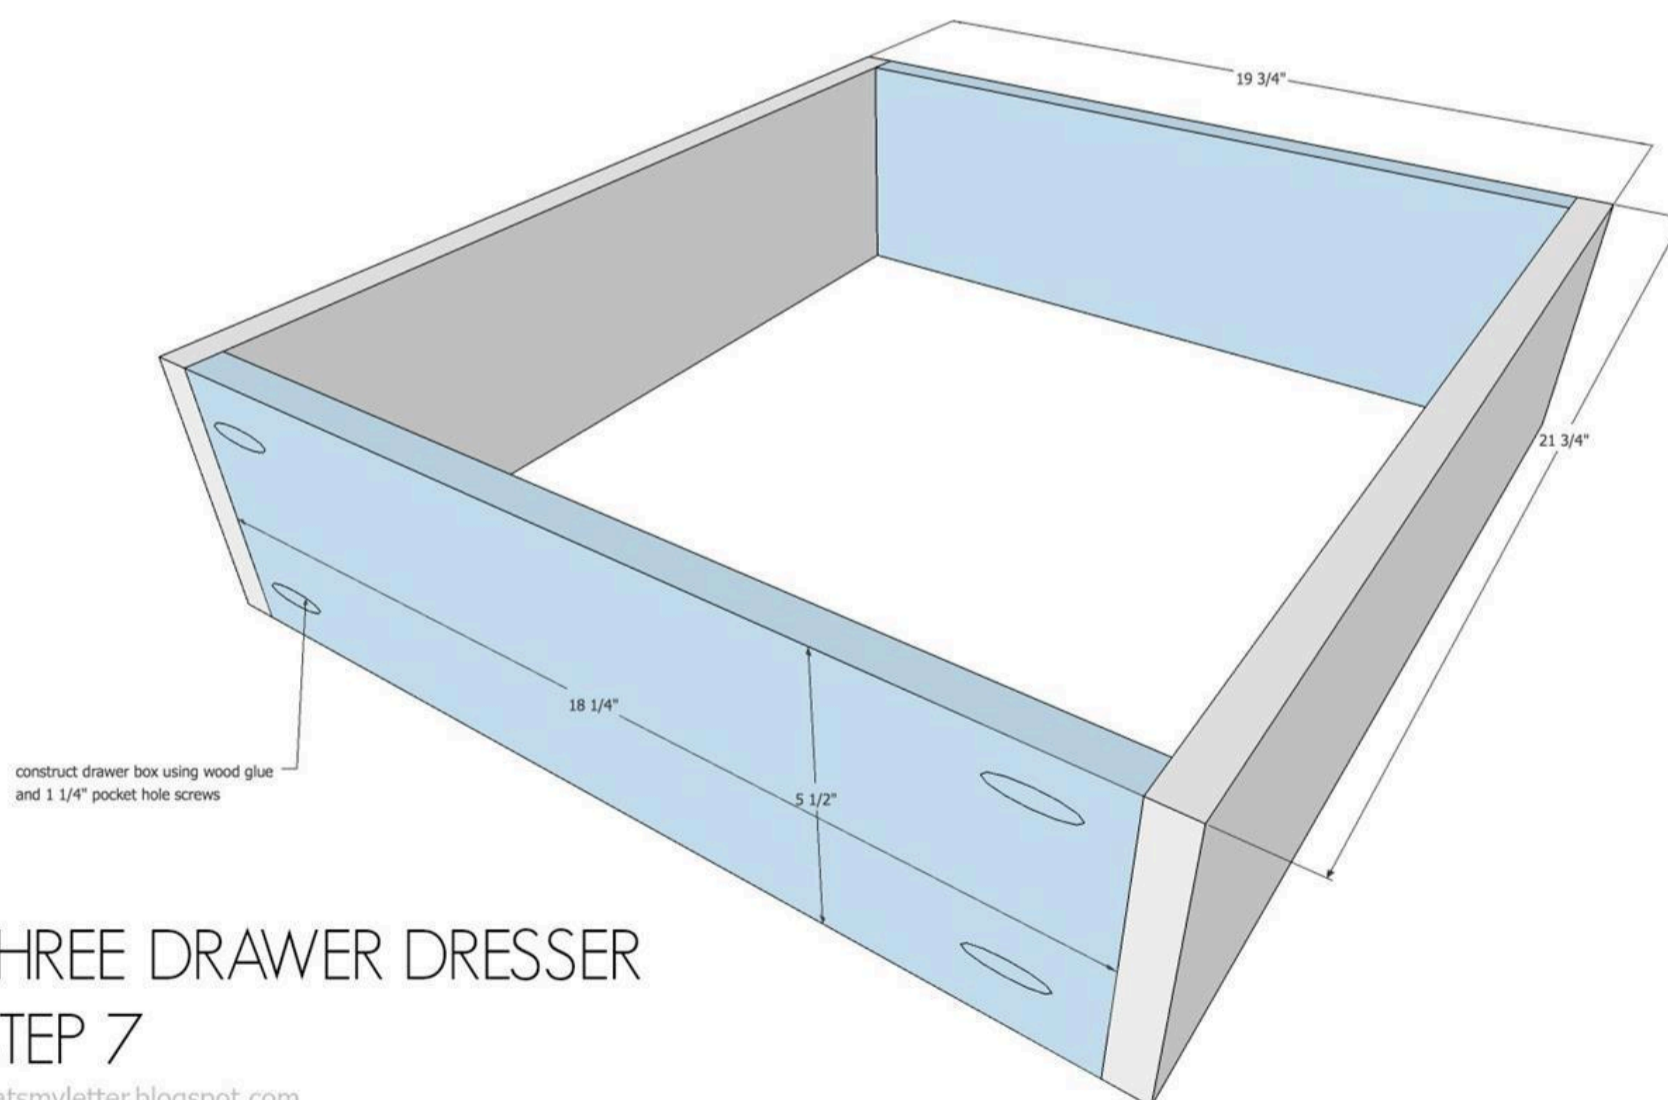


THREE DRAWER DRESSER STEP 7

thatsmyletter.blogspot.com

9

Step 8: drawer base

Attach base to drawer using wood glue and countersunk 1 1/4" screws.

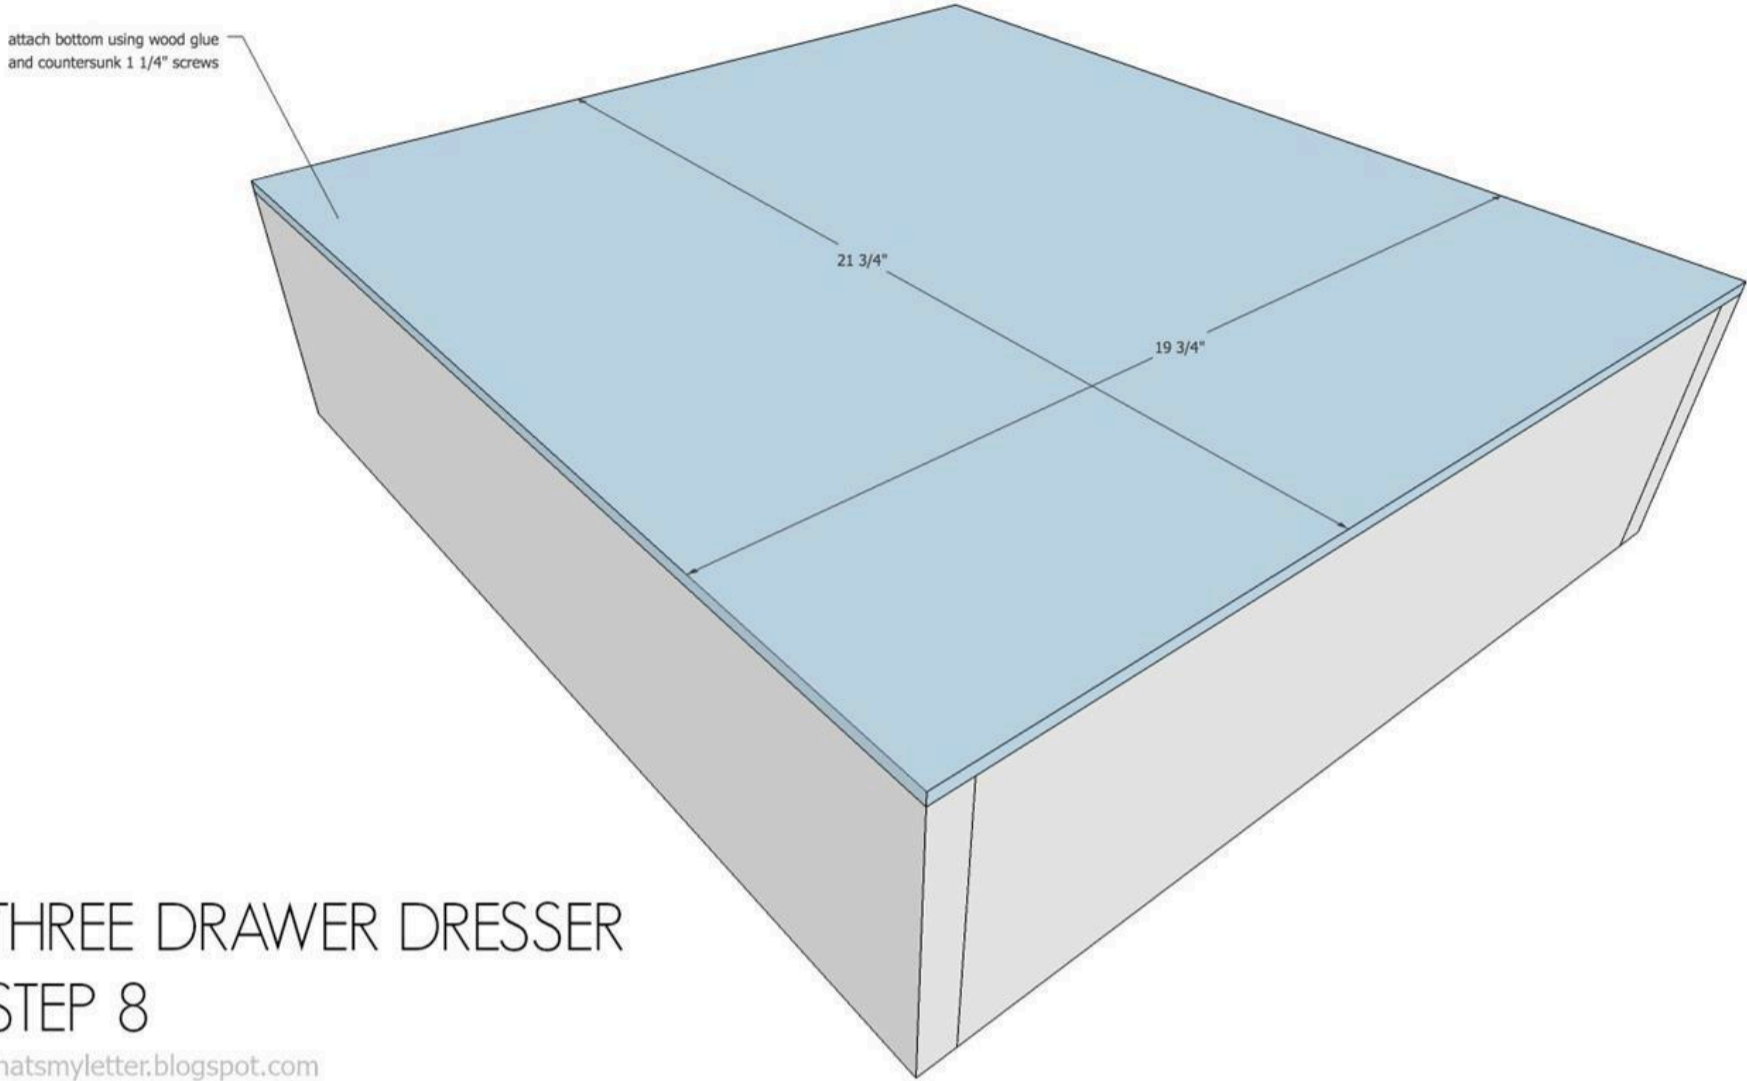


THREE DRAWER DRESSER
STEP 8

thatsmyletter.blogspot.com

10

Step 9: drawer front

Cut out drawer front handle pull as per sketch.

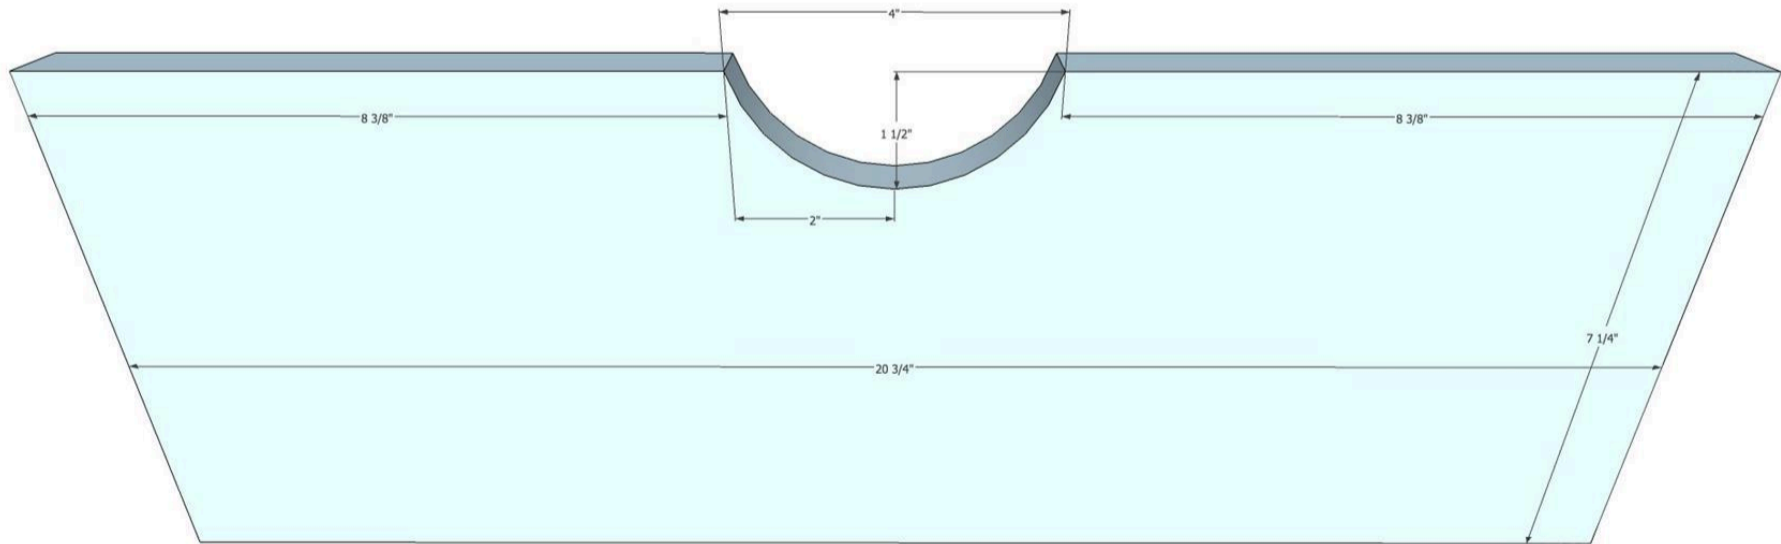


thatsmyletter.blogspot.com

11

Step 10: drawer front

Attach drawer glides as per hardware instructions. Put drawer front in place with wood glue and finish nails then remove drawer and secure front to box using countersunk 1 1/4" wood screws from interior.

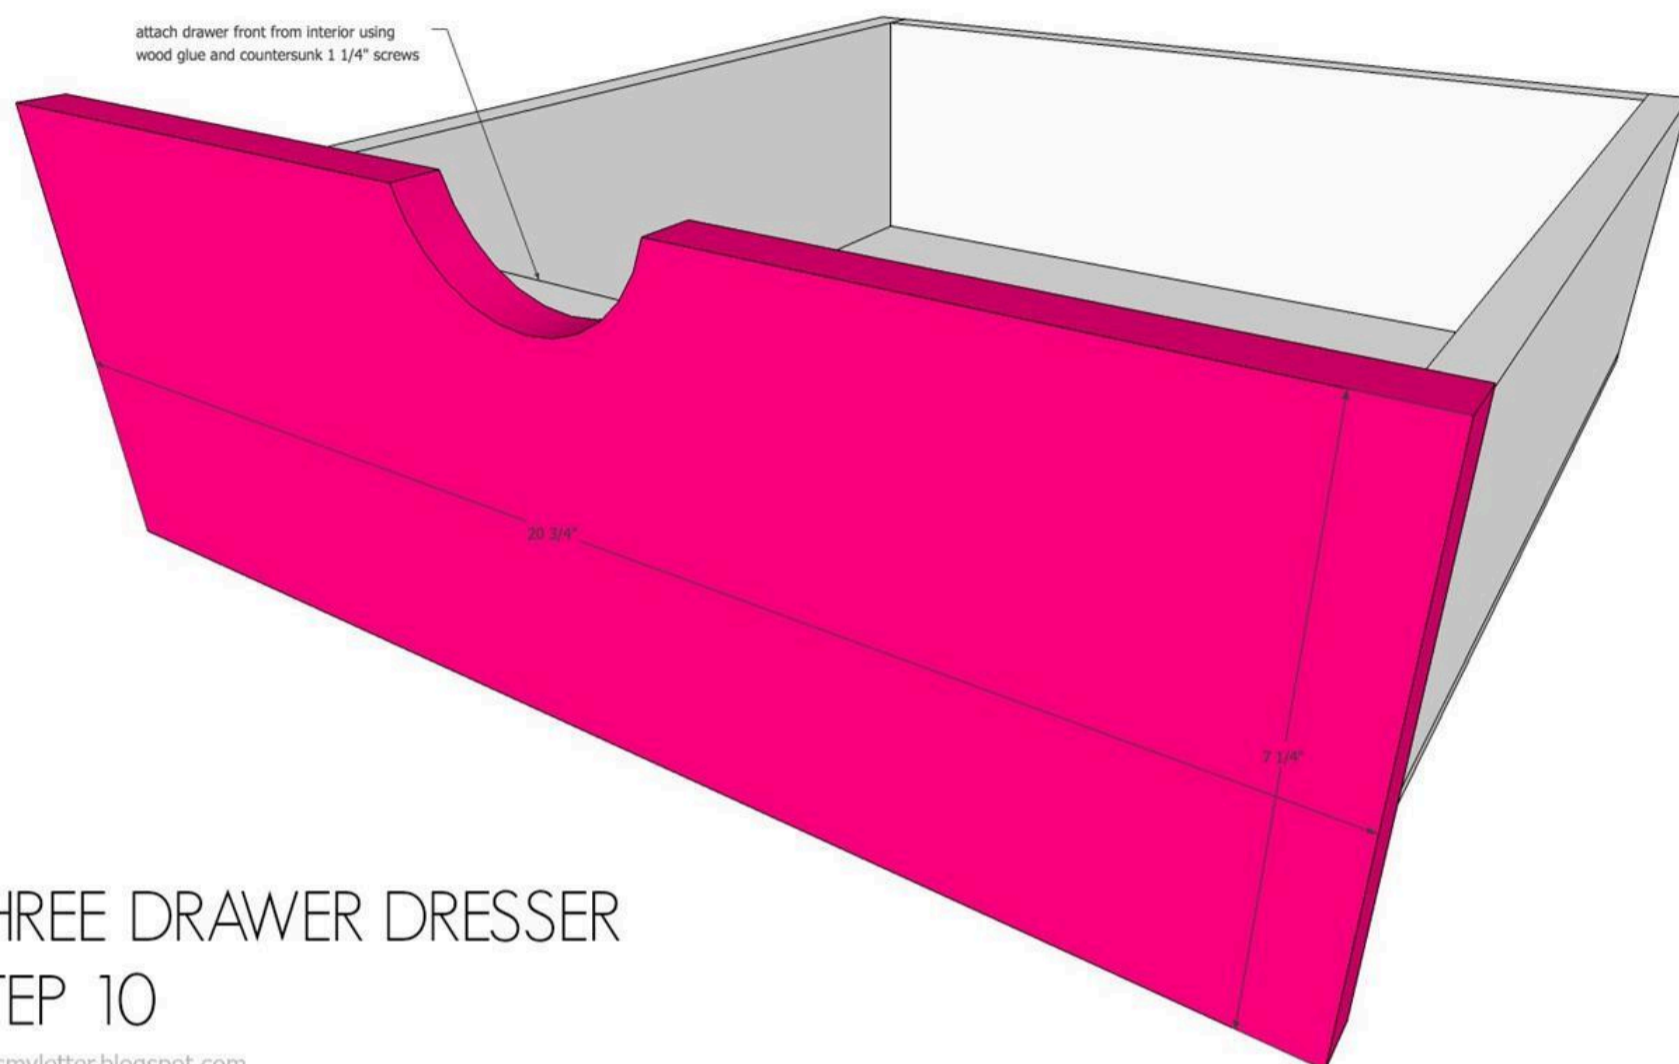


THREE DRAWER DRESSER STEP 10

thatsmyletter.blogspot.com

12**Step 11: backing**

Attach backing to unit using wood glue and 3/4" finish nails.

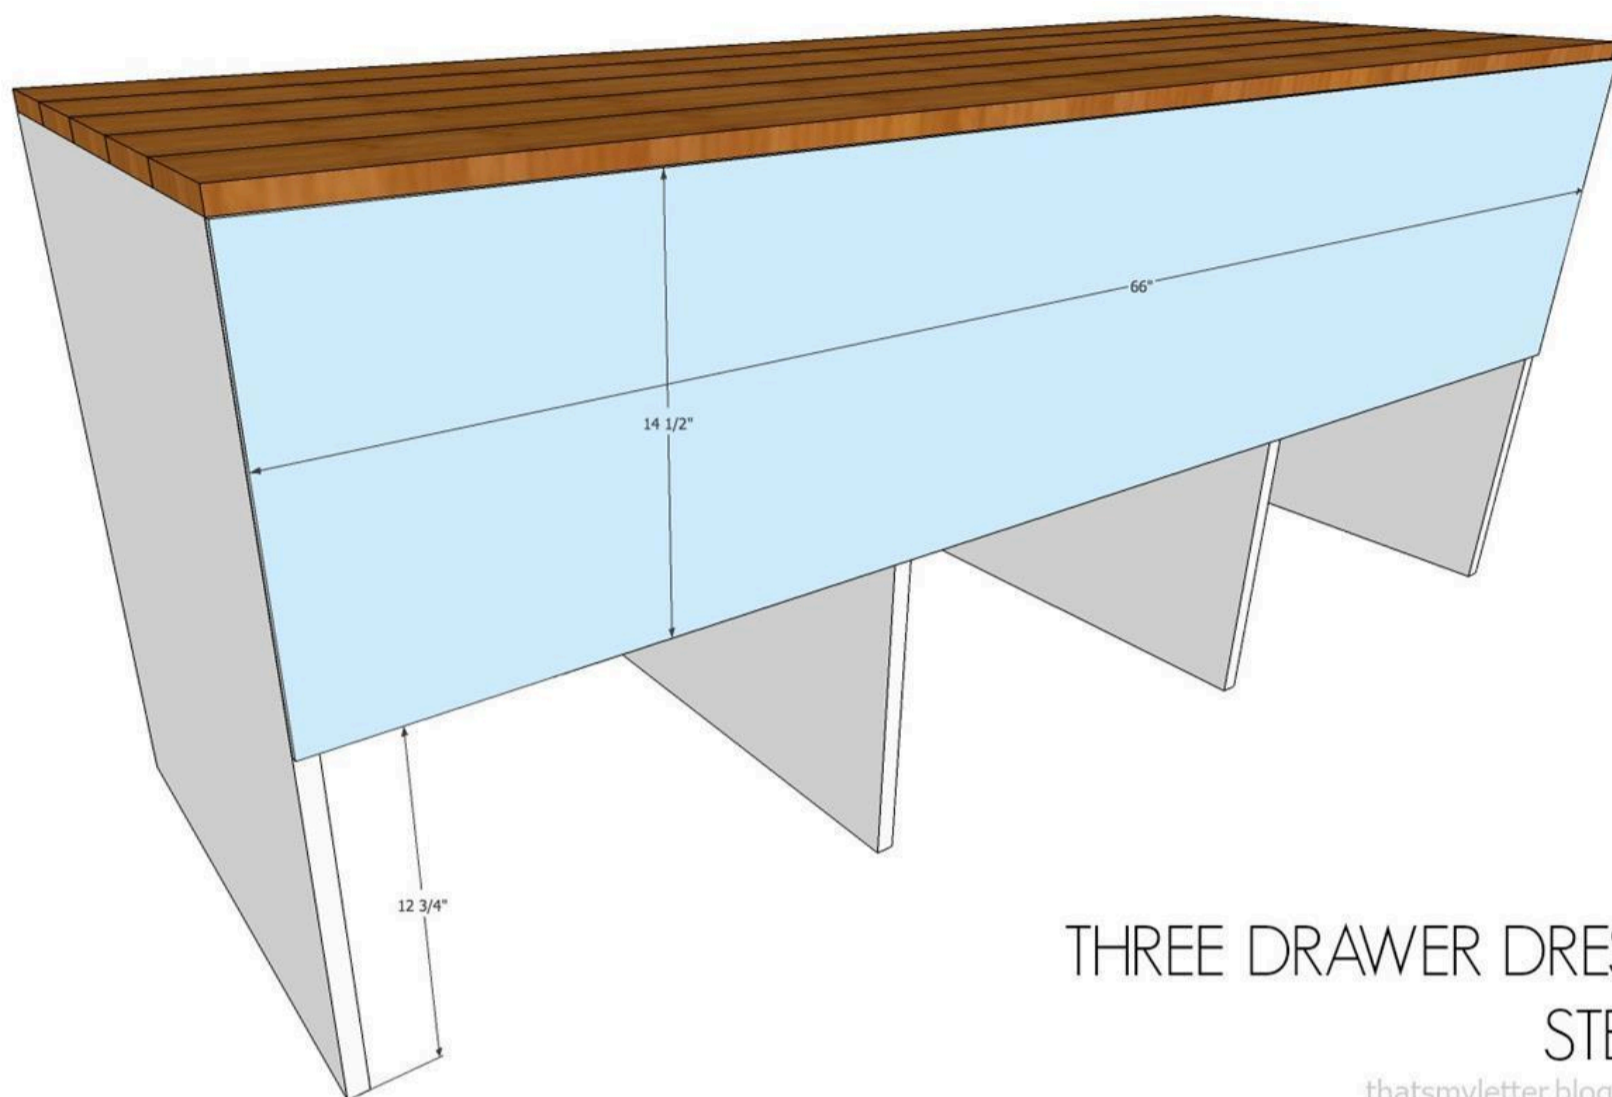

THREE DRAWER DRESSER
STEP 11

thatsmyletter.blogspot.com