
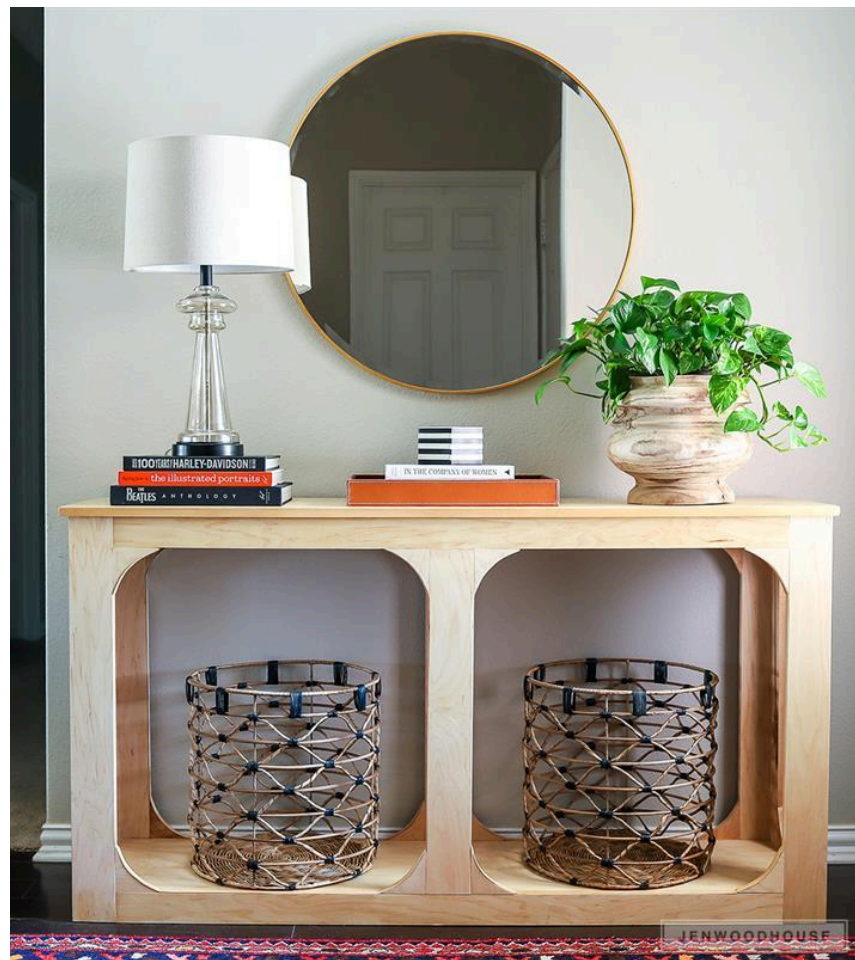


# One Sheet Plywood Console

By **Jen Woodhouse**

Difficulty  
Moderate

Build this stylish console table out of a single sheet of plywood! Its minimalist yet chic design makes it a versatile piece that will look stunning anywhere in your home.

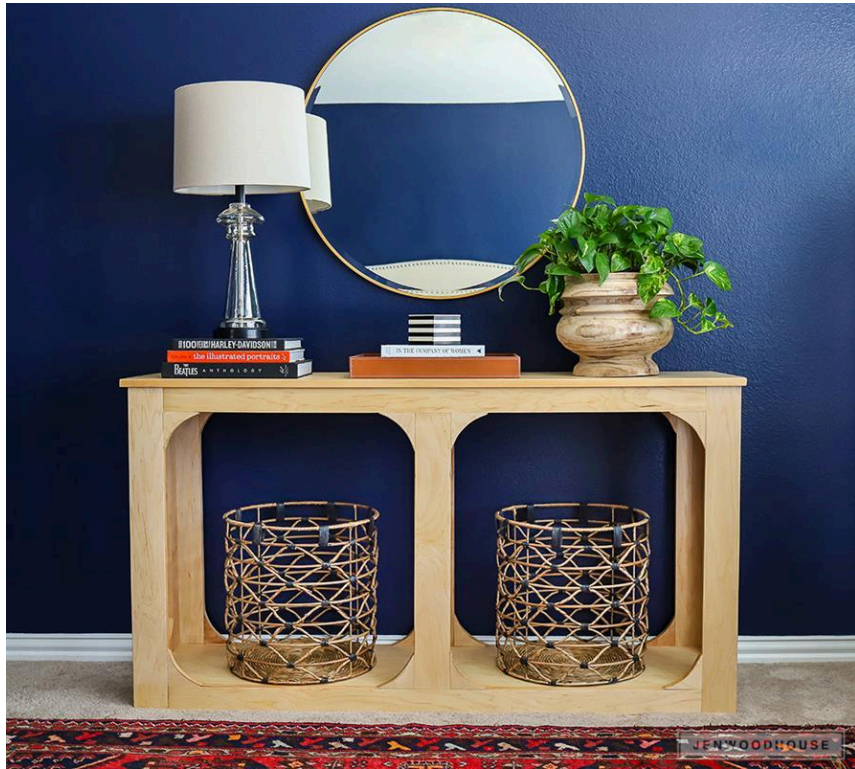

# Tools

## Kreg Tools

- Accu-Cut™  
[Accu-Cut™](#)
- Rip-Cut™  
[Rip-Cut™](#)
- Kreg® Pocket-Hole Jig 720  
[Kreg® Pocket-Hole Jig 720](#)

## Other Tools

- Circular Saw (cordless)
- Jigsaw
- Scroll Saw
- Square
- Table Saw
- Tape Measure
- Drill (cordless)
- Nail Gun
- Sander

# Materials

## Wood Products


- 1 Plywood , 3/4" Thick , Full Sheet

## Hardware & Supplies

- 1 3/4-inch Wood Veneer Edge Banding
- 1 1 1/4-inch Pocket Screws
- 1 1 1/4-inch Brad Nails
- 1 1 Inch Brad Nails
- 1 Wood Glue

# Cut List & Parts

- 1 Top , 3/4" X 61" X 16-1/2"
- 1 Bottom , 3/4" X 58-1/2" X 14"
- 4 Long Aprons , 3/4" X 53" X 2-1/2"
- 4 Short Aprons , 3/4" X 9" X 2-1/2"
- 6 Front, Back, Middle Legs , 3/4" X 32-1/2" X 3-1/2"
- 4 Side Legs , 3/4" X 32-1/2" X 2-1/2"
- 24 Curved Pieces , 3/4" X 3-1/2" X 3-1/2"

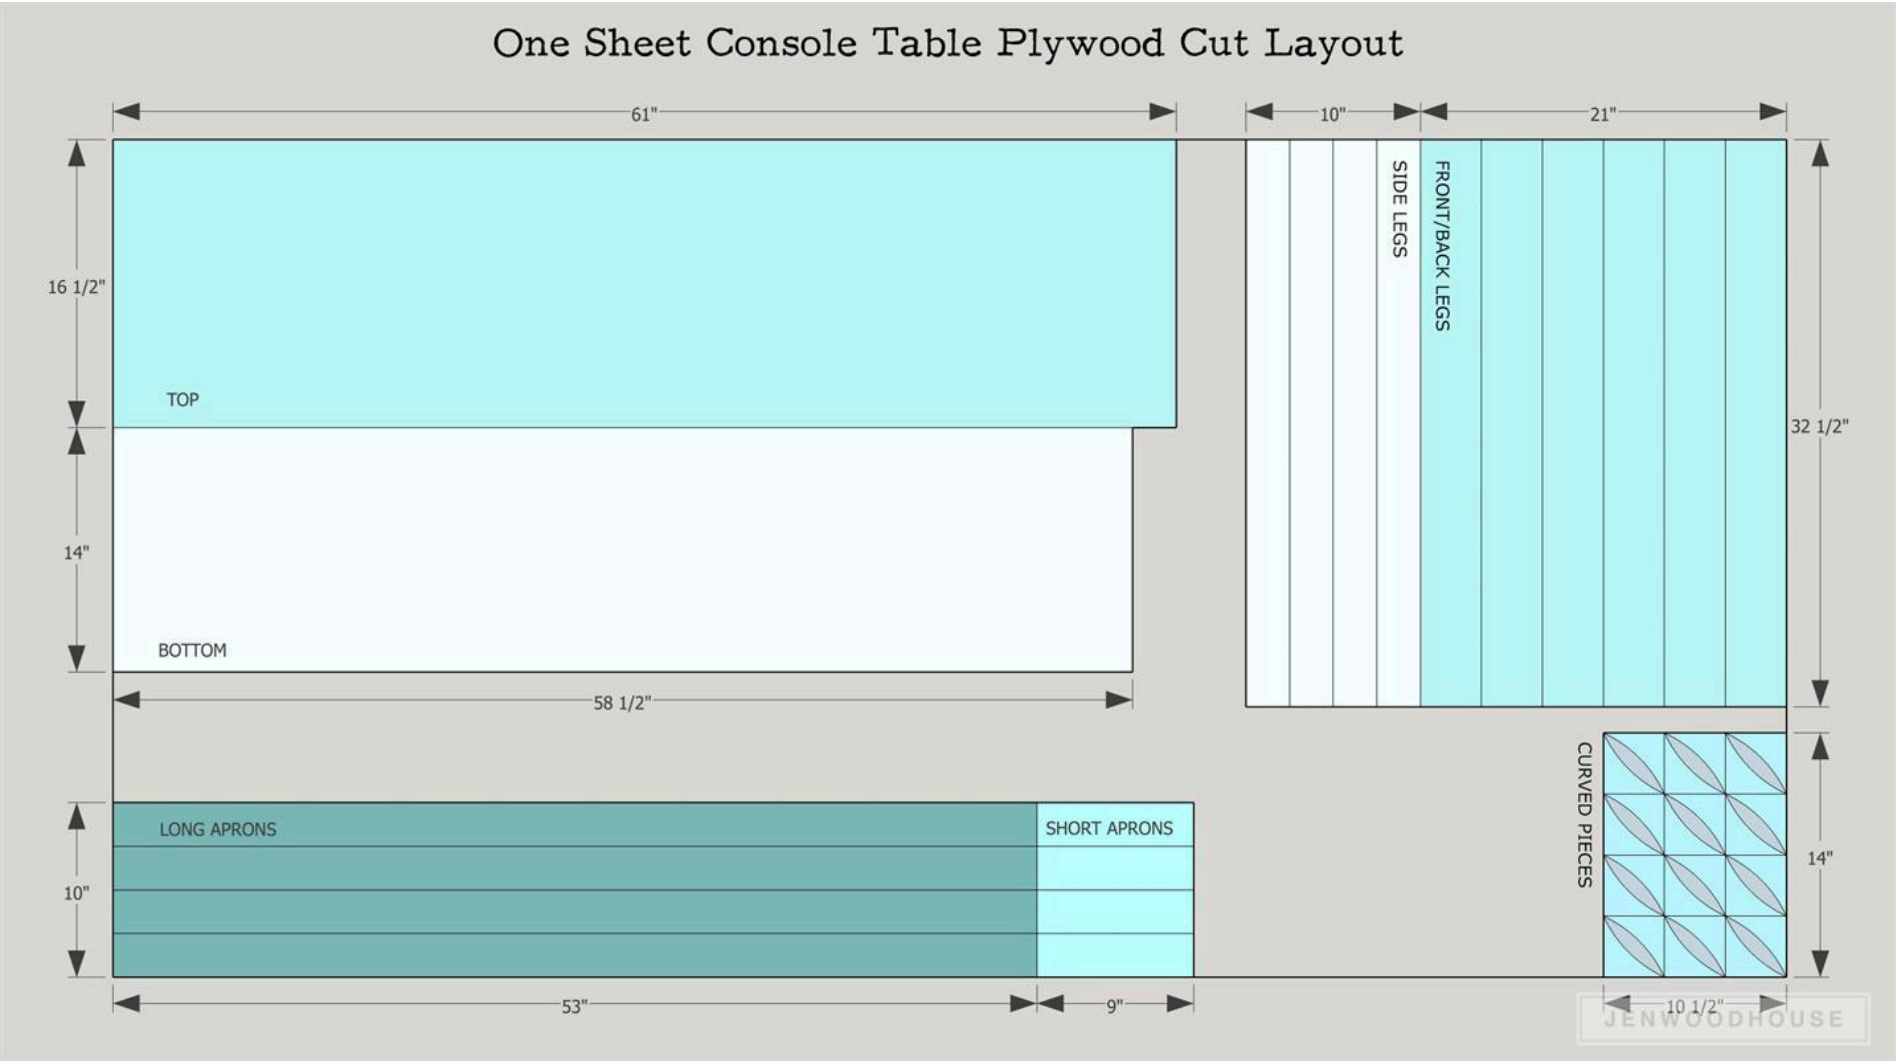


# Directions

1

**Build the Two Sides**

Measure, mark, and cut side legs and short aprons to size. Drill 3/4-inch pocket holes into the ends of the short aprons and attach to the side legs with 1 1/4-inch pocket screws. Be sure to drill 3/4-inch pocket holes facing up in the side legs to attach the top in later steps.

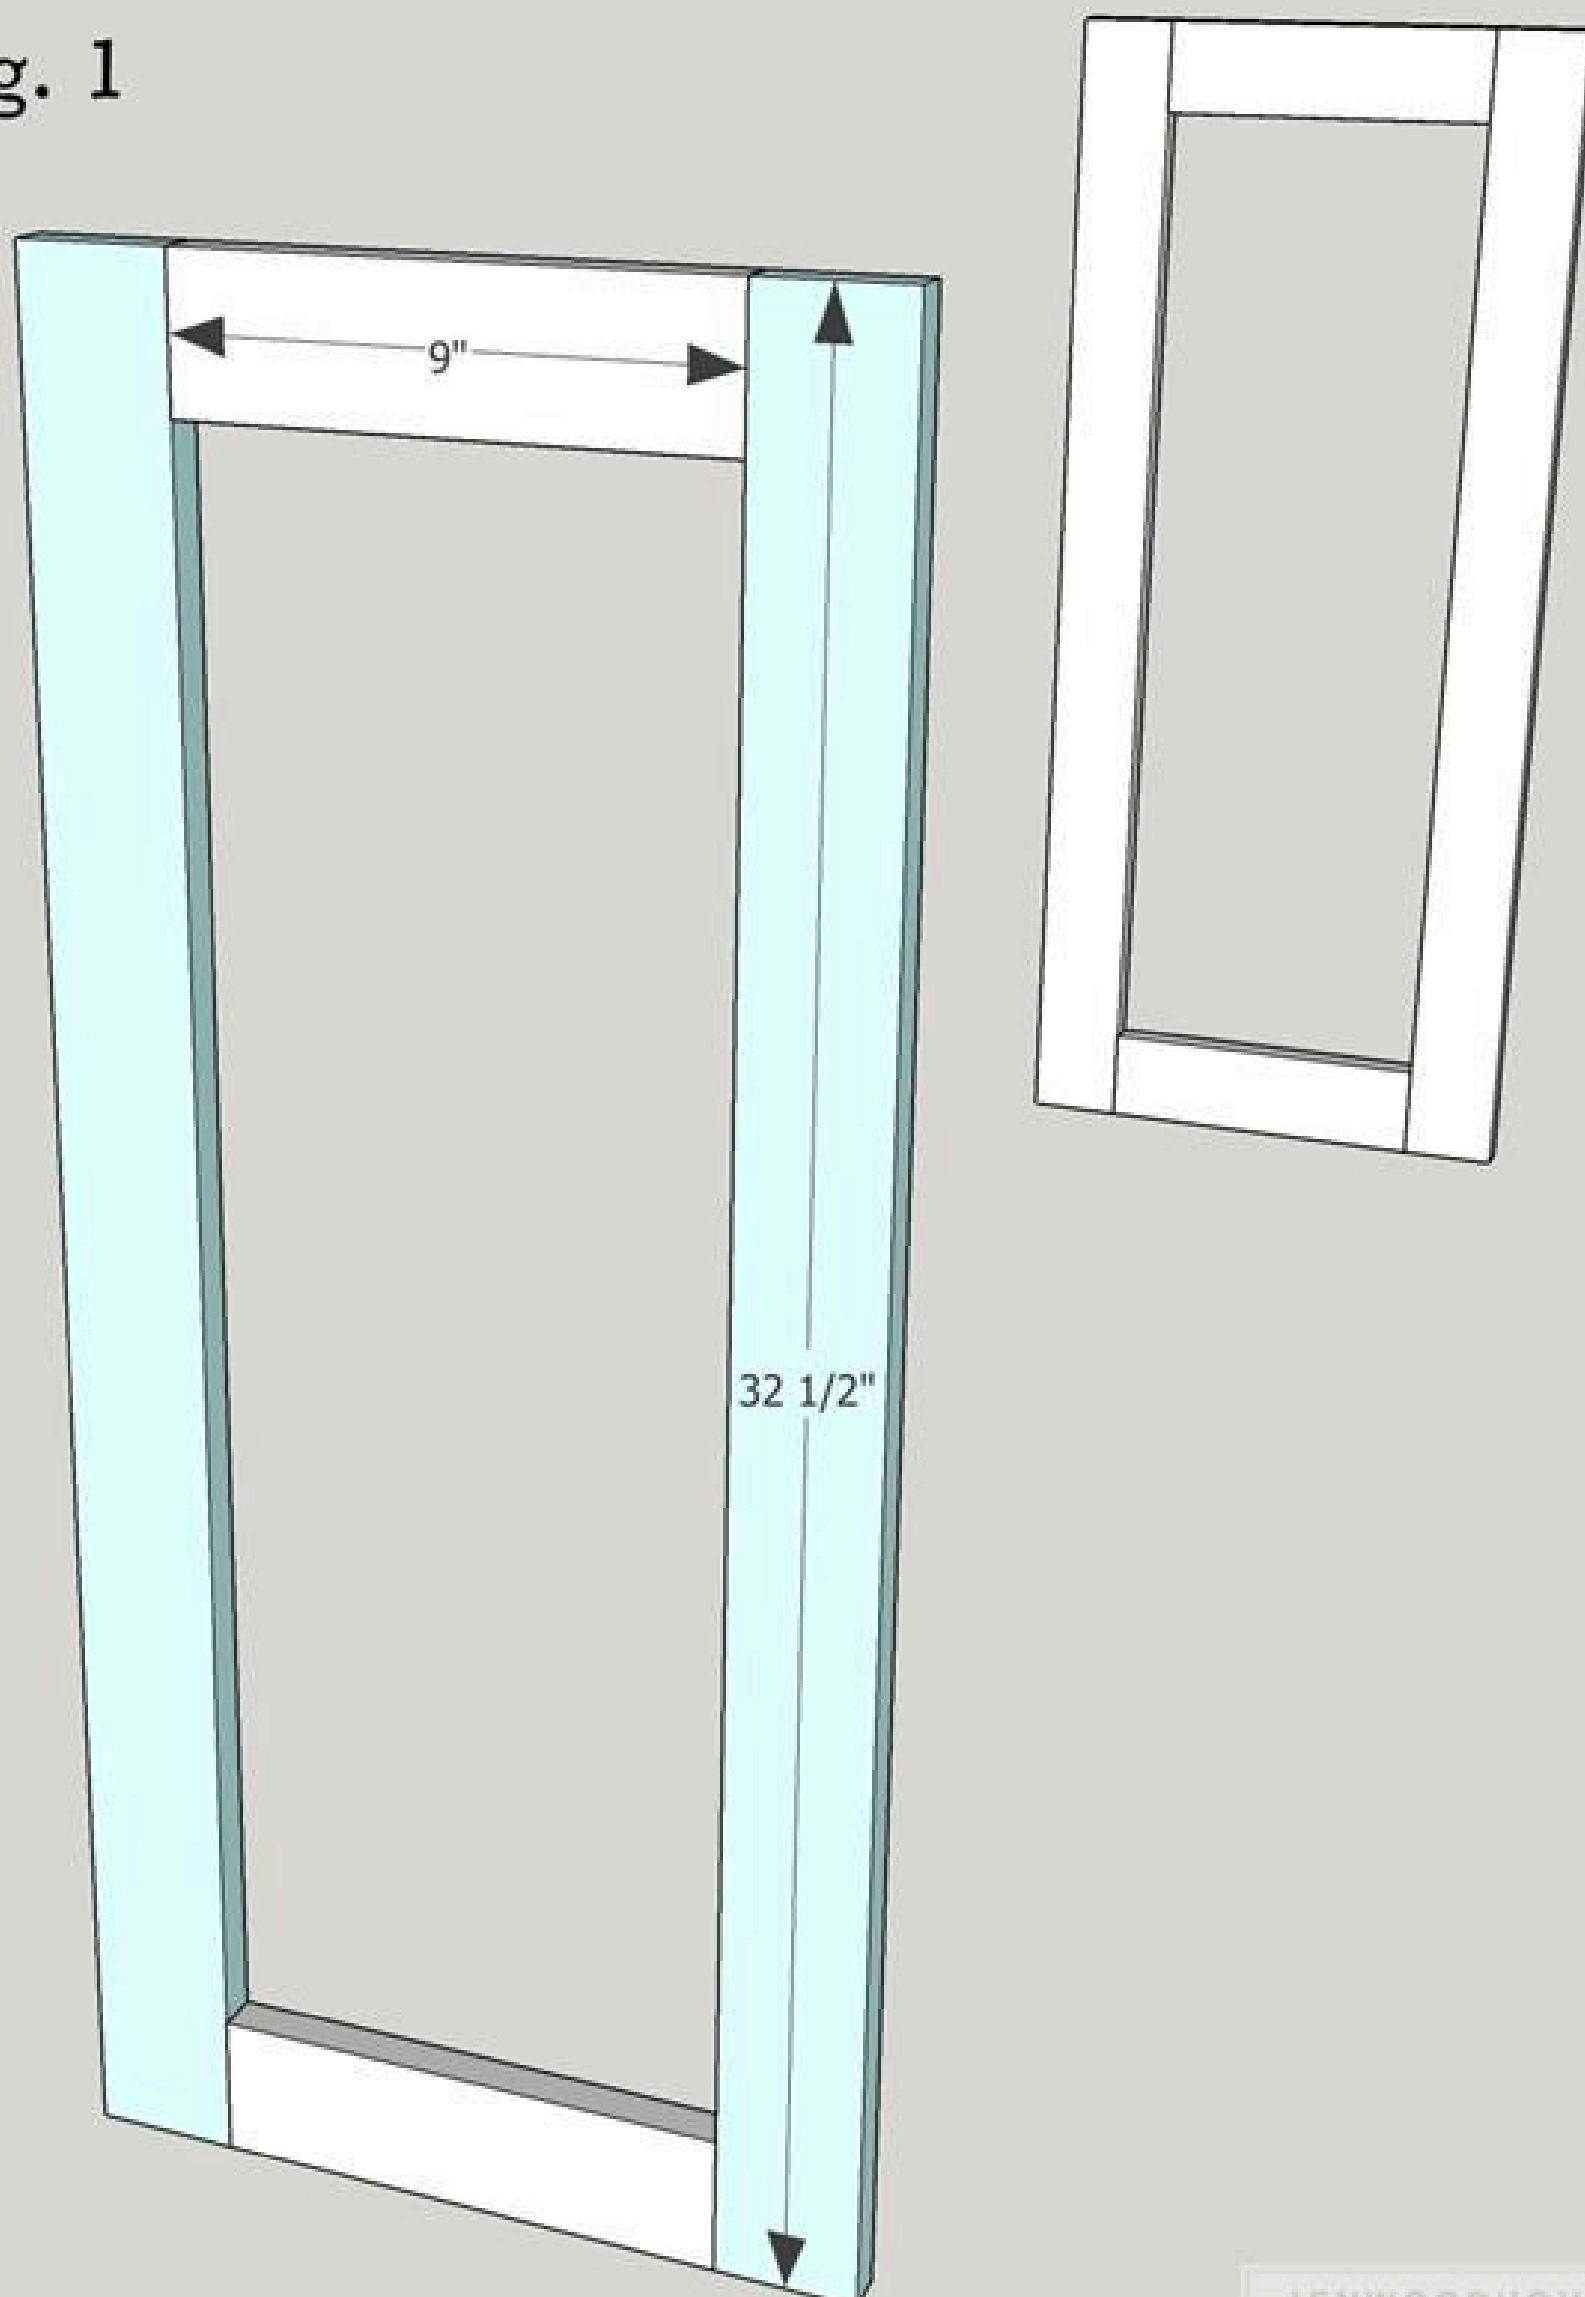**Fig. 1**


JENWOODHOUSE

2

### Add the Front and Back Legs

Measure, mark, and cut the front and back legs to size. Attach the front and back legs to the side legs with 1 1/4-inch brad nails and wood glue.

Fig. 2

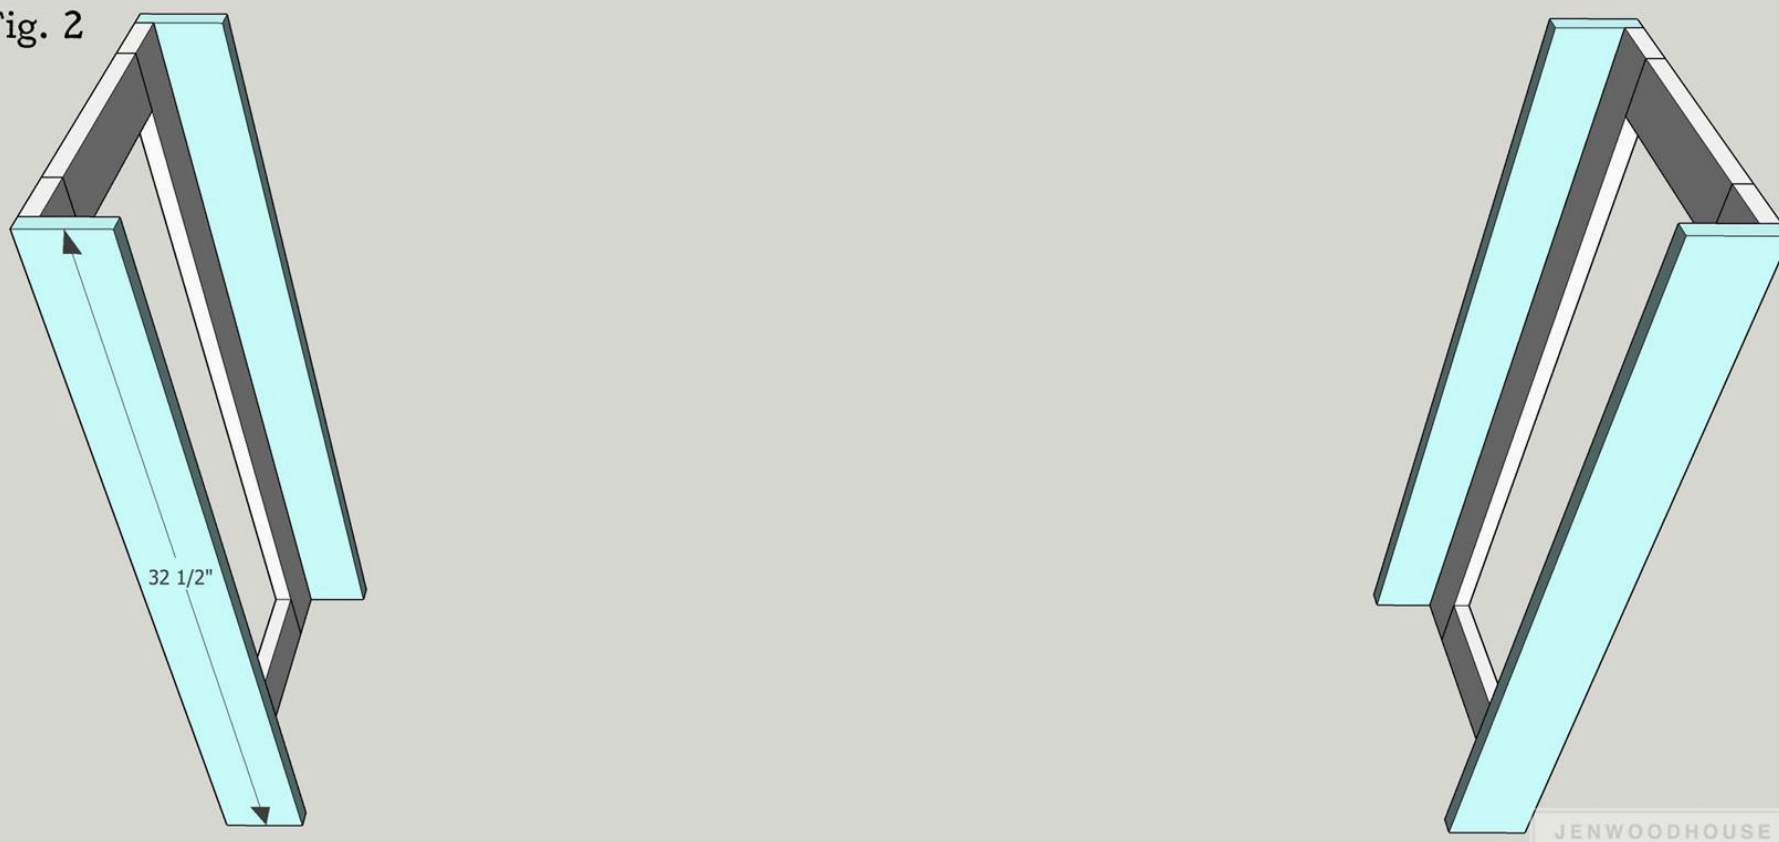


3

### Attach the Bottom Shelf

Measure, mark, and cut bottom shelf to size. Drill 3/4-inch pocket holes into the ends and attach to the sides with 1 1/4-inch pocket screws.

Fig. 3

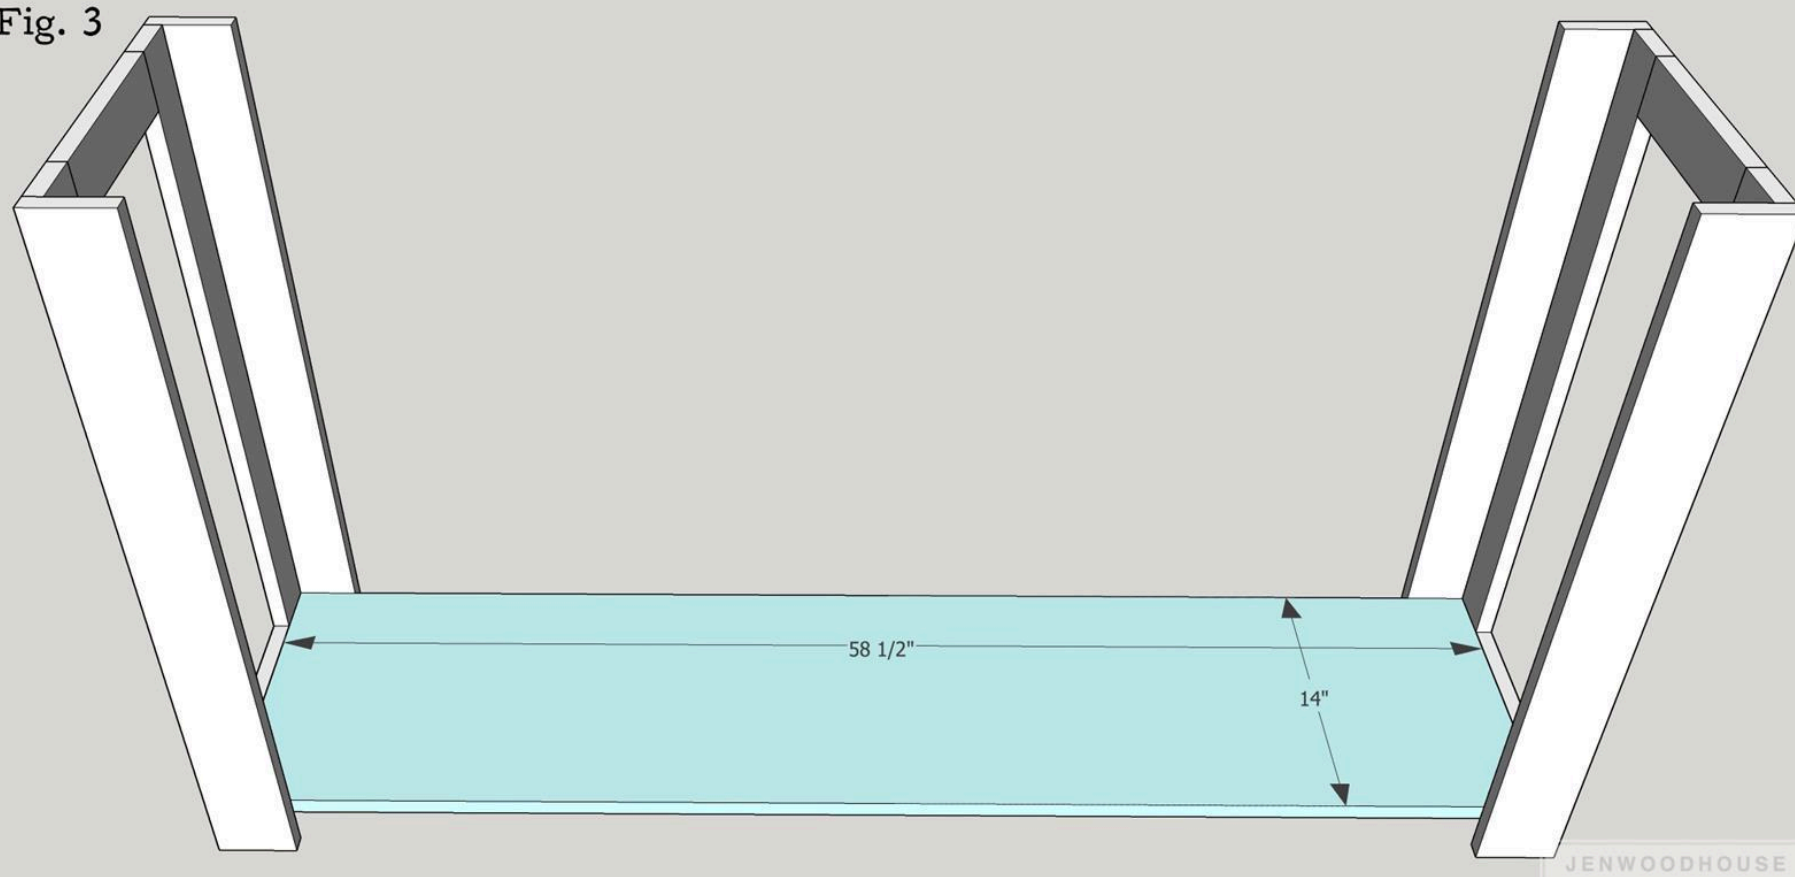




4

**Add the Long Aprons To the Bottom**

Measure, mark, and cut long aprons to size. Attach to carcass as shown with 1 1/4-inch brad nails and wood glue.

Fig. 4

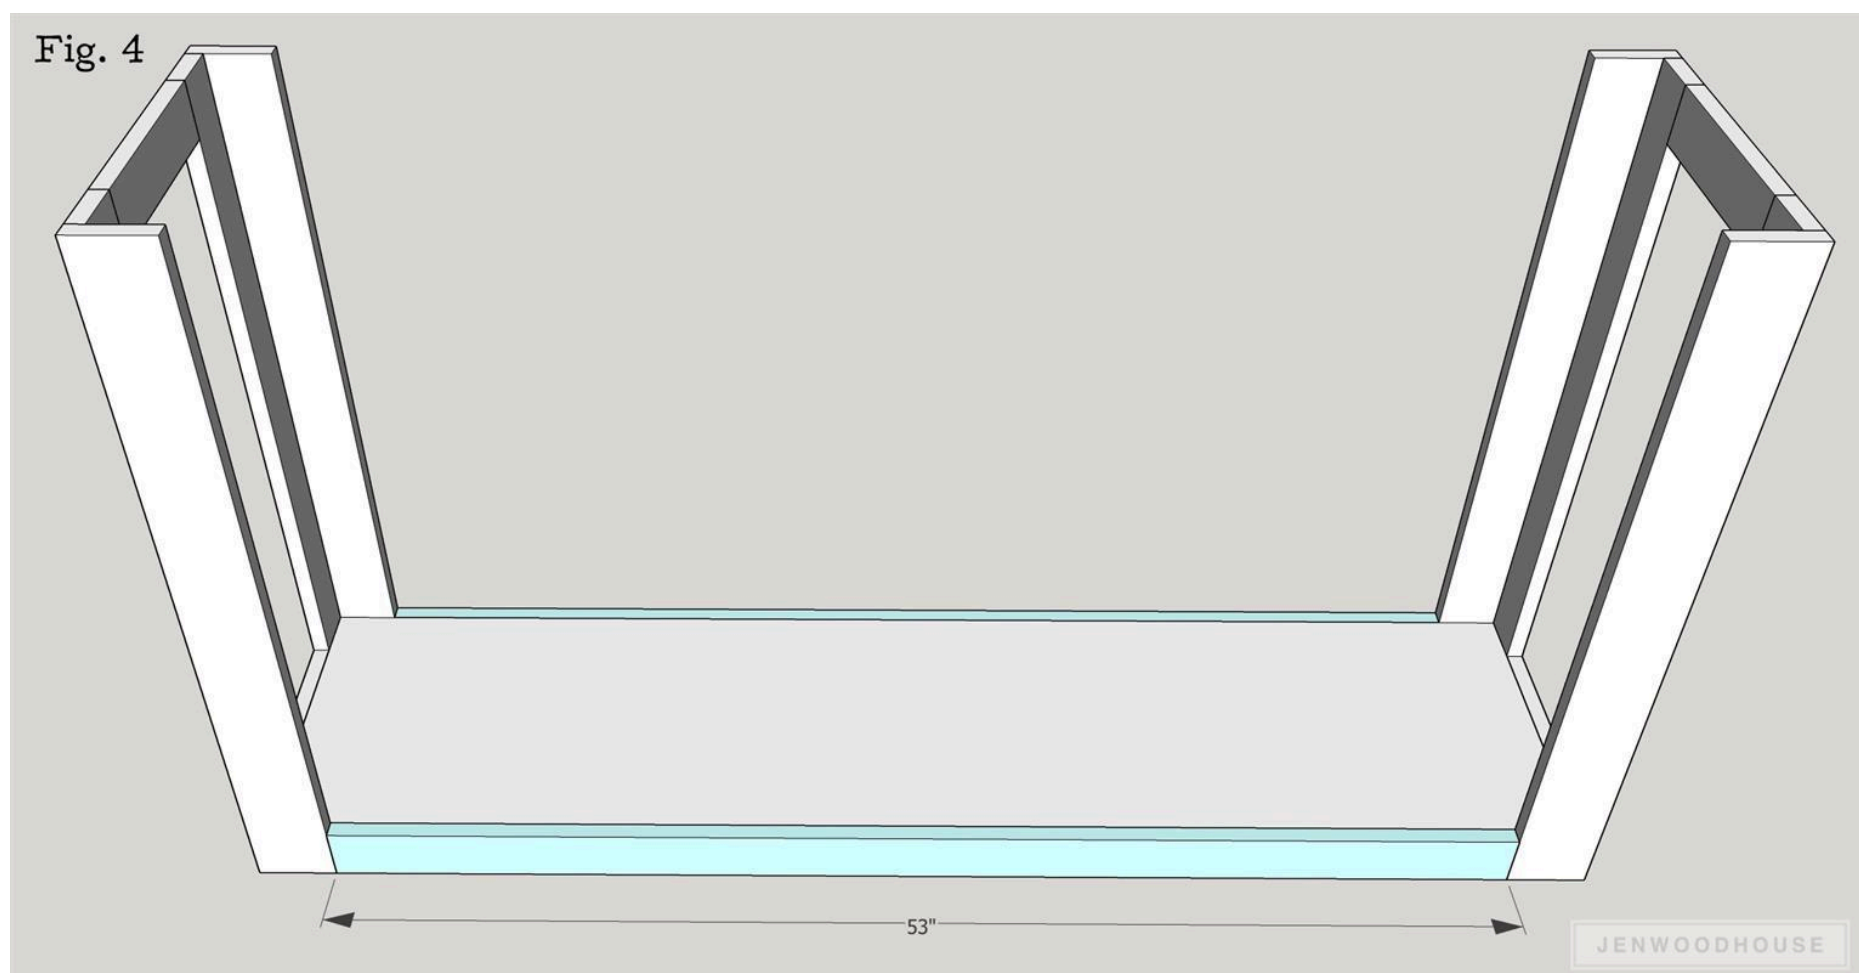


5

**Add the Long Aprons To the Top**

Measure, mark, and cut long aprons to size. Drill 3/4-inch pocket holes into the ends and attach to carcass with 1 1/4-inch pocket screws. Be sure to drill 3/4-inch pocket holes facing up to attach the top in later steps.

Fig. 5

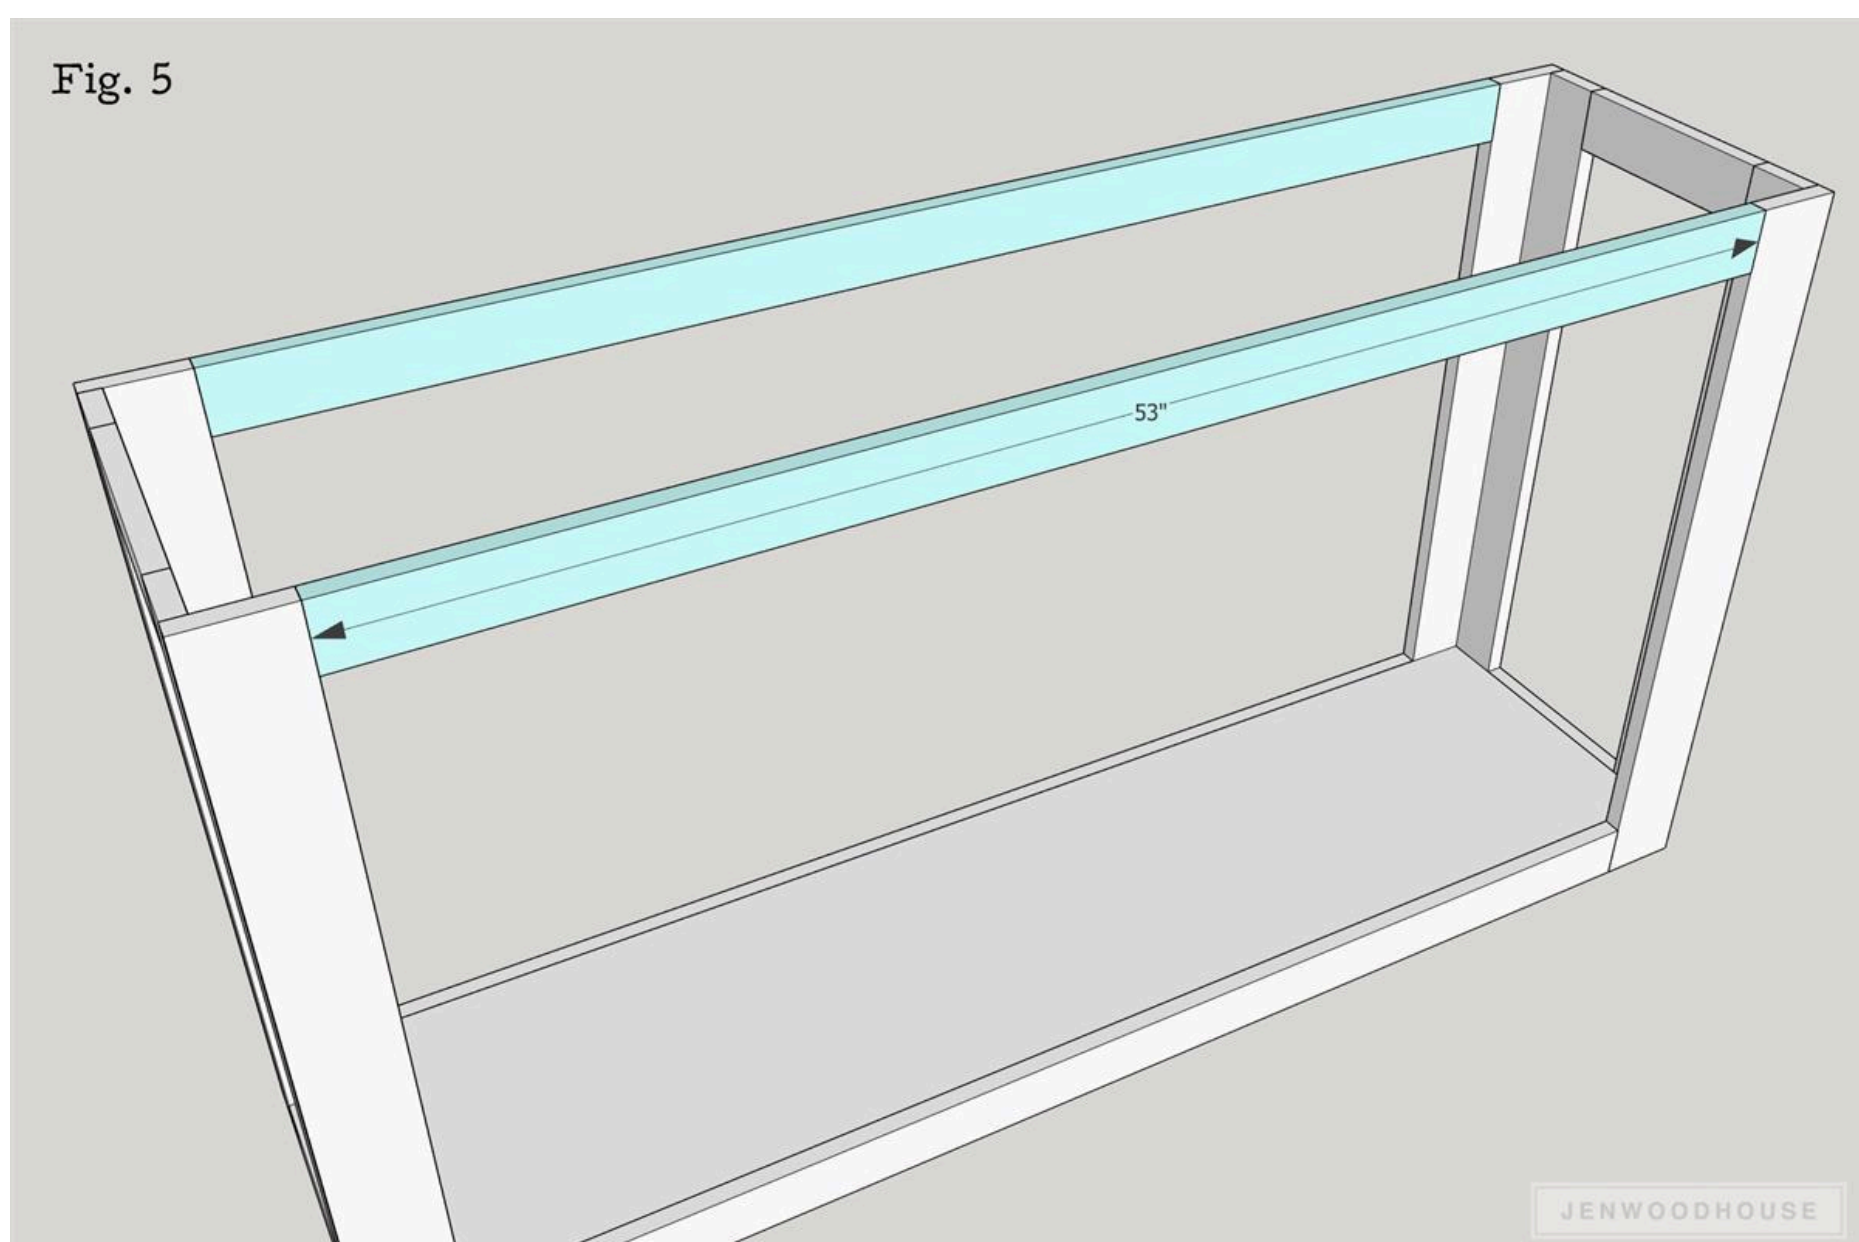


## 6

**Attach the Middle Legs**

Measure, mark, and cut middle legs to size. Drill 3/4-inch pocket holes into the ends, find the midpoint in the carcass and attach middle legs with 1 1/4-inch pocket screws.

Fig. 6

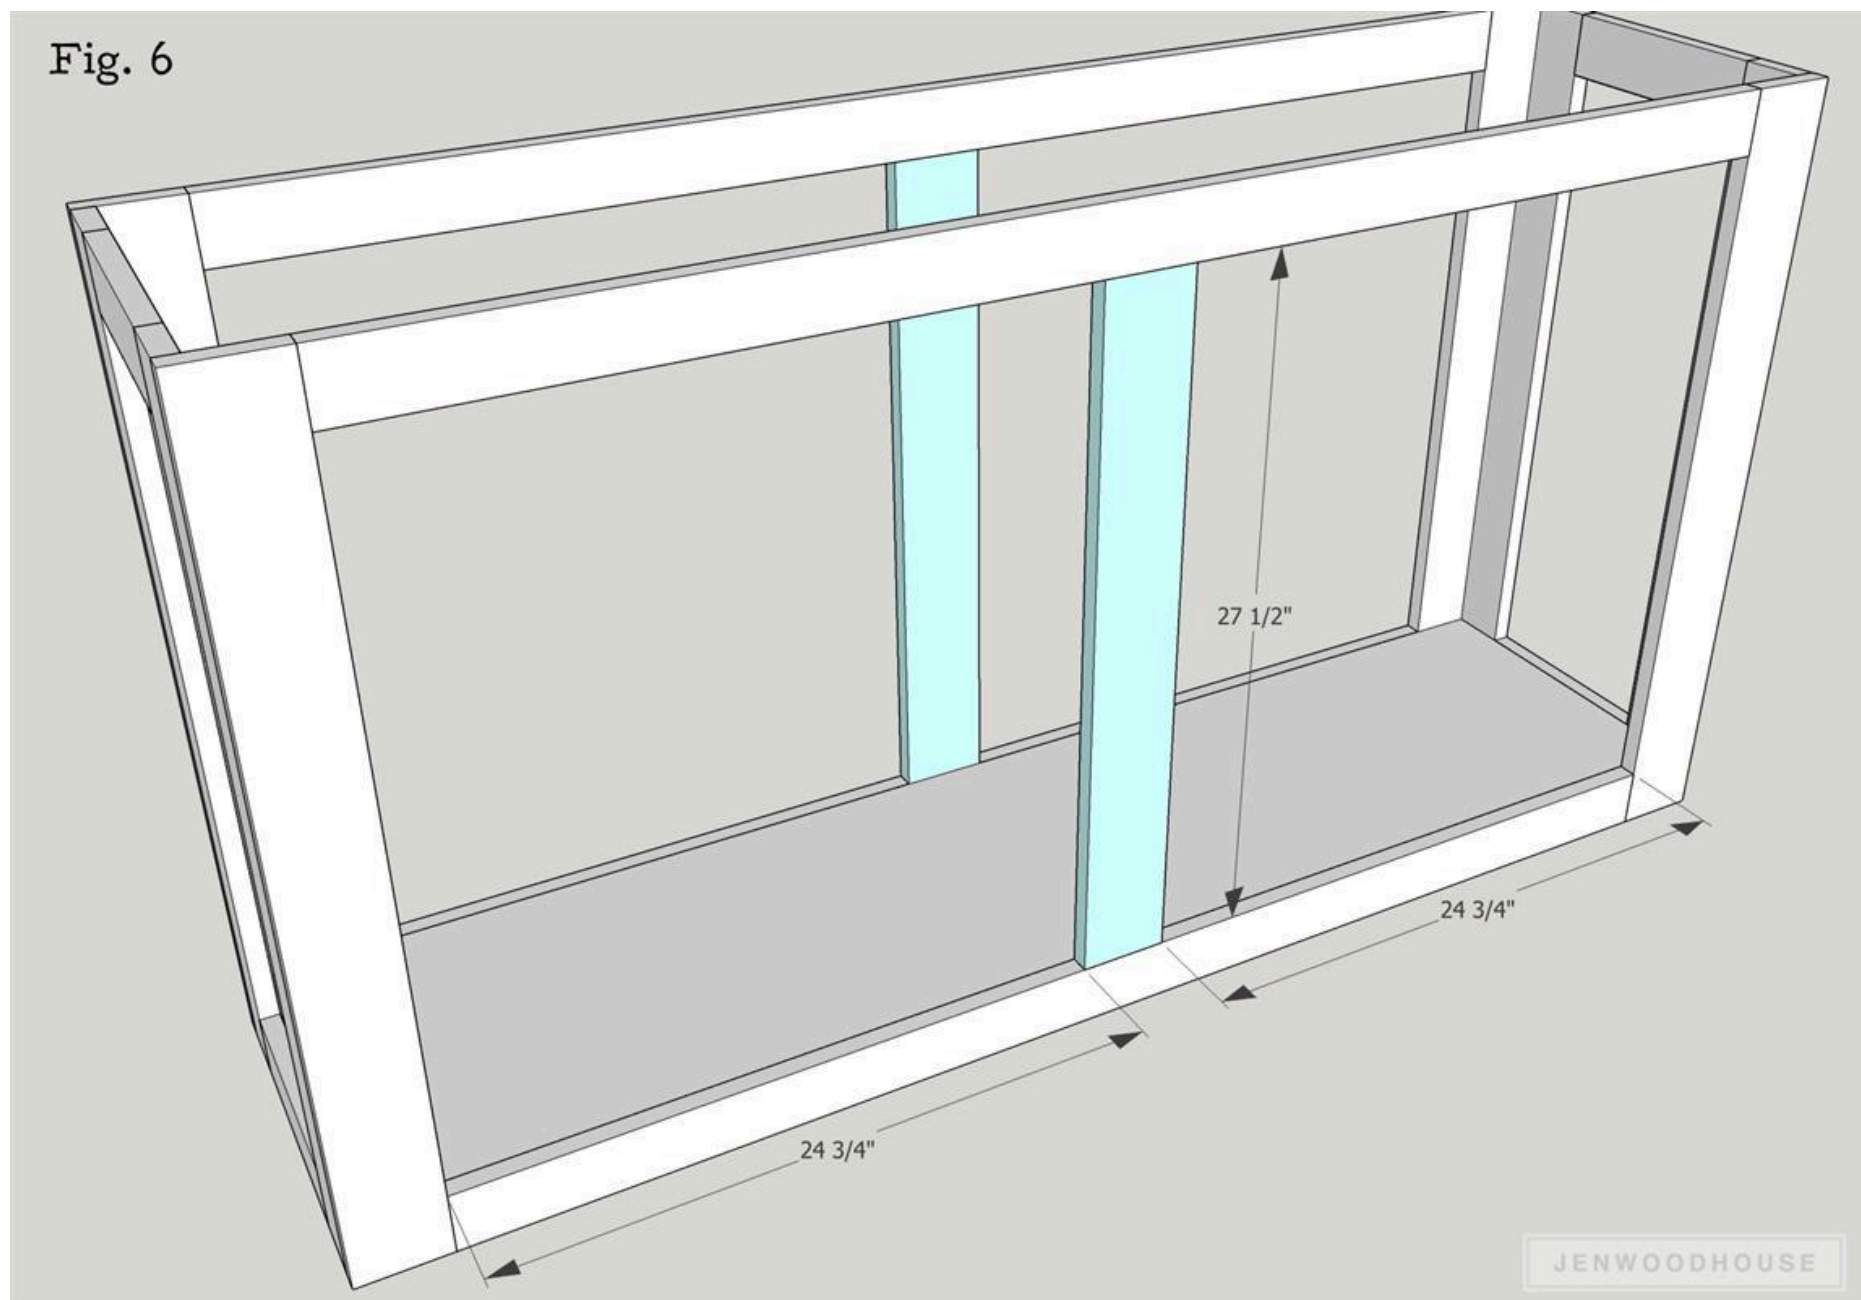




**7****Add the Curved Details**

Measure, mark, and cut curved pieces out with a jigsaw, bandsaw, or scroll saw. Attach as shown with wood glue and 1 inch brad nails.


Fig. 7

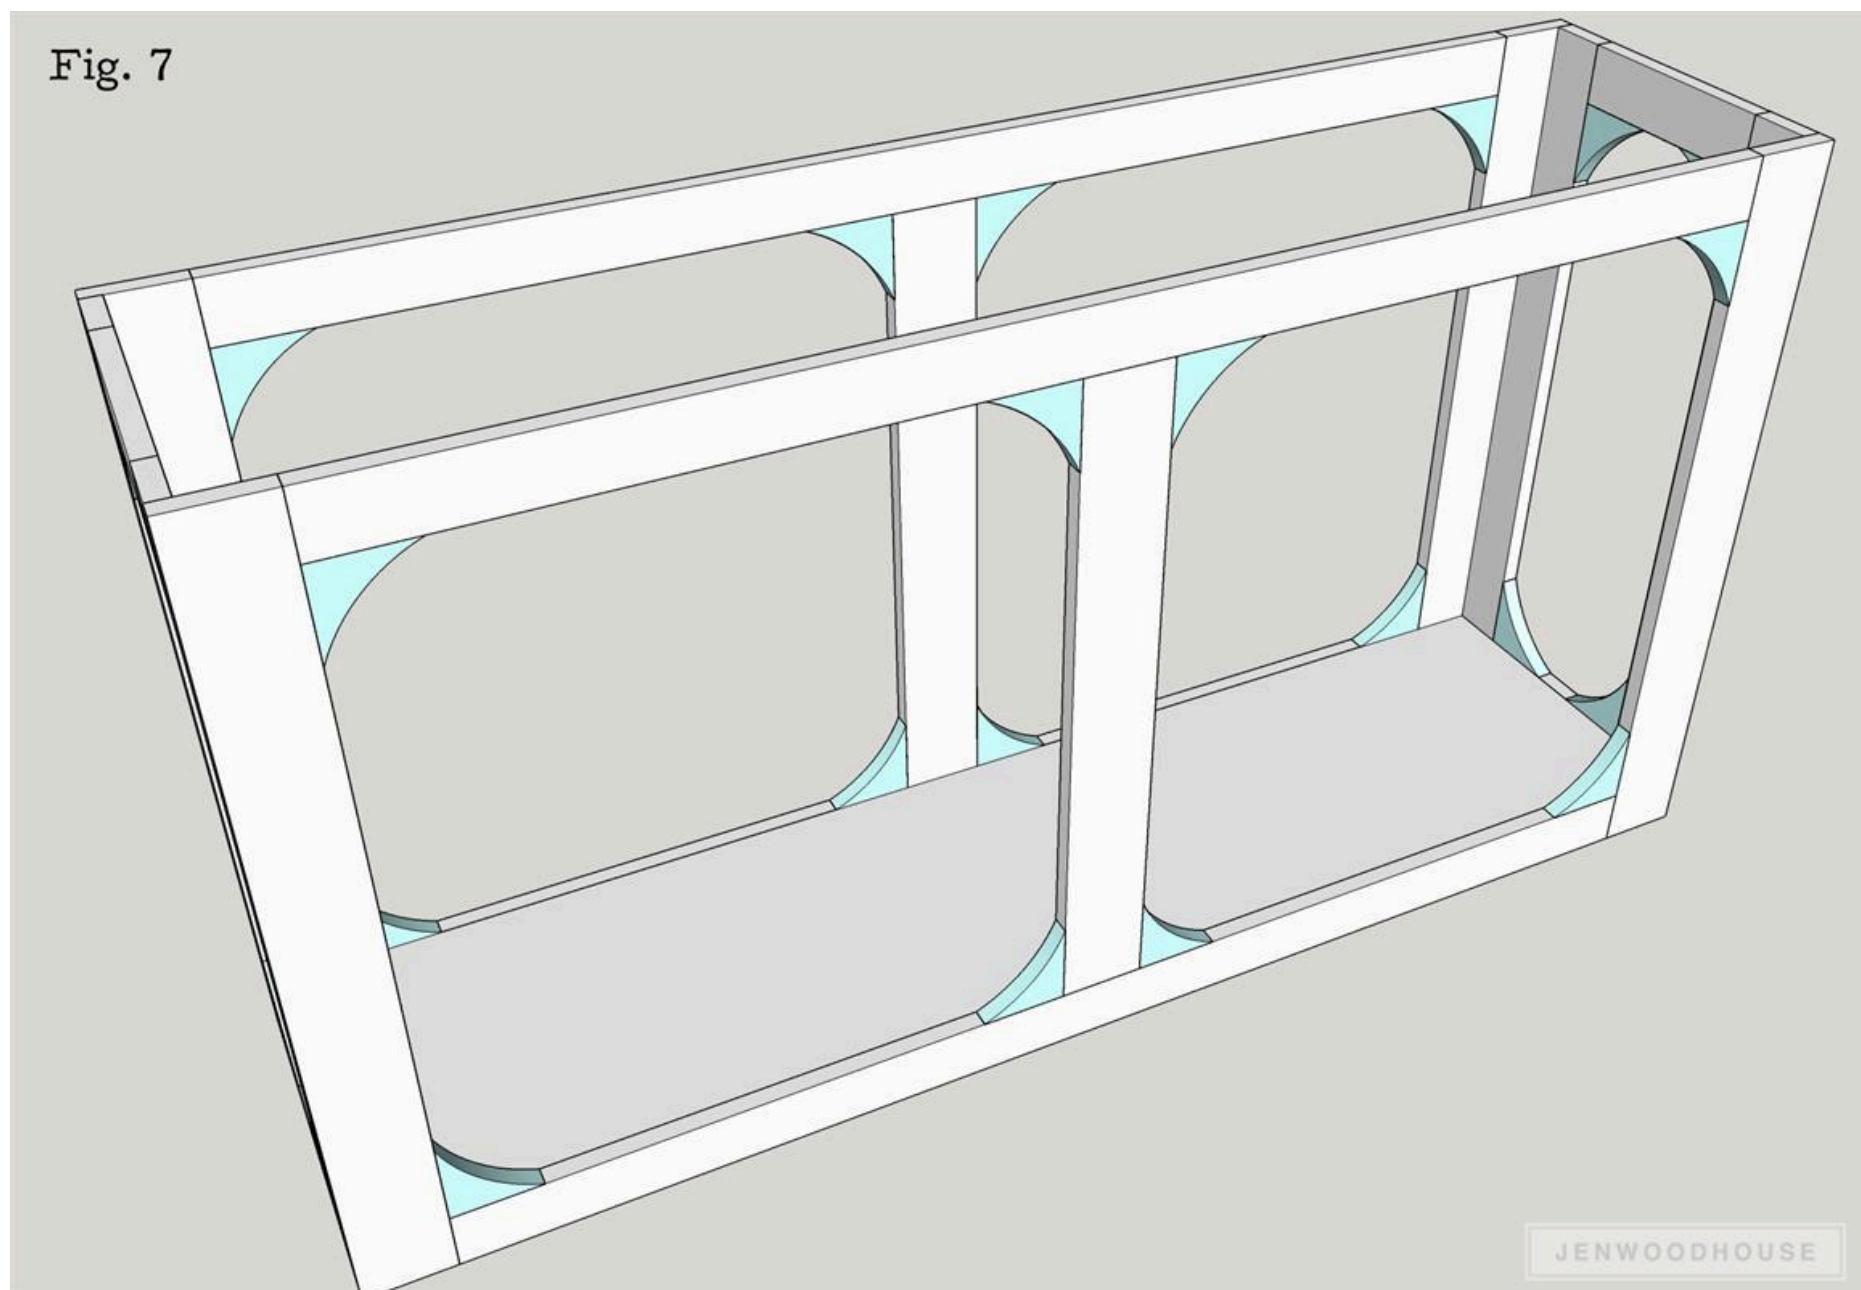

## 8

**Add the Underside Support**

Measure, mark, and cut middle support to size. Drill 3/4-inch pocket holes into ends and attach as shown with 1 1/4-inch pocket screws.

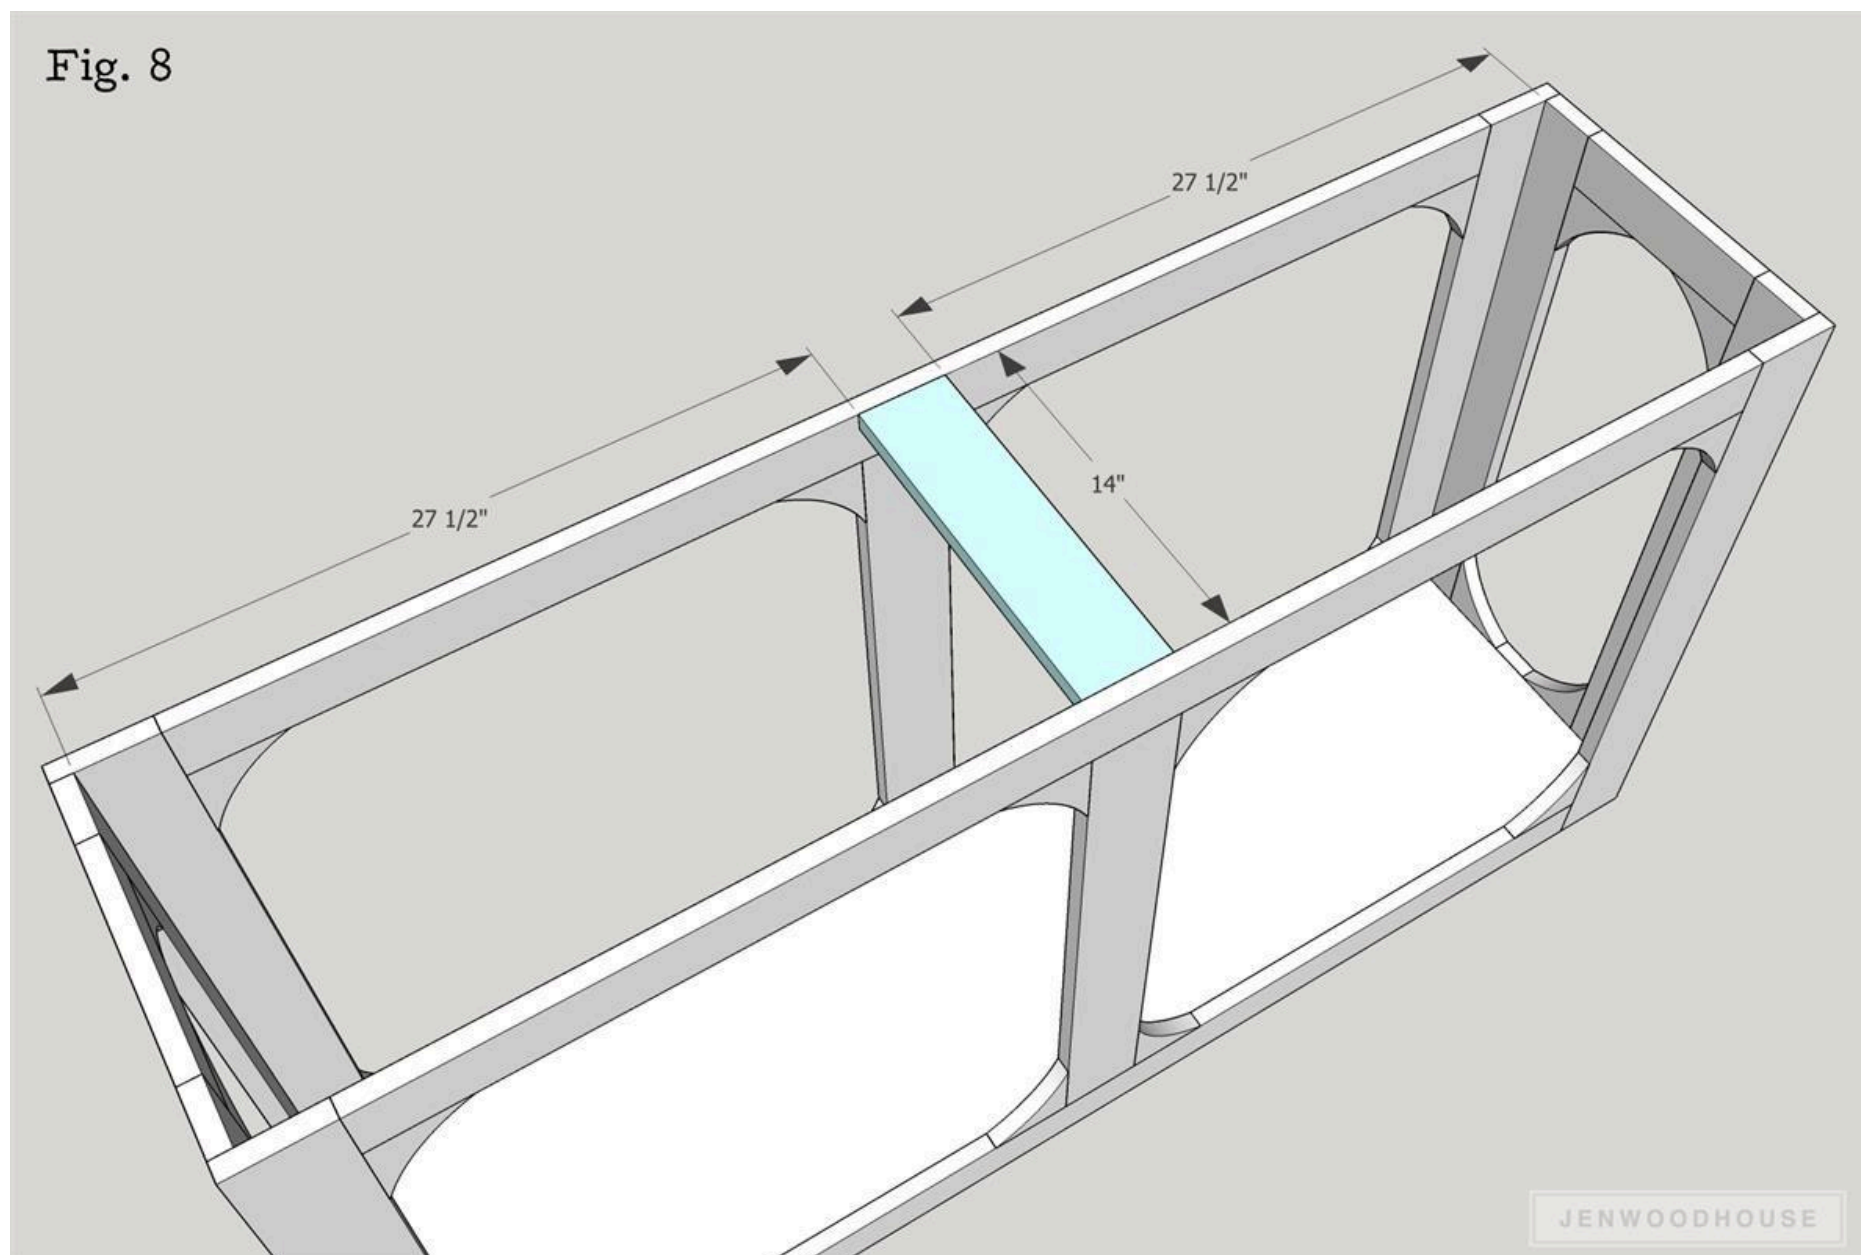
**Fig. 8**

## 9

**Attach the Top**

Measure, mark, and cut top to size. Position over the carcass with a 1/2-inch overhang on all sides. Attach with 1 1/4-inch pocket screws driven from the aprons underneath.

Fig. 9

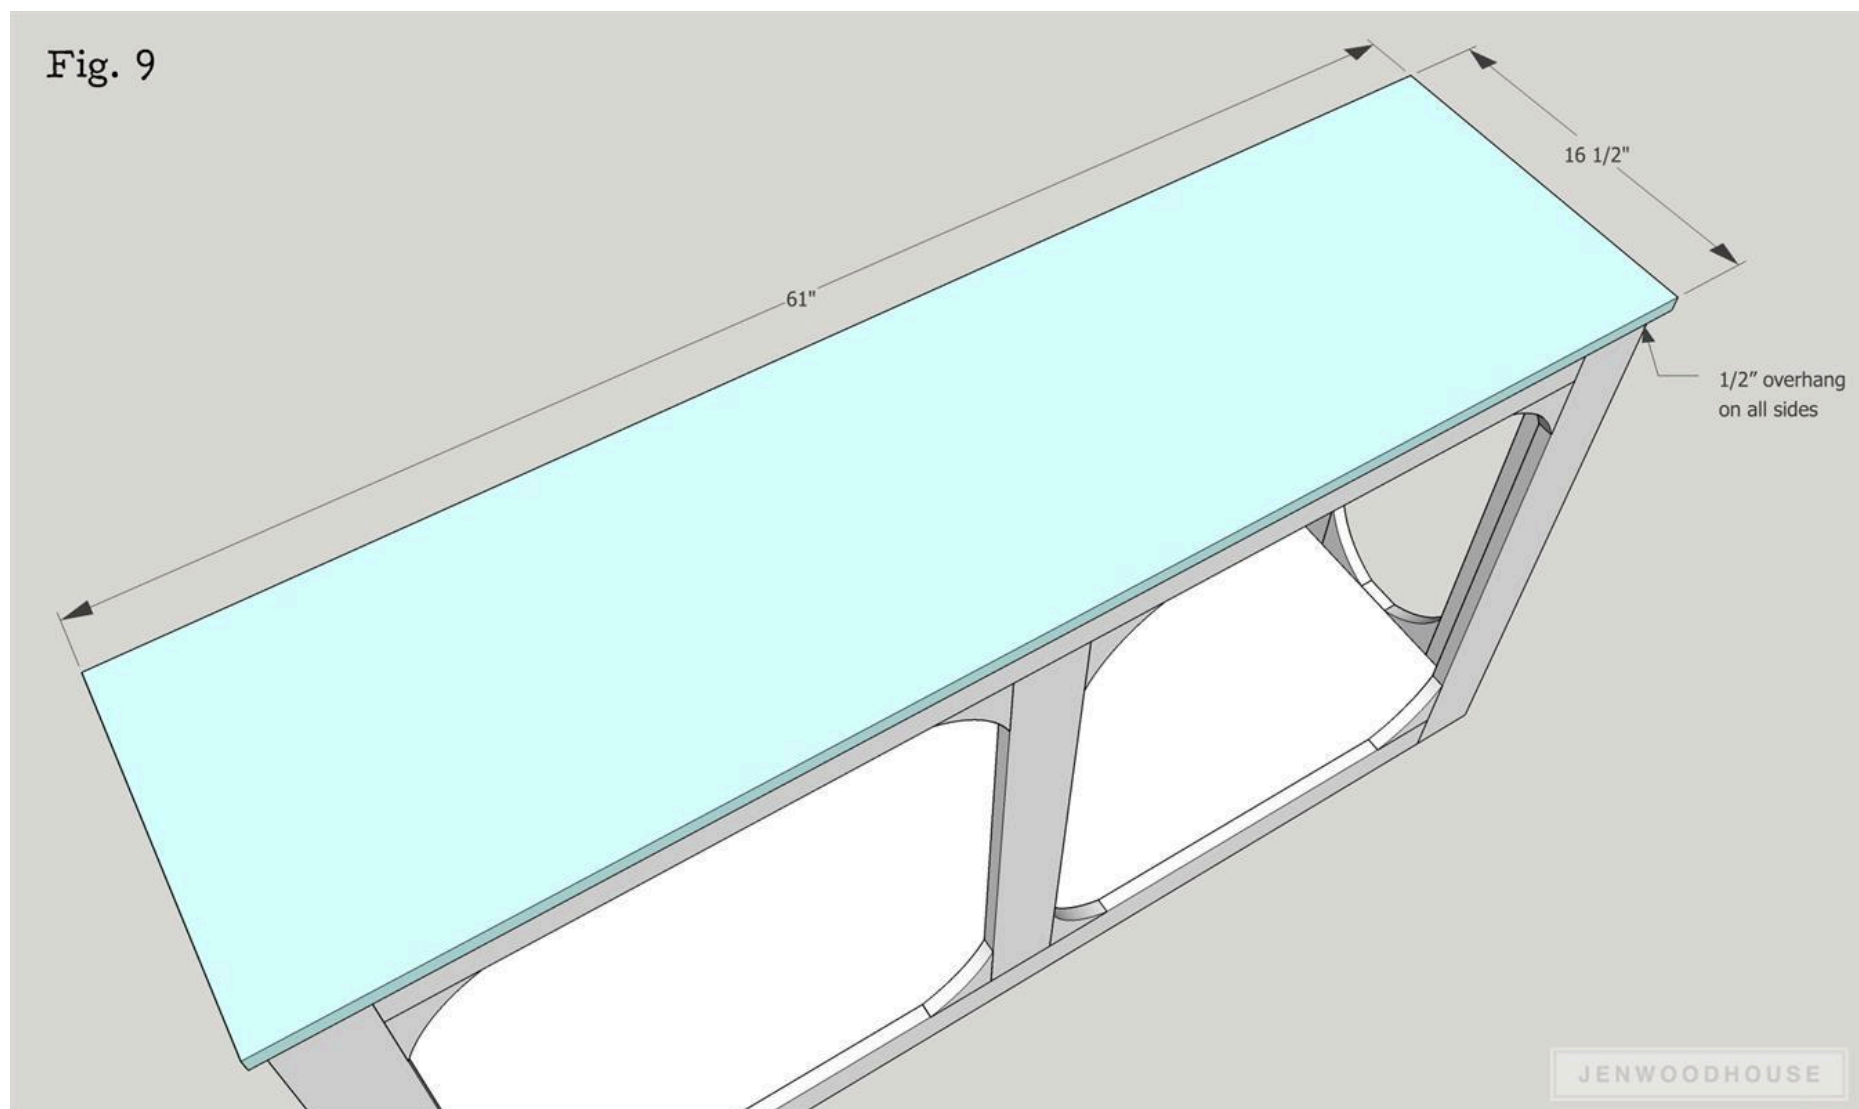

10

### Visit [JenWoodhouse.com](http://JenWoodhouse.com)

Visit [JenWoodhouse.com](http://JenWoodhouse.com) for more information, DIY project ideas, and building plans.

