

Kids Dress-Up Closet

By **Love Create Celebrate**

Difficulty

Moderate

A cute way to store your child's dress up clothes and accessories.





Tools

Kreg Tools

- Rip-Cut™
[Rip-Cut™](#)
- 3
[3" Bench Clamp](#)
- Kreg®
Pocket-Hole Jig 320
[Kreg® Pocket-Hole Jig 320](#)
- Precision
Router Table System
[Precision Router Table System](#)
- Concealed
Hinge Jig
[Concealed Hinge Jig](#)
- Track
Horse
[Track Horse](#)
- Mobile
Project Center
[Mobile Project Center](#)
- 90°
Corner Clamp
[90° Corner Clamp](#)
- True-FLEX™
Featherboard - Single
[True-FLEX™ Featherboard - Single](#)

Other Tools

- Miter Saw
- Square
- Table Saw
- Tape Measure
- Drill (cordless)
- Impact Driver
- Nail Gun
- Sander
- Paint Sprayer

Materials

Wood Products

- 2 MDF , 1/2" Thick , Full Sheet
- 1 Pine Dowel , 1 1/4" Diameter , 24"
- 1 Hardboard , 1/4" Thick , Full Sheet

Hardware & Supplies

- 4 Full Overlay Concealed Hinges
- 2 Door Pulls
- 4 Cabinet Feet

Cut List & Parts

- 2 Doors - Part A , 50"" X 12""
- 2 Sides - Part B , 50" X 16"
- 2 Top/Bottom - Part C , 16" X 23"
- 1 1-1/4" Dia. Dowel - Part D , 23 1/2"
- 1 Shelf - Part E , 15 1/4" X 23"
- 2 Fascia - Part F , 1" X 23"
- 2 Back Shim - Part G , 4" X 22 7/8"
- 1 Shoe Rack - Part H , 15 7/8" X 22 7/8"
- 3 Shoe Rack Bars - Part I , 1/2" X 1/2" X 22 7/8"
- 1 Trim - Part J , 1/2" X 3/4" X 22'
- 1 Backing - Part K , 49 1/2" X 23 1/2"

MATERIAL LIST

Quantity	Material/Item	Dimensions
2	1/2" thick MDF	4' X8'
1	pine dowel	24 " long
1	1/4" hardboard	50" x24"
1	Door Trim	1/2" x 3/4" x 22' (approx.)
2	Door Pulls	-
4	Cabinet Feet	-
4	Door Hinges	-



love
create celebrate



PART LIST

Component	Quantity	Description	Material	Dimensions	*Notes*
A	2	Doors	1/2" thick MDF	50" x 12"	
B	2	Side	1/2" thick MDF	50" x 16'	
C	2	Top/Bottom	1/2" thick MDF	16" x 23"	
D	1	1 1/4" Dowel	pine dowel	23 1/2 " long	
E	1	Shelve	1/2" thick MDF	15 1/4" x 23"	
F	2	Fascia	1/2" thick MDF	1" x 23"	for bottom and shelve
G	2	Back Shim	1/2" thick MDF	4" x 23"	
H	1	Shoe Rack	1/2" thick MDF	15 7/8" x 22 7/8"	
I	3	Shoe Rack Bars	1/2" thick MDF	1/2" x 22 7/8"	
J	1	Trim	1/2" thick MDF	1/2" x 3/4" x 22' (approx.)	profile as noted in drawings
K	1	Backing	1/4" hardboard	49 1/2" x 23 1/2"	
L	2	Door Pulls	-	-	
M	4	Cabinet Feet	-	-	
N	4	Door Hinges	-	-	Full Overlay Cabinet Door Hinge

CUT LIST

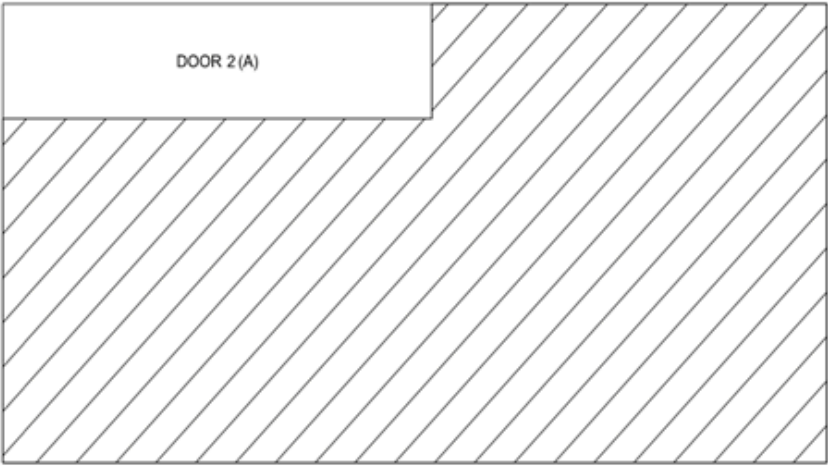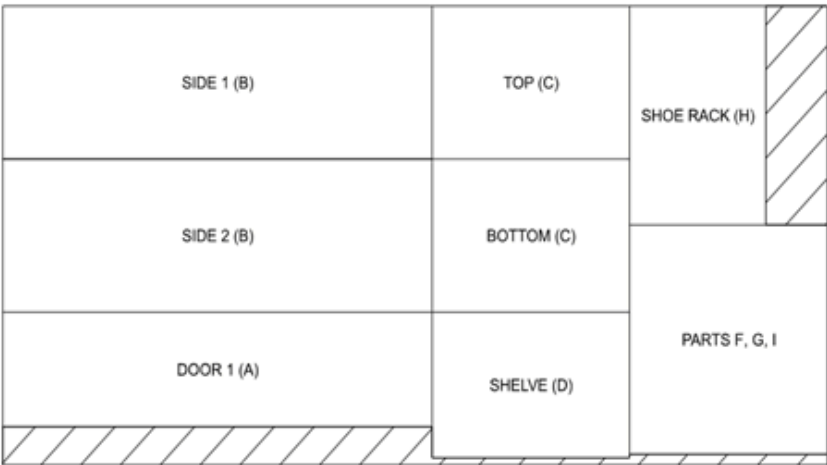

UNUSED MATERIAL

Directions

1

Cut MDF to width

Drawing and further details can be found in the "Extras" tab/section

Cut your MDF pieces to widths (Parts A, B, c, E, F, G, H, I). I needed 4' x 8'2 sheets, however the majority of the second sheet is unused. I used my rip saw to cut them to width.



2

Cut MDF to Length

I used my mitre saw to cut them to the proper lengths.



3**Add Pocket Holes**


Add pocket holes to Part C (Bottom and Top pieces).



4

Assemble Cabinet

Assemble Parts B and C (sides and top/bottom). I used my Kreg corner claps to hold everything together and glued and screwed the joints. You are also going to want to install the 1 1/4" dia. dowel during this step (prior to securing all the sides/top/bottom).

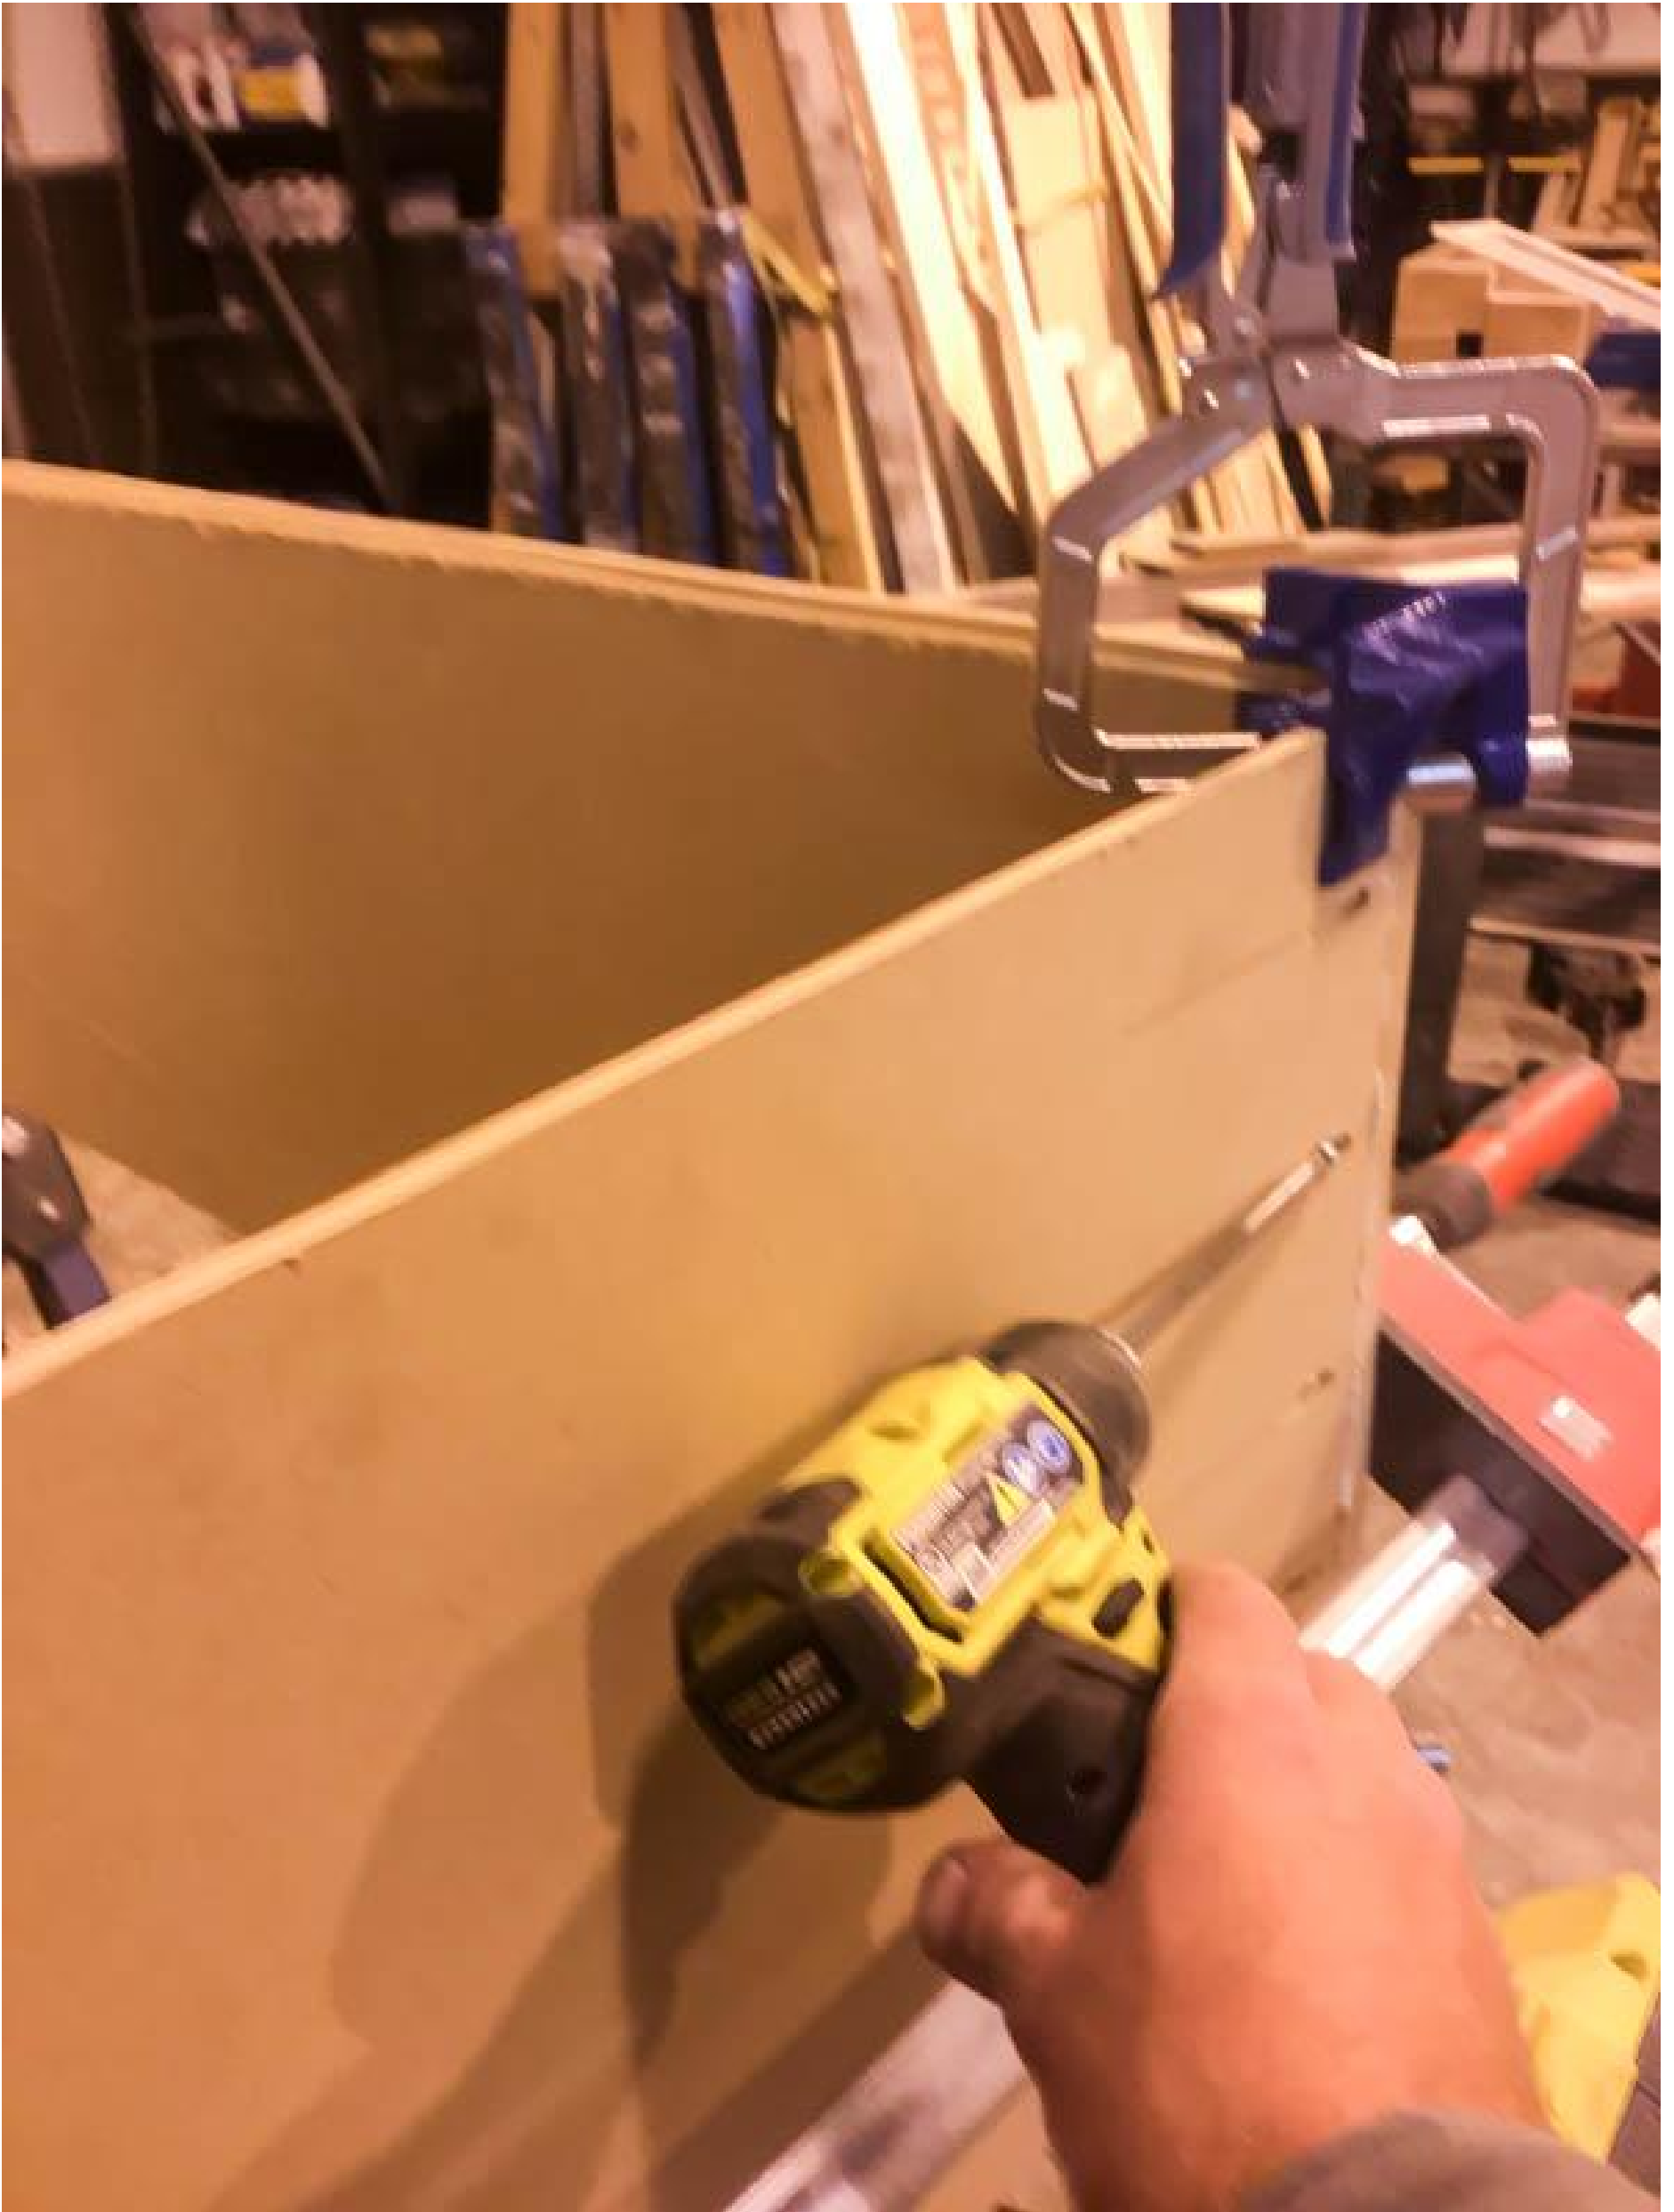

5**Route groove**

On Parts B and C route a 1/4 " deep by 1/4" wide groove on the back for the backing board as noted in the drawings



6**Prep Part B**

Drill a 1 1/4" dia hole (I used a Forstner Bit) as shown on the drawings at the dowel location - I drilled the hole approx 1/4" deep.



7**Check for square**

Check your cabinet for square but taking diagonal measurements from corner to corner. Adjust as required so both diagonal are the same. This will ensure your doors fit nicely.



8**Prep Part A**

Mark out your location and drill your holes for your concealed hinges. I used my Kreg concealed hinge jig to drill the holes.



9**Attach Hinges**

Attach hinges to door and place on cabinet. O than marked and pre-drilled the holes for the hinge to cabinet location. Once drilled you can screw your concealed hinges to the cabinet with hardware from your hinges. Once both doors are installed you can adjust the hinges to ensure the doors sit flushly with the edges of the cabinet. You can use a flush trim bit on a router if any of the edges extend too far past the cabinet once you center the doors.



10

Cut Backing

Cut your 1/4" thick backing board.



11**Attach Backing**

I used glue and nails to secure the Part K to the back of the cabinet.



12


Cut Dowel

Cut dowel to length



13**Cut Trim**

I made custom trim out of some old flat stock molding I had lying around. I used a 1/4" ogee router bit - See drawings for further details.

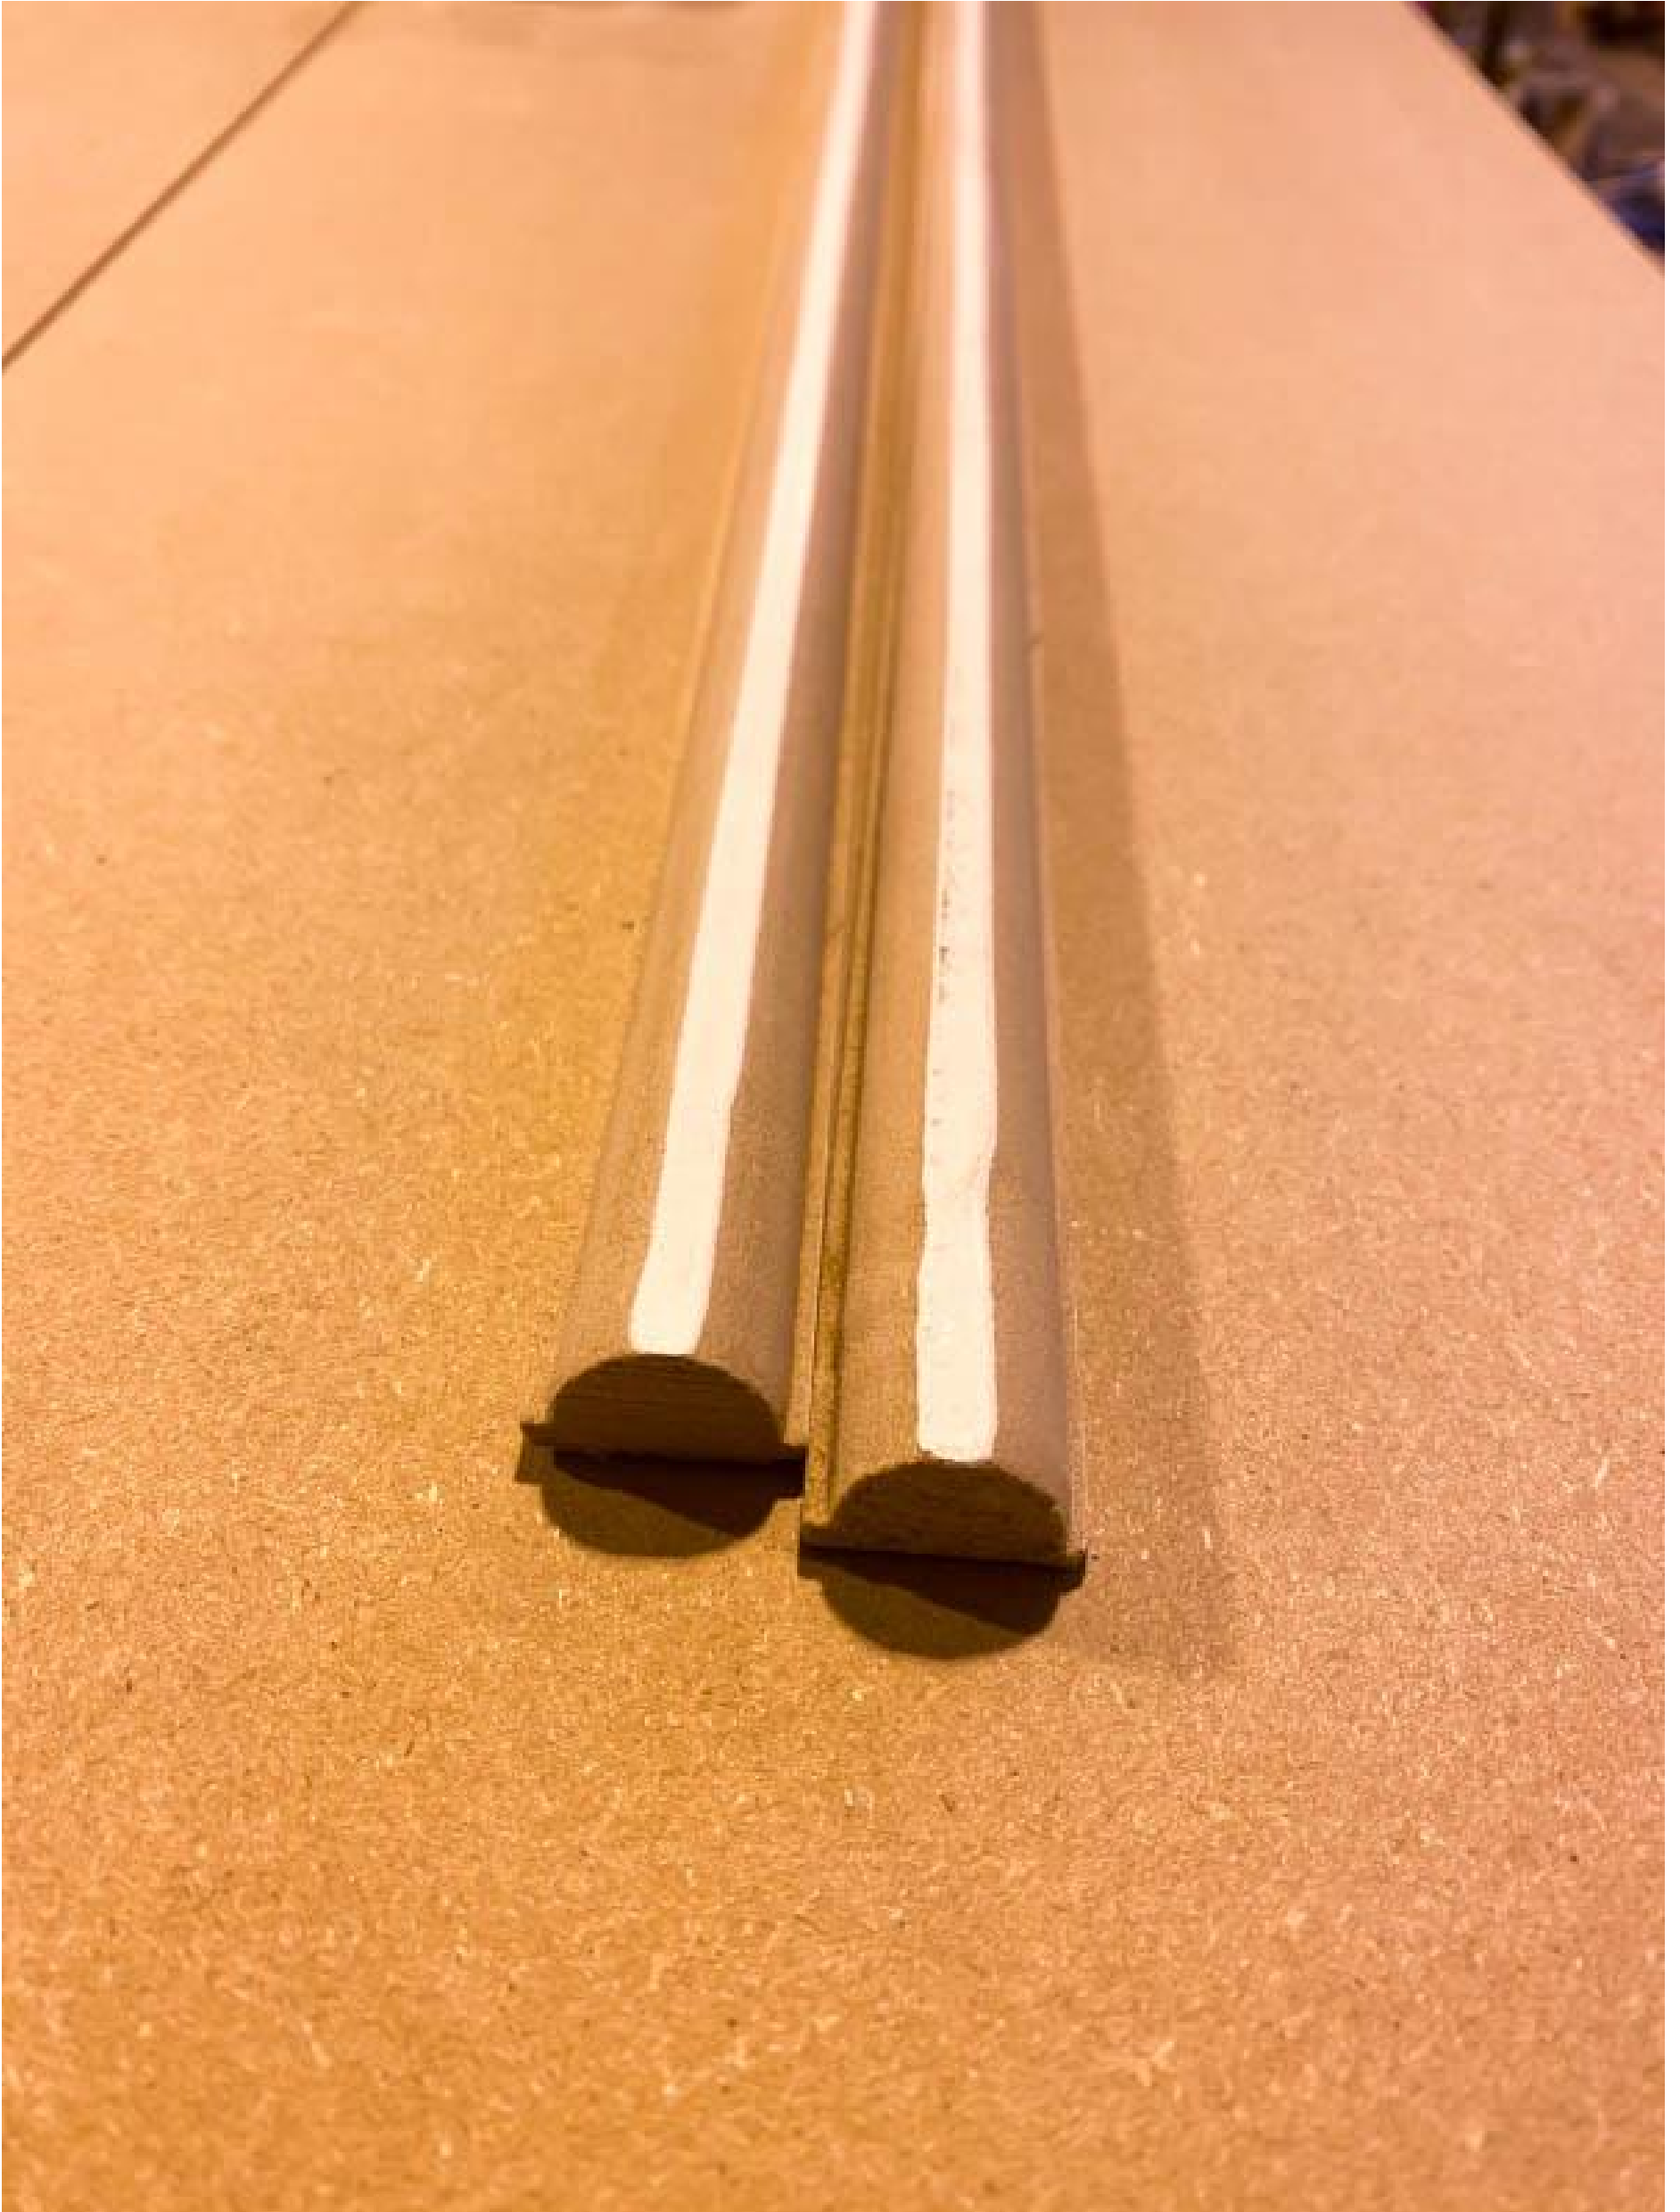

14**Attach Trim to Doors**

Cut and attach trim to doors as shown on drawings. I mitred the ends and glued and pin nailed the trim to the drawer faces. I also drilled the holes for the door pulls at this time.



15**Cut Shoe Rack - Part H**

For the hidden storage at the base, I made a false bottom. I added two 4" high shims at the back of the cabinet and a 1" fascia piece at the front - see Drawings for details. I secured part I as shown on the drawings to hold the board in place (1 on the bottom) and to hold the shoes on the angled board (2 on the top) once installed in place.

16**Paint/Finish**

Fill any holes/cracks and give the piece a light sand. I removed any hardware and primed the entire cabinet.



17**Drill holes for feet**

I used 4 round door pulls as feet - they fit the scale of the project perfectly.



18**Paint trim**

We painted the trim and feet a different color, we just yellow frog tape on the fresh paint to keep nice crisp edges for our paint.



19

Enjoy

Put in your child's dress up clothes and let them enjoy! Thanks for using our plans!

