

# Four-Bin Trash and Recycling Cabinet

By **Love Create Celebrate**

Difficulty

Moderate

Four bin cabinet to hide trash and recycling bins





# Tools

## Kreg Tools

Kreg®  
Pocket-Hole Jig [Kreg® Pocket-Hole Jig 720](#)  
720  
Precision  
Router [Precision Router Table System](#)  
Table  
System

## Other Tools

Miter Saw  
  
Rotary Tool  
  
Table Saw  
  
Tape Measure  
  
Track Saw  
  
Thickness Planer  
  
Clamps  
  
Drill (cordless)  
  
Hammer  
  
Impact Driver  
  
Nail Gun  
  
Router  
  
Sander

# Materials

## Wood Products

- 2**   MDF , 5/8" Thick , Full Sheet
- 5**   Board , 2x4 , 96"
- 5**   Board , 2x6 , 72"

## Hardware & Supplies

- 3**   Drawer Slides (3 Sets)
- 4**   Garbage Bins - We Used Ikea Article Number: 802.635.73
- 3**   Handles/Drawer Pulls

# Cut List & Parts

1 See Build Plans , -

# Directions

---

1

## Cut MDF Materials

Using the cut guide at the back of the plans cut and label all the MDF pieces



## 2

### Route Grooves

Using a router, cut 5/8" grooves in the drawer front, sides, and back. The groove should be 1/2" from the bottom of the drawer and 3/8" deep. You may want to make the groove slightly larger (1/16" or so) to allow for the pieces to fit easily together and room for the glue



### 3

#### Assemble Drawers

Once the materials are cut and grooves routed, assemble the one top drawer and 2 bottom drawers (front/sides/back only - not face pieces). I glued and screwed the drawers together.



# 4

## Build Base Frame

Using 2x4 cut as per the drawings build the base of the cabinet. I used pocket holes to attach the base together and the base board to the frame (along with wood glue)



5

## Frame Cabinet

Frame out the cabinet with 1x1 (2x4 cut down) as per the drawing and photo.



**6****Finish Framing Cabinet**

add bracing to the sides and top of the cabinet as per the drawings and photos



**7****Add Trim**


Add MDF trim/face to front of cabinet as per drawings. I glued and nailed the trim into place. Check for square and your measurements as this is important for fitment later on.



# 8

## Add Drawer Hardware

Fit and add Drawer hardware - depending on your choice of slide this may effect the bracing you need on the sides of the cabinet.

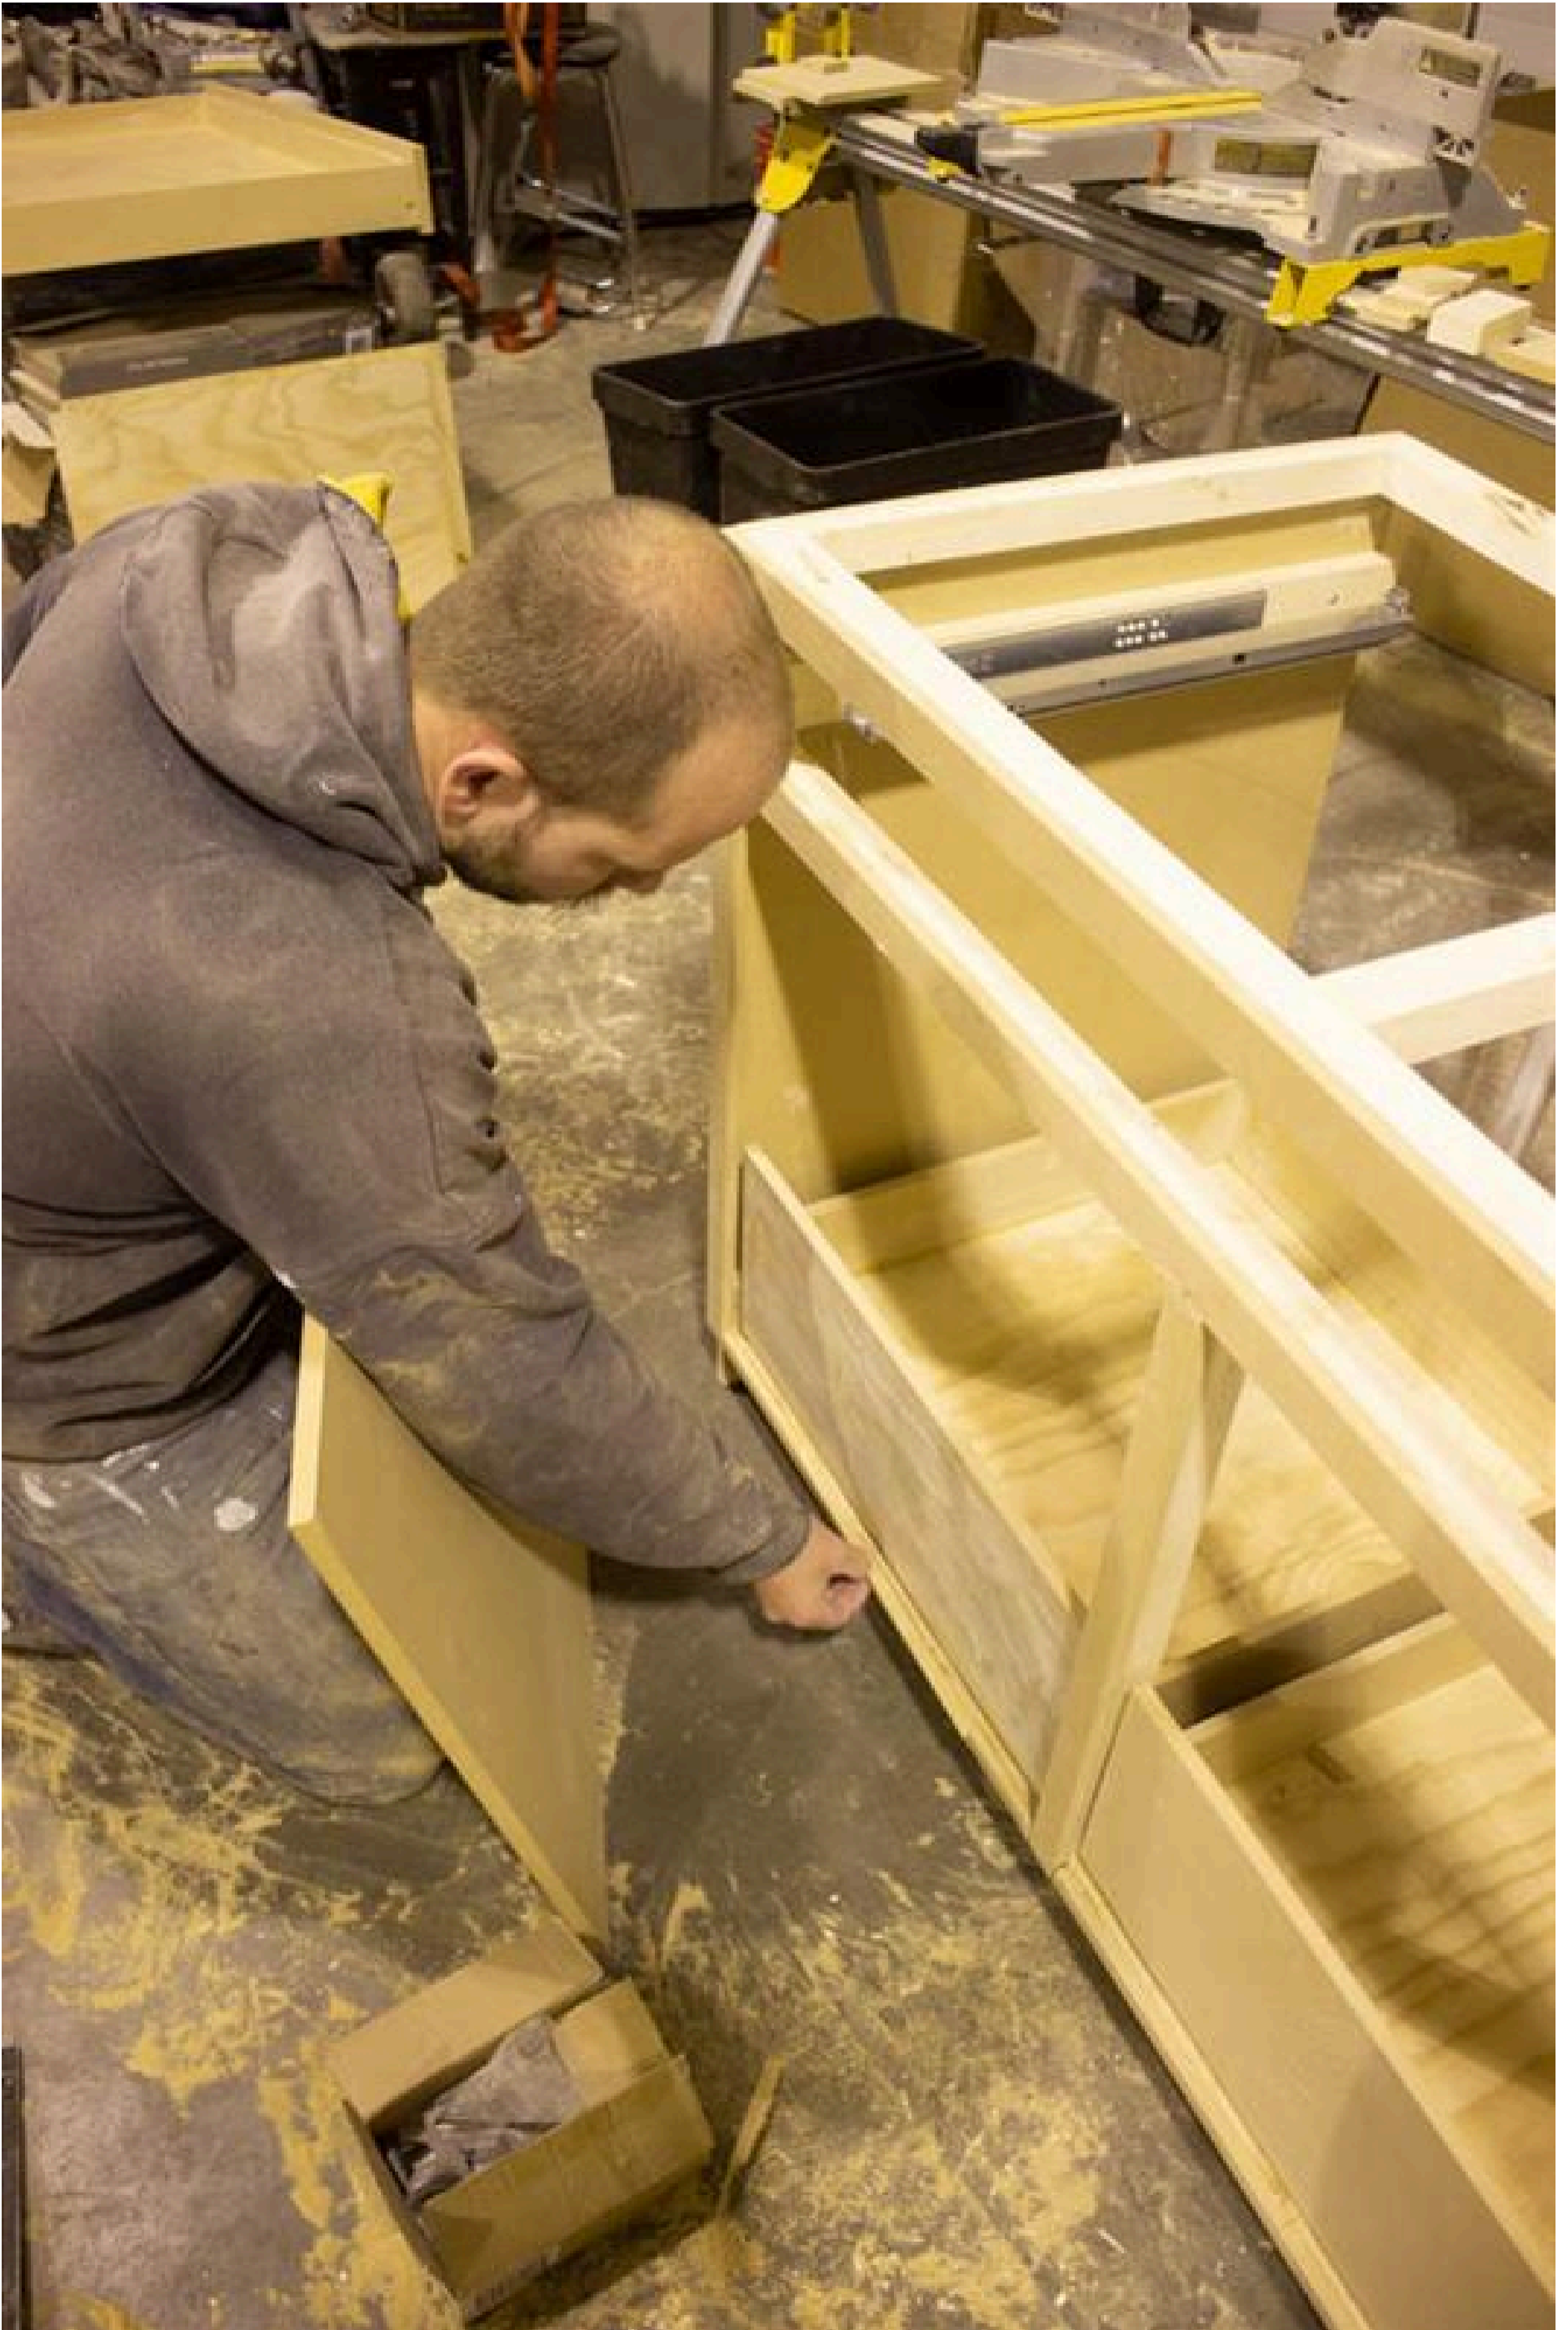

9

## Test fit drawers

Test fit drawers and adjust hardware as required.

---



**10****Fit Face plates**

Fit face plates and adjust sizes as required. You can use shims to hold and place and secure fronts to drawers. Once you have the desired fit, mark your slide hardware as you may want to remove it when you go to paint the cabinet.

You can install the diagonal braces on the drawers at this point. I used them to pull in the face plates slightly so they sat flush with the cabinet face. I used pine 2x4 (cut down as per drawings) so it wouldn't crack and used screws and glue to hold in place.

---



**11****Paint**

Once you ensure all drawers fit nicely, and are happy with how they open and close, remove all drawers and hardware and prep for paint.

You can use drywall mud to patch holes/edges. Sand and prime

We used a paint sprayer for primer and first coat and rolled the final top coat on all exposed faces.



## 12

### Counter Top

Install counter top of your choice.

We ended up making our own. It consisted of five 2x6" glued and pocket screwed together and cut down to 26" wide x 50" long.

We stained it with Varathane Kona Premium Wood Stain and applied varnish to protect the top.



**13****Install**

Install Cabinet - it isn't detailed in the plans but I ended up installing a 4" wide strip of MDF along the back of the cabinet so I could easily secure the cabinet to the wall (and to wall studs).

Once cabinet secured install counter top. I screwed it in all 4 corners and 2 along the center of the cabinet. Reinstall your drawers, install drawer pull hardware, and enjoy your new Trash and Recycling Cabinet!

---

