
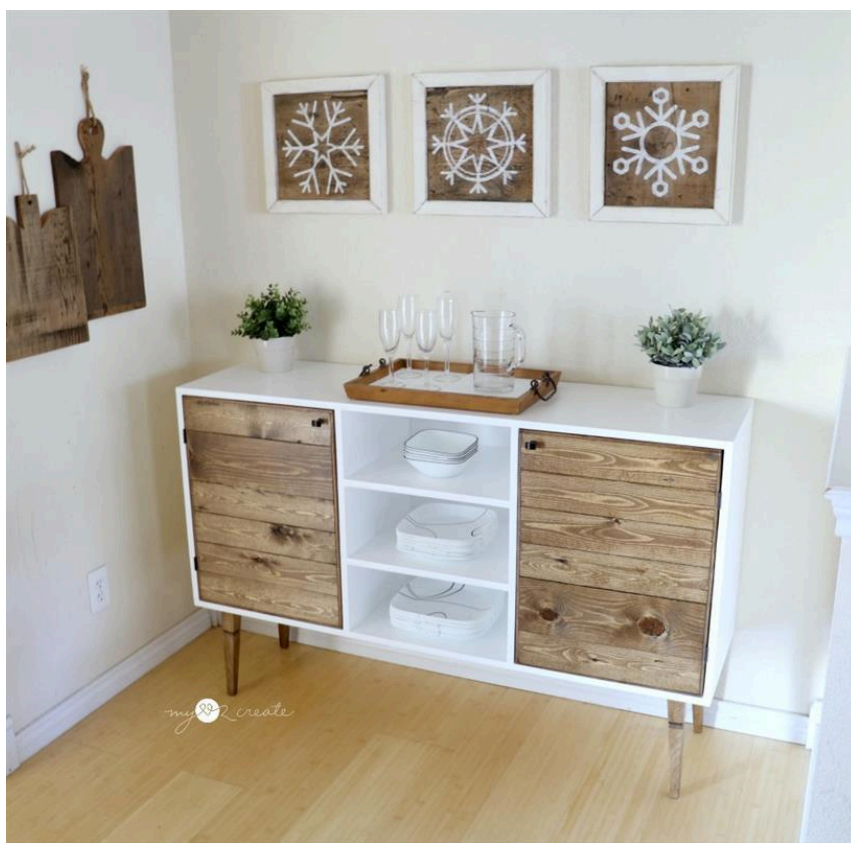


Modern Rustic Buffet

By **My Love 2 Create**

Difficulty
Moderate

This buffet combines a classic combo of modern and rustic, with clean lines, and beautifully stained cabinet doors. Ideal for helping serve up your best holiday celebrations, and don't forget, it is perfect for your extra kitchen storage too! You can't go wrong with this simple yet elegant build!

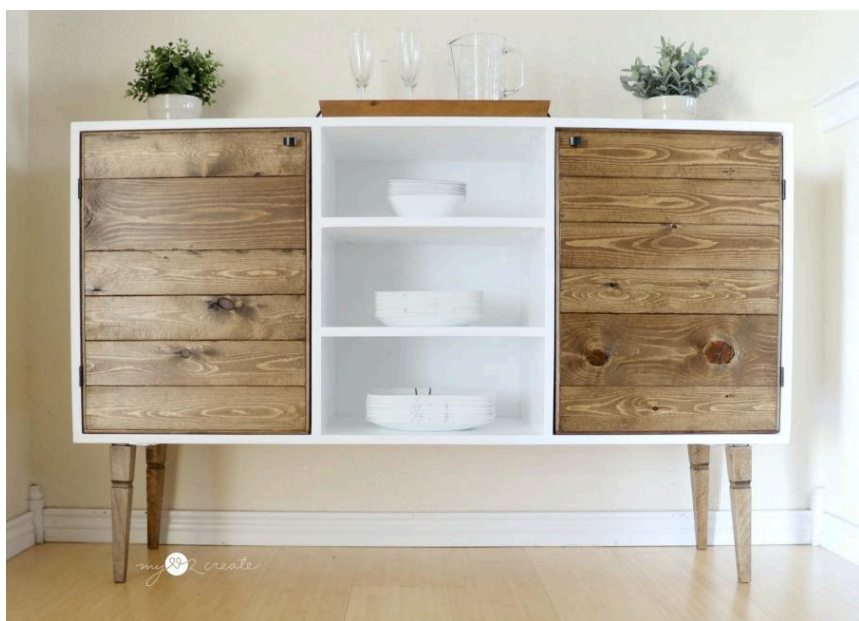

Tools

Kreg Tools

Wood Project Clamp - 6" [Wood Project Clamp - 6"](#)
Kreg® Pocket-Hole Jig 720 [Kreg® Pocket-Hole Jig 720](#)

Other Tools

Circular Saw (cordless)
Miter Saw
Square
Tape Measure
Drill (cordless)
Impact Driver
Nail Gun
Sander

Materials

Wood Products

- 1 Plywood , 3/4" Thick , Full Sheet
- 1 Board , 1x6 , 36"
- 2 Board , 1x4 , 96"
- 1 Trim , 1/4" Thick , 36"
- 1 Plywood , 1/4" Thick , Full Sheet


Hardware & Supplies

- 8 5mm Shelf Pins (Optional: If You Make Your Side Shelves Adjustable)
- 2 Knobs
- 4 Small Butt Hinges
- 2 Magnetic Cabinet Door Catches
- 4 Leg Mounting Hardware
- 4 8" To 10" Modern Legs

Cut List & Parts

- 2 Top/Bottom , 3/4" Plywood X 15 3/4"x56
- 4 Sides/Dividers , 3/4" Plywood X 15 3/4"x23 1/2"
- 2 Middle Shelves , 3/4" Plywood X 15 3/4"x17"
- 2 Side Shelves , 3/4" Plywood X 14"x18"
- 10 Door Pieces , 3/4"x3 1/2"x17 3/4"
- 2 Door Piece , 3/4"x5 1/2"x17 3/4"
- 2 Door Part , 1/4"x3 3/4"x17 3/4"
- 4 Door Piece Secure Pieces: 5 Gallon Paint Sticks Or Scrap 1/4" Plywood , 1/4"x1/2"x20"
- 1 Back Piece , 1/4"x56"x25"

3/4" Plywood Cuts

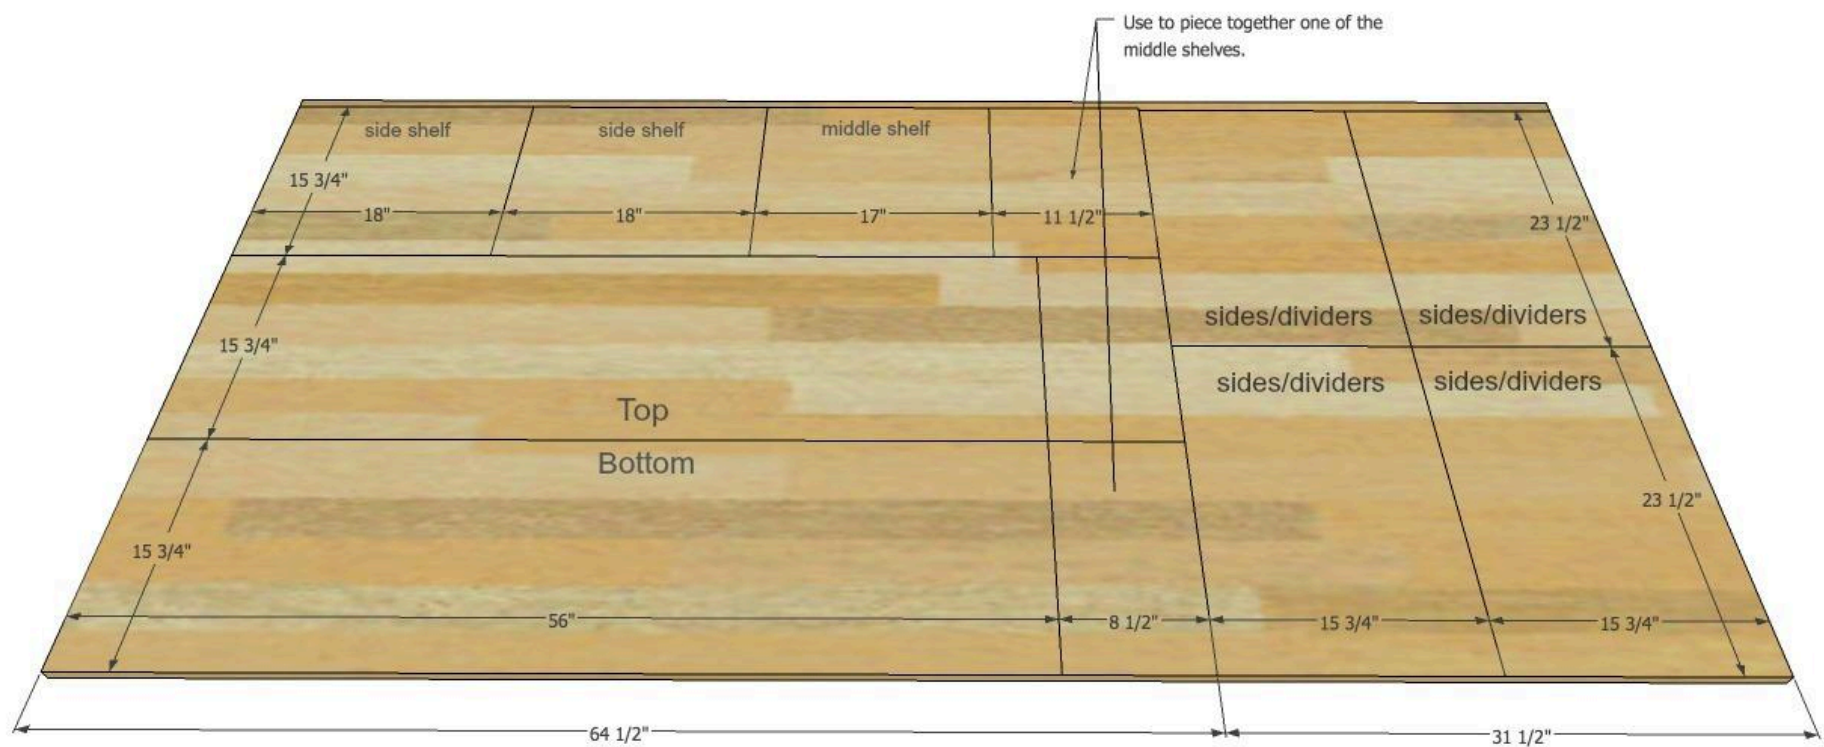

my  create

Modern Rustic Buffet




my  create

Directions

1

Build Frame

Attach the sides flush to each end of the bottom piece. Then attach the middle sections as directed. Next, attach the top piece. Use 3/4" pocket holes and 1 1/4" pocket hole screws for all joinery.

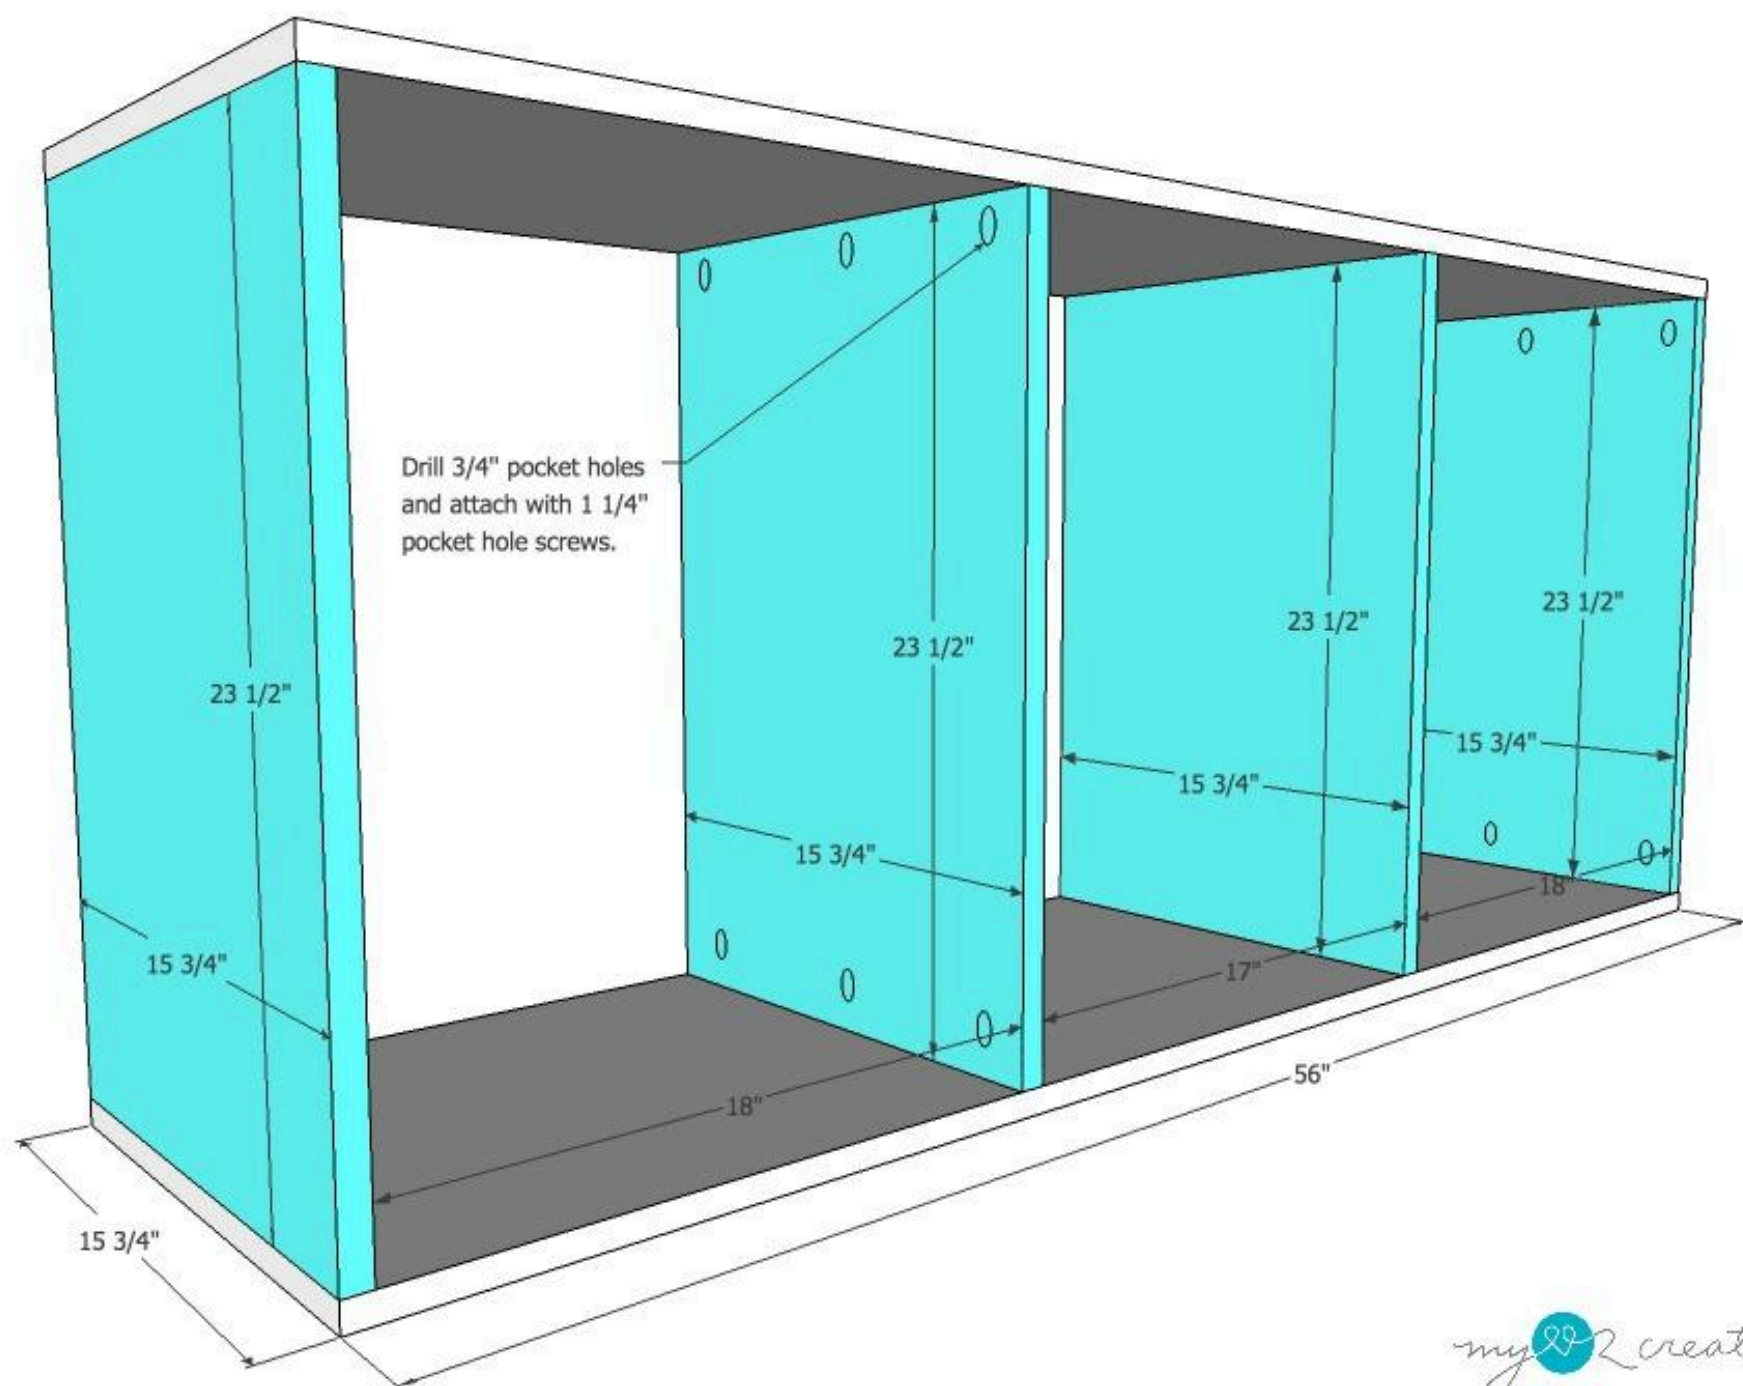


my2create

2

Add Shelves


Measure and mark for middle shelf placement then attach with $\frac{3}{4}$ " pocket holes and $1\frac{1}{4}$ " pocket hole screws from the underside. You can fix the side shelves to any height you desire by attaching with pocket holes, or you can use a Kreg shelf pin jig to drill holes for adjustable shelves inside the side cabinets.

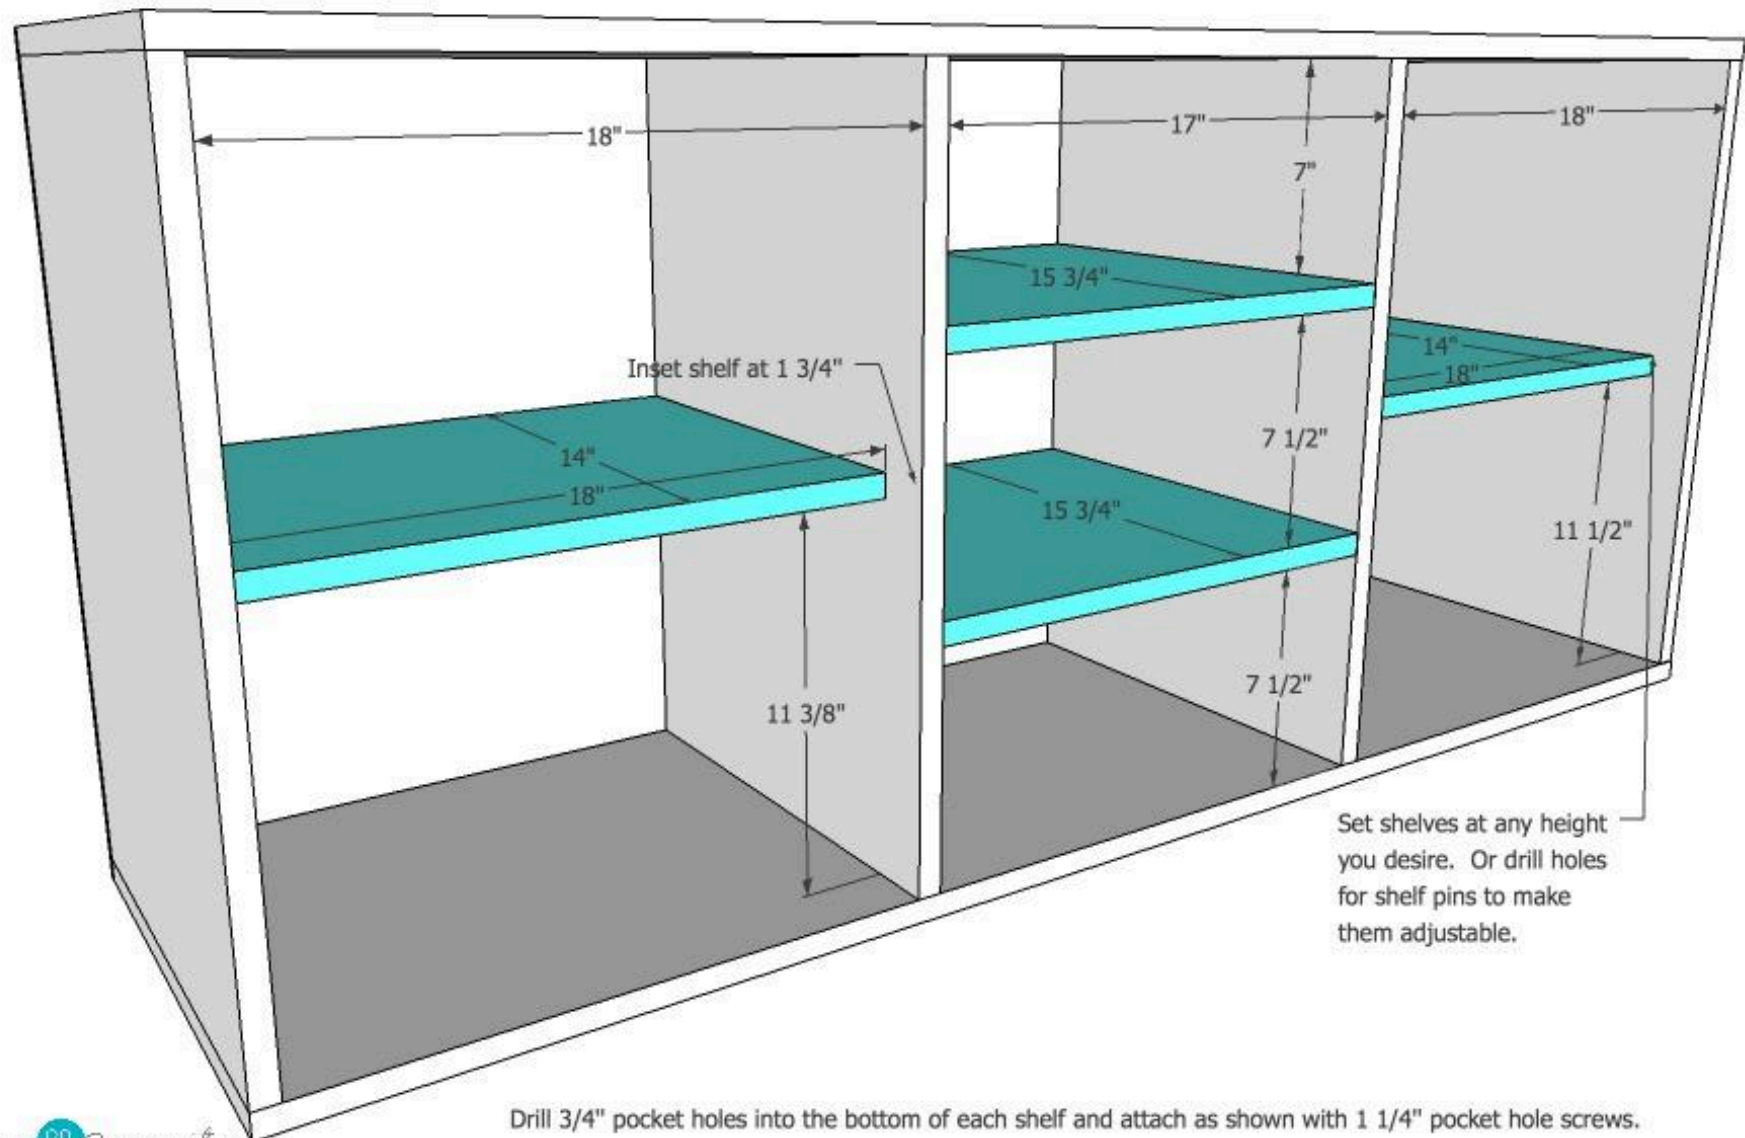

my create


3**Pocket holes**

Suggested placement for pocket holes on fixed shelves.

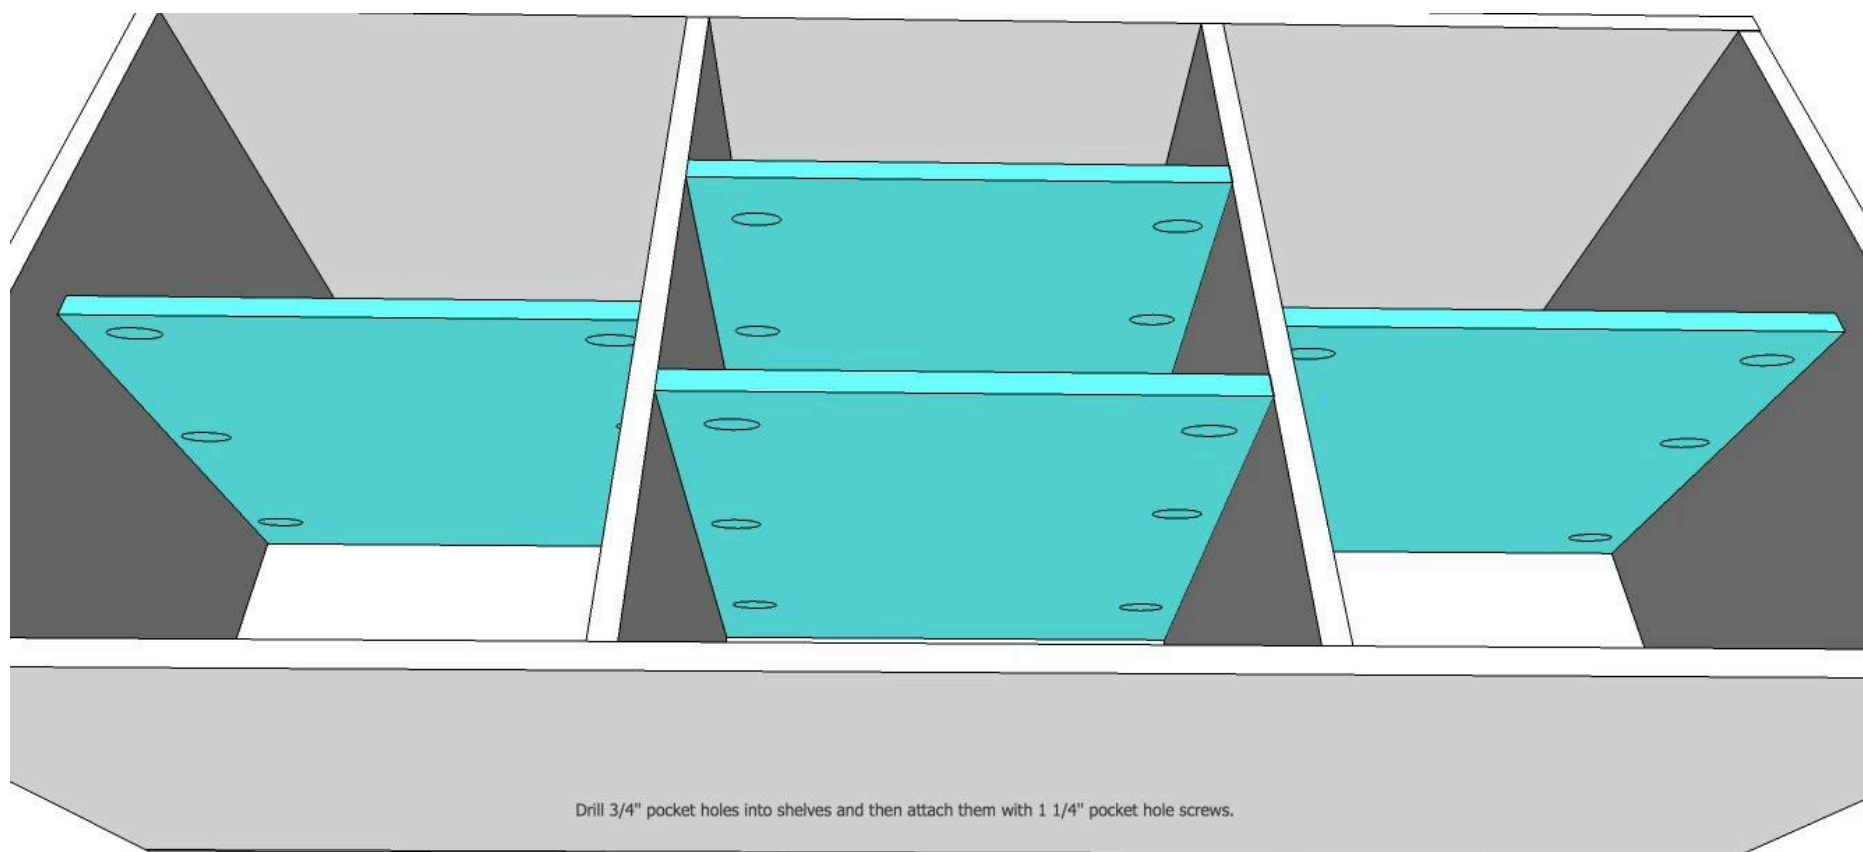*my2create*

4**Attach backing**


Attach the 1/4" plywood back to the frame with 3/4" screws, making sure to attach into each side, divider, shelf, and both top and bottom pieces. Always pre-drill holes first.

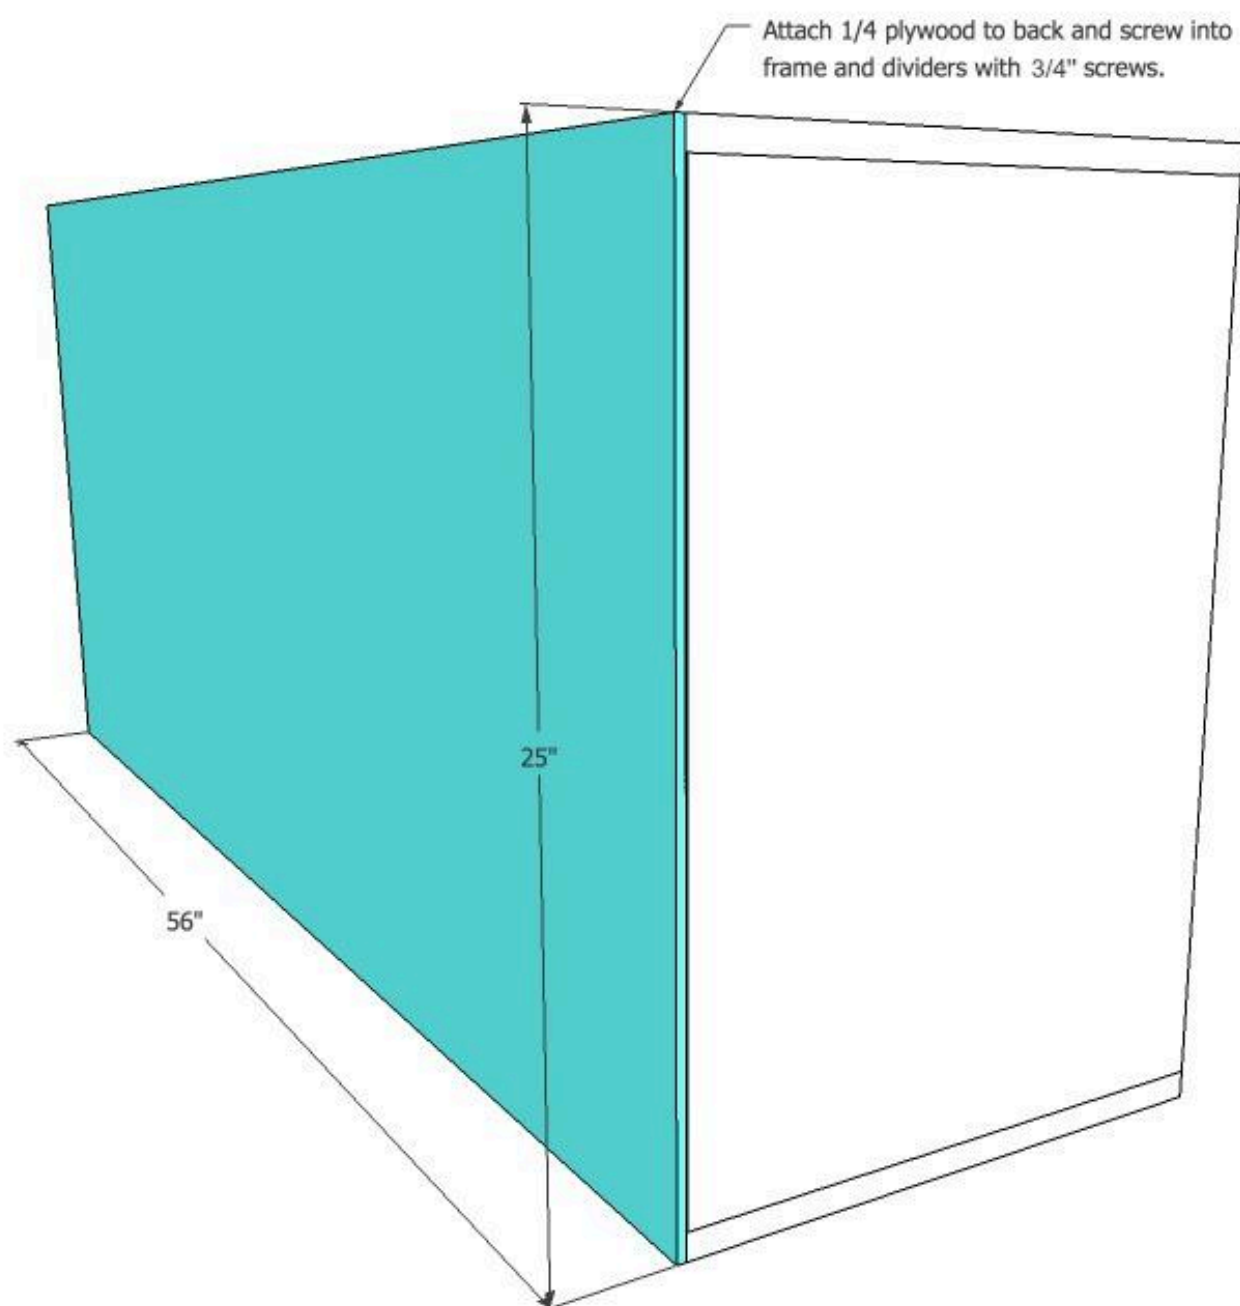

5

Build doors

Using the 1x6, 1x4's, and trim piece, build two doors. Cut pieces to length and glue together. You can clamp or secure them with a paint stick or scrap 1/4" material with 3/4" finish nails and glue. *Please note not all boards dimensions are accurate. After I built my doors I realized my 1x4 pieces were just short of the actual 3 1/2". I ended up adding another piece of trim to the top and cut the sides down to fit trim on them to finish them out. You can build these doors anyway you like as long as they fit the opening. Doors should measure 1/8" less than the opening on all sides, it is best to build the frame and then measure your opening before you build the doors.

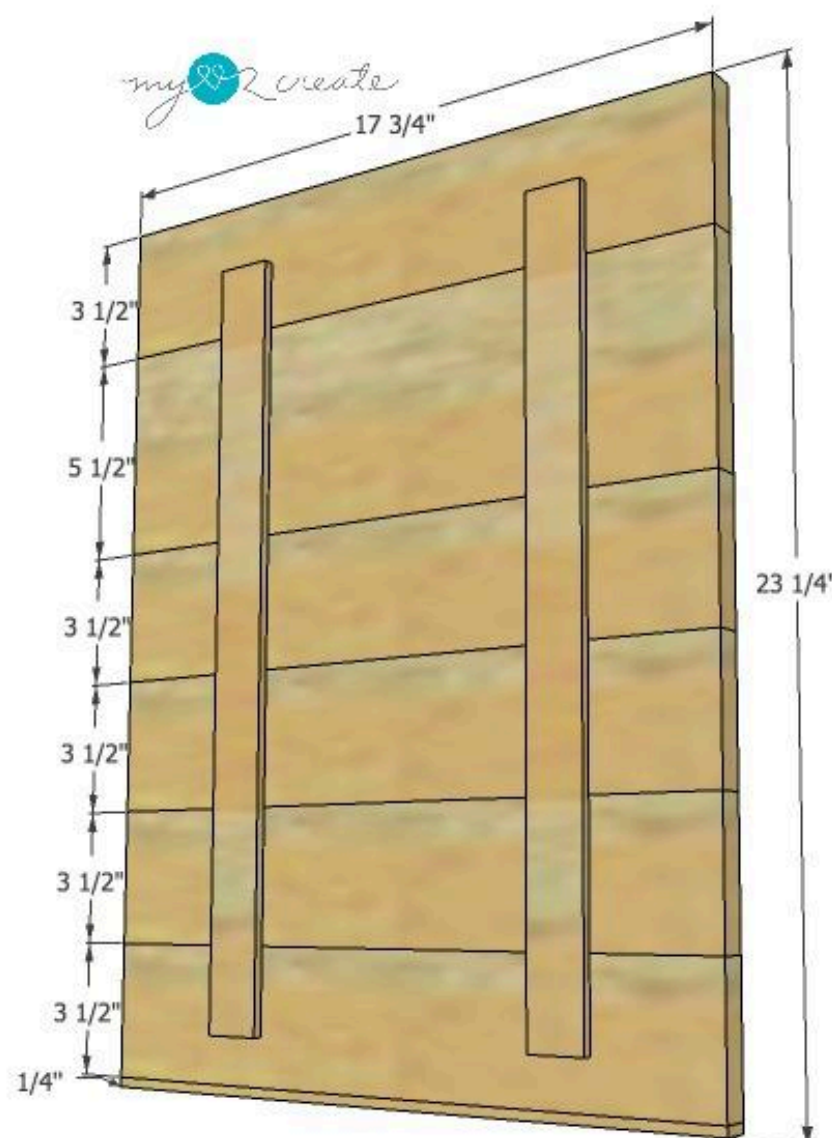

Build doors using reclaimed wood or a 1x6 and 1x4's. You can really use any wood you want to build them. I added a piece of 3/4" x 1/4" trim to the bottom as well. You can glue and clamp the boards or glue and use 1/4" thick paint sticks or plywood strips to secure the boards, nailing them into each board with 3/4" finish nails.

6


Paint/Stain

Paint, stain, and finish as you desire.

7

Attach feet and doors

Attach the feet to the bottom of the buffet with leg mounting hardware. Attach the doors with butt hinges, apply the magnetic catch, and knob as well.

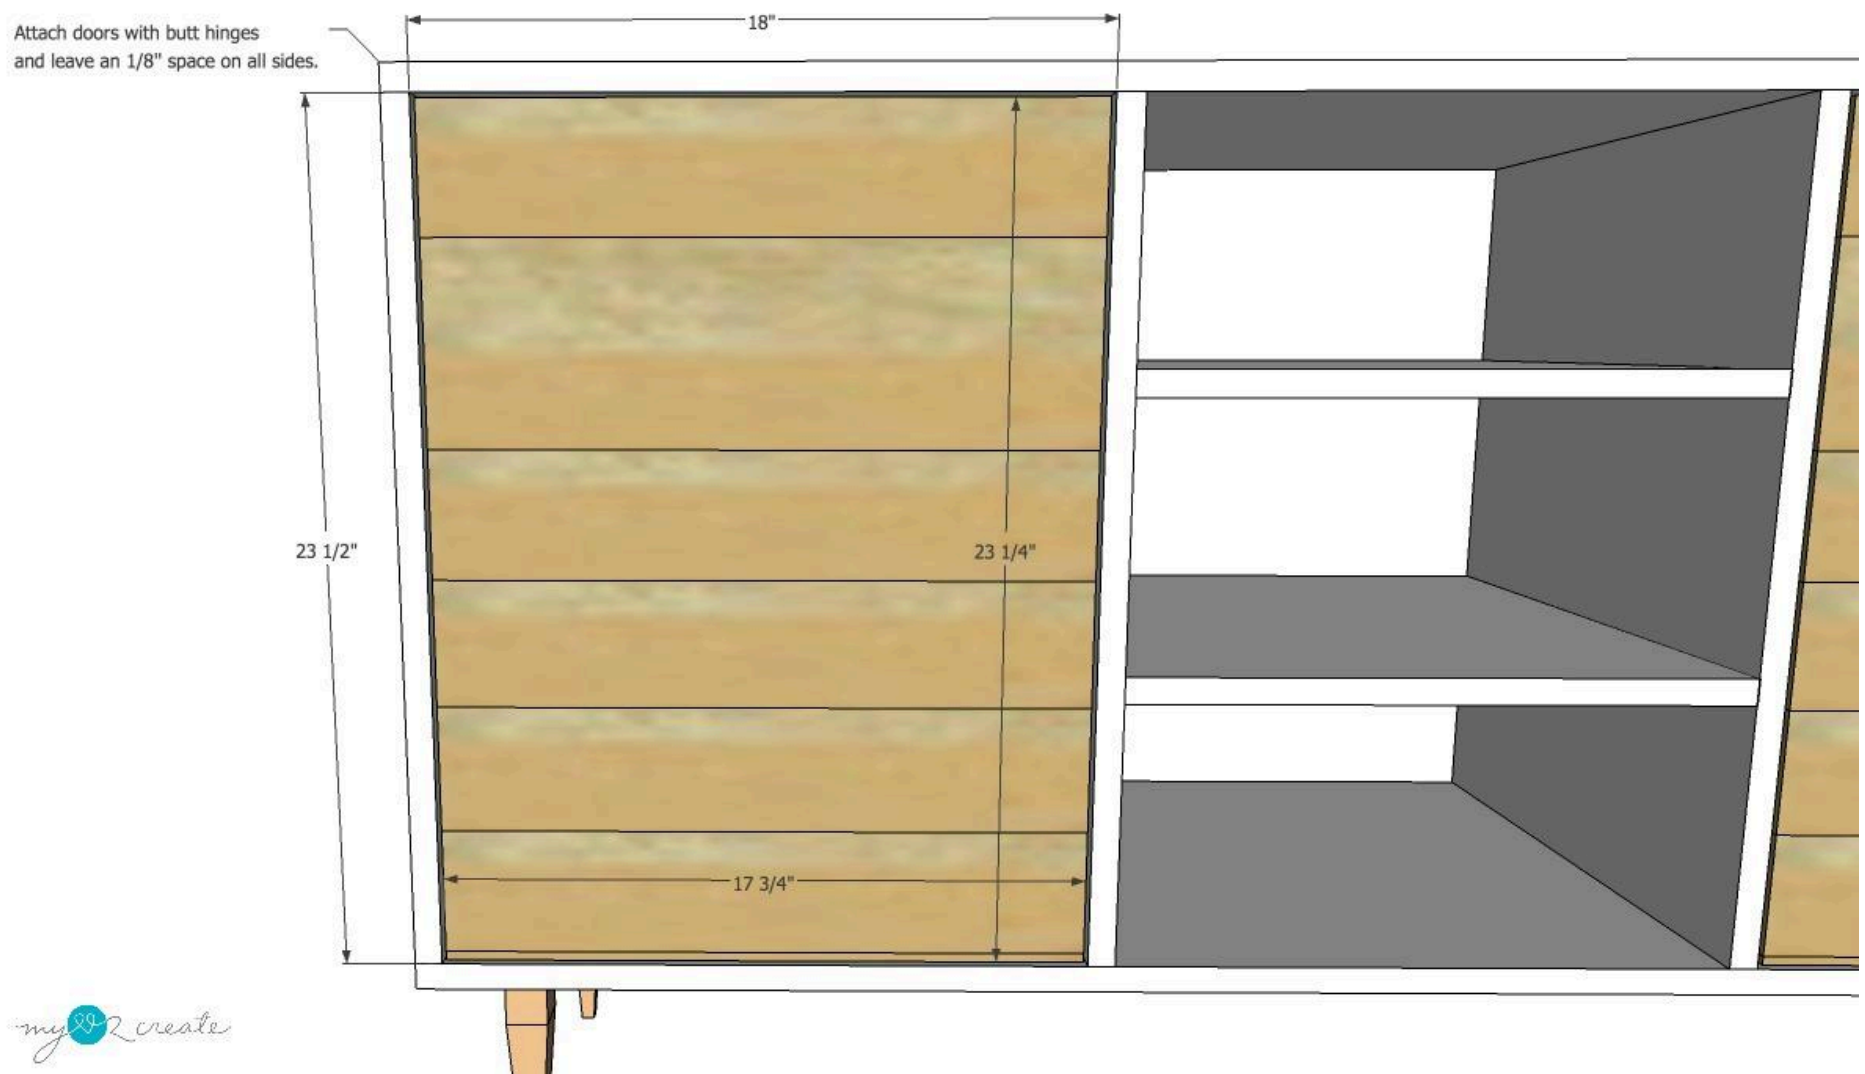

8

Visit www.MyLove2Create.com

For more photos of the build visit www.MyLove2Create.com