

Modern Floating Nightstand

By Spencley Design Co

DifficultyModerate

This nightstand is the perfect way to compliment your home and has just enough storage without being too bulky.











Tools

Kreg Tools

Kreg®

Pocket- Kreg® Pocket-Hole Jig 720PRO

Hole Jig 720PRO

Foreman

Pocket- Foreman Pocket-Hole Machine

Hole Machine

Adaptive Cutting Adaptive Cutting System Saw + Guide Track Kit

System

Saw + Guide

System

Frack Kit Adaptive Cutting System Rip Guides

Rip Guides

Pocket- Zinc Pocket-Hole Screws

Hole Screws

Zinc

Pocket- Zinc Pocket-Hole Screws

Hole Screws

Other Tools

Circular Saw

Drill

Materials

Wood Products

- 1 Cherry Hardwood, 3/4", See Cut List
- 1 Cherry Hardwood , ½" , See Cut List
- 1 Cherry Hardwood, 1/4", See Cut List

Hardware & Supplies

- 1 Box Of 1" Pocket-hole Screws (See Tools List)
- 1 Box Of 1 1/4" Pocket-hole Screws (See Tools List)



Cut List & Parts

- 2 Side- $\frac{3}{4}$ " Cherry Hardwood, $\frac{13}{3}$ X 6" X $\frac{3}{4}$ "
- 1 Top- 3/4" Cherry Hardwood, 13" X 18"
- **1** Bottom- $\sqrt[3]{4}$ " Cherry Hardwood , 12 $\sqrt[1]{4}$ " X 16 $\sqrt[1]{2}$ "
- 1 Drawer Front- $\frac{3}{4}$ " Cherry Hardwood , 5 $\frac{1}{4}$ " X 16 $\frac{1}{2}$ "
- 1 Drawer Inside Front- ½" Cherry Hardwood , 3" X 15 5/16"
- Drawer Back- ½" Cherry Hardwood , 2" X 15 5/16"
- 2 Drawer Sides- ½" Cherry Hardwood, 3" X 10"
- 1 Drawer Bottom- ¼" Cherry Hardwood , 9 ¾" X 16"



Directions

1

Watch the Video

Before attempting this project, watch the full youtube video to get a better understanding of how to complete the project. Link for the video is down below in the "extras" section








Cut pieces for main case

Cut pieces down according to the cut list for the main case

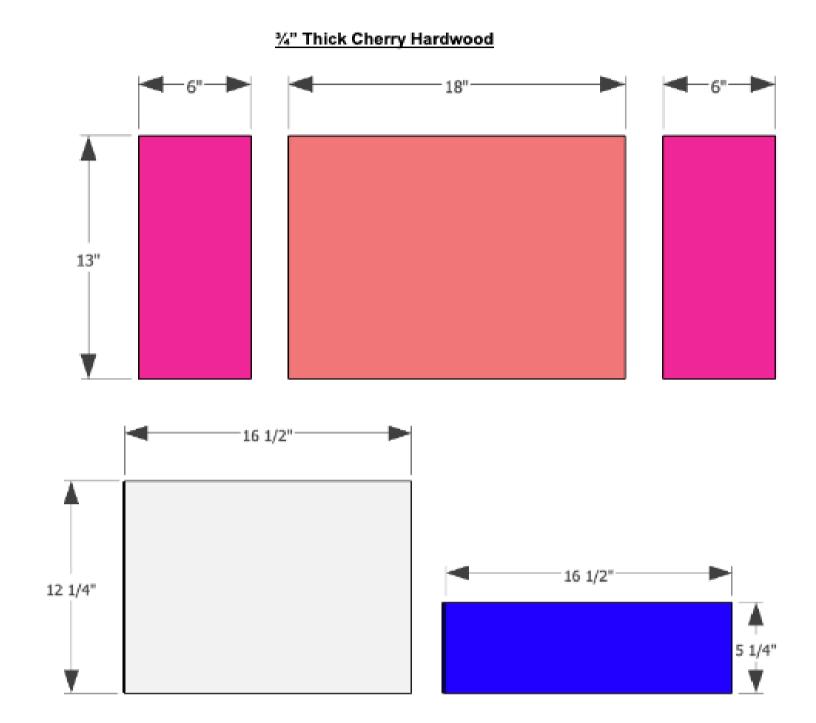






Assemble nightstand case

Using glue assemble all 4 of the pieces for the main case out of 3/4" thick cherry.

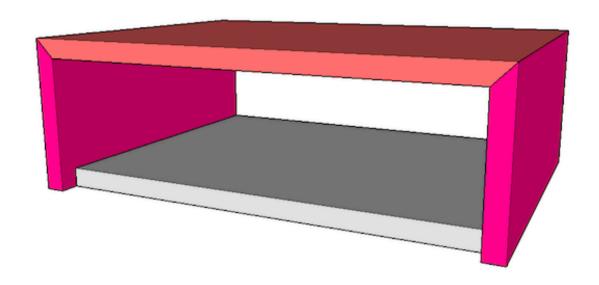




Cut pieces for drawer box

Cut pieces for drawer box out of ½" thick cherry.

1/2" Thick Cherry Hardwood

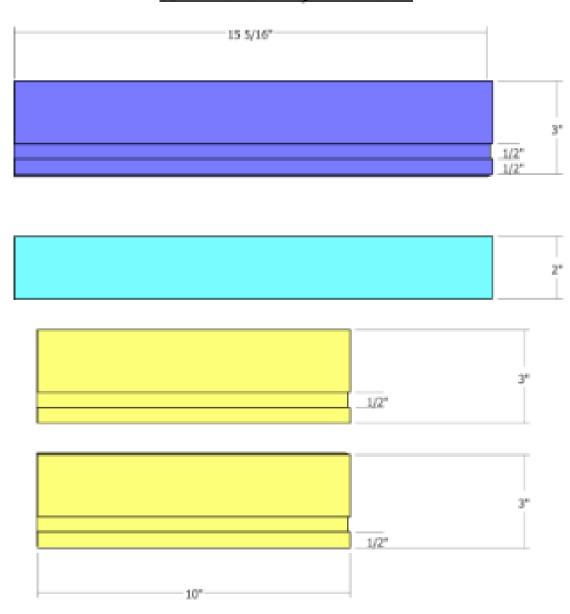






Cut drawer bottom

Using 1/4" thick cherry, cut the drawer bottom to final size


1/4" Thick Cherry Hardwood

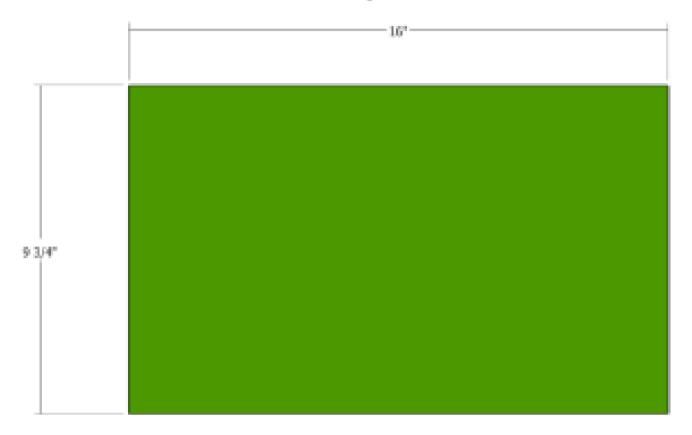



Assemble drawer

Using pocket hole screws, assemble the drawer box

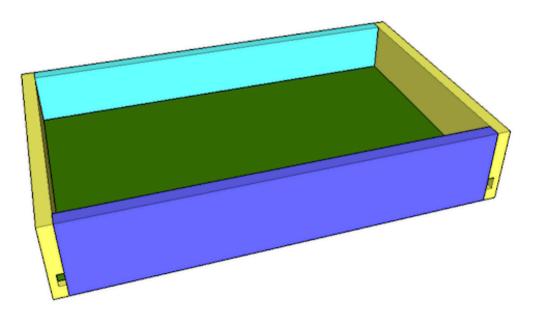





Attach drawer slides

Attach undermount drawer slides inside the box





Attach drawer front

Using screws, attach the drawer front to the center of the drawer box

