

Modern Floating Nightstand

By **Spencley Design Co.**

Difficulty
Moderate

This nightstand is the perfect way to compliment your home and has just enough storage without being too bulky.



Tools

Kreg Tools



[Kreg@ Pocket-Hole Jig 720PRO](#)



[Foreman Pocket-Hole Machine](#)



[Adaptive Cutting System Saw + Guide Track Kit](#)



[Adaptive Cutting System Rip Guides](#)



[Zinc Pocket-Hole Screws](#)



[Zinc Pocket-Hole Screws](#)

Other Tools

Circular Saw

Drill

Materials

Wood Products

- 1 Cherry Hardwood , 3/4" , See Cut List
- 1 Cherry Hardwood , 1/2" , See Cut List
- 1 Cherry Hardwood , 1/4" , See Cut List

Hardware & Supplies

- 1 Box Of 1" Pocket-hole Screws (See Tools List)
- 1 Box Of 1 1/4" Pocket-hole Screws (See Tools List)

Cut List & Parts

- 2 Side- $\frac{3}{4}$ " Cherry Hardwood , 13" X 6" X $\frac{3}{4}$ "
- 1 Top- $\frac{3}{4}$ " Cherry Hardwood , 13" X 18"
- 1 Bottom- $\frac{3}{4}$ " Cherry Hardwood , 12 $\frac{1}{4}$ " X 16 $\frac{1}{2}$ "
- 1 Drawer Front- $\frac{3}{4}$ " Cherry Hardwood , 5 $\frac{1}{4}$ " X 16 $\frac{1}{2}$ "
- 1 Drawer Inside Front- $\frac{1}{2}$ " Cherry Hardwood , 3" X 15 $\frac{5}{16}$ "
- 1 Drawer Back- $\frac{1}{2}$ " Cherry Hardwood , 2" X 15 $\frac{5}{16}$ "
- 2 Drawer Sides- $\frac{1}{2}$ " Cherry Hardwood , 3" X 10"
- 1 Drawer Bottom- $\frac{1}{4}$ " Cherry Hardwood , 9 $\frac{3}{4}$ " X 16"

Directions

1

Watch the Video


Before attempting this project, watch the full youtube video to get a better understanding of how to complete the project.

Link for the video is down below in the "extras" section



2**Cut pieces for main case**


Cut pieces down according to the cut list for the main case

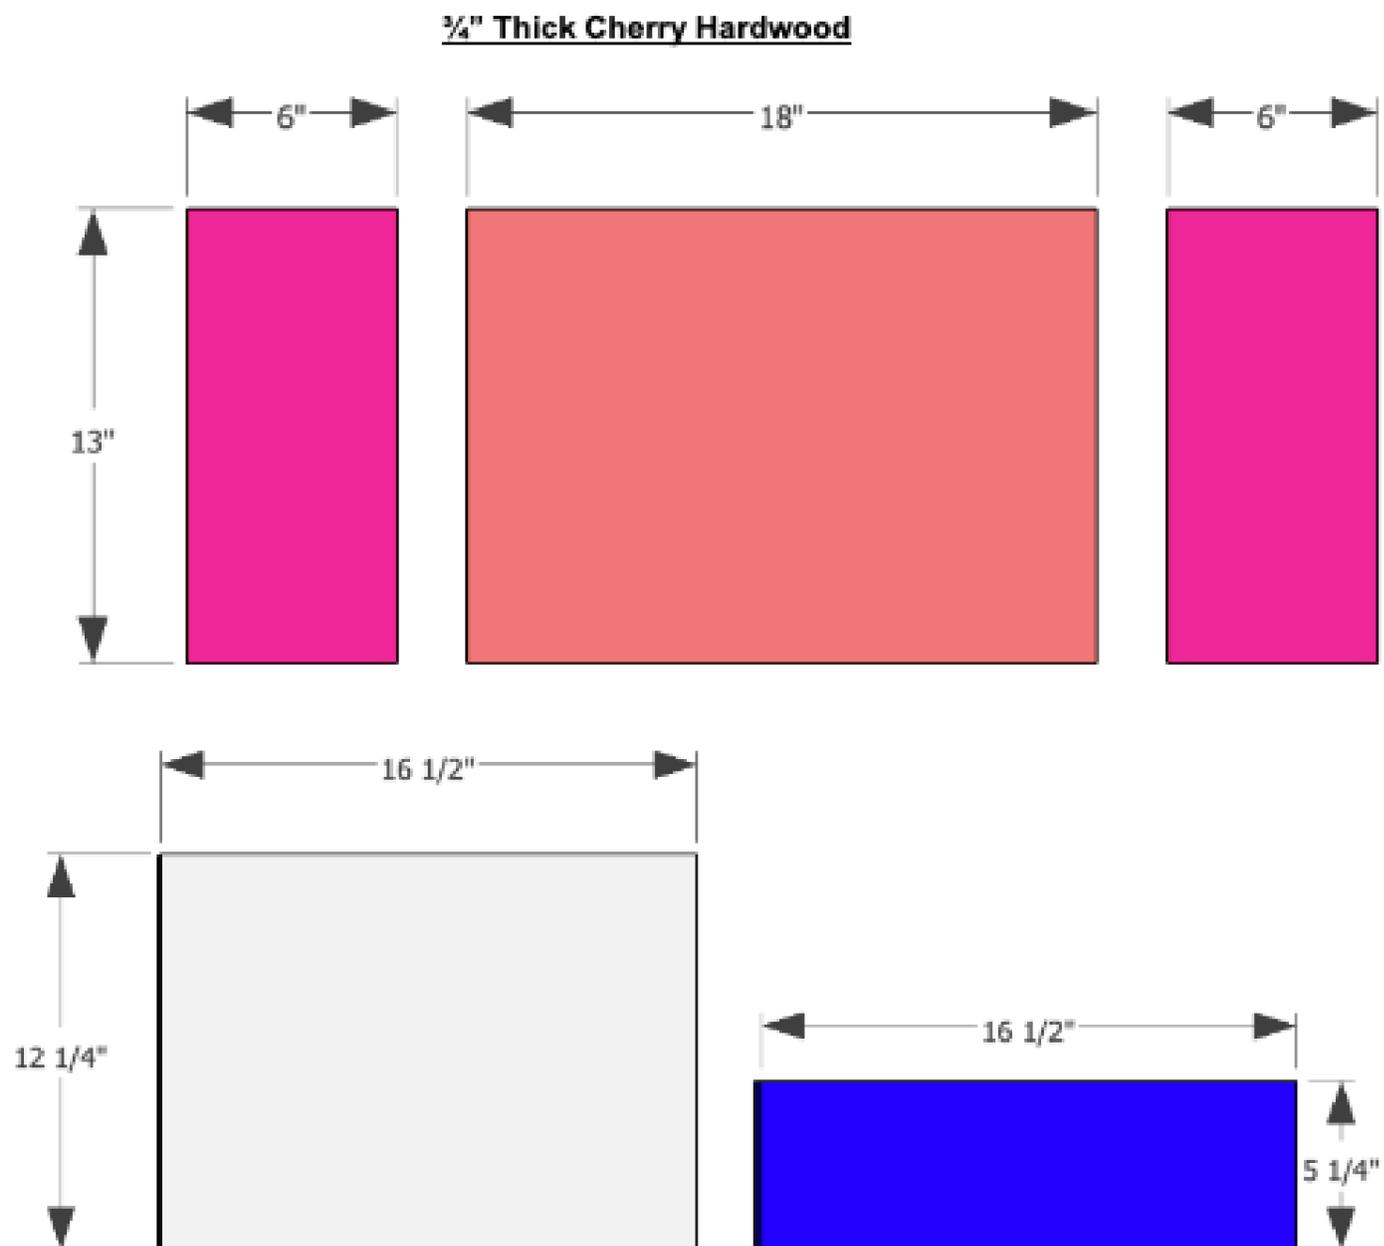

3

Assemble nightstand case

Using glue assemble all 4 of the pieces for the main case out of $\frac{3}{4}$ " thick cherry.



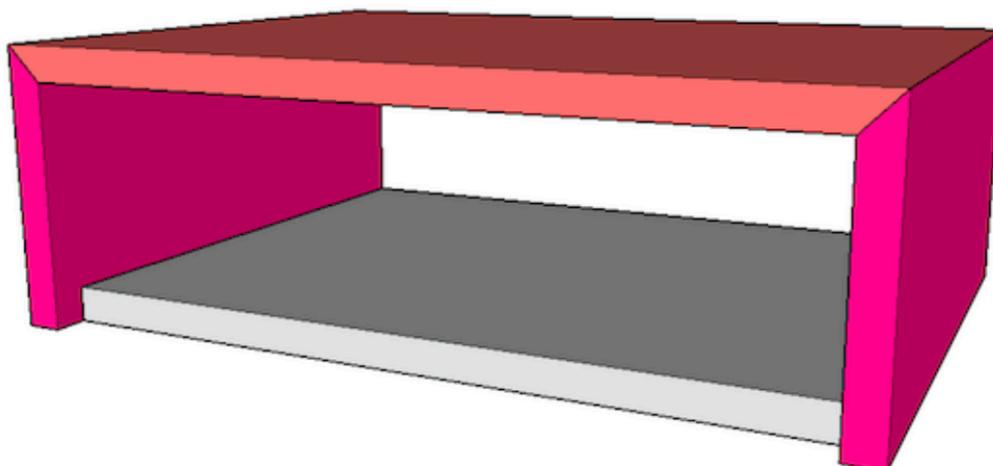


4

Cut pieces for drawer box

Cut pieces for drawer box out of $\frac{1}{2}$ " thick cherry.

$\frac{1}{2}$ " Thick Cherry Hardwood

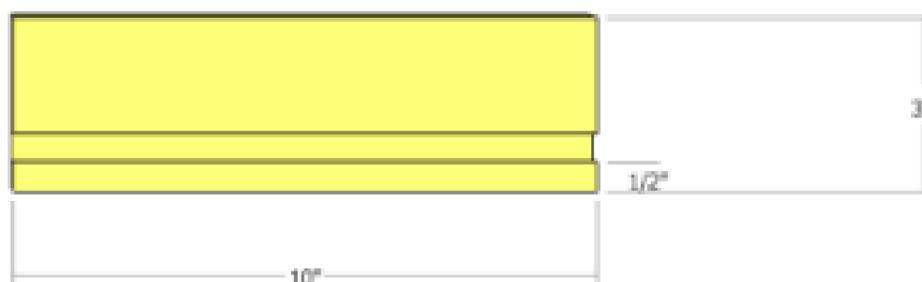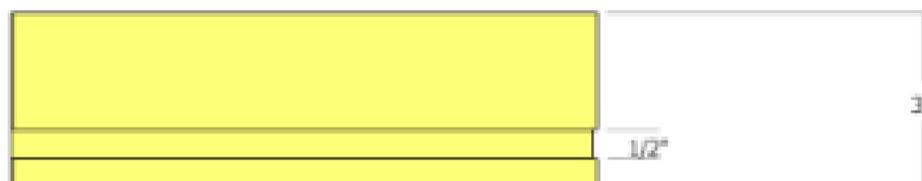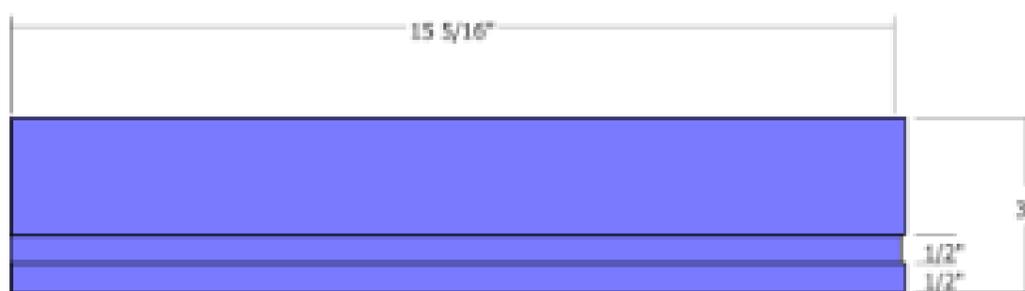


5

Cut drawer bottom

Using 3/4" thick cherry, cut the drawer bottom to final size


3/4" Thick Cherry Hardwood

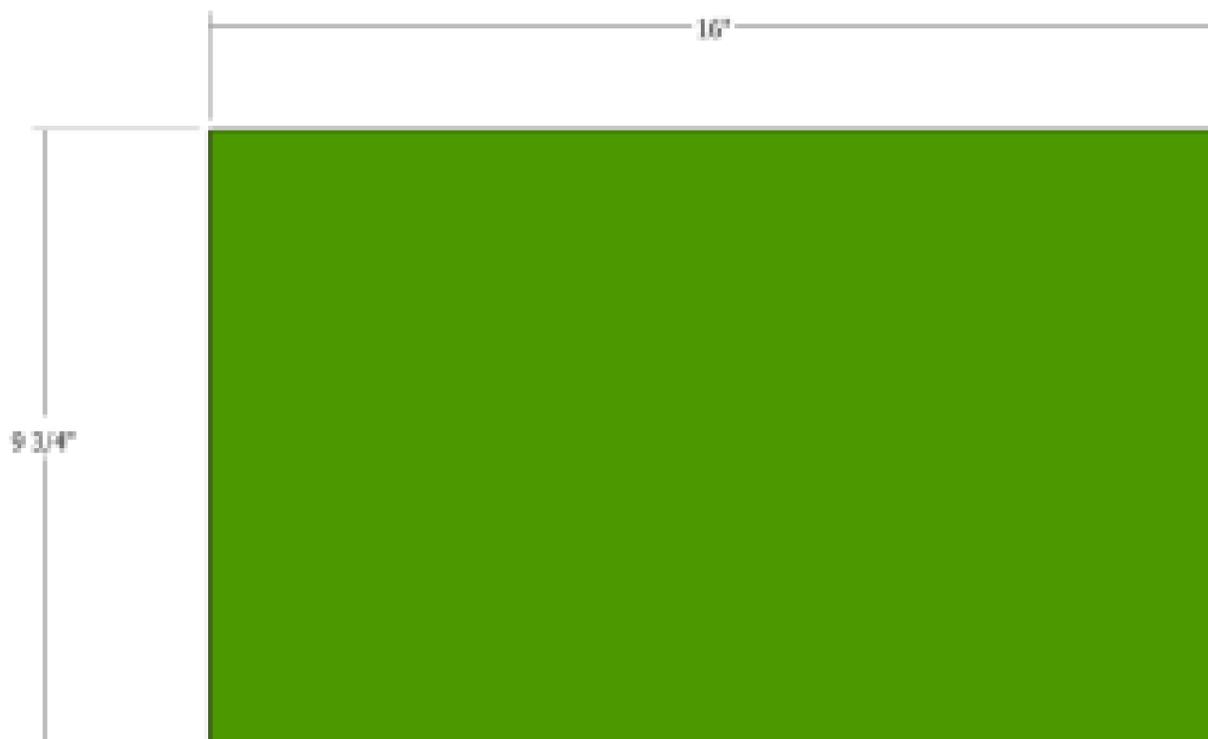

6

Assemble drawer


Using pocket hole screws, assemble the drawer box

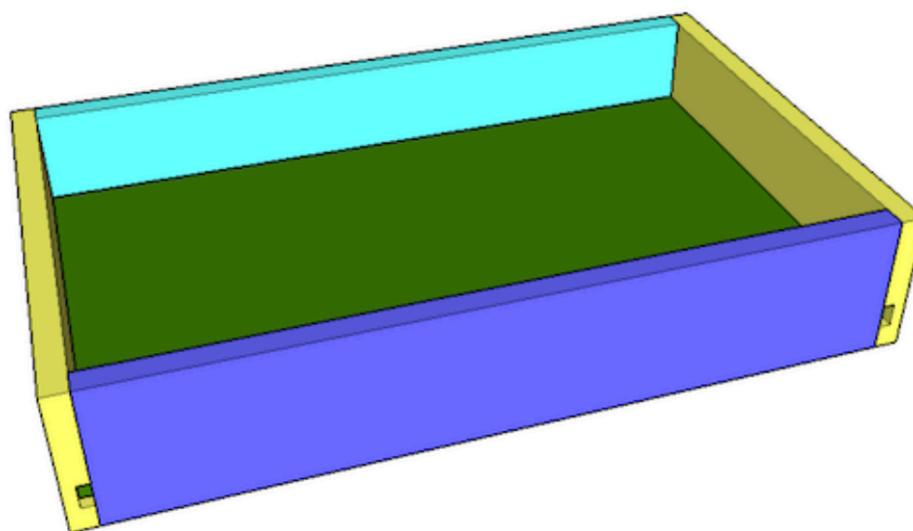

7

Attach drawer slides

Attach undermount drawer slides inside the box

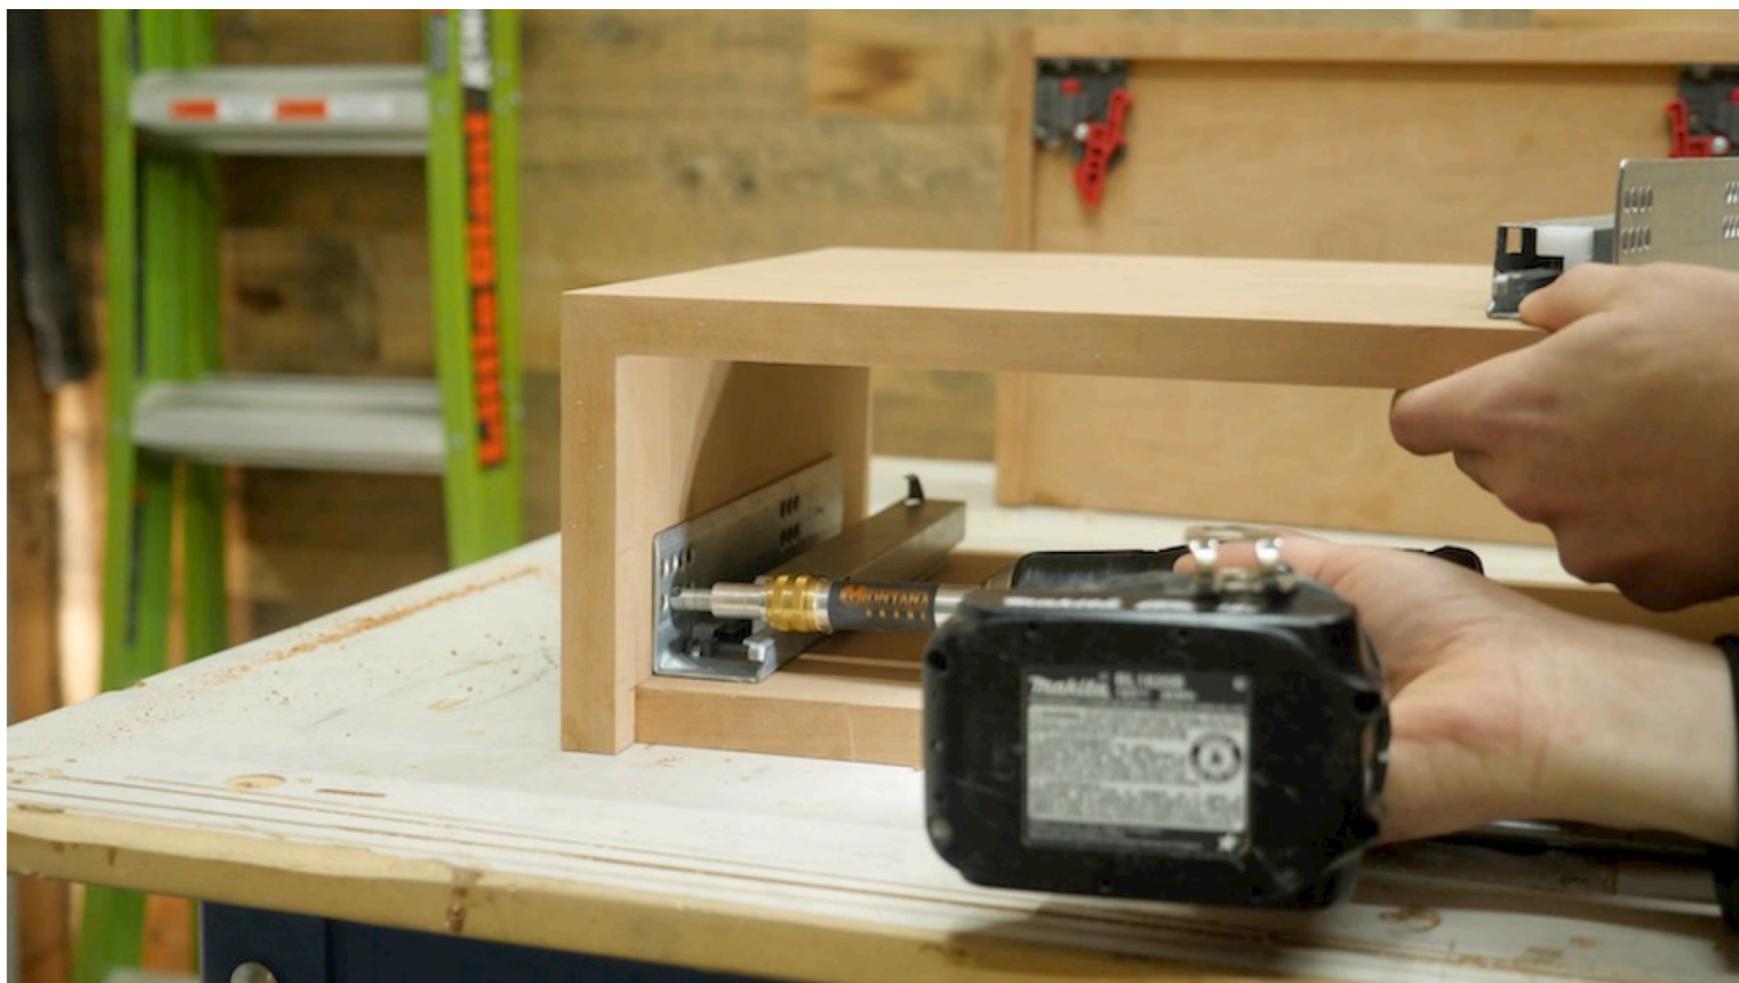

8

Attach drawer front

Using screws, attach the drawer front to the center of the drawer box

