

# Under Workbench Storage

By **Spencley Design Co.**

Difficulty

Easy

This is the perfect storage solution to put underneath your Kreg workbench!







# Tools

## Kreg Tools

- Kreg®  
Pocket-  
Hole Jig  
720PRO

[Kreg® Pocket-Hole Jig 720PRO](#)
- Cabinet  
Hardware  
Jig

[Cabinet Hardware Jig](#)
- Universal  
Bench  
Base  
with  
Standard-

[Universal Bench Base with Standard-Height Legs](#)

# Materials

## Wood Products

- 1

3/4" Plywood
- 1

1/2" Plywood

## Hardware & Supplies

- 4

Drawer Pulls
- 4

Sets Of Drawer Slides

# Cut List & Parts

- 2 Case Sides - 3/4 Ply , 27 1/2 X 10 1/2 X 3/4
- 1 Case Interior - 3/4 Ply , 27 1/2 X 9 3/4 X 3/4
- 3 Case Lower Braces - 3/4 Ply , 37 1/4 X 2 X 3/4
- 6 Case Upper Braces - 3/4 Ply , 18 1/4 X 2 X 3/4
- 4 Drawer Bottoms - 1/2 Ply , 12 3/8 X 16 3/4 X 1/2
- 2 Large Drawer Front - 1/2 Ply , 8 3/4 X 18 X 1/2
- 4 Large Drawer Back/Front - 1/2 Ply , 6 3/4 X 16 1/4 X 1/2
- 4 Large Drawer Sides - 1/2 Ply , 6 3/4 X 12 7/8 X 1/2
- 2 Small Drawer Front - 1/2 Ply , 3 1/4 X 18 X 1/2
- 4 Small Drawer Back/Front - 1/2 Ply , 2 1/2 X 16 1/4 X 1/2
- 4 Small Drawer Sides - 1/2 Ply , 2 1/2 X 12 7/8 X 1/2



# Directions

---

1

## Watch Video

Check out the video first, and as you build. It'll help with a few instructions!

[🔗 Under Workbench Storage Video](#)

---

2

## Cut Parts

Cut down plywood parts according to the cutlist provided above





**3**

### Drill Pocket Holes

Grab all of your 3/4" thick plywood brace pieces to construct the case and drill pocket holes into them

**4**

### Construct Case

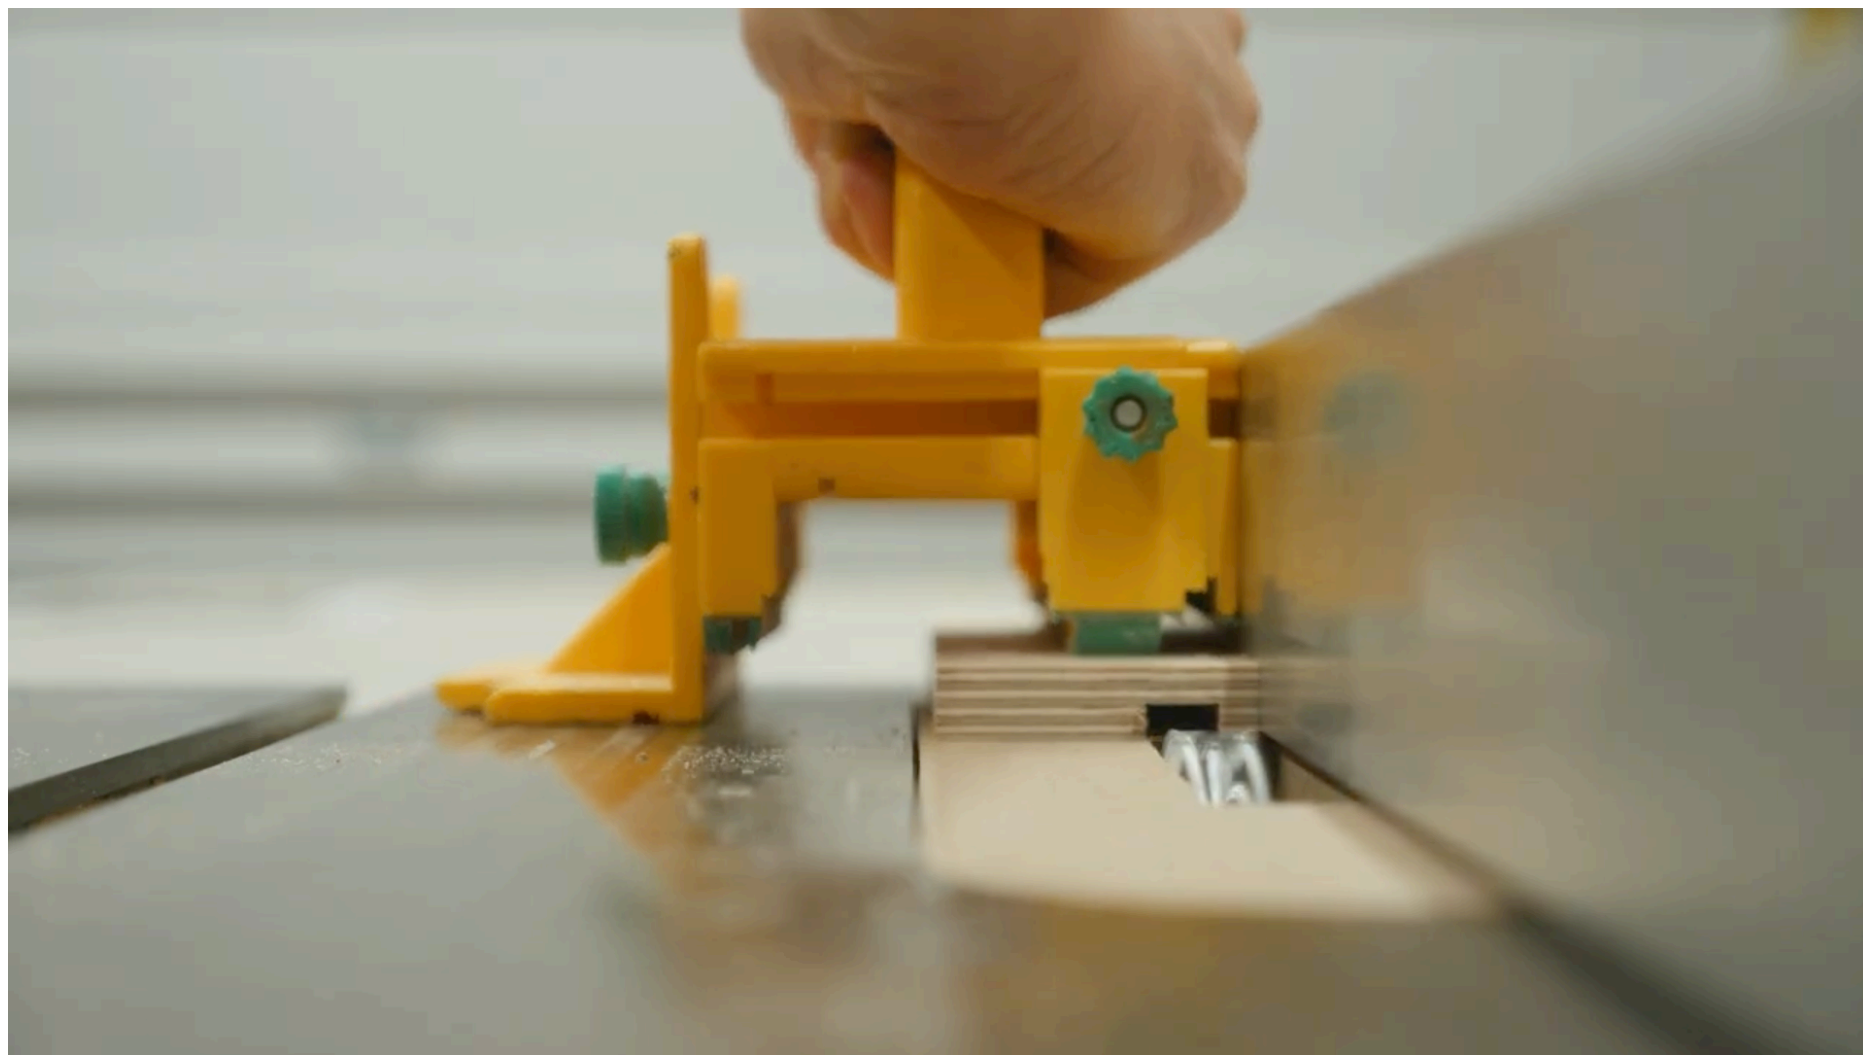
Using 1 1/4" pocket hole screws, assemble the case together





**5****Cut Drawer Dados**

In all of the 1/2" thick plywood drawer pieces, (excluding the false fronts) cut a 1/2" wide and 1/4" deep dado to house the drawer bottoms

**6****Assemble Drawer Boxes**

Assemble all 4 drawer boxes using 1" long pocket hole screws





**7****Install Drawer Slides**

Using a small spacer, install 4 sets of drawer slides inside the case

**8****Install Large Drawers**

Install large drawers between the drawer slides, attach the drawer front, and attach the drawer pull





**9****Install Small Drawers**

Install small drawers between the drawer slides, attach the drawer front, and attach the drawer pull





10

## You Are Done!

Congrats on building the under workbench storage!

