


Rustic Coffee Table

By **The Crafted Maker**

Difficulty

Easy

This rustic coffee table is an easy weekend build. It has many fun design elements such as nuts and bolts to give it a rustic yet industrial look. This is a great addition to most living room decors.

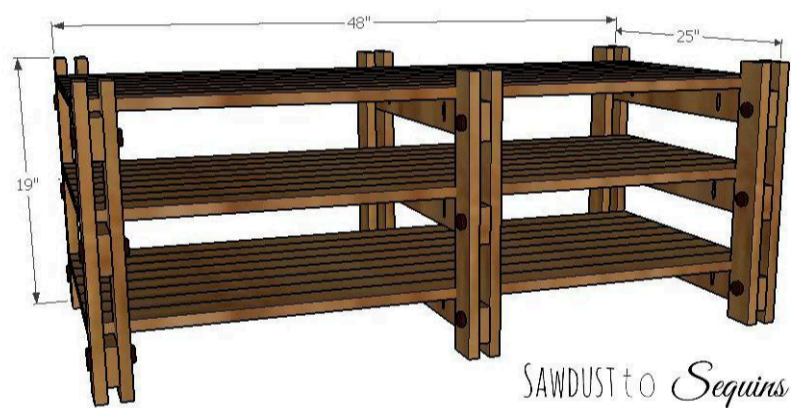

Tools

Kreg Tools



[Kreg® Pocket-Hole Jig 720](#)

Other Tools

Miter Saw

Tape Measure

Drill (cordless)

Sander

Sawhorse

Materials

Wood Products

18 Board , 1x3 , 96"

2 Board , 1x2 , 96"

Hardware & Supplies

18 1 ¼" Pocket Hole Screws

18 3/8-in-16 X 3-in Bolts

18 3/8-in-16 Hex Nuts

18 3/8-in X 7/8-in Flat Washers

48 1 ¼" Wood Screws

1 120 Sandpaper

1 Kona Wood Stain

Cut List & Parts

- 24 Shelf Boards , 3/4"x2.5"x48
- 12 Table Leg Height Boards , 3/4"x2.5"x19"
- 9 Table Leg Width Boards , 3/4"x2.5"x25"
- 6 Shelf Joiner Boards , 3/4"x1.5"x18"

Cut List

18 - 1x3x96" Boards

<i>SAWDUST to Sequins</i>		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
		48"		48"					
19"		19"		19"		19"		19"	
19"		19"		19"		19"		19"	
25"		25"		19"		19"			
25"		25"		25"		25"			
25"		25"		25"		25"			
25"		25"		25"		25"			
25"		25"		25"		25"			

Cut List

2 - 1x2x96"

6 boards @ 18"				
<i>SAWDUST to Sequins</i>				


Directions

1

Cut boards and drill holes needed

Cut all boards according to the cut list. Drill holes with a 3/8" spade bit in the (12) 19" boards and the (9) 25" boards. The picture shows the location of the holes.

Spade bit cuts

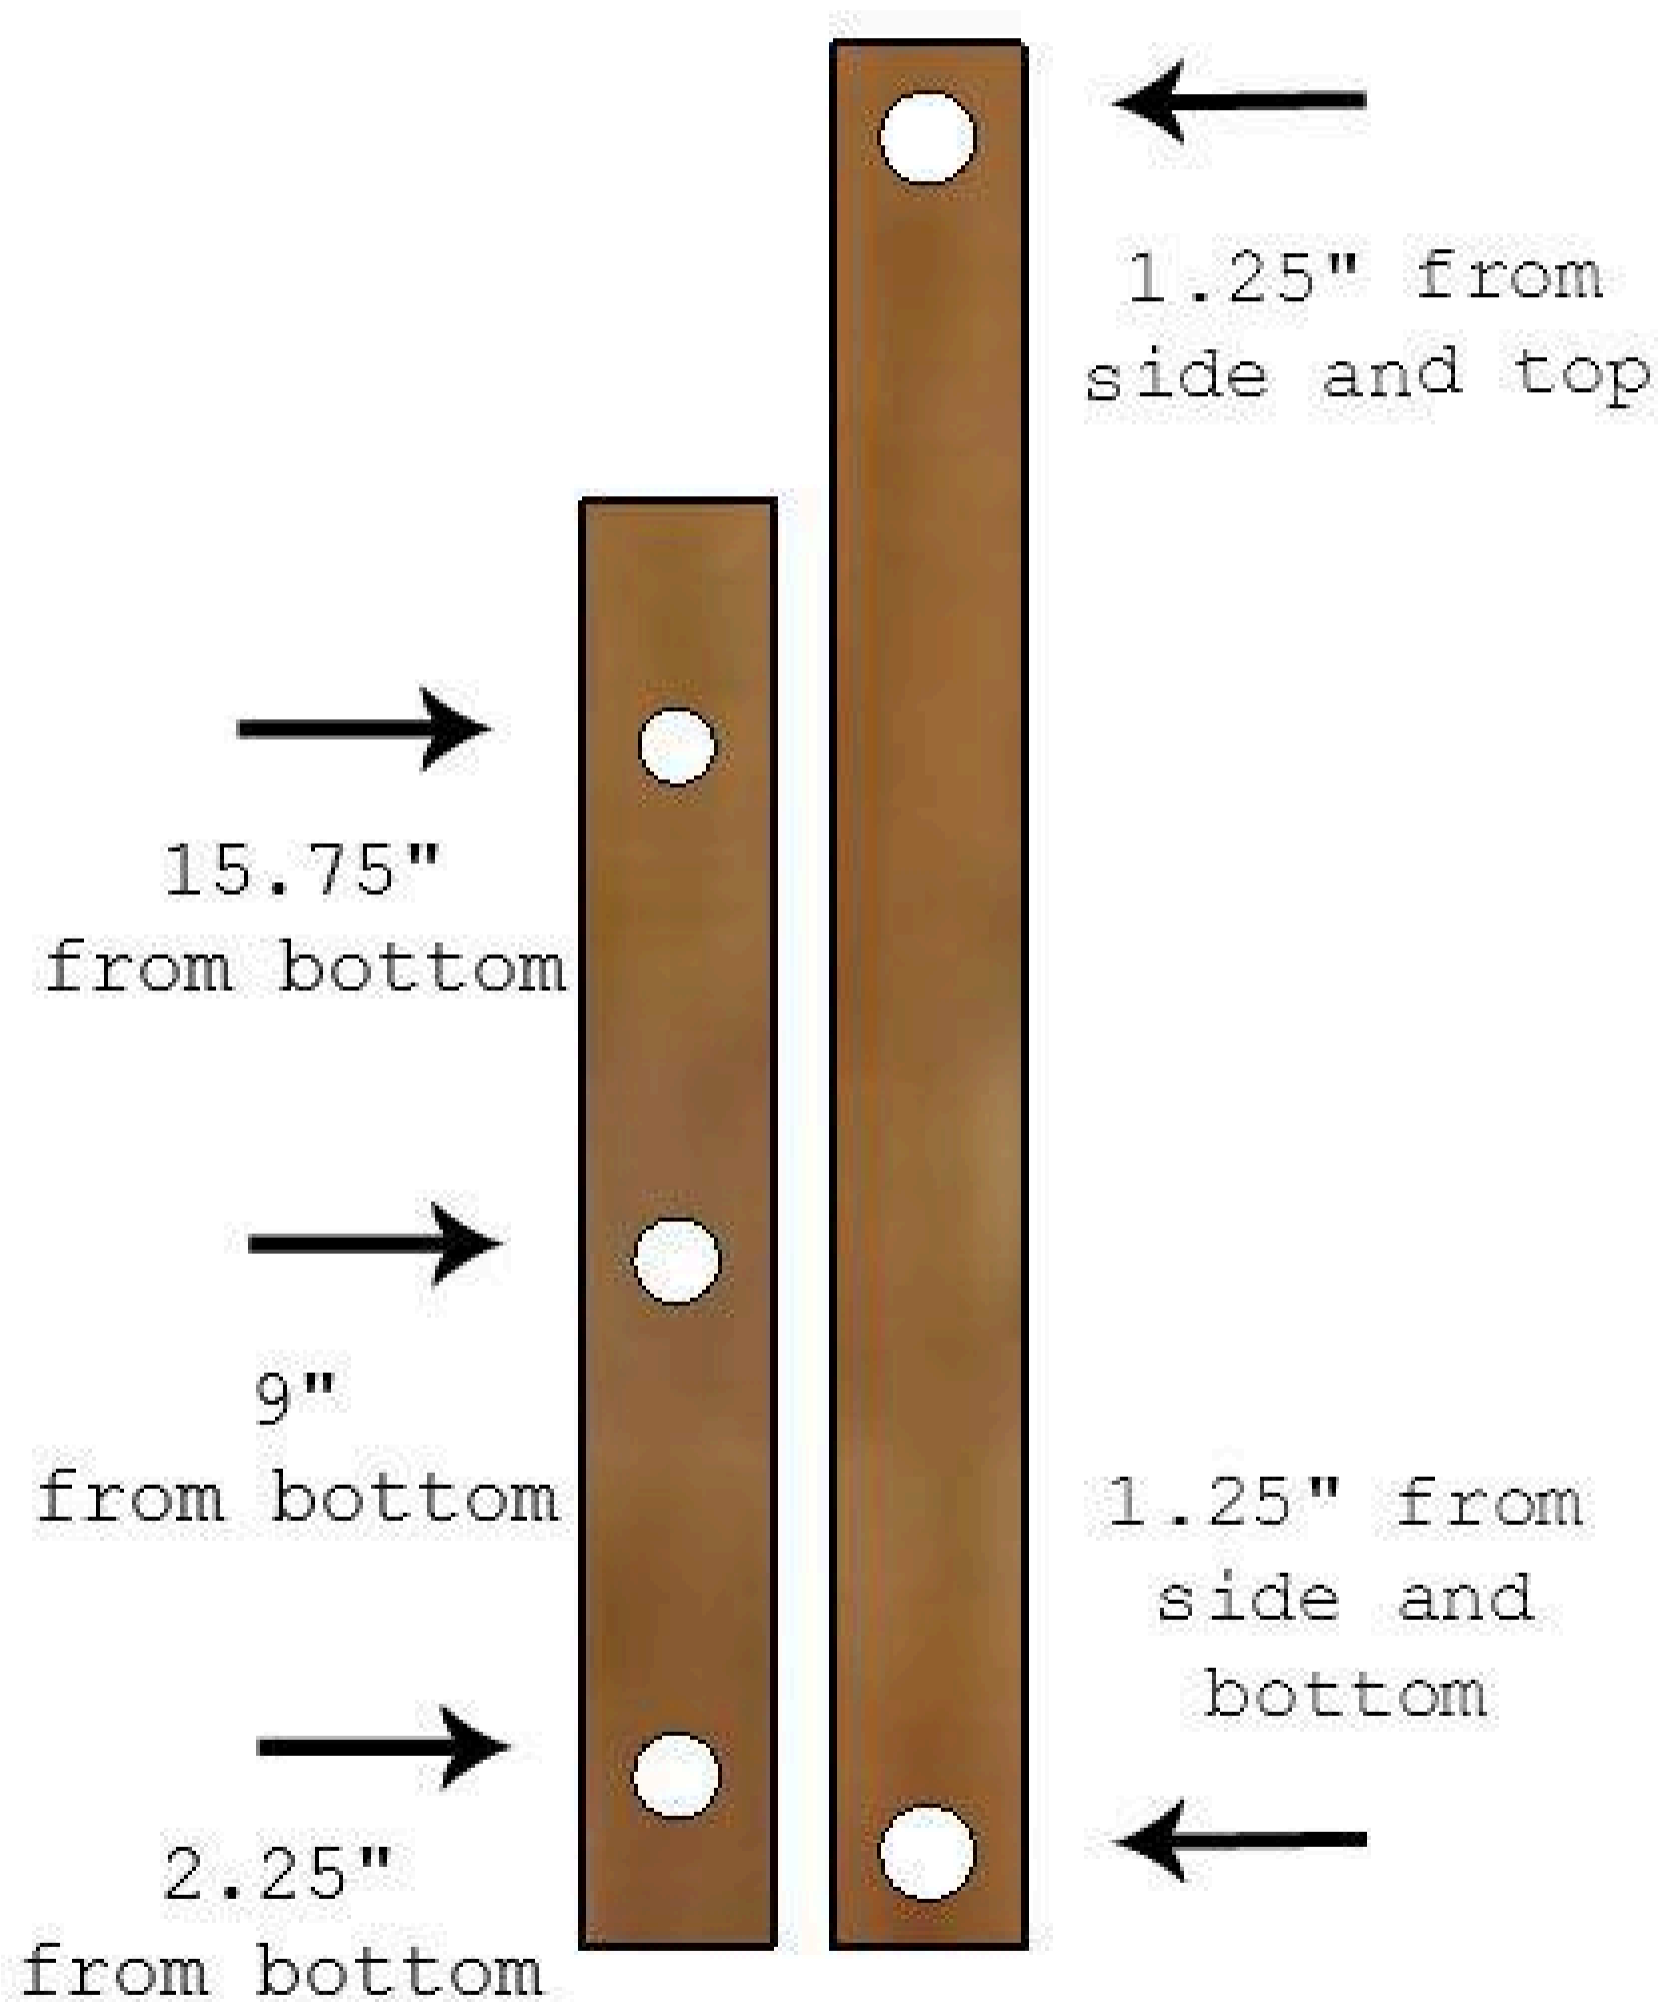

2


Drill pocket holes

Drill pocket holes in the 25" boards.

They should be 6" from the edge of each side.

Pocket Holes

6"

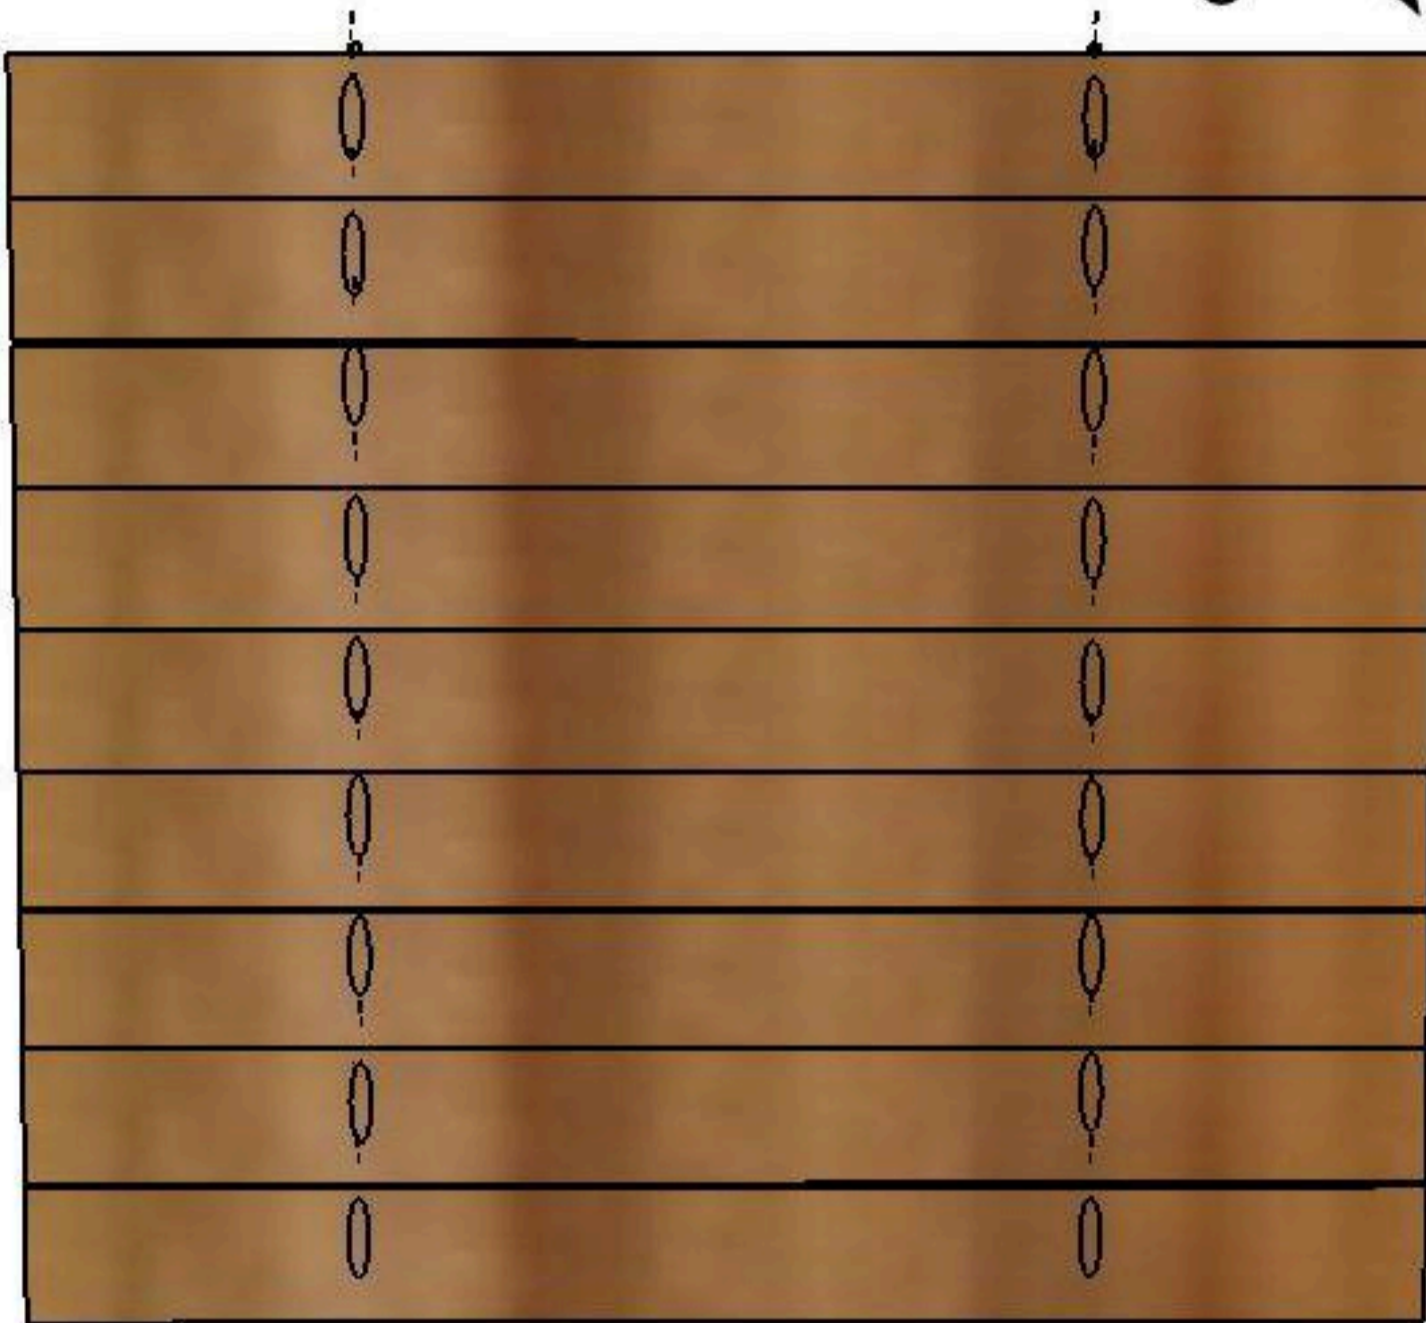

SAWDUST to *Sequins*


3

Sand or Paint Boards

Completely sand your boards and paint or stain. This is very difficult to do once the table is assembled.

4**Assemble Shelves**

Place two of the 18" 1x2 boards across eight of your 48" 1x3 boards and screw in with 1 1/4" wood screws. Repeat until you have three shelf units. 1x2 boards should be placed 6" from each edge.

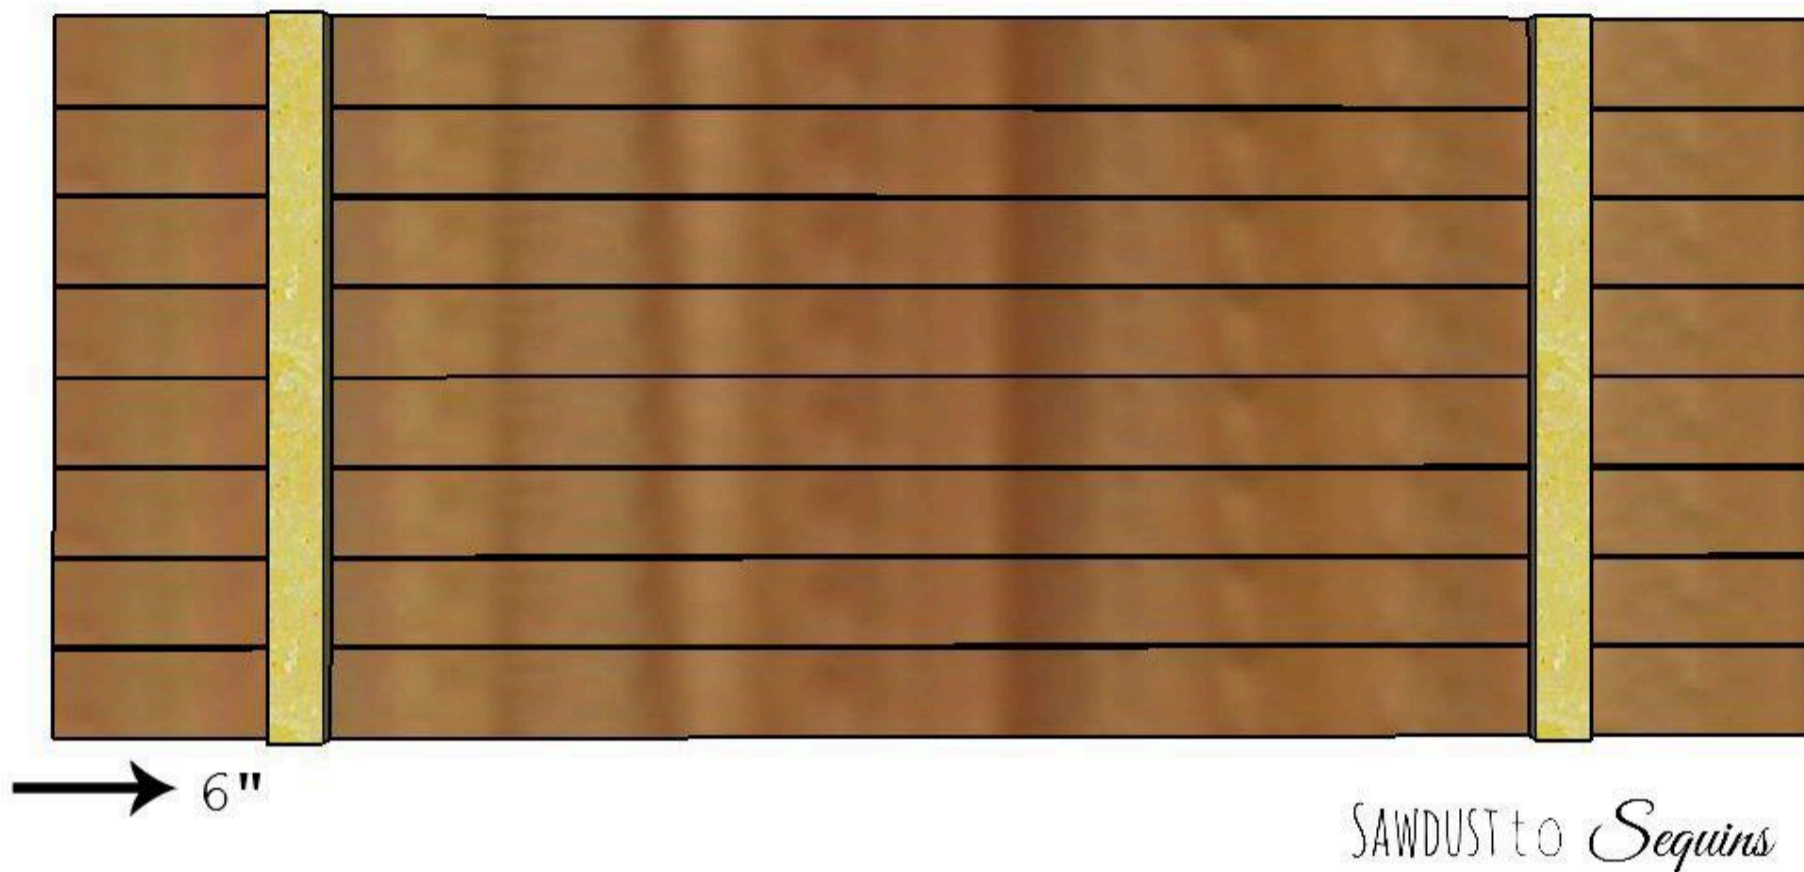

5

Assemble Legs of Table

Place 3 - 1x3 @ 25" between
3- 1x3 @ 19". Secure with a
bolt, washer, and hex nut.

The holes drilled with the spade
bit will be the placement of the
boards. Tighten the nuts to ensure
the stability of the table. Make three
of these.



SAWDUST to *Sequins*

6

Install Shelf Units to Legs

Attach the shelf units you assembled in step 4 to the leg supports with pocket hole screws.



SAWDUST to *Sequins*