

Fluted Bathroom Vanity

By **Built by Bec Designs**

Difficulty

Moderate

Want to bring your building skills up a level? Try this vanity build!





Tools

Kreg Tools



[Kreg® Pocket-Hole Jig 720PRO](#)



[Zinc Pocket-Hole Screws](#)



[Concealed Hinge Jig](#)



[Concealed Hinge Jig](#)

Other Tools

Table saw

Router

Nail Gun

Drill

Sander

Materials

Wood Products

60 3/4" Thick Wood , Board Feet

Hardware & Supplies

50 1 1/4" Pocket Hole Screws

50 1 1/2" Brad Nails

Wood Glue

Variation Of 80, 120, 150 And 220 Sandpaper

Stain Of Choice

CA Glue

Roundover Bit

Triple Beaded Bit

4 Inset Door Hinges

Cut List & Parts

- 2** Sides Of Cabinet , 35"x19.75"x.75"
- 1** Bottom Of Cabinet , 25.5"x20.5"x.75"
- 3** Face Frame Center , 25.5"x1.5"x.75"
- 2** Face Frame Sides , 35"x1.5"x.75"
- 1** Fluting Detail , 25.5"x3.75"x.75"
- 2** Doors , 24"x12.875"x.75"
- 1** Baseboard Front , 29.25"x4.5"x.75"
- 2** Baseboard Sides , 21.5"x4.5"x.75"
- 8** Door Trim , .25"x.25"x.25"
- 1** Upper Trim Front , 30.25"x.25"x.50"
- 2** Upper Trim Sides , 22"x.50"x.25"

Directions

1**1**

Cut and attach the side panels together using wood glue and 1 1/4" pocket hole screws.



2**2**


Cut the panel to size using a table saw, track saw or circular saw.

3**3**

Attach the bottom panel of the cabinet to the sides of the cabinet using wood glue and 1 1/4" pocket hole screws. Make sure the bottom of the cabinet is 3.5" inches off the floor.

4**4**

Cut the face frame to size and attach together using 1 1/4" pocket hole screws and wood glue.

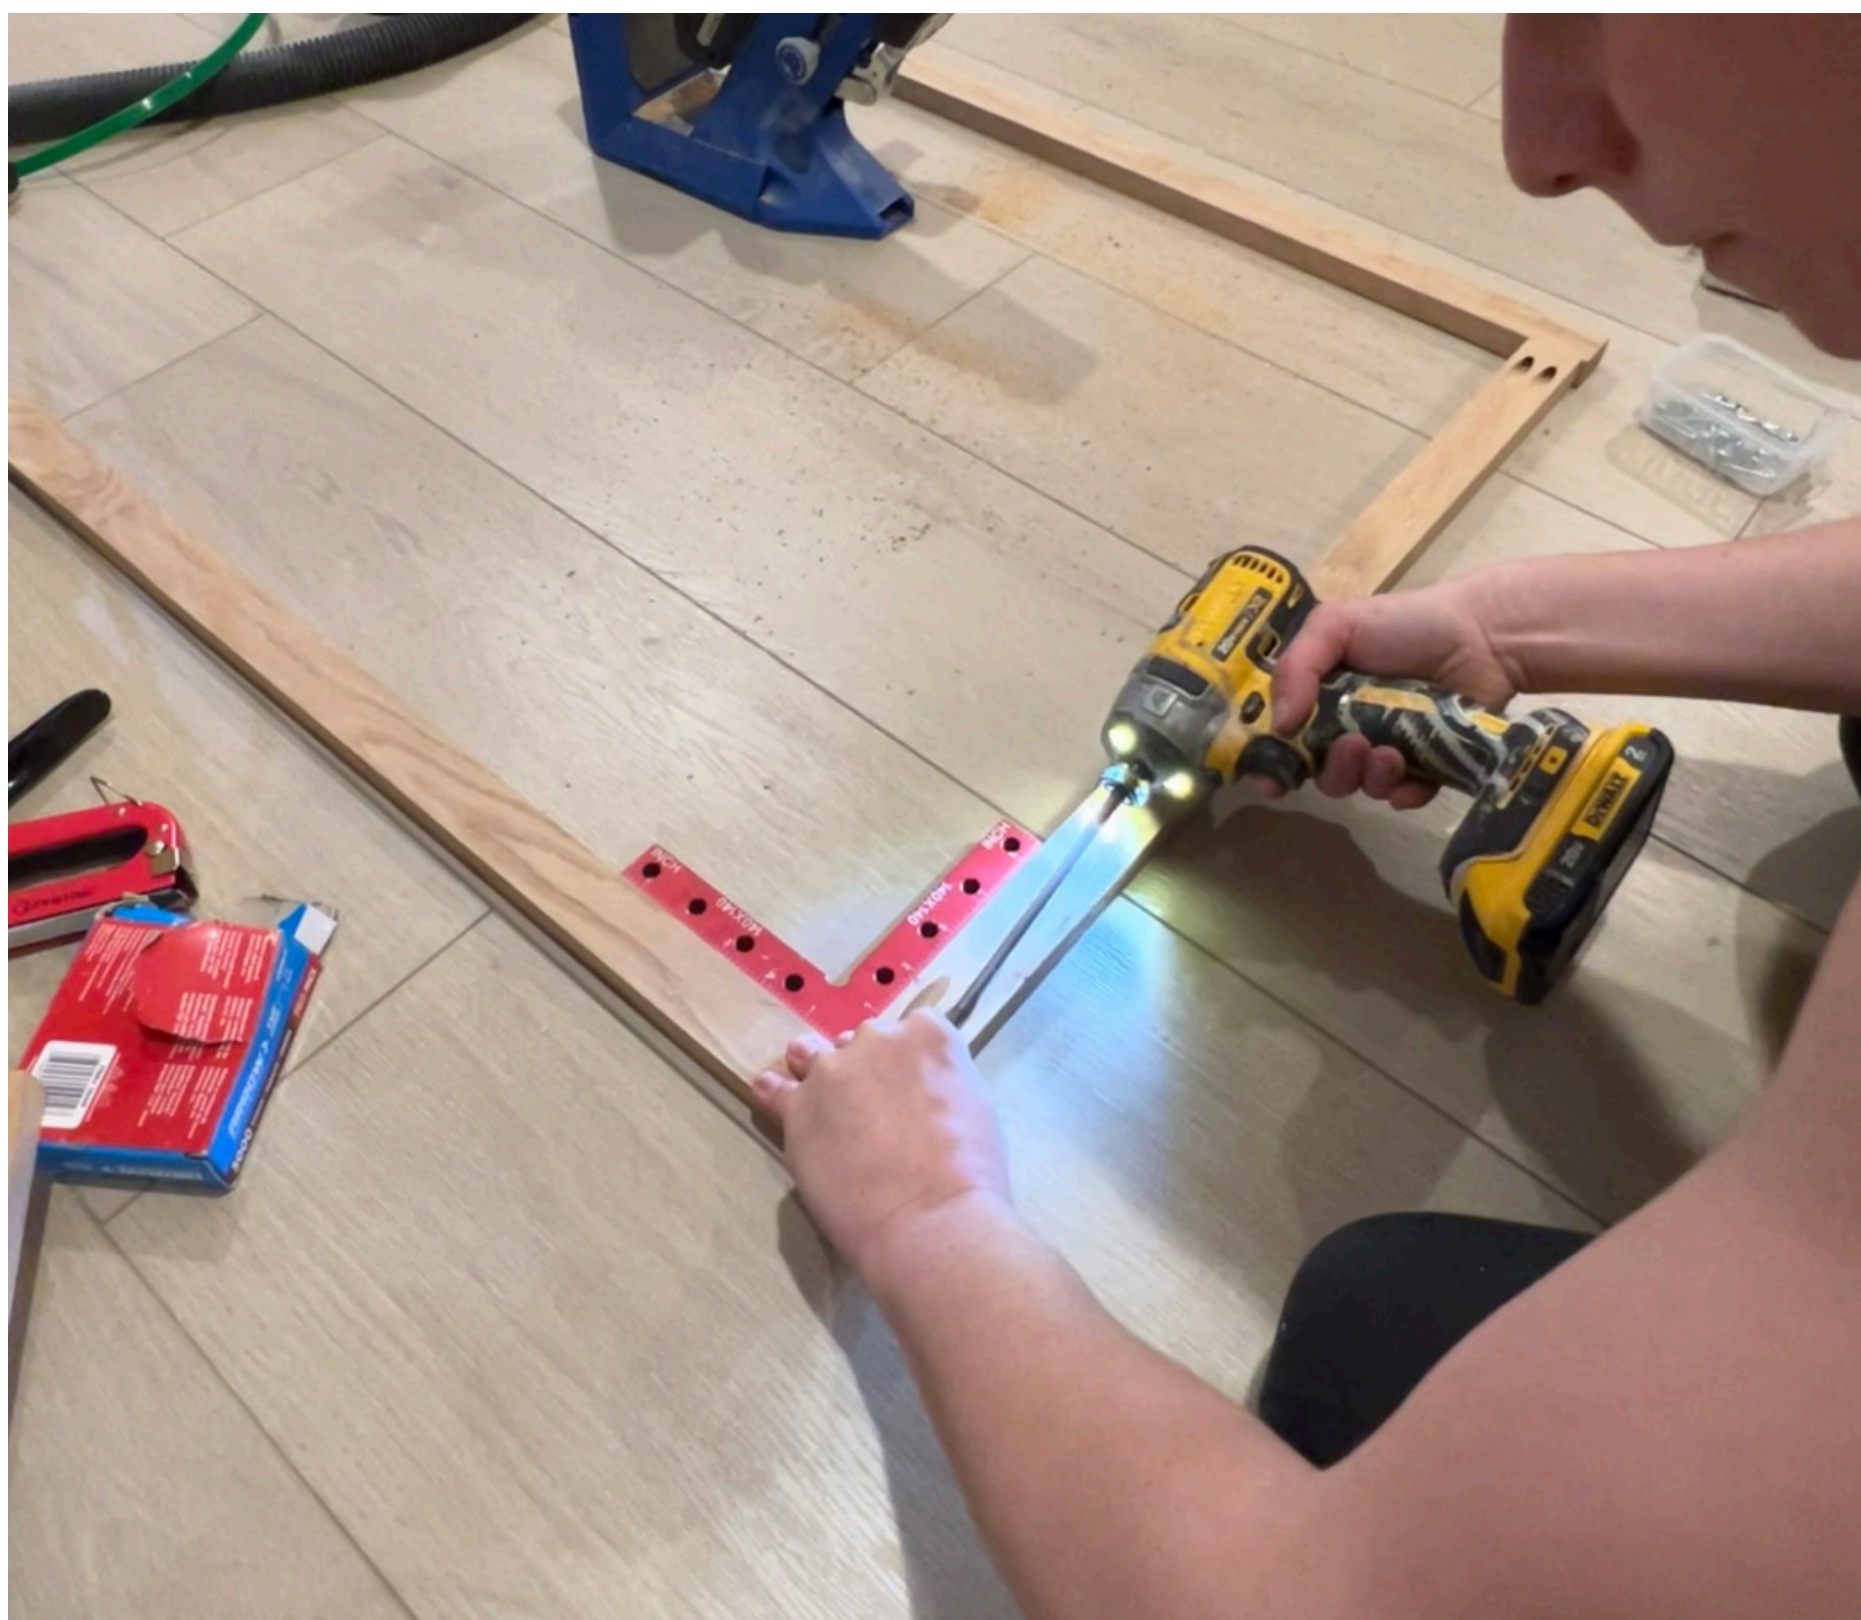

5**5**

Nail the face frame onto the cabinet box using 1 1/2" brad nails.



6**6**

After routing the fluted trim and cutting it to size, use CA glue and glue the trim onto the backboard.



7**7**

Cut the doors to size and using the Kreg Hinge Jig drill the cup holes for the hinges.



8**8**

Add trim to the door fronts, using CA Glue. (optional)

**9****9**

Attach the doors to the cabinet. Make sure to have an even reveal on all sides.

10**10**

Use a roundover bit to route the trim for underneath the countertop. Cut to size and attach with CA glue. (optional)

11

11

Sand and stain the color of your choice!
