

3 Drawer Nightstand

Difficulty

Moderate

A classic three drawer nightstand with simple lines and generous storage. This nightstand is the perfect blend of ample surface area at your bedside and lots of hidden storage space in the drawers below.





3 DRAWER NIGHTSTAND
JAIMECOSTIGLIO.COM

Tools

Kreg Tools

Kreg®
Pocket-Hole Jig 720PRO [Kreg® Pocket-Hole Jig 720PRO](#)
Multi-Mark™ [Multi-Mark™](#)

Drawer
Slide Jig [Drawer Slide Jig](#)

Wood
Project Clamp - 3" [Wood Project Clamp - 3"](#)

Other Tools

Miter Saw

Table Saw (or Circular Saw)

Drill/Driver

Tape Measure

Sander

Materials

Wood Products

- 2 Select Pine Board , 2x2x96"
- 3 Select Pine Board , 1x2x96"
- 1 Select Pine Board , 1x8x72"
- 1 Select Pine Board , 1x3x72"
- 2 Select Pine Board , 1x6x96"
- 1 3/4" Plywood Full Sheet , 4' X 8'
- 1 1/4" Plywood Full Sheet , 4' X 8'

Hardware & Supplies

- 8 2 1/2" Pocket-hole Screws
- 70 1 1/4" Pocket-hole Screws
- 6 #8 X 2" Wood Screws
- 32 #8 X 3/4" Wood Screws
- 20 #8 X 1 1/4" Wood Screws
- 12 18 Gauge 3/4" Brad Nails
- 1 Wood Glue
- 3 Sets Of 16" Soft Close Side Mount Drawer Glides
- 3 Drawer Pulls

Cut List & Parts


- 4** Legs , 1 1/2" X 1 1/2" X 29 1/4"
- 2** Side Panels , 3/4" X 16" X 22 1/4"
- 4** Cross Supports , 3/4" X 1 1/2" X 25 1/2"
- 2** Cross Supports , 1 1/2" X 1 1/2" X 25 1/2"
- 1** Top , 3/4" X 20" X 30"
- 2** Large Drawer Fronts , 3/4" X 7 1/4" X 25 1/4"
- 1** Small Drawer Front , 3/4" X 7 1/4" X 25 1/4"
- 4** Large Drawer Short Sides , 3/4" X 5 1/2" X 16"
- 4** Large Drawer Long Sides , 3/4" X 5 1/2" X 22 3/4"
- 2** Small Drawer Short Sides , 3/4" X 1 1/2" X 16"
- 2** Small Drawer Long Sides , 3/4" X 1 1/2" X 22 3/4"
- 3** Drawer Bottoms , 1/4" X 16" X 24 1/4"
- 6** Drawer Glide Supports , 3/4" X 1 1/2" X 16"
- 1** Backing , 1/4" X 25 1/2" X 22 1/4"

Directions

1

Taper legs

If desired use a tapering jig to make bottom portion of legs tapered.

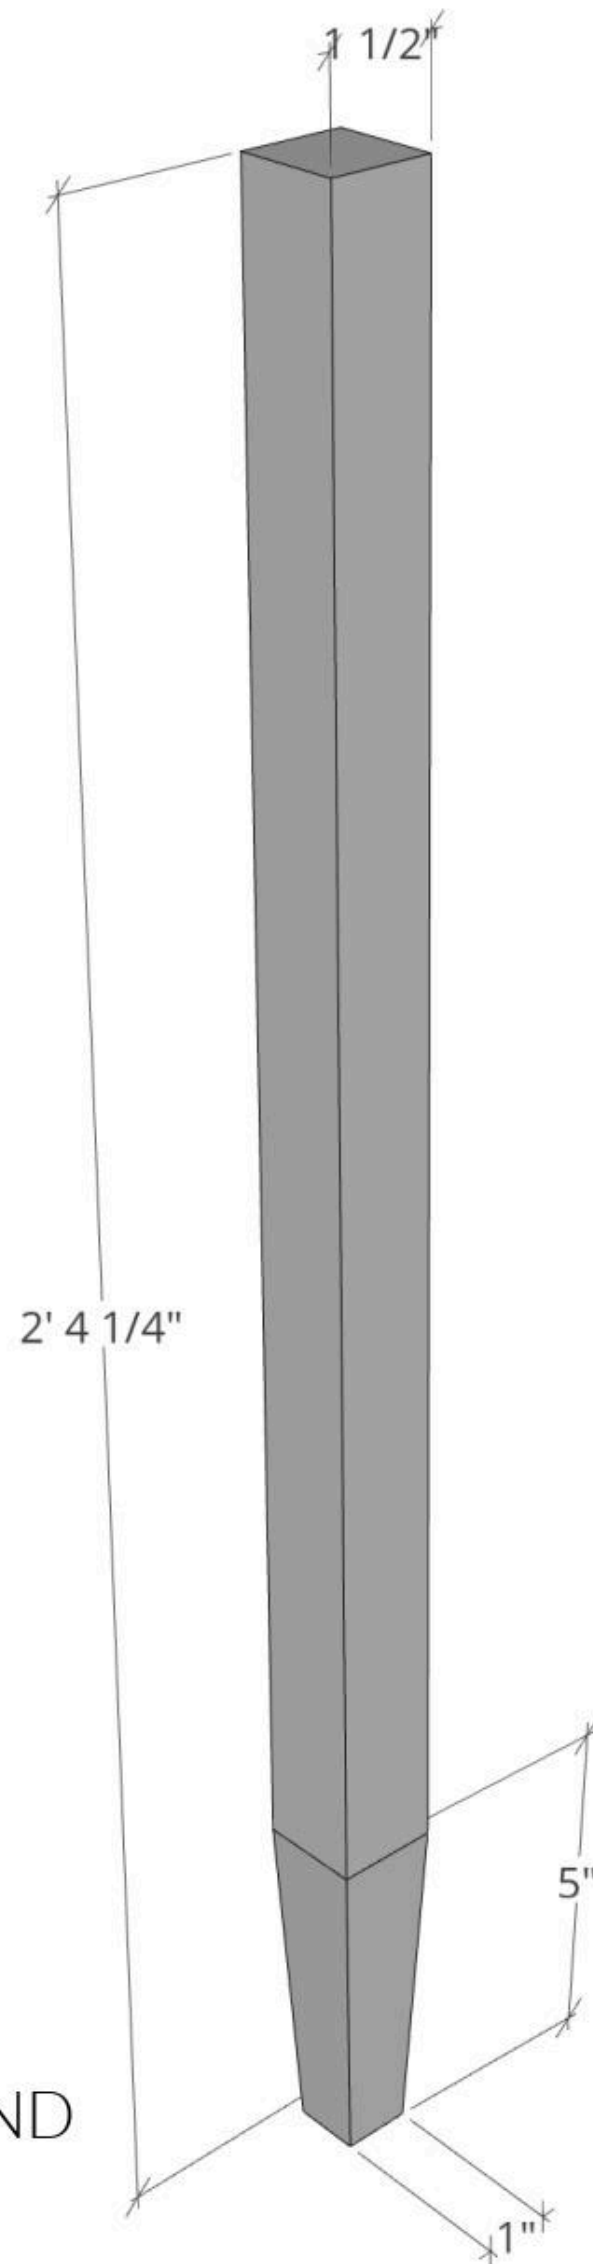

3 DRAWER NIGHTSTAND
STEP 1


JAIMECOSTIGLIO.COM

2

Attach legs to side panels

Attach legs to side panels using 1 1/4" pocket hole screws. Keep side panel flush to leg at exterior.

Make 2.

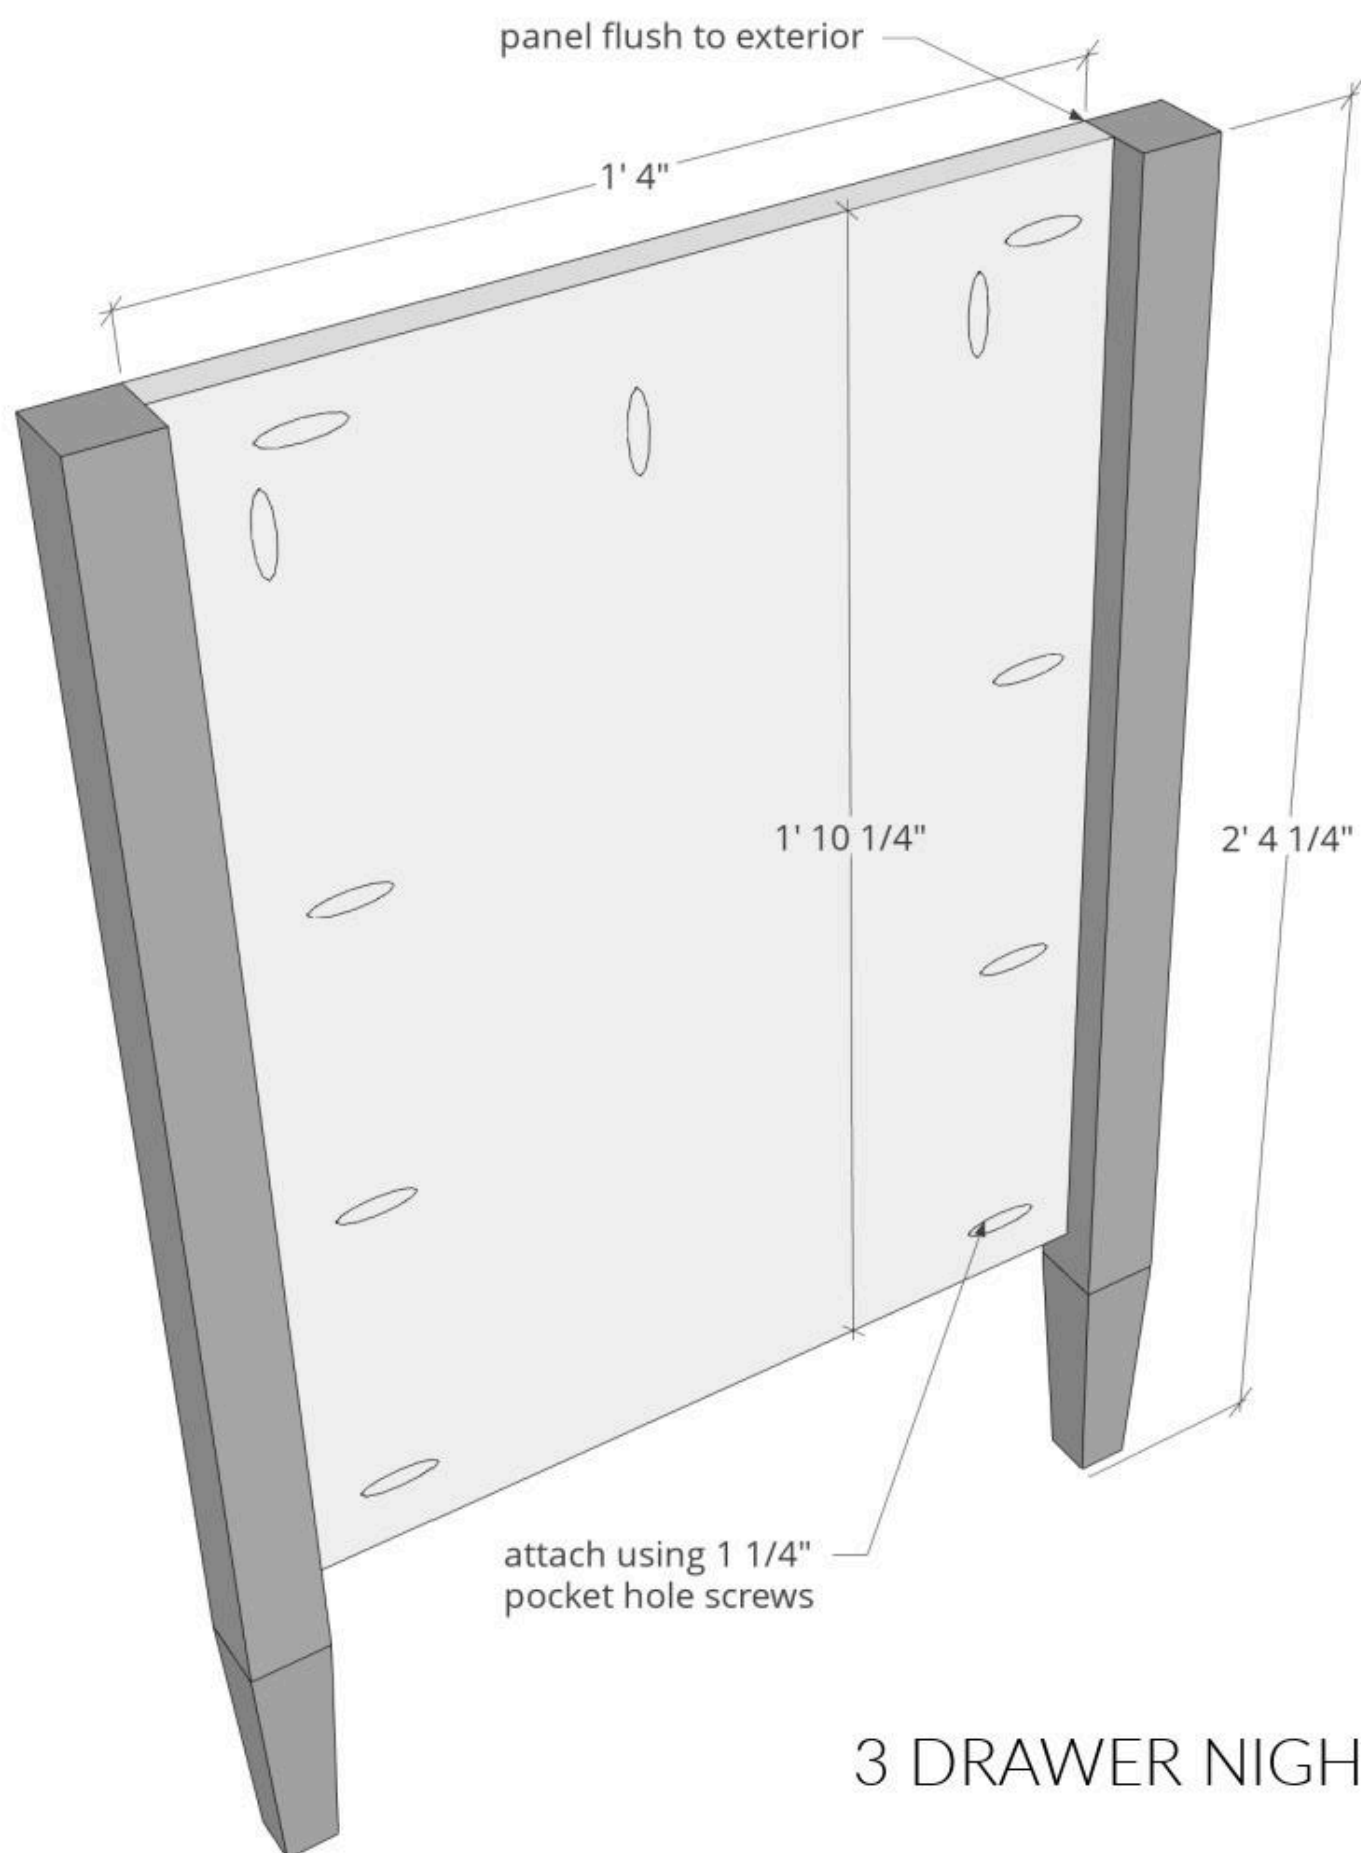


3 DRAWER NIGHTSTAND
STEP 2

JAIMECOSTIGLIO.COM

3

Attach cross supports

Attach cross supports to side panel. Use wood glue and corresponding pocket hole screws. Keep pocket holes at back, top or underside when possible.

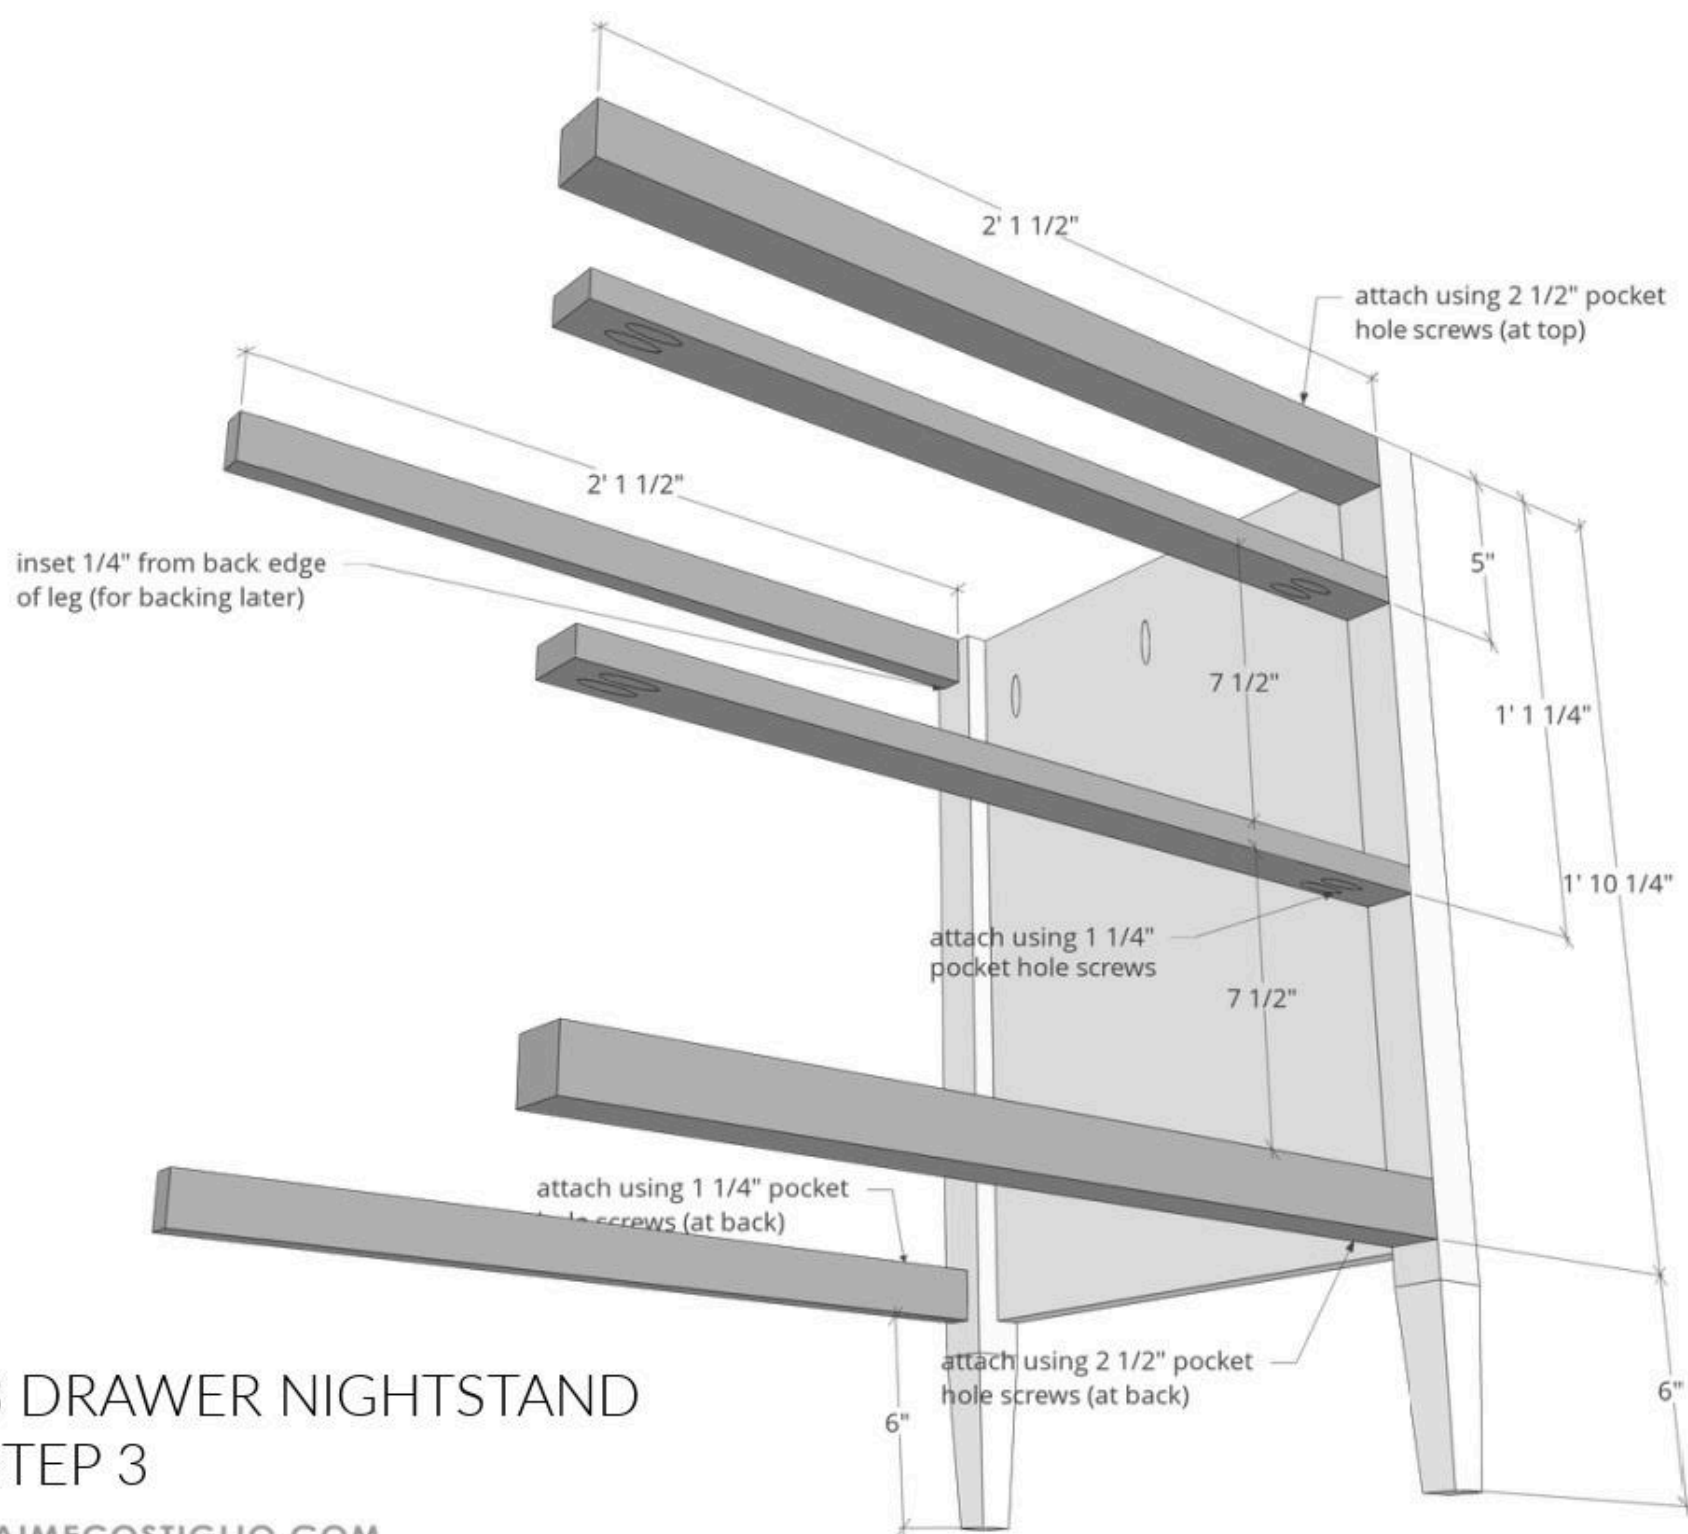


3 DRAWER NIGHTSTAND STEP 3

JAIMECOSTIGLIO.COM

4**Attach opposite side to supports**

Attach other side panel to cross supports, same as Step 3.

3 DRAWER NIGHTSTAND STEP 4

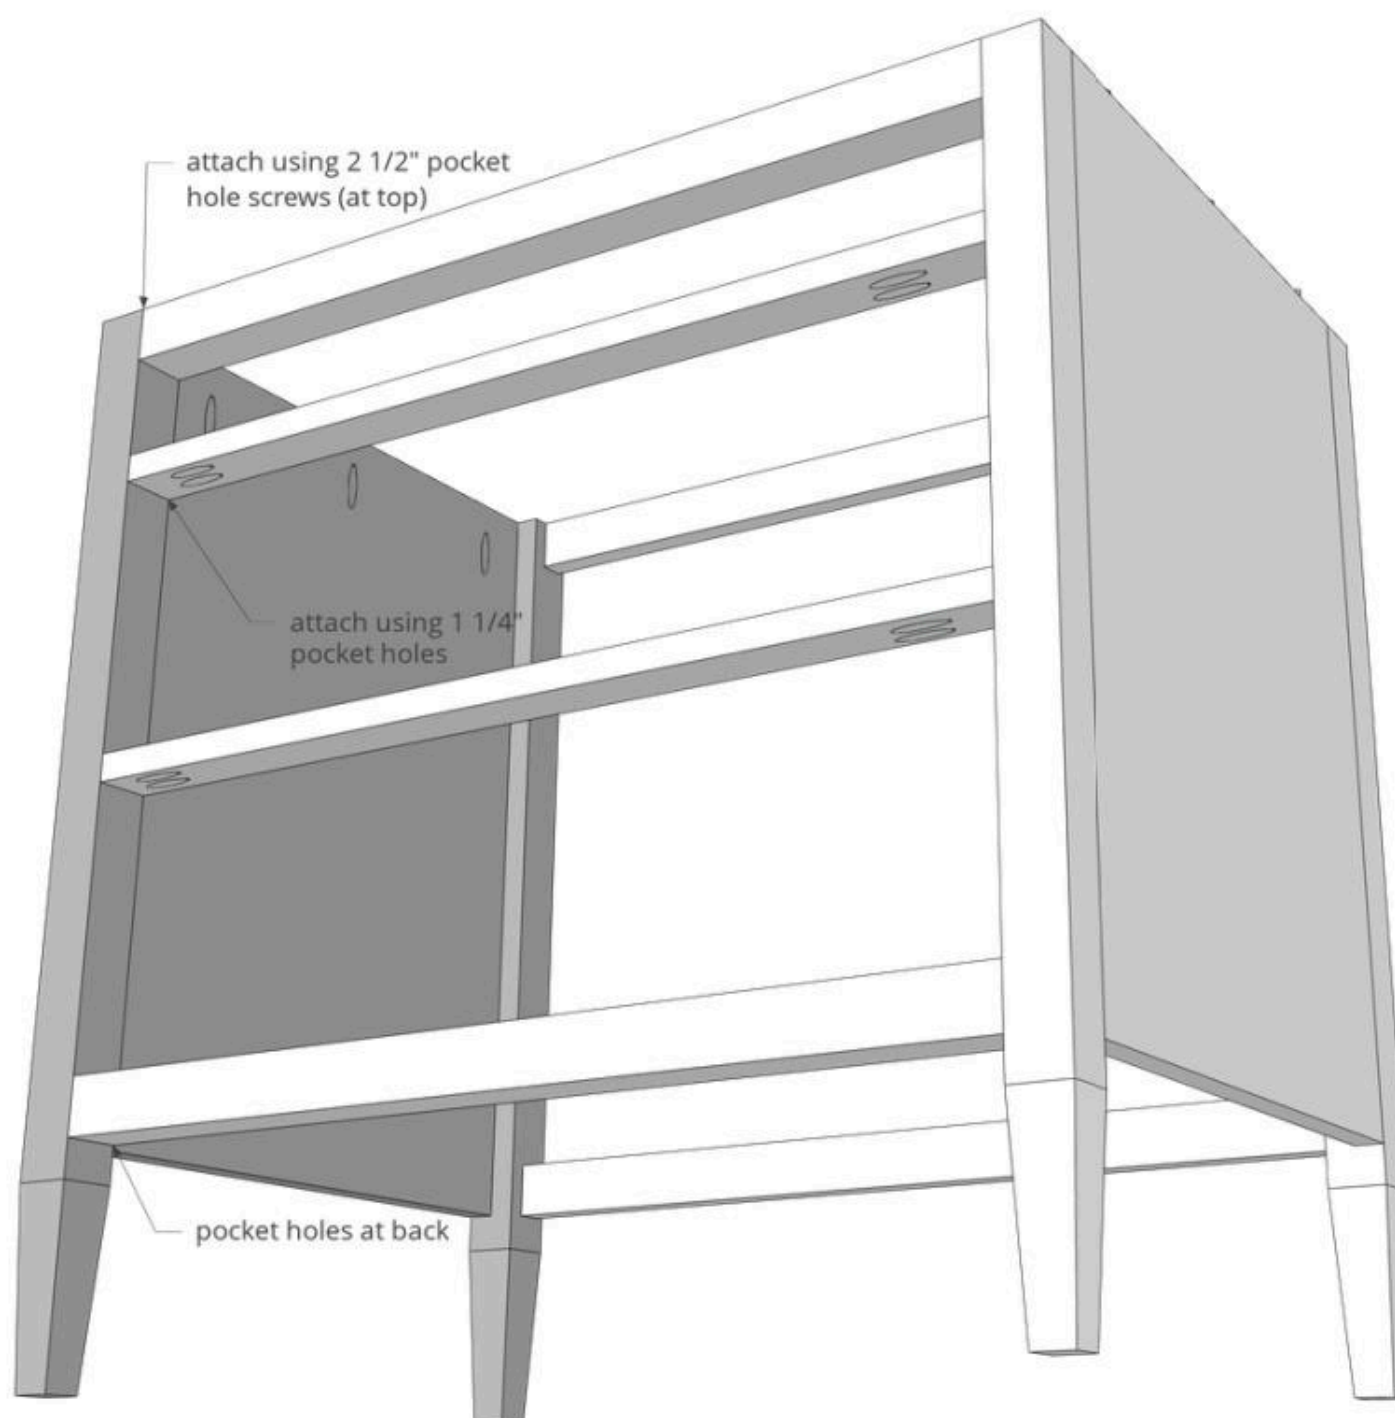


JAIMECOSTIGLIO.COM

5

Attach top

Attach top to body using 1 1/4" pocket hole screws. Keep 3/4" overhang at front and sides. Secure front and back cross supports to top using 2" countersunk wood screws.

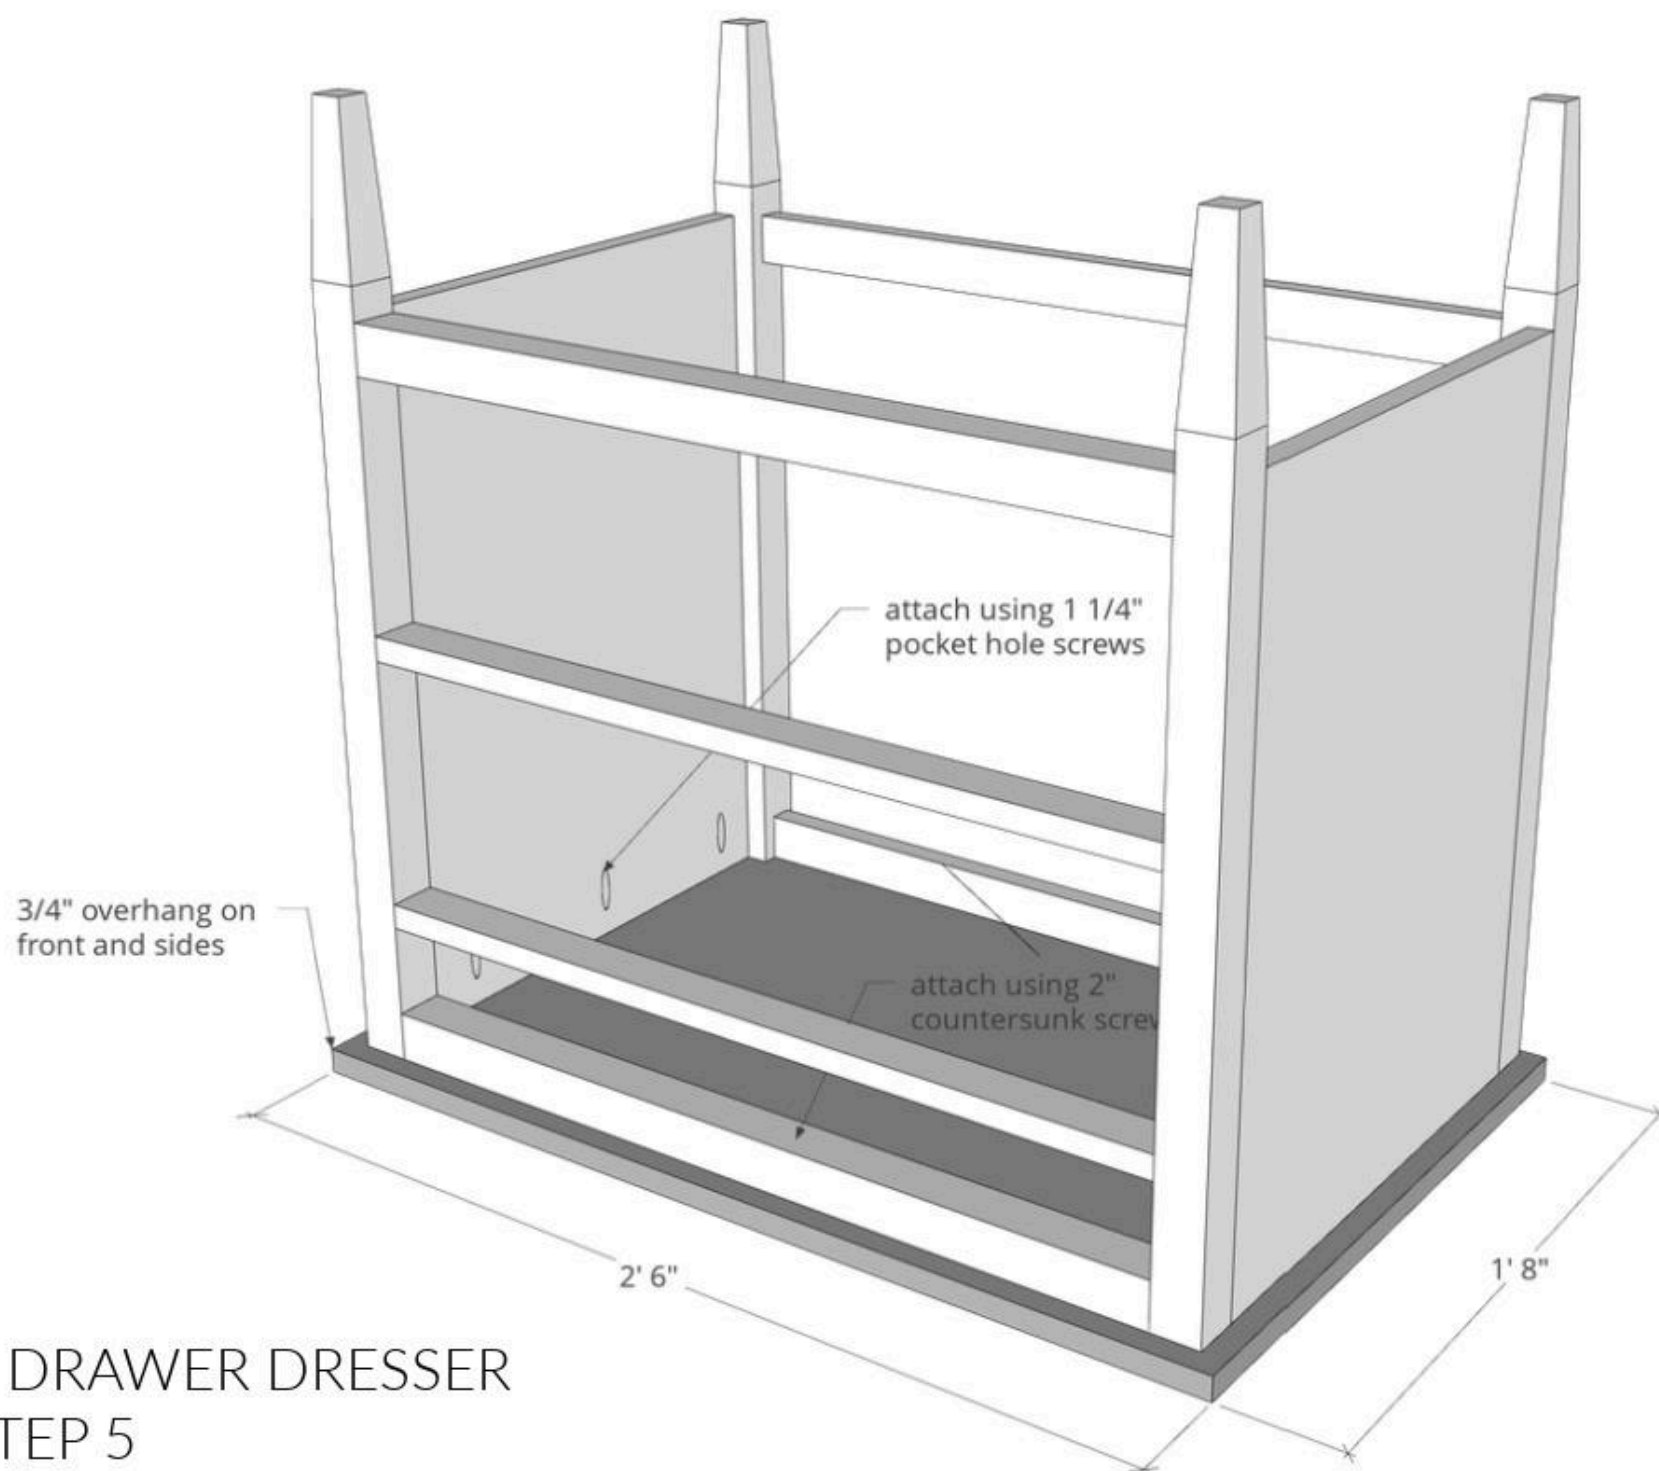


3 DRAWER DRESSER STEP 5

JAIMECOSTIGLIO.COM

6**Assemble large drawers**

Attach long sides to short sides using wood glue and 1 1/4" pocket hole screws.

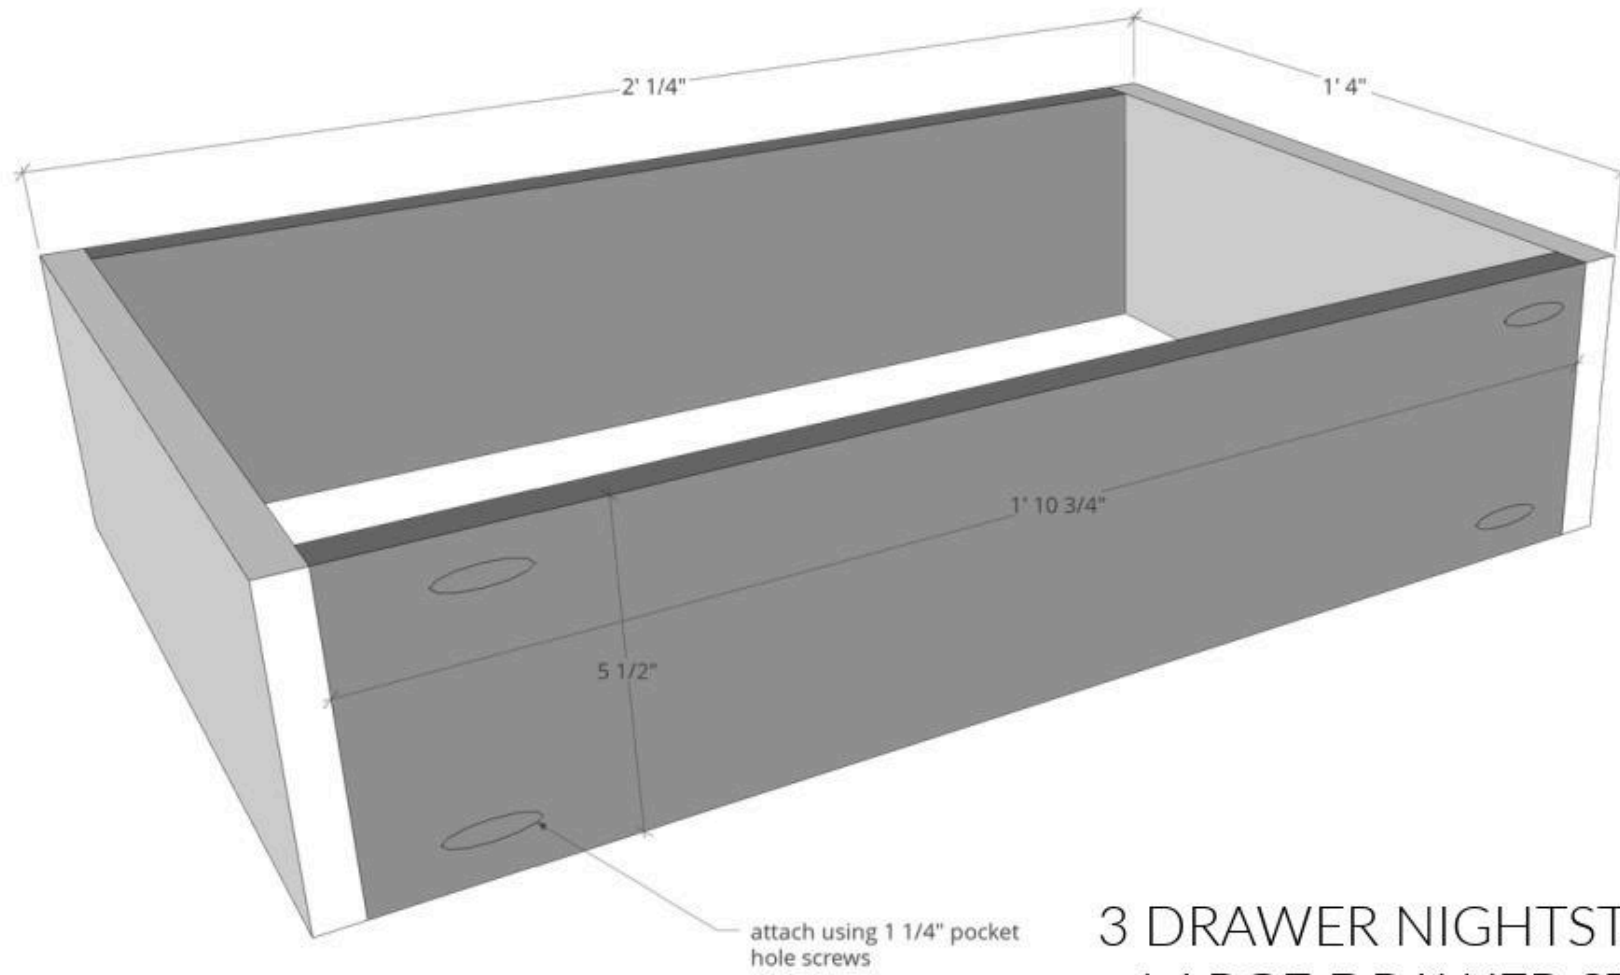


3 DRAWER NIGHTSTAND
LARGE DRAWER STEP 1

JAIMECOSTIGLIO.COM

7

Attach drawer bottom to large drawers

Attach drawer bottom to box using wood glue and $\frac{3}{4}$ " countersunk wood screws.

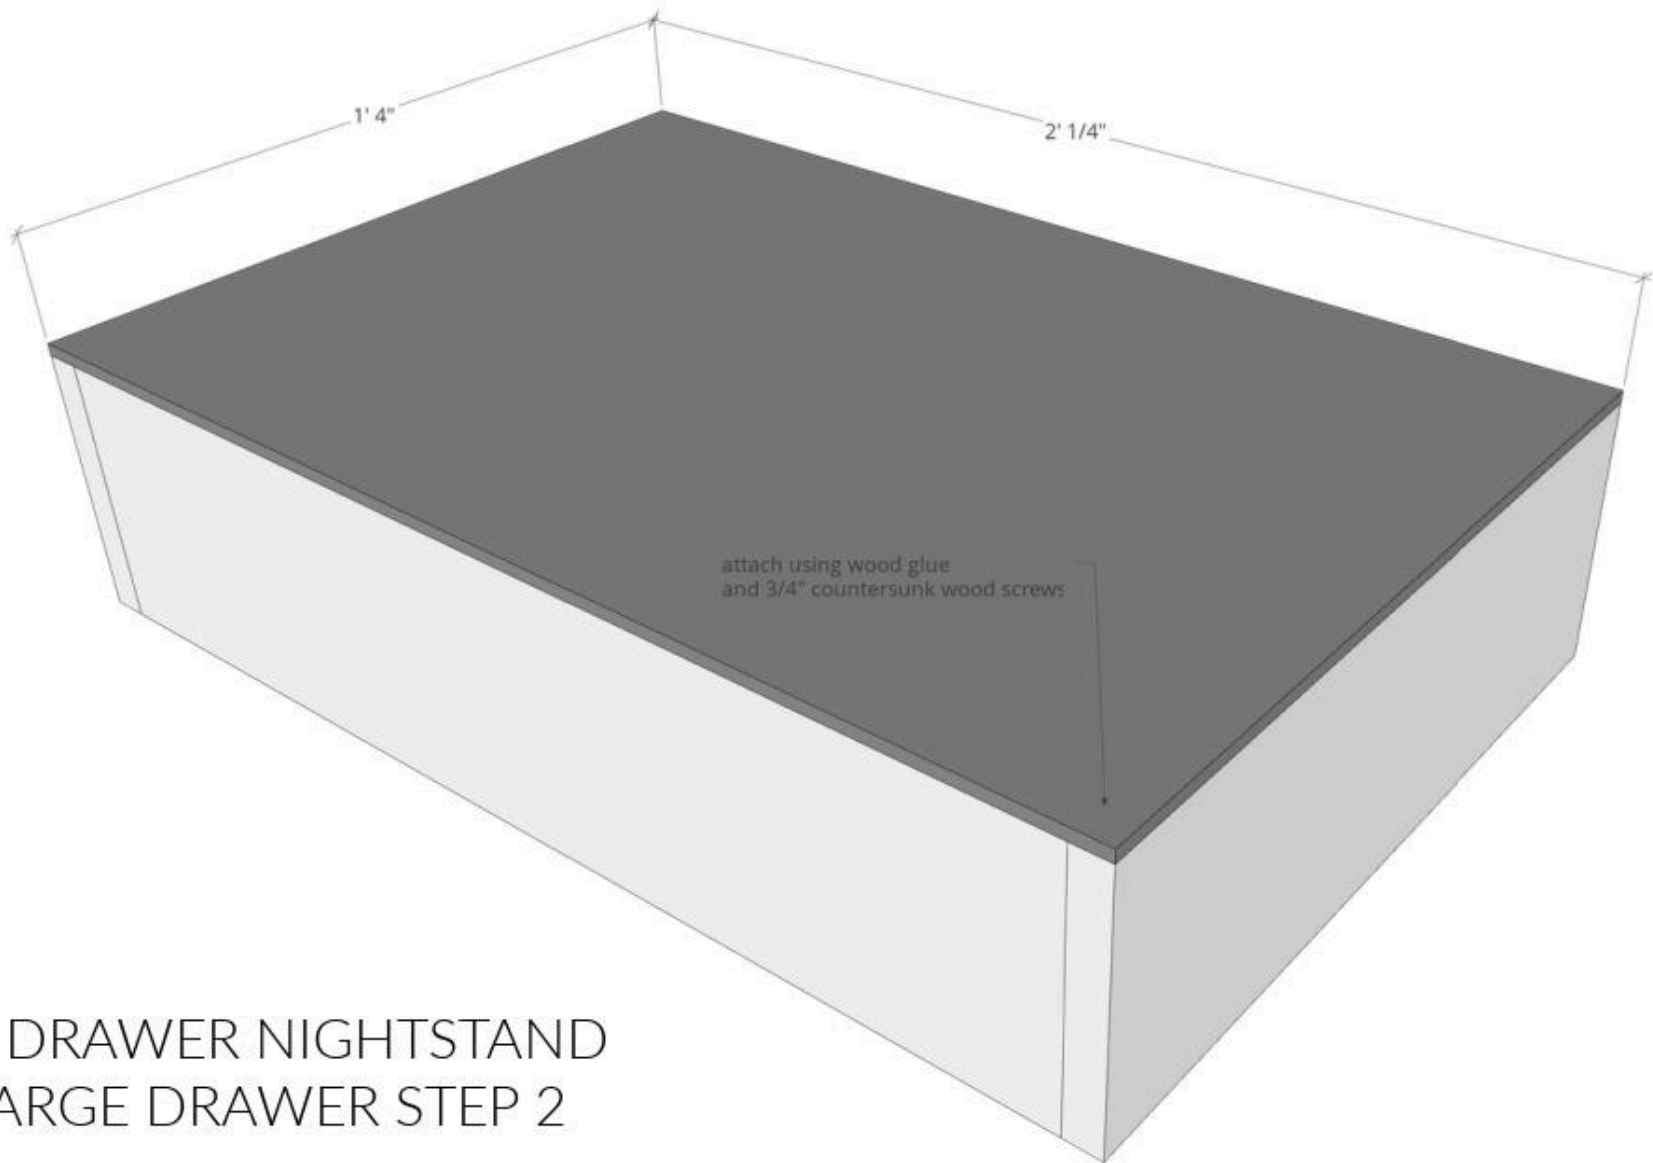


3 DRAWER NIGHTSTAND LARGE DRAWER STEP 2

JAIMECOSTIGLIO.COM

8

Assemble small drawer

Attach long sides to short sides using wood glue and 1 $\frac{1}{4}$ " pocket hole screws.

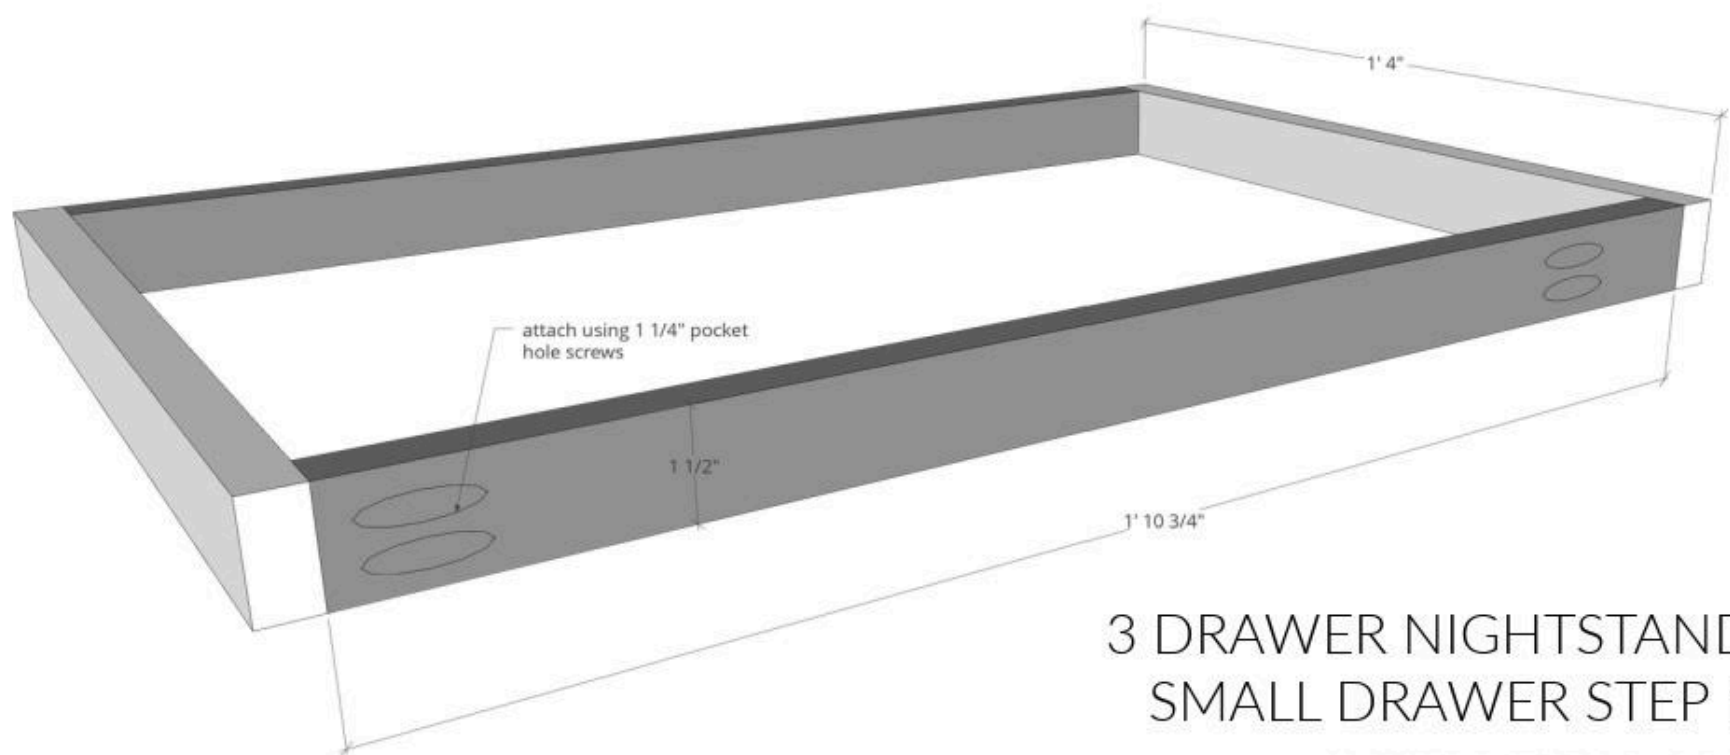


3 DRAWER NIGHTSTAND SMALL DRAWER STEP 1

JAIMECOSTIGLIO.COM

9

Attach drawer bottom to small drawer

Attach drawer bottom to box using wood glue and $\frac{3}{4}$ " countersunk wood screws.

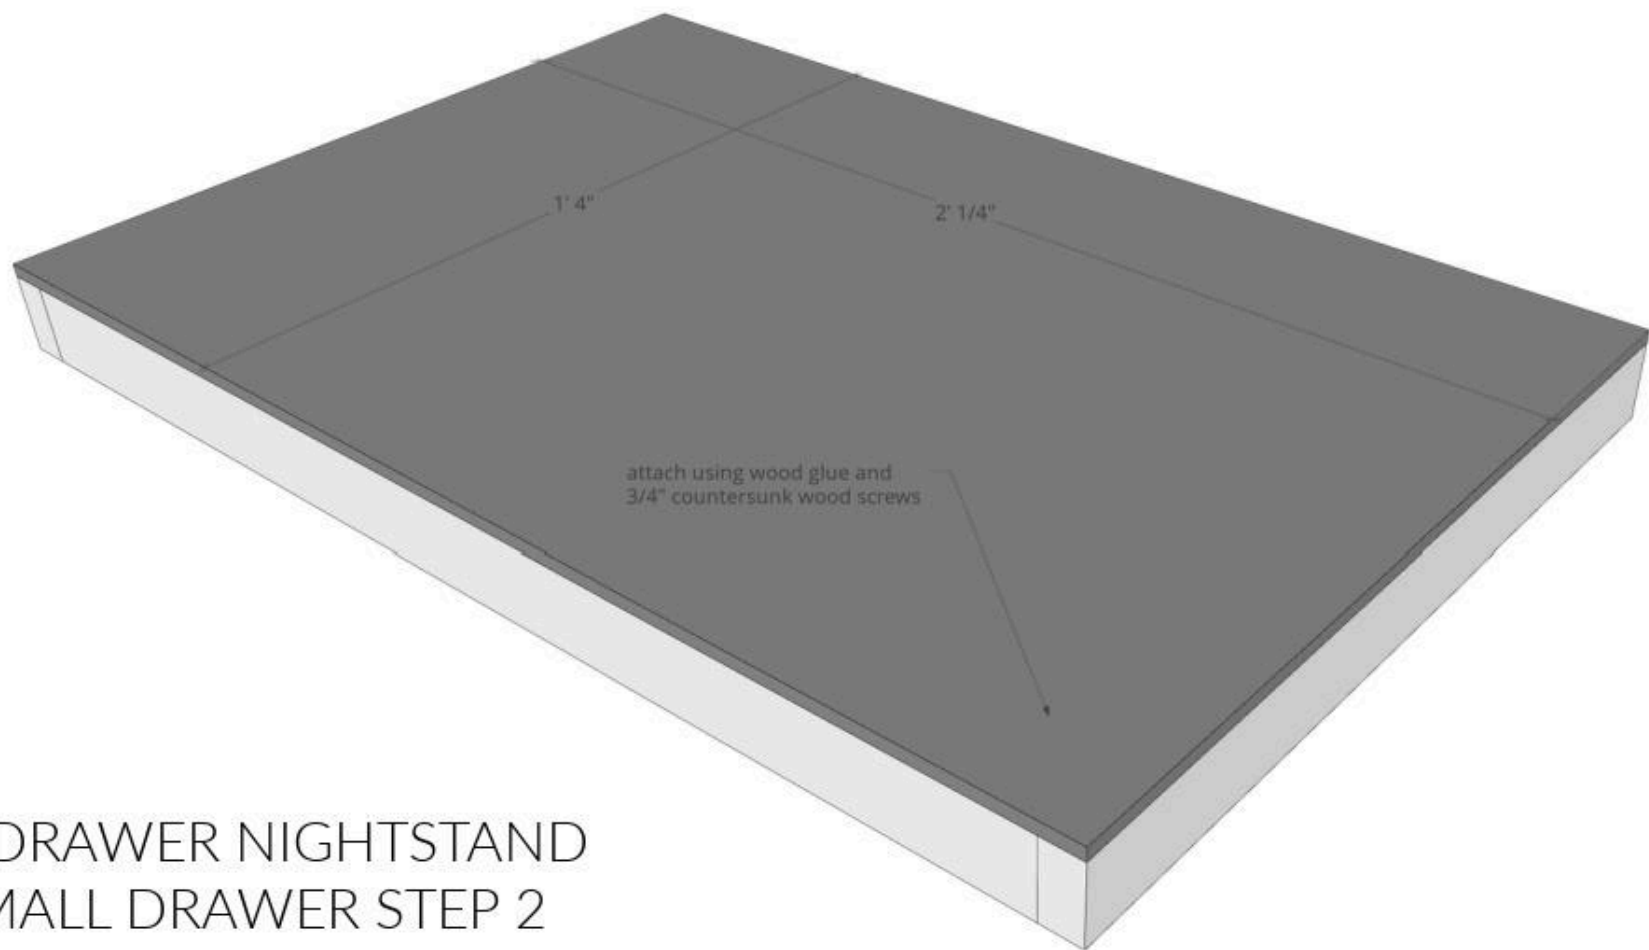


3 DRAWER NIGHTSTAND
SMALL DRAWER STEP 2

JAIMECOSTIGLIO.COM

10

Attach drawer glide supports

Before installing drawer glides attach supports to interior side panels using wood glue and 1 1/4" countersunk wood screws.

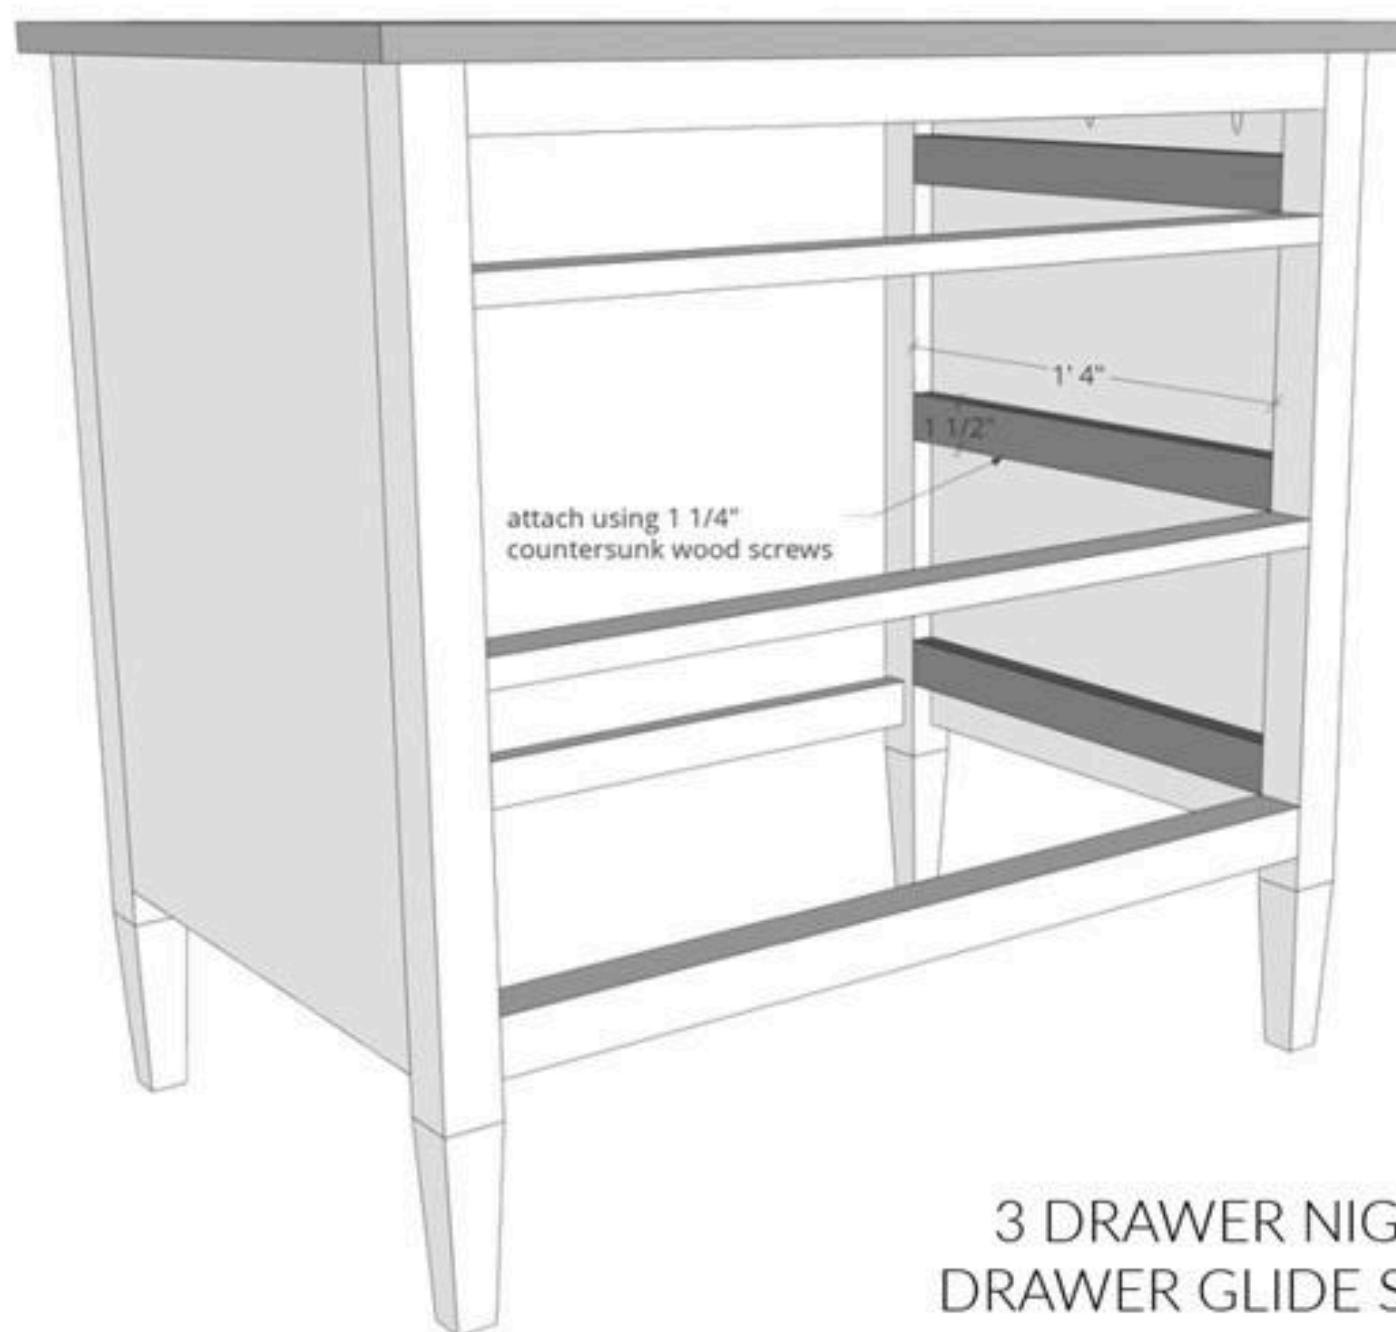


3 DRAWER NIGHTSTAND
DRAWER GLIDE SUPPORTS

JAIMECOSTIGLIO.COM

11**Attach backing**

Attach backing to cross supports using wood glue and $\frac{3}{4}$ " brad nails.

3 DRAWER NIGHTSTAND STEP 6

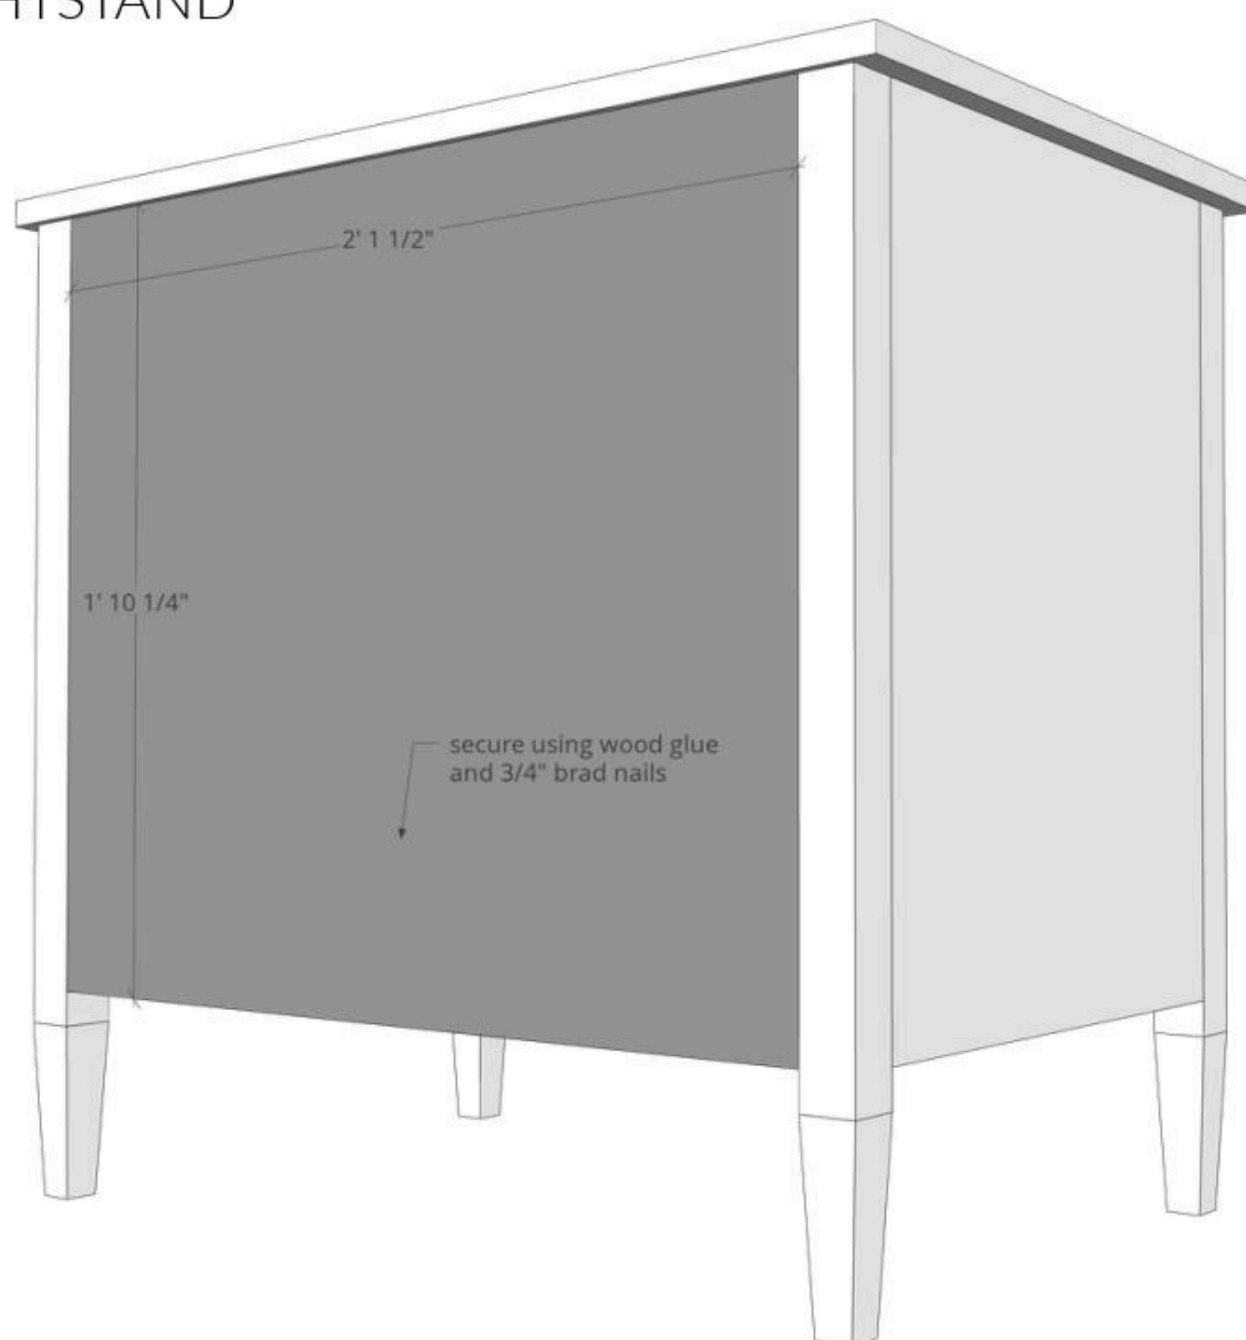

JAIMECOSTIGLIO.COM