


# Floating-Top Console Table

By **Kreg Tool**

Difficulty

Easy

This great-looking table makes a great addition to a hallway, entry, or anyplace else you want to add some elegant style without taking up too much space. The construction makes the top appear to “float” over the base. You could even modify it for use as a sofa table by making the legs 6" shorter.

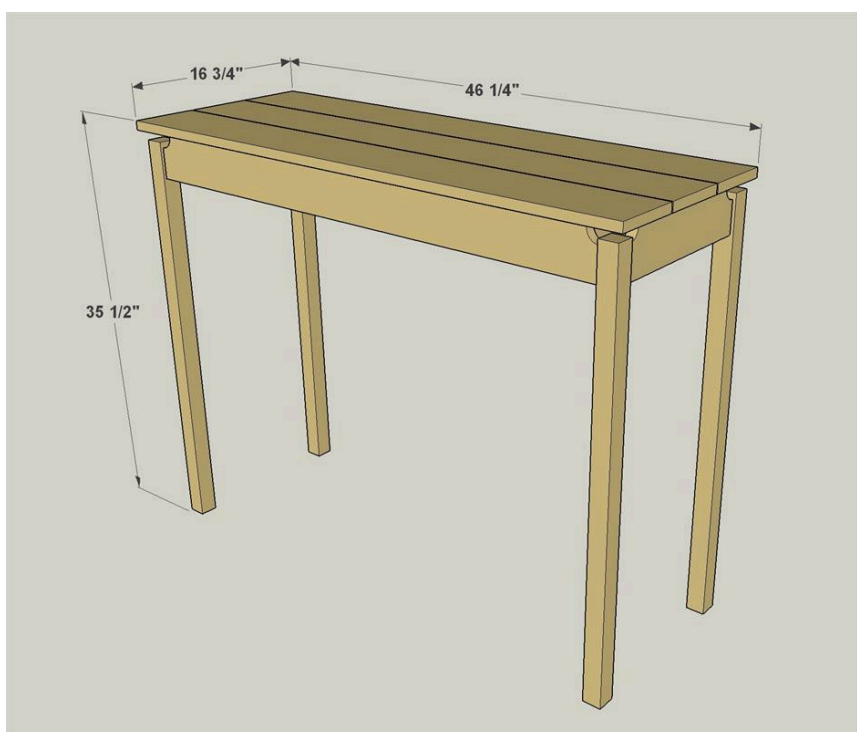

# Tools

## Kreg Tools

 [Wood Project Clamp - 6"](#)

 [Kreg® Pocket-Hole Jig 720](#)

## Other Tools

- Jigsaw
- Miter Saw
- Tape Measure
- Compass
- Drill (cordless)
- Sander

# Materials

## Wood Products


- 2** Board , 1x4 , 96"
- 1** Board , 1x6 , 96"
- 1** Board , 1x6 , 48"
- 4** Board , 2x2 , 60"

## Hardware & Supplies

- 46** 1 1/4" Coarse Pocket Hole Screws

# Cut List & Parts

- 4 Leg , 1 1/2" X 1 1/2" X 34"
- 2 Short Rail , 3/4" X 3 1/2" X 13"
- 2 Long Rail , 3/4" X 3 1/2" X 42"
- 3 Top Support , 3/4" X 3 1/2" X 14"
- 3 Top Boards , 3/4" X 5 1/2" X 45 3/4"

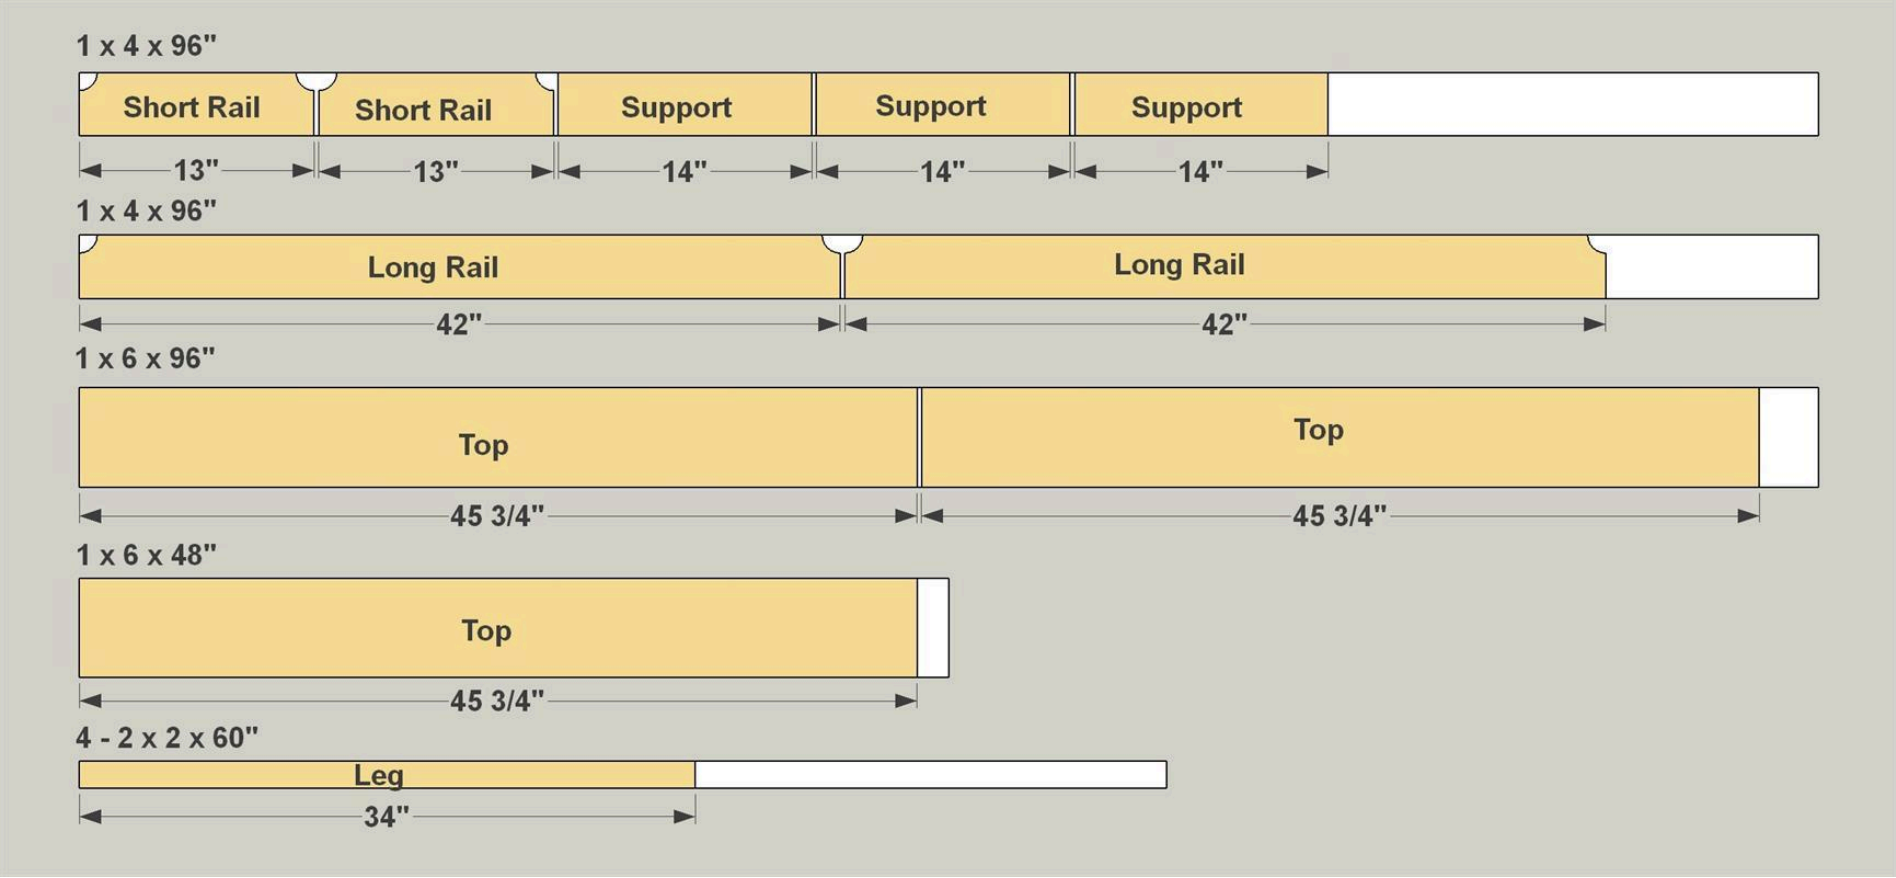

# Directions

1


## Cut the Legs

Cut four Legs to length from 2x2 boards (we used clear pine), as shown in the cutting diagram.

2

## Make Short Rails


Cut two Short Rails Legs to length from a 1x4 board, as shown in the cutting diagram. Then, use a compass to lay out the arcs in the upper corners, as shown. Cut the arcs with a jig saw, and then sand them smooth. With your pocket hole jig set up for 3/4" material, drill pocket holes where shown.

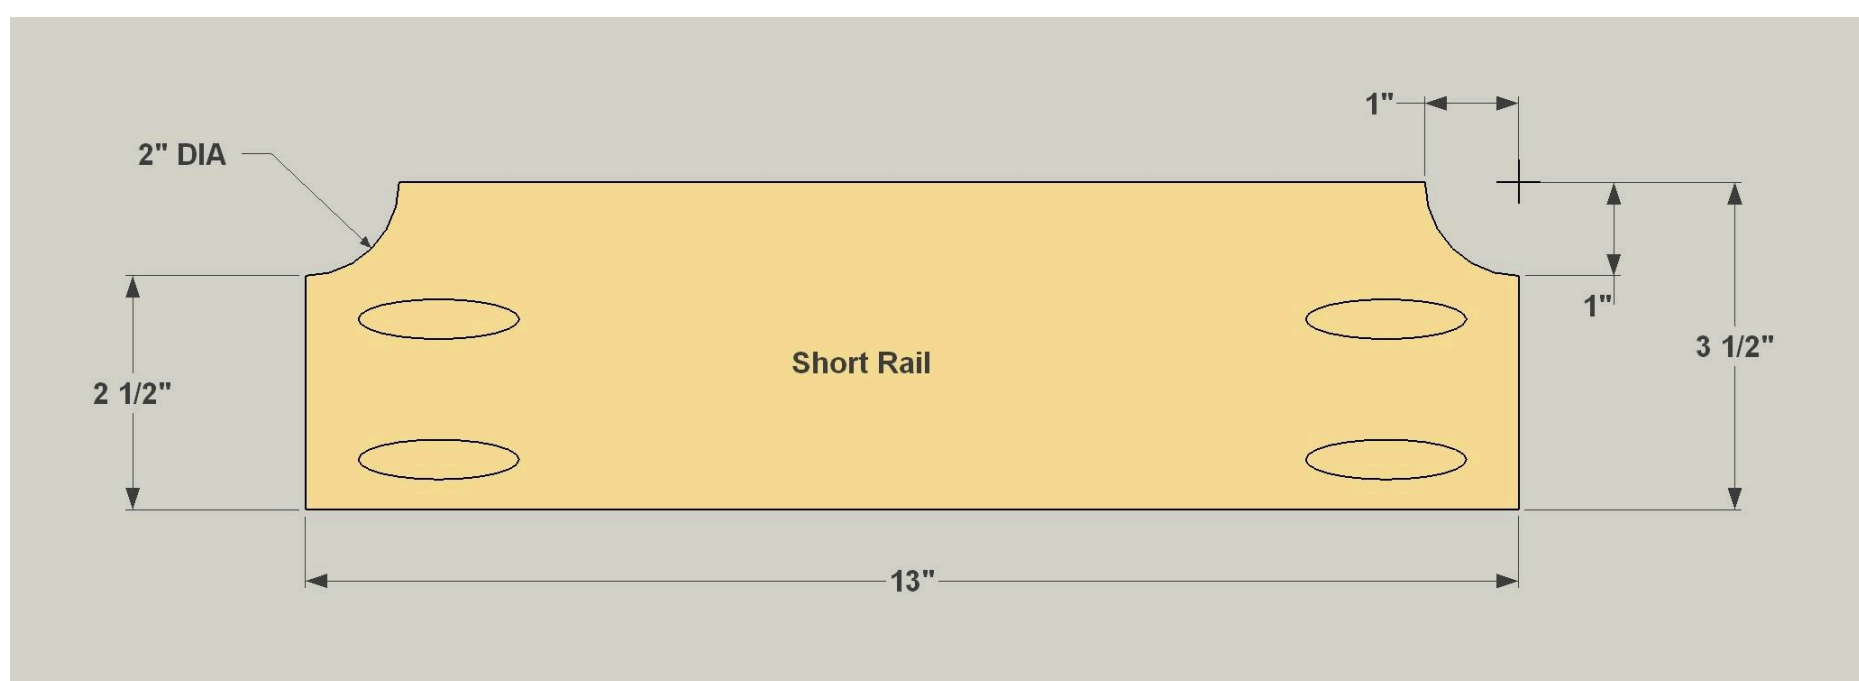

3

## Make Long Rails


Cut two Long Rails Legs to length from a 1x4 board, as shown in the cutting diagram. Then, use a compass to lay out the arcs in the upper corners, as shown. Cut the arcs with a jig saw, and then sand them smooth. With your pocket hole jig set up for 3/4" material, drill pocket holes where shown.

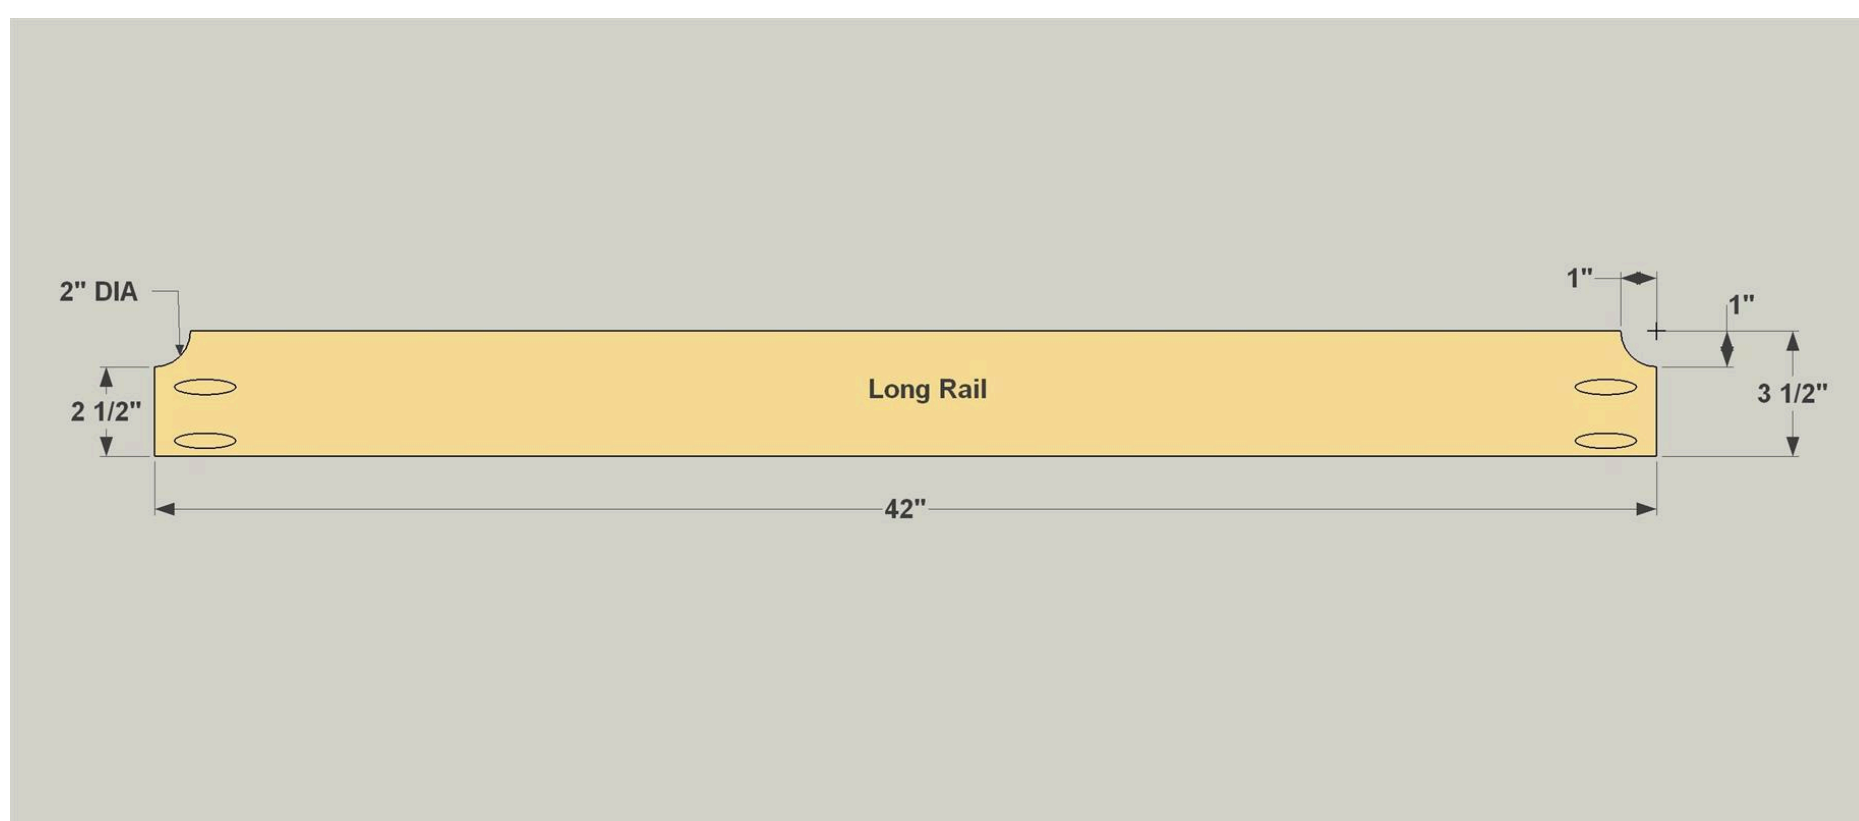

## 4

**Attach the Short Rails**

Now you can attach the Short Rails to the Legs using 1 1/4" pocket hole screws. Use coarse-thread if you're building from a softwood like pine, and fine-thread if you are building from a hardwood, such as oak or maple. Note that the Rails are set in 1/4" from the outside face of the Legs.

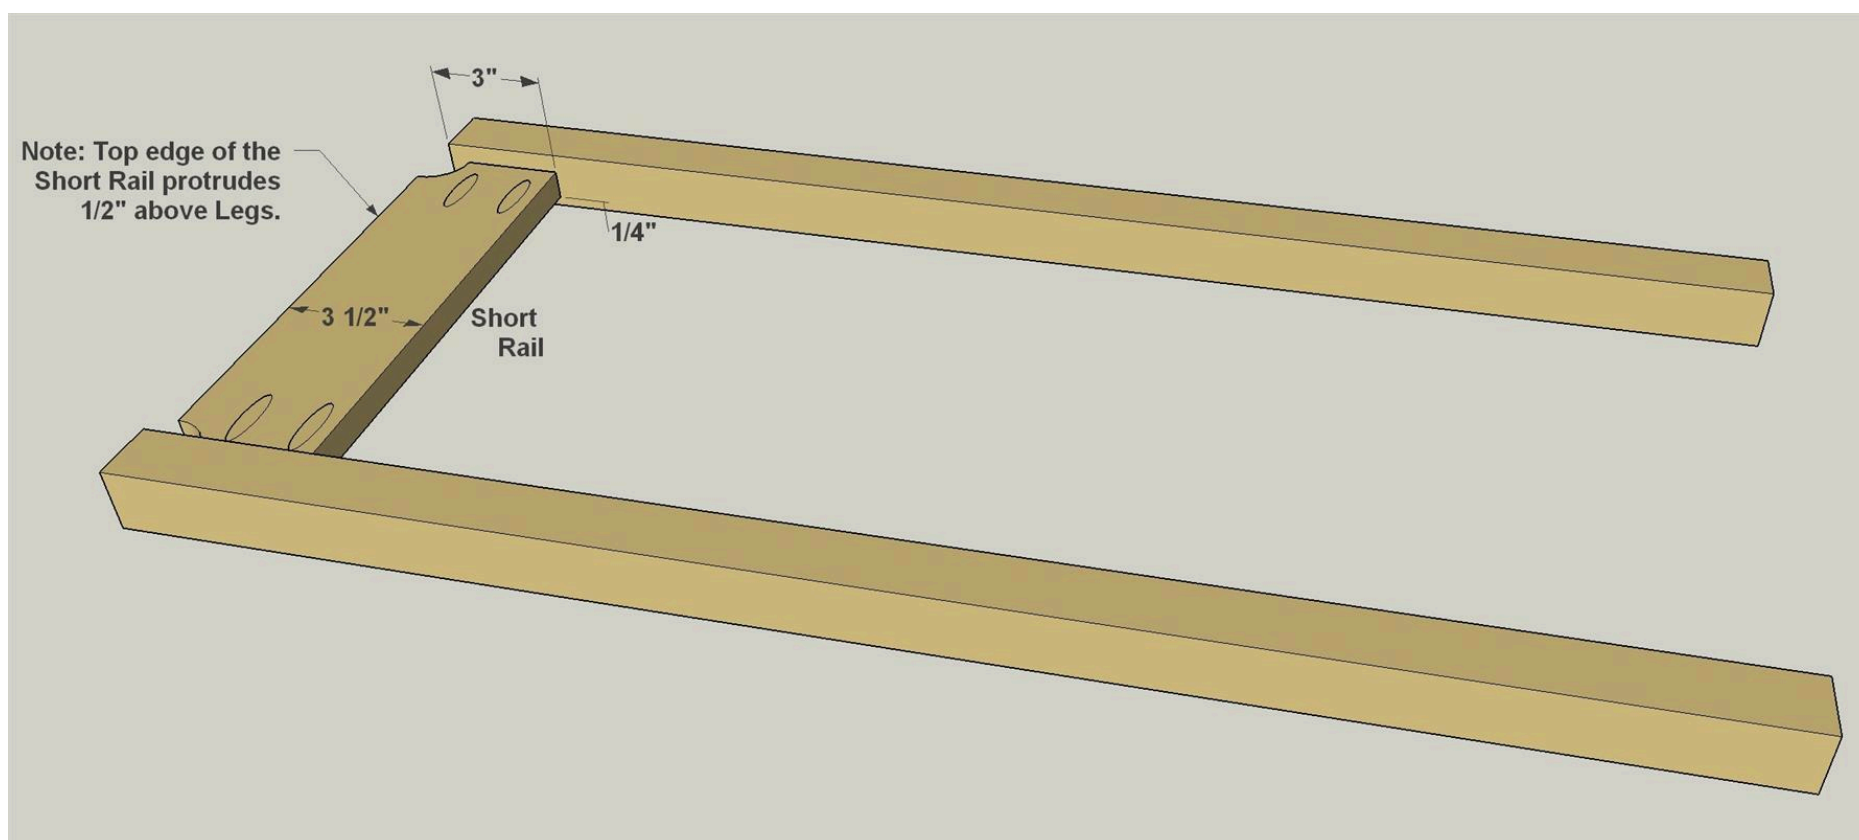




5

### Attach the Long Rails


Next, attach the Long Rails to the Legs to complete the main table base. Again, use 1 1/4" pocket hole screws, and make sure that the Rails are inset 1/4" from the outside face of the Legs.

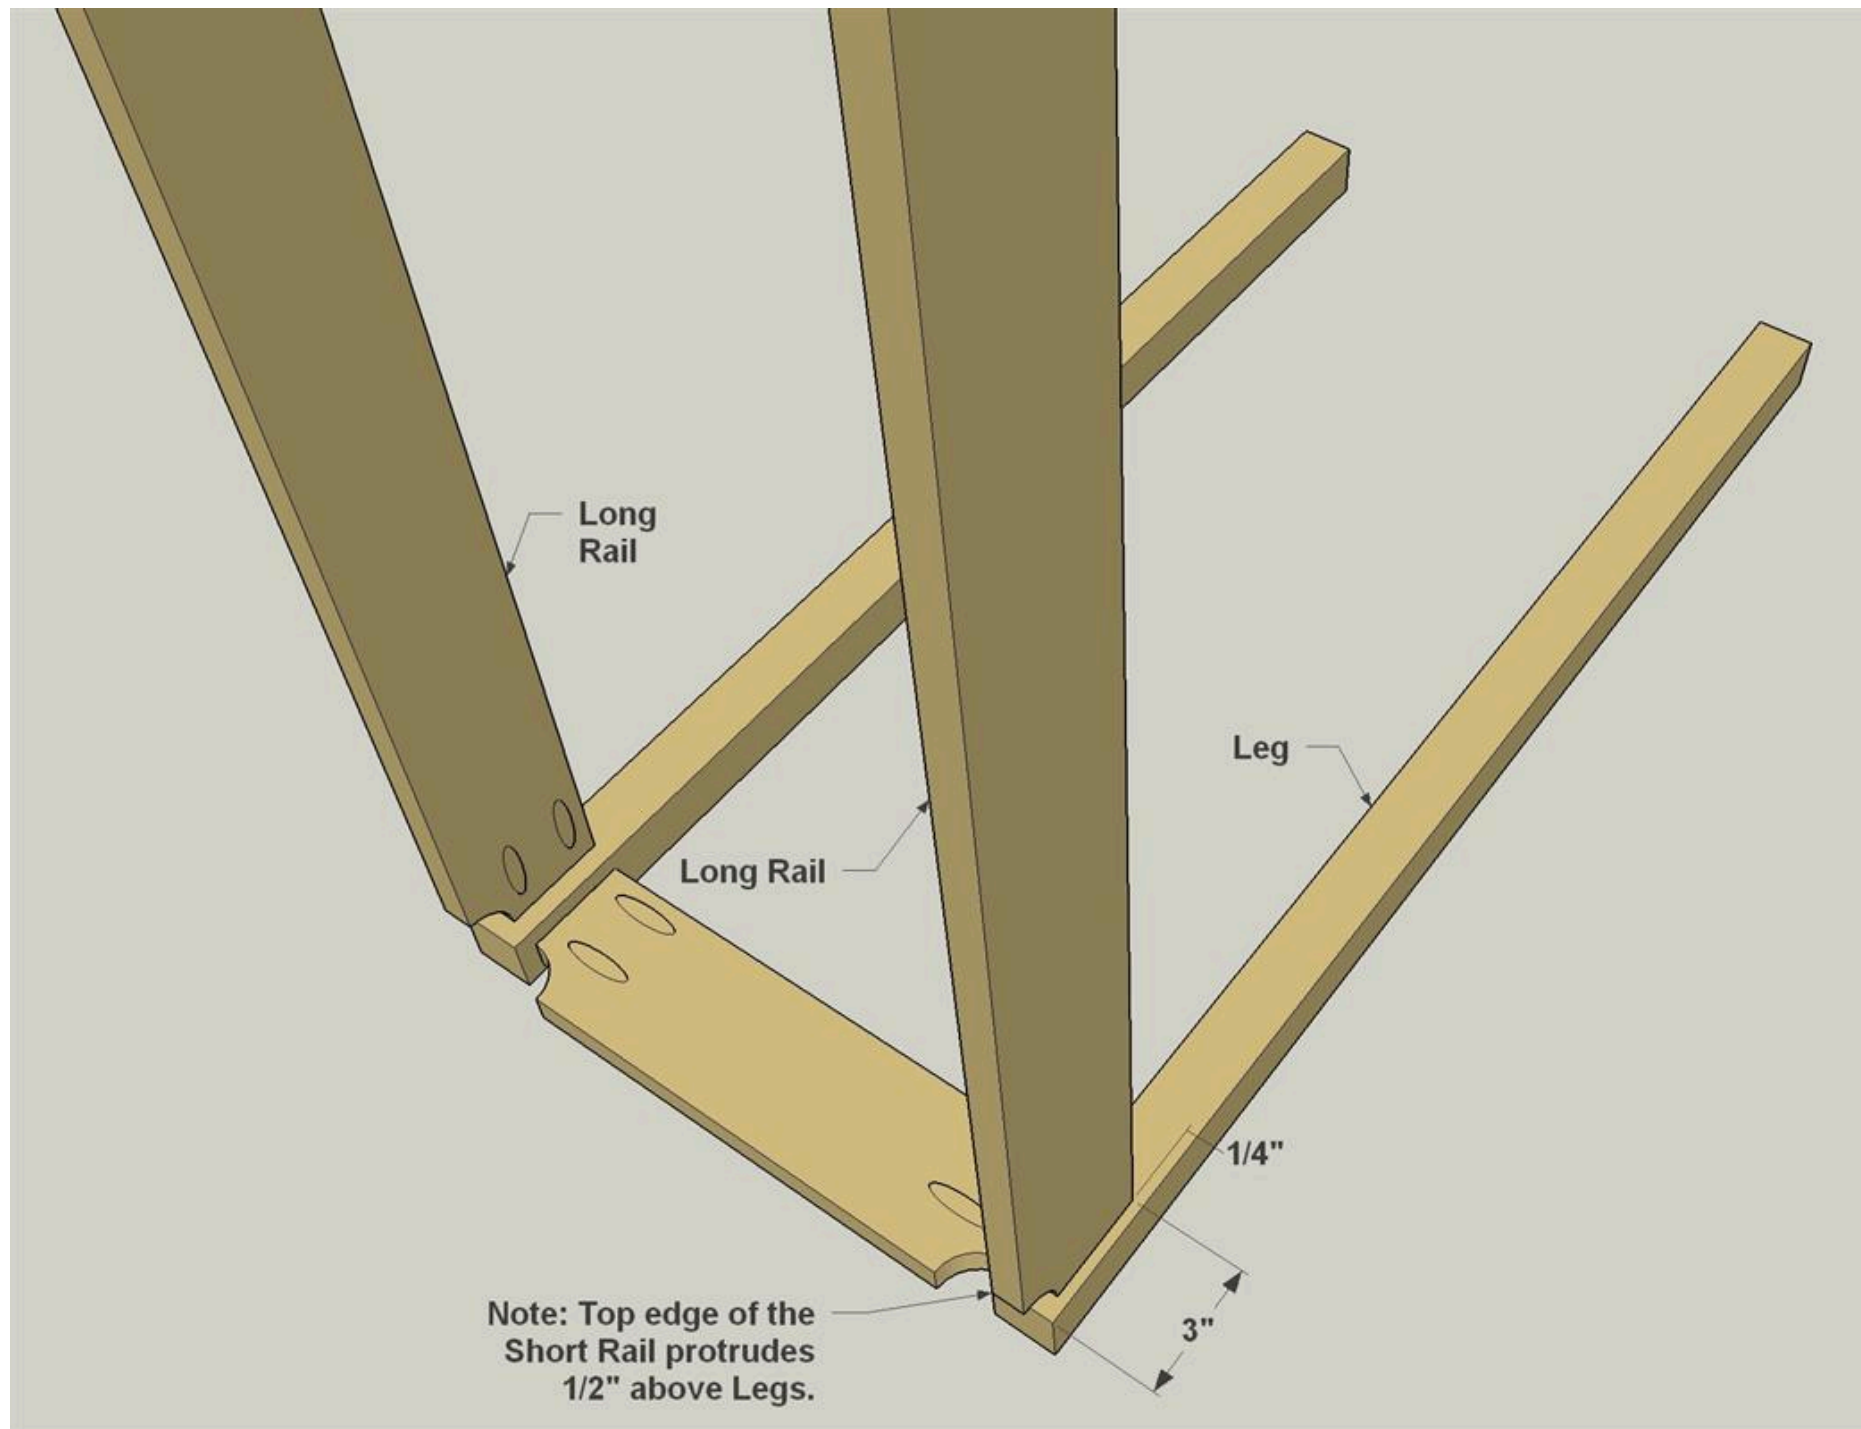

6

### Make the Top Supports


Cut three Top Supports to length from a 1x4 board, as shown in the cutting diagram. With your pocket hole jig set up for 3/4" material, drill pocket holes in the Top Support where shown.

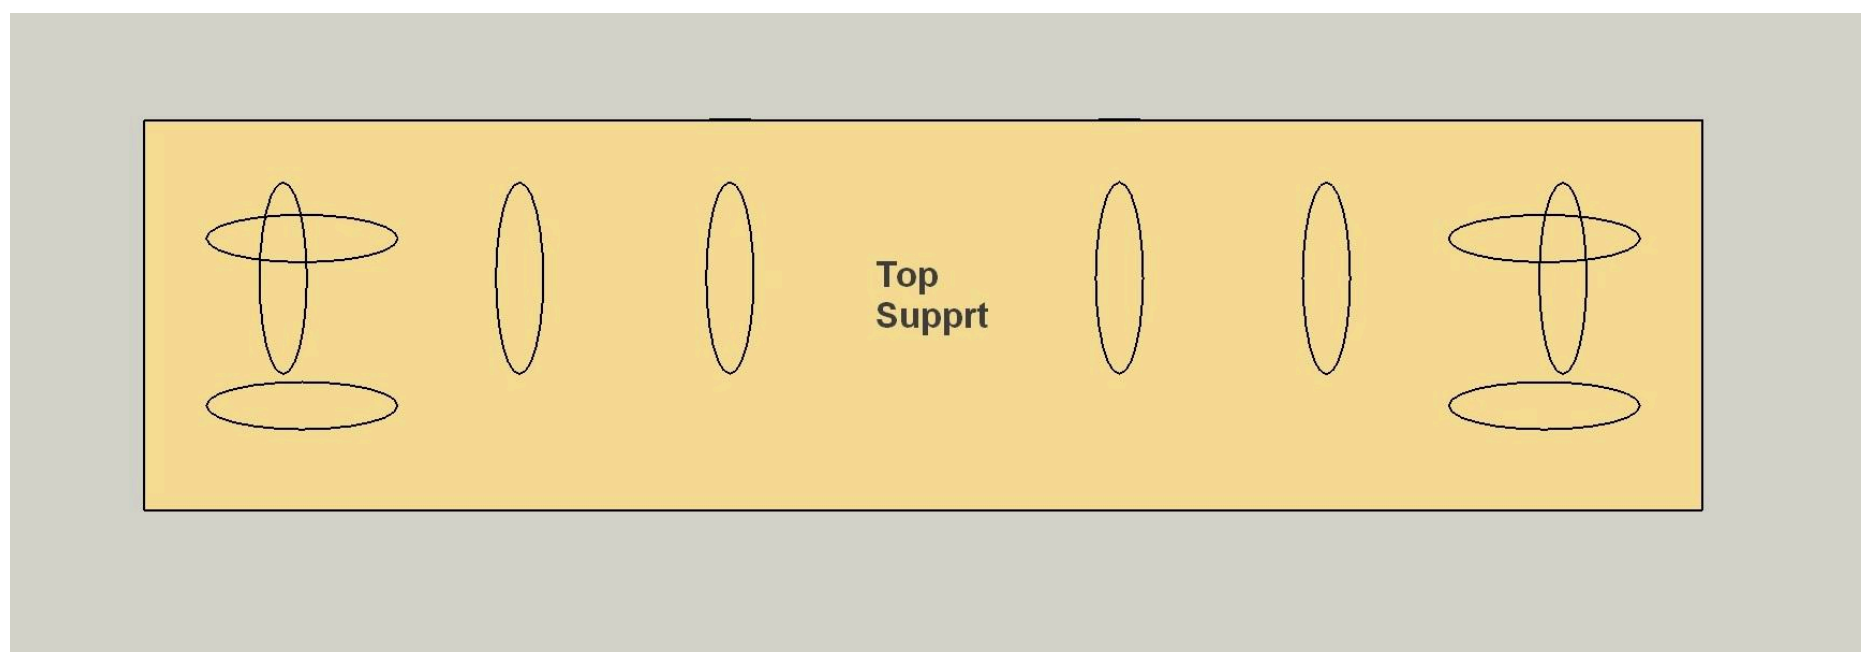

7

## Attach the Top Supports

Now you can attach the Top Supports to the Rails, as shown, using 1 1/4" pocket hole screws. Note that the supports are positioned 1/4" above the Long Rails.

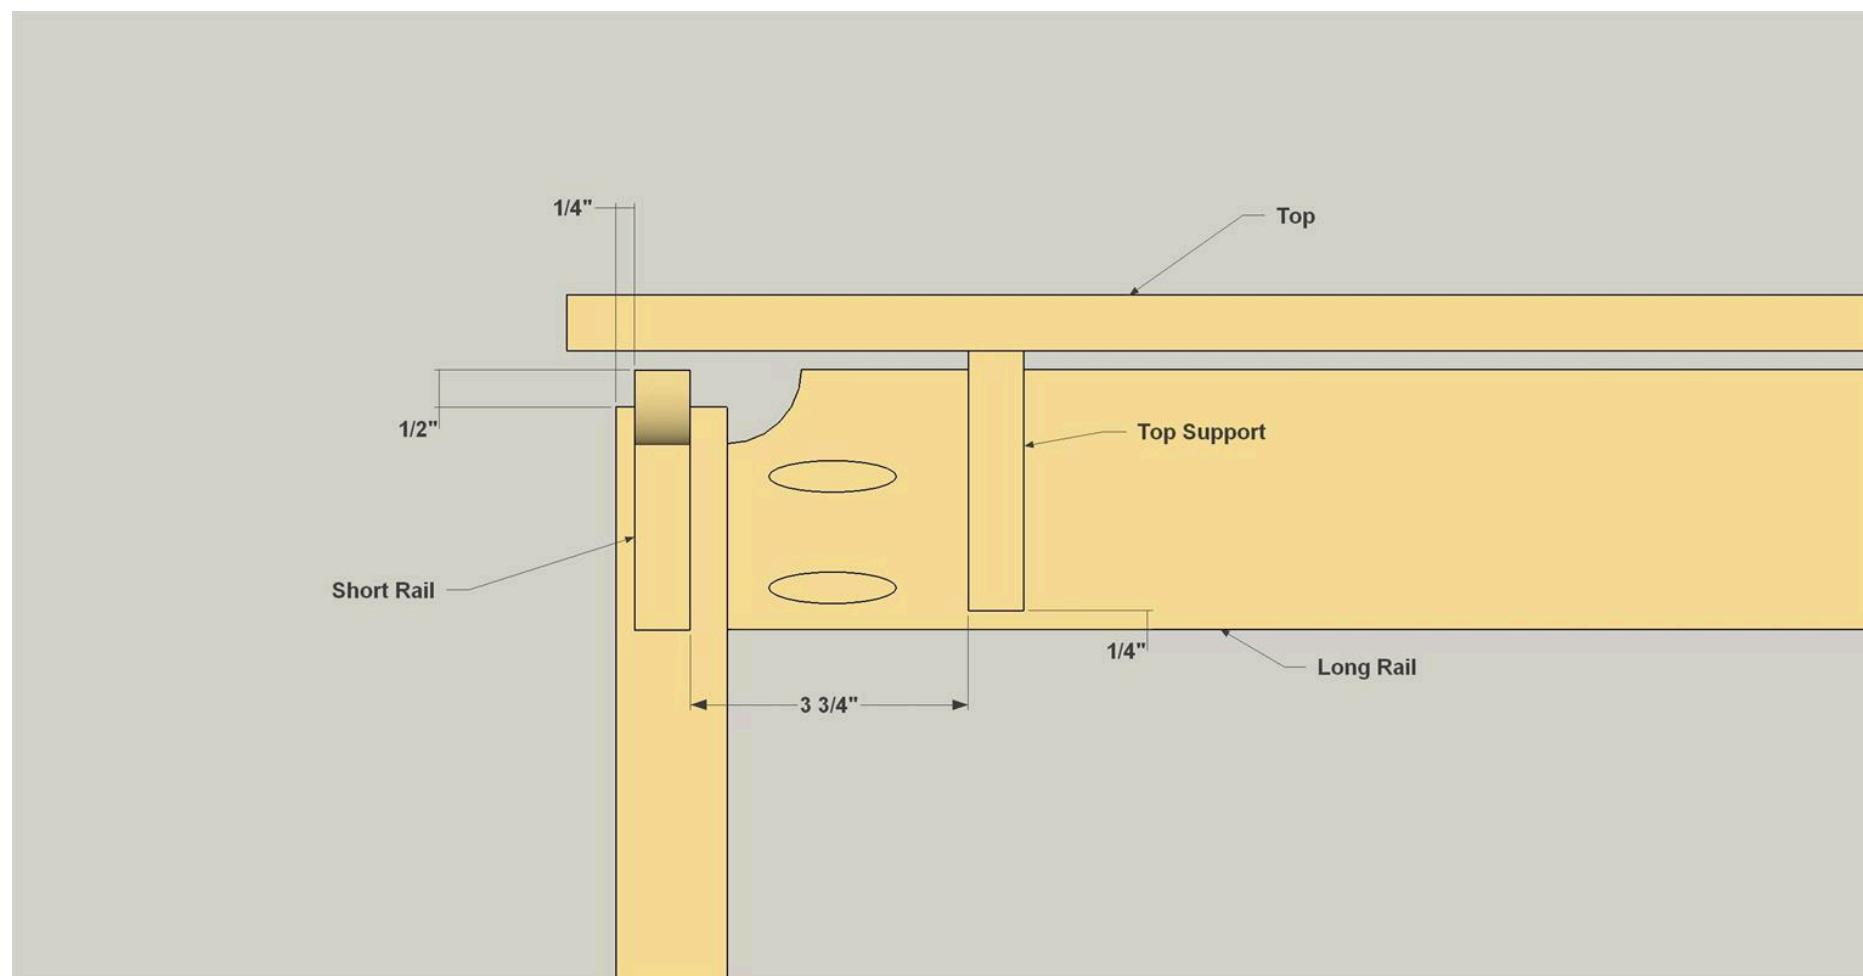

8

## Make the Top

Cut three Top pieces to length from 1x6 boards (we used soft maple), as shown in the cutting diagram. Before you attach the Top, now is a good time to stain, paint, or finish the Top pieces and the base. This is especially true if you plan to do a painted base and natural top, as we did.

## 9

**Attach the Top**

Now you can attach the Top, as shown, using 1 1/4" pocket hole screws. The easiest way to do this is to lay the Top pieces face down on a flat surface, then position the table base upside down on them. That makes it easy to check all of the overhangs and the gaps between boards.

