

Adirondack Counter Height Side Table

Difficulty
Advanced

This Adirondack style side table completes your outdoor seating area by providing a flat functional surface area. The side table coordinates with the Adirondack counter height chair and makes the perfect outdoor seating area.





Tools

Kreg Tools

Kreg®
Pocket-
Hole Jig
720

[Kreg® Pocket-Hole Jig 720](#)

Other Tools

- Jigsaw
- Miter Saw
- Tape Measure
- Drill (cordless)
- Nail Gun
- Sander

Materials

Wood Products

- 1** Board , 1x3 , 96"
- 2** Board , 1x4 , 96"
- 2** Board , 2x2 , 72"

Hardware & Supplies

- 24** 1 1/4" Pocket Hole Screws
- 12** 1 1/4" Finish Nails

Cut List & Parts


- 4 Legs , 2 X 2 @ 35 1/4"
- 4 Short Side Aprons , 1 X 3 @ 9 1/2"
- 4 Long Side Aprons , 1 X 3 @ 14"
- 2 Table Top Middle , 1 X 4 @ 22"
- 2 Table Top Sides , 1 X 3 @ 21"
- 2 Table Top Outer Edge , 1 X 3 @ 20"
- 4 Bottom Shelf Slats , 1 X 4 @ 12 1/2"

Directions

1

Dimensions

22" diameter top x 36"h

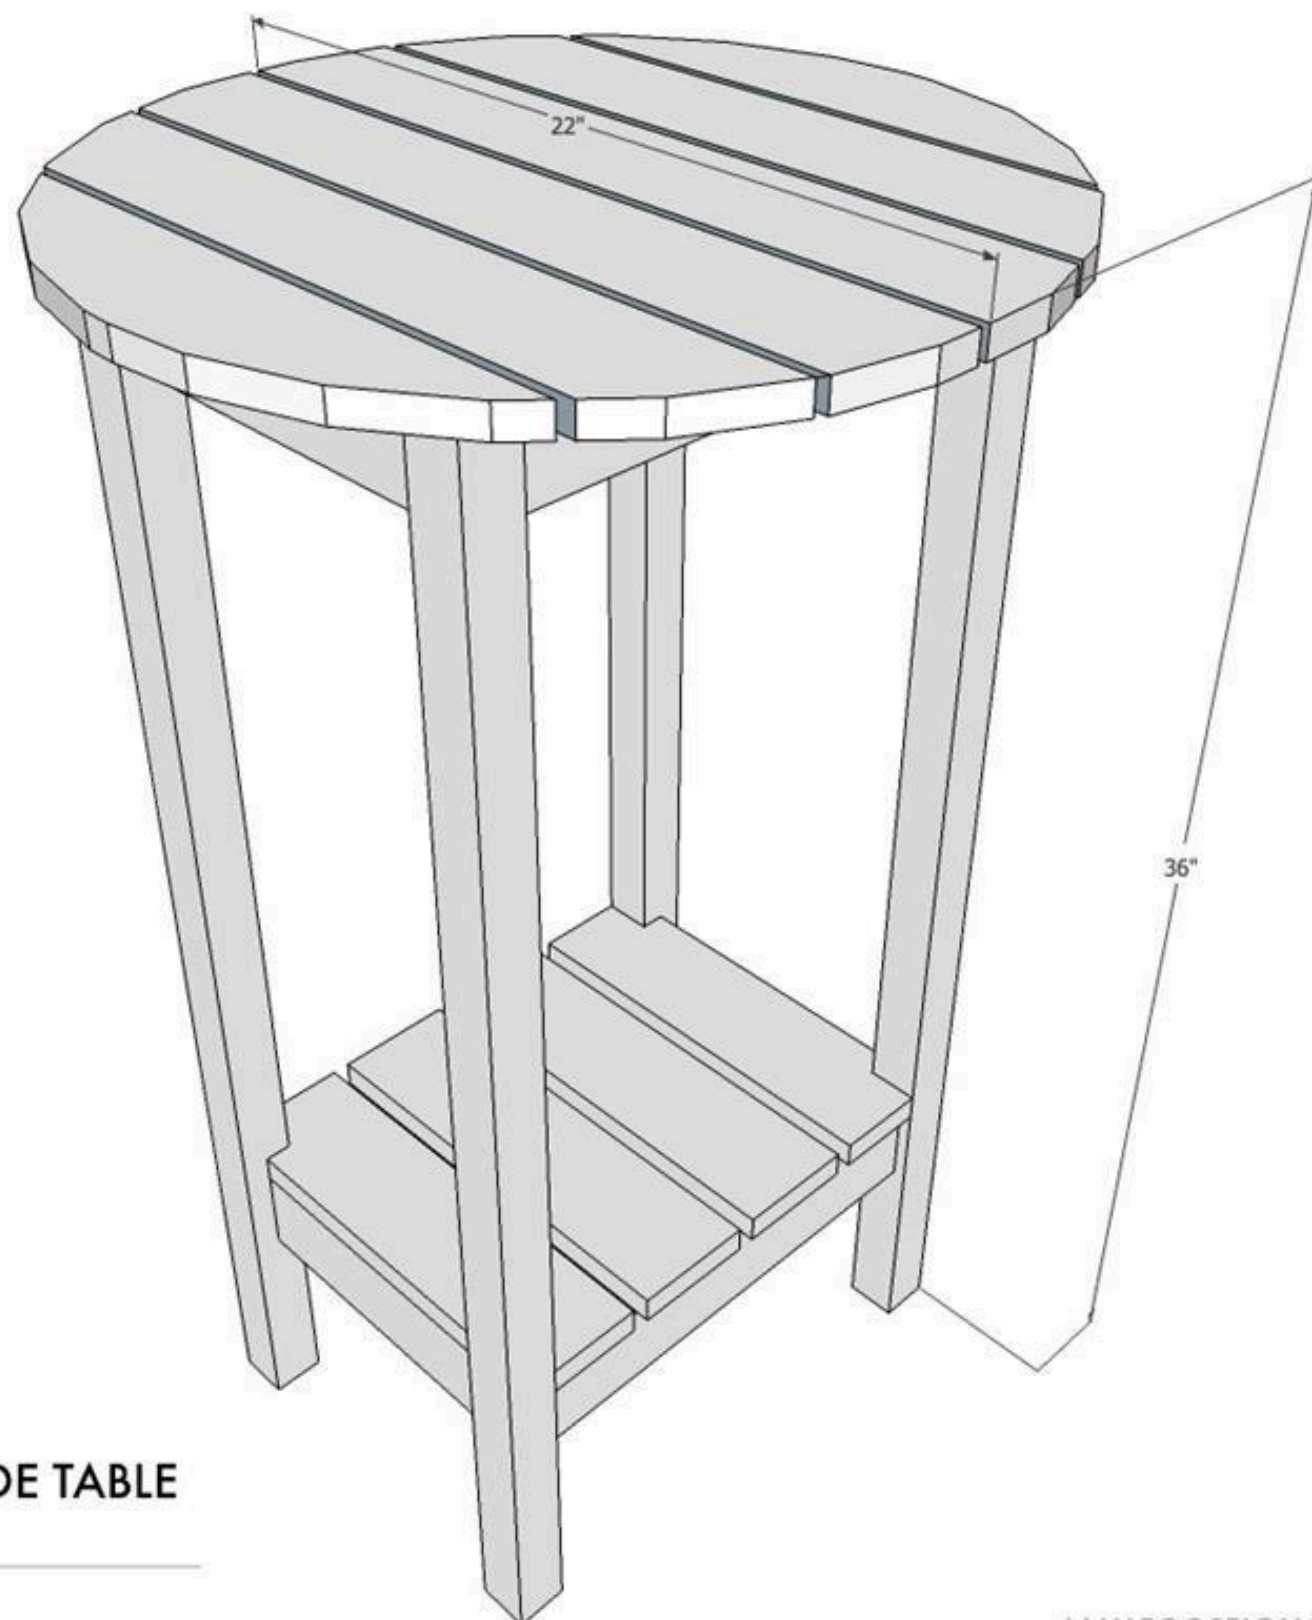

ADIRONDACK SIDE TABLE
COUNTER HEIGHT


DIMENSIONS

JAIMECOSTIGLIO.COM

2

Step 1

STEP 1: Attach short side aprons to legs using wood glue and 1 1/4" pocket hole screws. Keep apron inset 3/8". Make 2 sets.

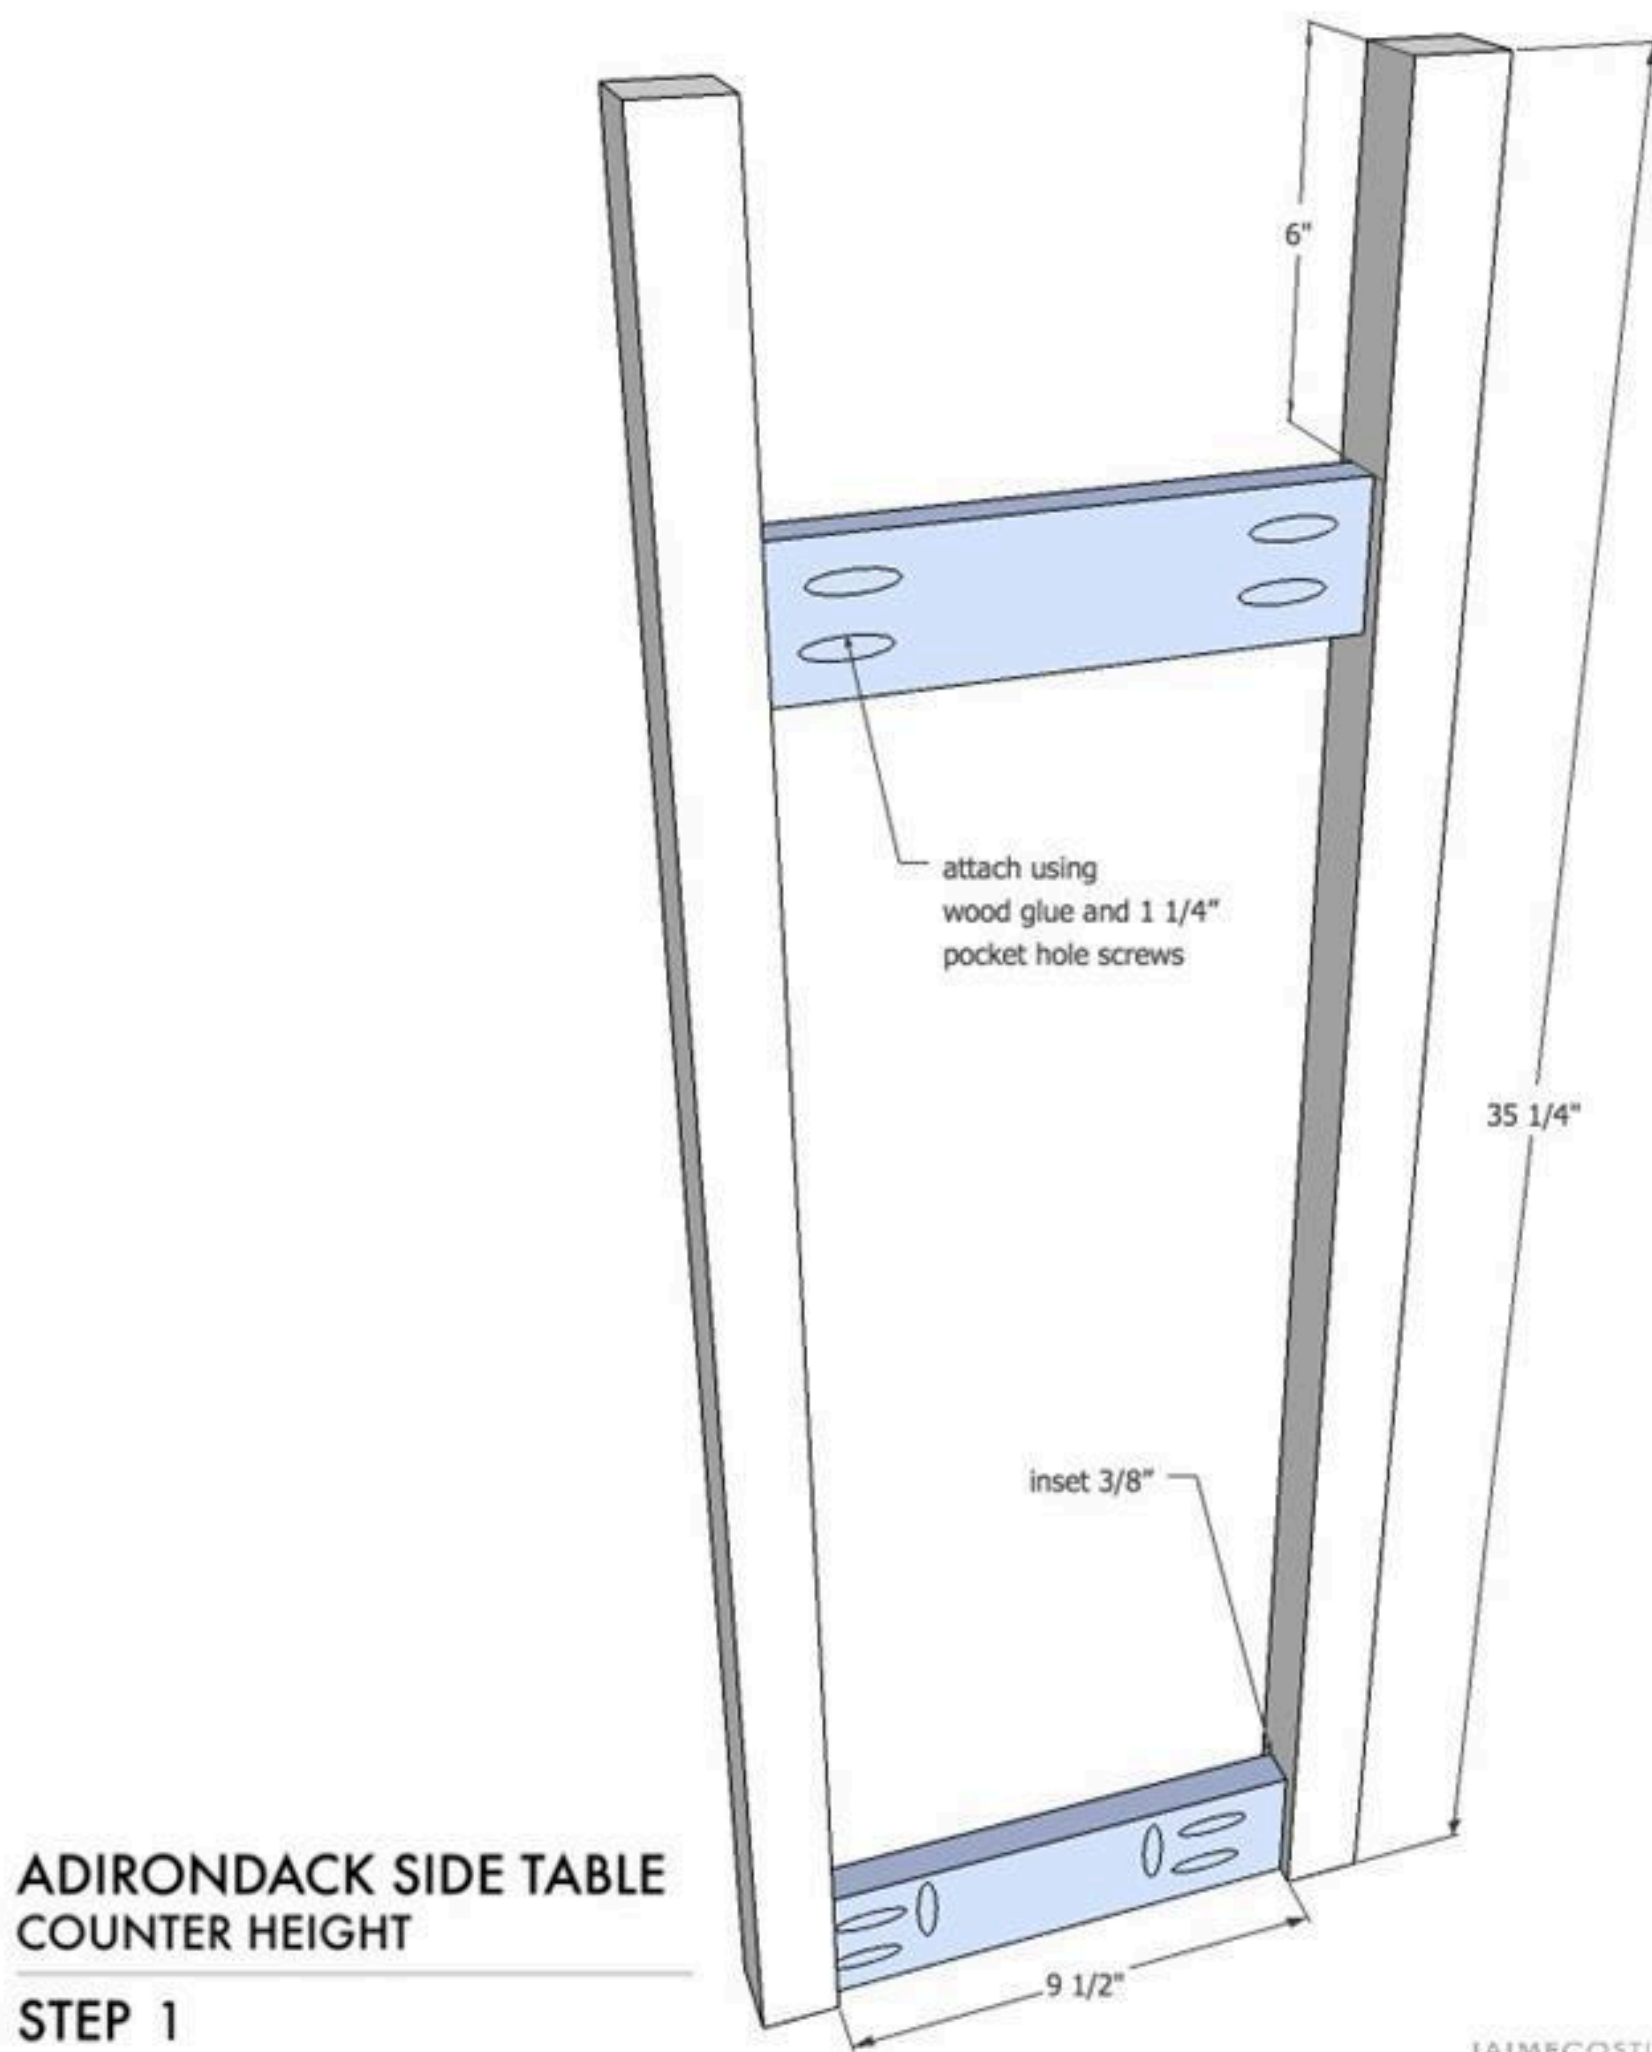

ADIRONDACK SIDE TABLE
COUNTER HEIGHT


STEP 1

JAIMECOSTIGLIO.COM

3

Step 2

STEP 2: Attach long side aprons to short side panels at legs using wood glue and 1 1/4" pocket hole screws.

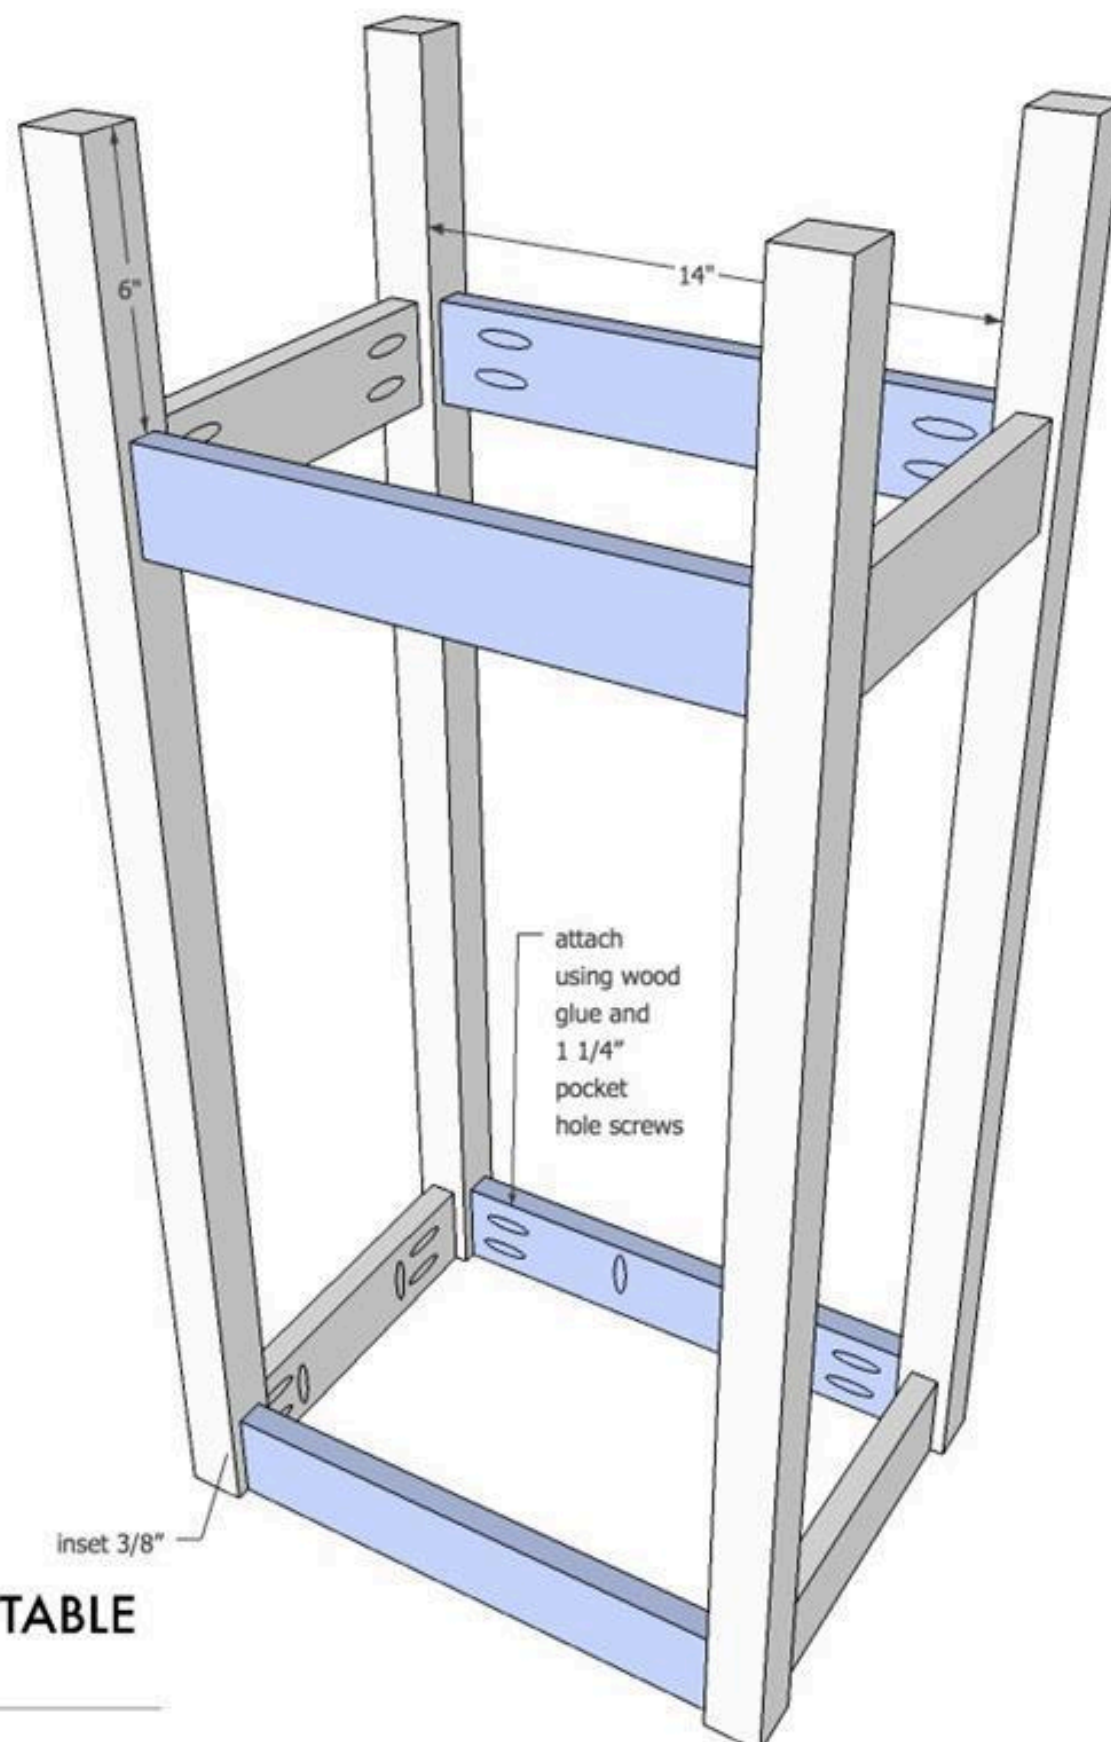

ADIRONDACK SIDE TABLE
COUNTER HEIGHT


STEP 2

JAIMECOSTIGLIO.COM

4

Step 3

STEP 3: Attach table top pieces to aprons using wood glue and 1 1/4" pocket hole screws. Keep 1/8" spacing between boards. Use a jig saw to trim boards to 22" diameter circle.

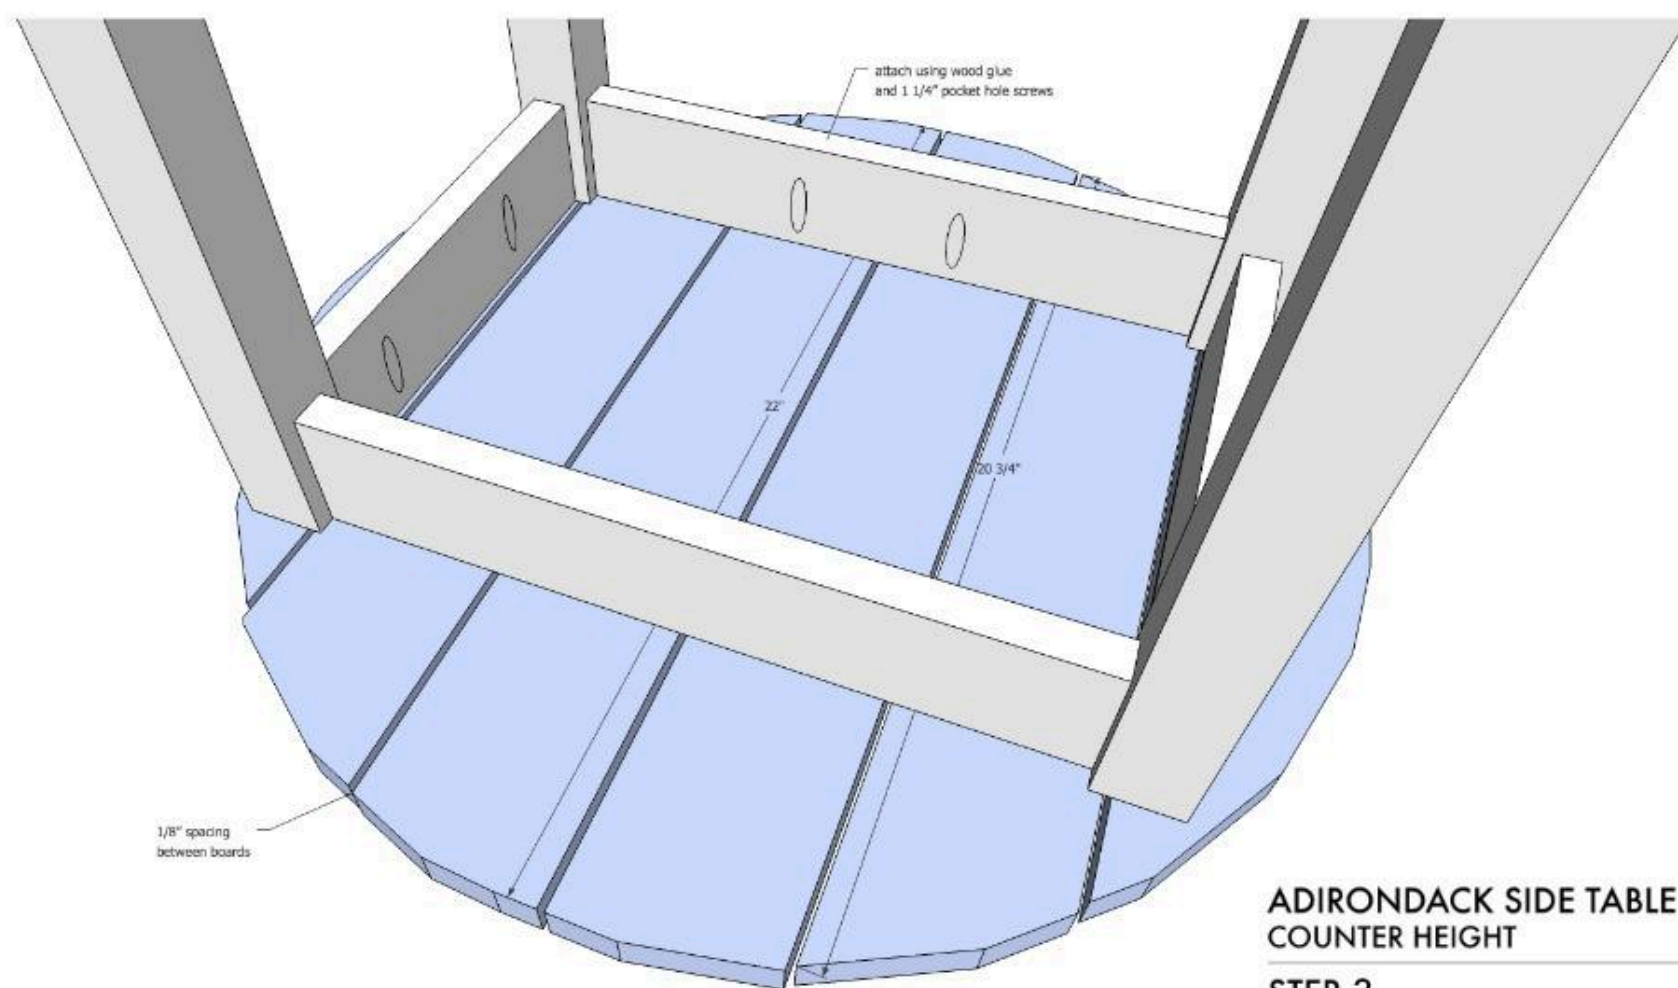

JAIMECOSTIGLIO.COM


ADIRONDACK SIDE TABLE
COUNTER HEIGHT

STEP 3

5

Step 4

STEP 4: Attach bottom shelf slats to aprons using wood glue and 1 1/4" finish nails. Notch out corners using jigsaw to fit around legs.

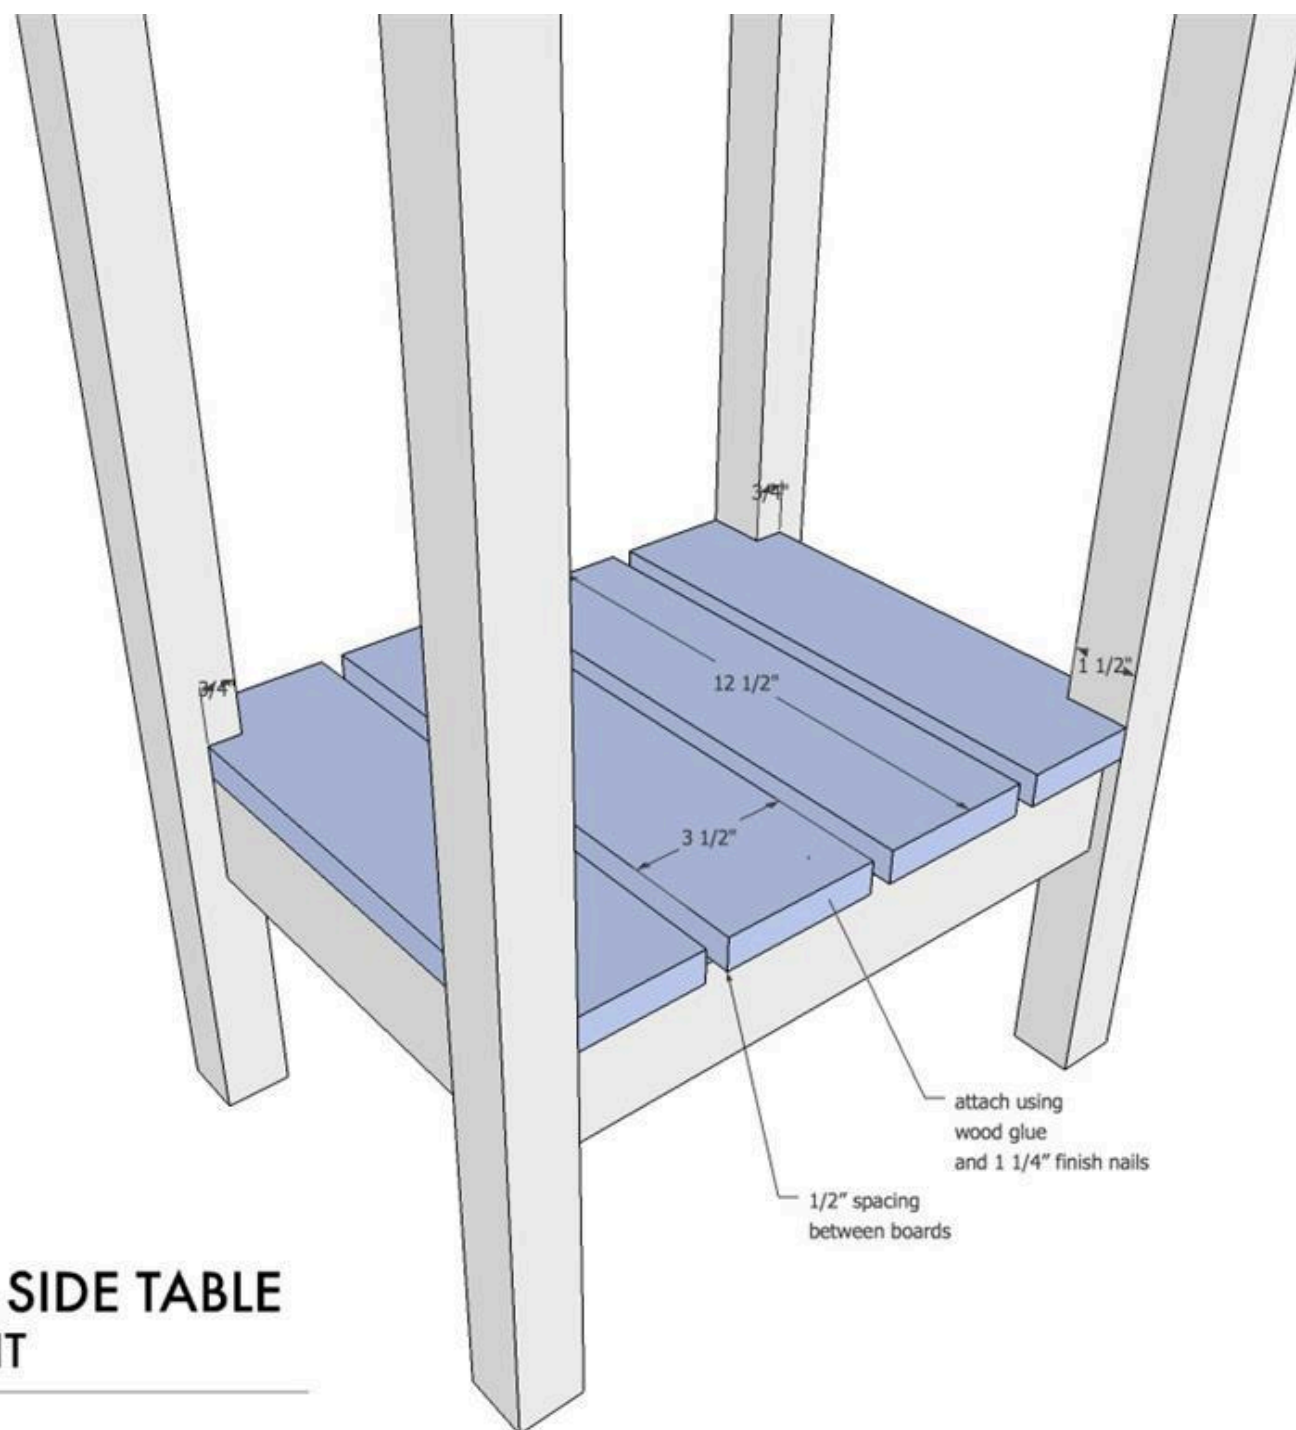

ADIRONDACK SIDE TABLE COUNTER HEIGHT

STEP 4

JAIMECOSTIGLIO.COM