

# Coffee Table with Train Table/Storage

#### **Difficulty**

#### Easy

In this plan you'll see how to build a coffee table with a simple, modern base and train table on top, which can also be used as storage. This can also be used without the storage above, but it makes a great place to store things like board games and other things not used daily.













## Tools

#### **Kreg Tools**







#### **Other Tools**

Miter Saw

Table Saw

Tape Measure

Impact Driver

## Materials

#### **Wood Products**

- **4** Board, 2x2, 96"
- **2** Board , 1x2 , 96"
- 1 Plywood , 3/4" Thick , Full Sheet

#### Hardware & Supplies

- **30** 1-1/4" Kreg Pocket Hole Screws
- **50** 2-1/2" Kreg Pocket Hole Screws
- Black Paint
- 1 Sanding Block 60 Grit
- 1 Sanding Block 120 Grit
- 1 Wood Stain In Colour Of Choice
- **18** 1-1/2" Kreg Pocket Hole Screws
- 5 Small Craft Paintbrushes
- 1 Variety Of Acrylic Paints (I Used Light Green, Dark Green, Blue, Charcoal, And White)



## Cut List & Parts

- **4** Base , 1-1/2" X 1-1/2" X 12"
- **4** Base , 1-1/2" X 1-1/2" X 45"
- **4** Base , 1-1/2" X 1-1/2" X 21"
- **3** Support , 1/2" X 1-1/2" X 21"
- **2** Lid Stopper , 1/2" X 1-1/2" X 44"
- **2** Tabletop Surround , 3/4" X 43-1/2" X 4"
- 2 Tabletop Surround , 3/4" X 24" X 4"
- **1** Tabletop , 3/4" X 45" X 24"
- 1 Train Table Base , 3/4" X 21" X 42"



## Directions

1

### **Prepare base**

Once pieces are cut to size according to cut list, drill pocket holes into all of the 1-1/2"x 1-1/2" pieces for the base, except the 12" ones. Sand all pieces.








### Prepare tabletop surround

Drill pocket holes into all four pieces, plus an additional two holes on the sides of the longer pieces to create a "box." Attach all four pieces using 1-1/4" pocket screws.

Sand all pieces smooth with 120 grit sandpaper.

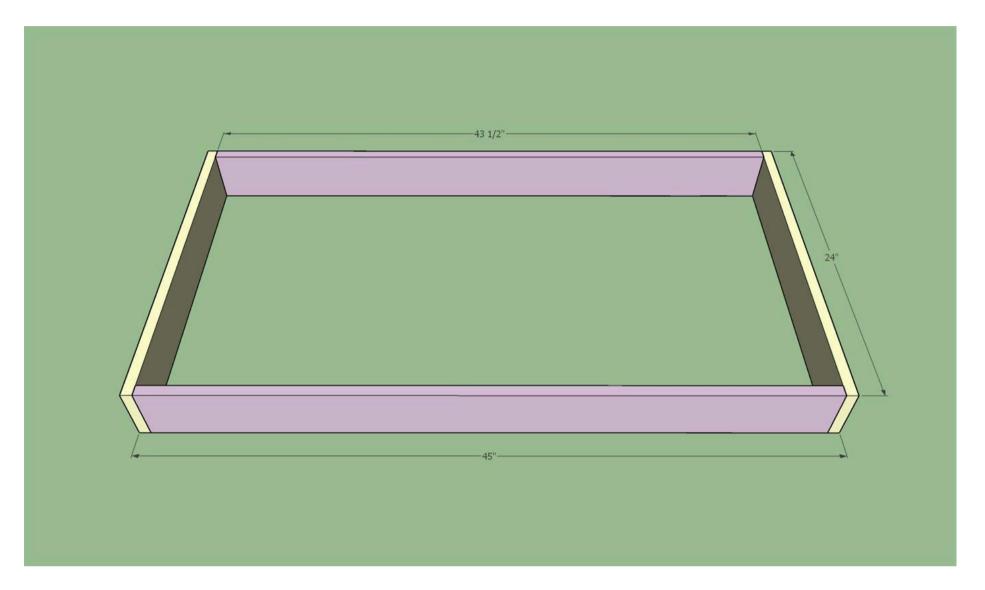




3

#### Build frame base - part 1


Using 45" and 21" pieces of the 1-1/2"x1-1/2" boards, create two frames as illustrated in image using 2-1/2" pocket screws.

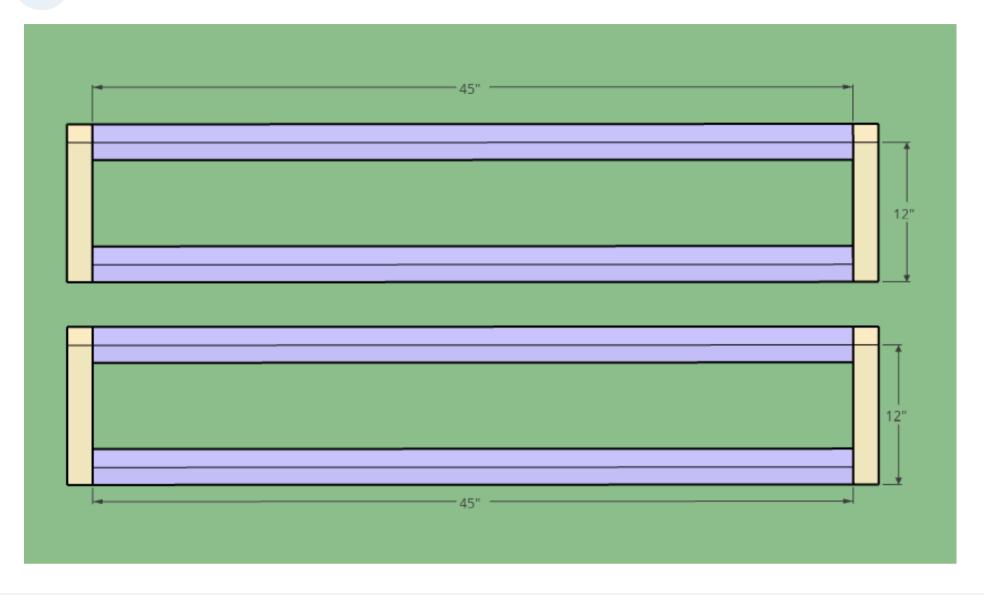



#### Build frame base - part 2

Attach 1-1/2"x1-1/2"x21" pieces to the frames using 2-1/2" pocket screws.

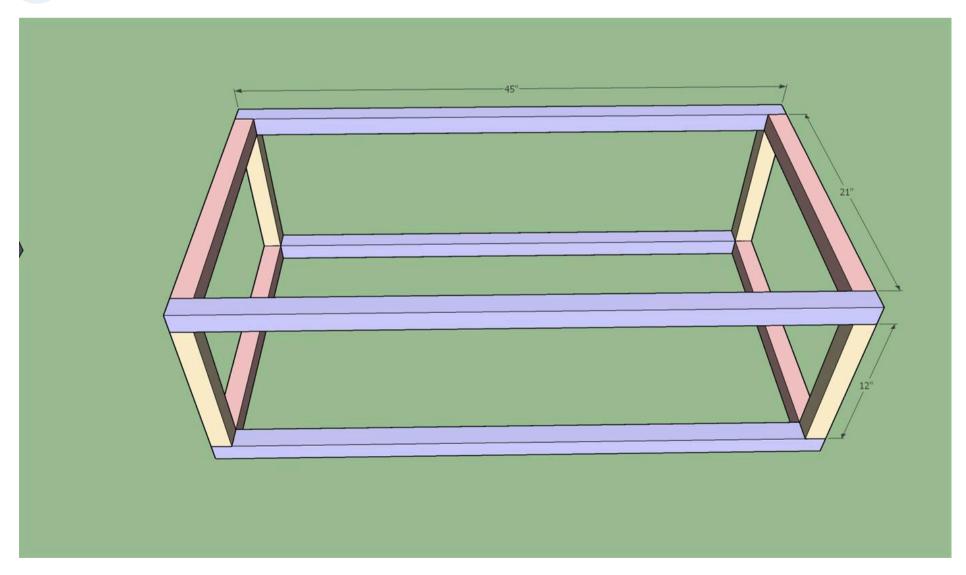




5

#### **Build bottom supports**


Attach the 3/4"x1-1/2"x21" boards to the base frame to create a support for the bottom of the tabletop.

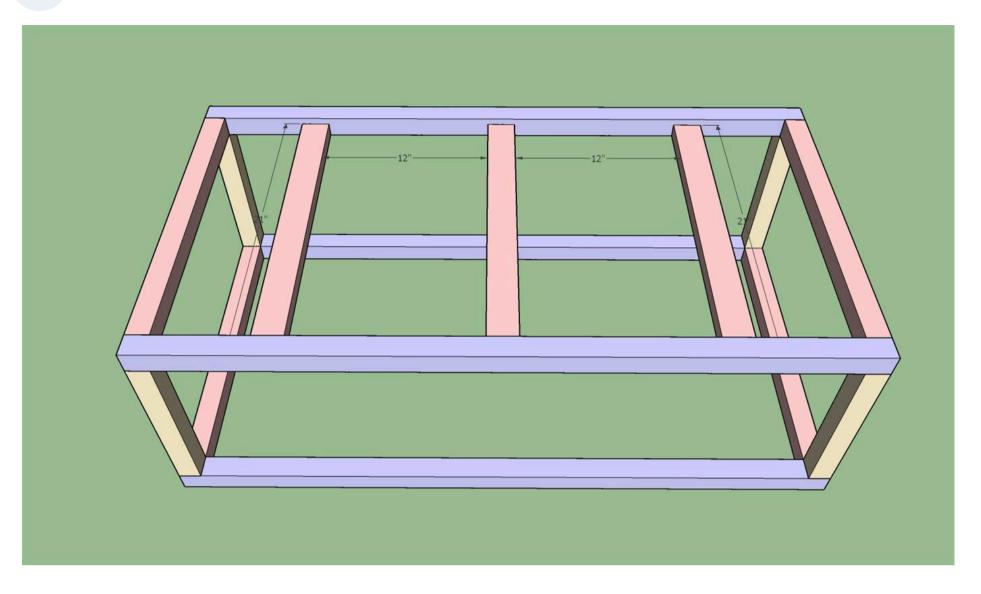

6

### Add plywood bottom

You can use screws for this, but it should be a tight enough fit that you don't need to.

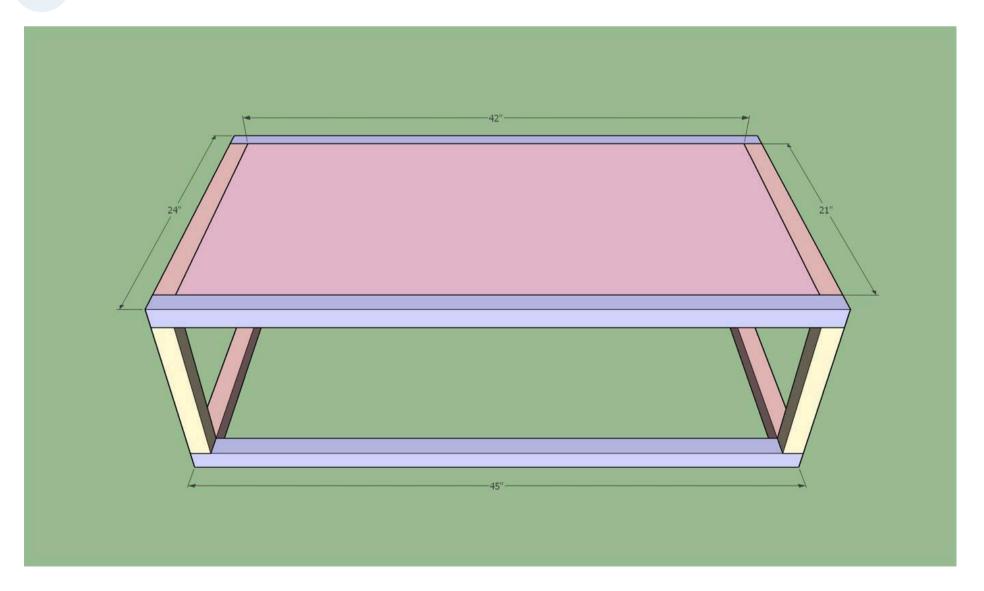






#### Attach train table surround

Stain the entire thing in the colour of your choice, then, using 1-1/2" pocket screws, attach top piece.

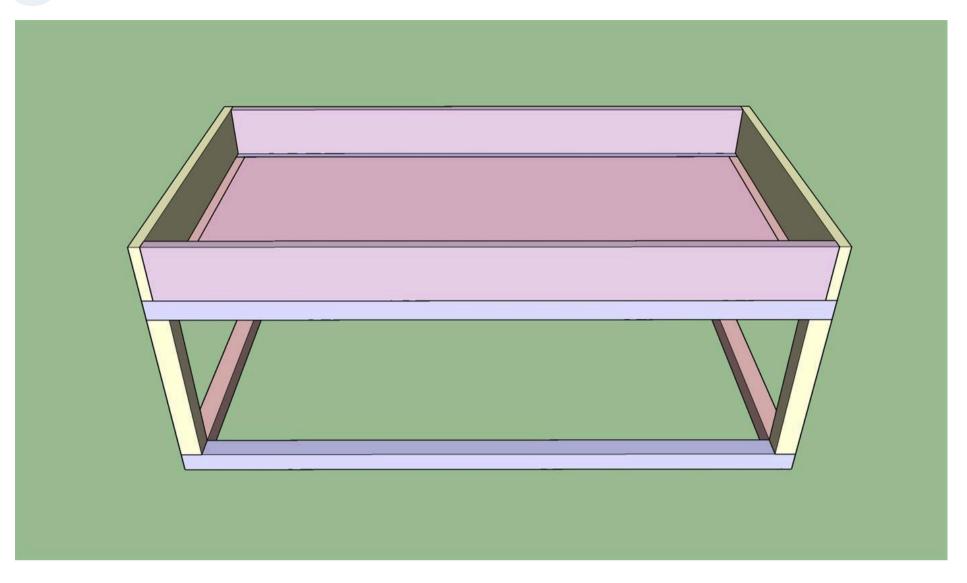

8

#### **Prepare tabletop**

Add stoppers to the tabletop so that the top doesn't slide around. Stain in colour of choice.







#### Paint base

Using a matte black paint of your choice, paint the base.







## Draw train table landscape

Using a pencil, draw a road, lake, trees, and whatever else you'd like as part of your train table landscape on the plywood base.







## Paint lansdcape

Using acrylic paint and small craft paintbrushes, paint the grass, water, road, etc.







#### Add trains!

Add in your trains and let the kiddos play! When they're done, just add the top back on!

