

# DIY Command Center

Difficulty

Easy

This is a very convenient command center. It would be great next to a door, in the garage, or in an office or classroom. It is a pretty straight forward build, that requires pretty basic tools and supplies. It measures 28" wide by 40 1/2" tall.





# Tools

## Kreg Tools

Accu-Cut™     [Accu-Cut™](#)

Wood Project Clamp - 6"     [Wood Project Clamp - 6"](#)

Kreg® Pocket-Hole Jig 720     [Kreg® Pocket-Hole Jig 720](#)

## Other Tools

Circular Saw (corded)

Miter Saw

Tape Measure

Drill (cordless)

Sander

# Materials

## Wood Products


- 1    Board , 1x3 , 96"
- 1    Board , 1x3 , 72"
- 1    Board , 1x4 , 72"
- 1    Board , 1x6 , 36"
- 1    Plywood , 1/4" Thick , Quarter Sheet

## Hardware & Supplies

- 50   1 1/4" Pocket Hole Screws
- 7    Hooks (Use As Many As You'd Like)
- 1    Wood Glue
- 1    Chalkboard Paint
- 8    Small Nails

# Cut List & Parts

- 1 Frame Piece , 28" 1x3
- 2 Frame Piece , 32 1/2" 1x3
- 1 Frame Piece , 23" 1x3
- 1 Frame Piece , 9 1/2" 1x3
- 1 Shelf Piece , 11 1/4" 1x4
- 1 Shelf Piece , 14" 1x4
- 3 Shelf Pieces , 12 1/2" 1x4
- 1 Bottom Frame Piece , 28" 1x6
- 2 Backing Pieces , 9 1/2" X 10 1/2" (1/4" Plywood)
- 2 File Holder Fronts , 14" X 6 1/2" (1/4" Plywood)
- 1 Chalkboard , 22 1/2" X 24" (1/4" Plywood Chalkboard)

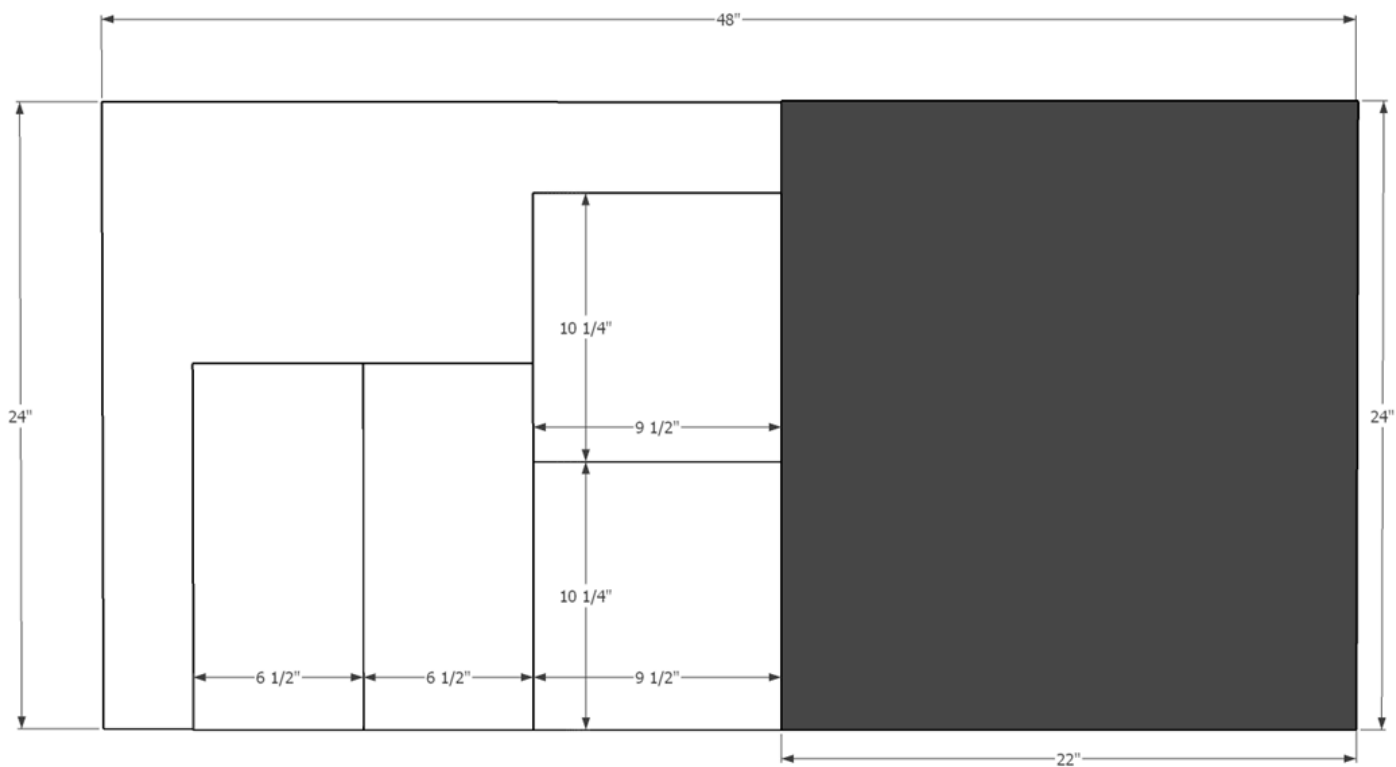

TheCreativeMom.com

# Directions


**1****Build Frame**

Cut Two (30 1/2") 1x3 boards. Drill pocket holes in both ends.

Cut one (28") 1x3 board.

Cut one (28") 1x6 board.

Using wood glue and 1 1/4" pocket hole screws, assemble a frame, with the 1x6 on the bottom.

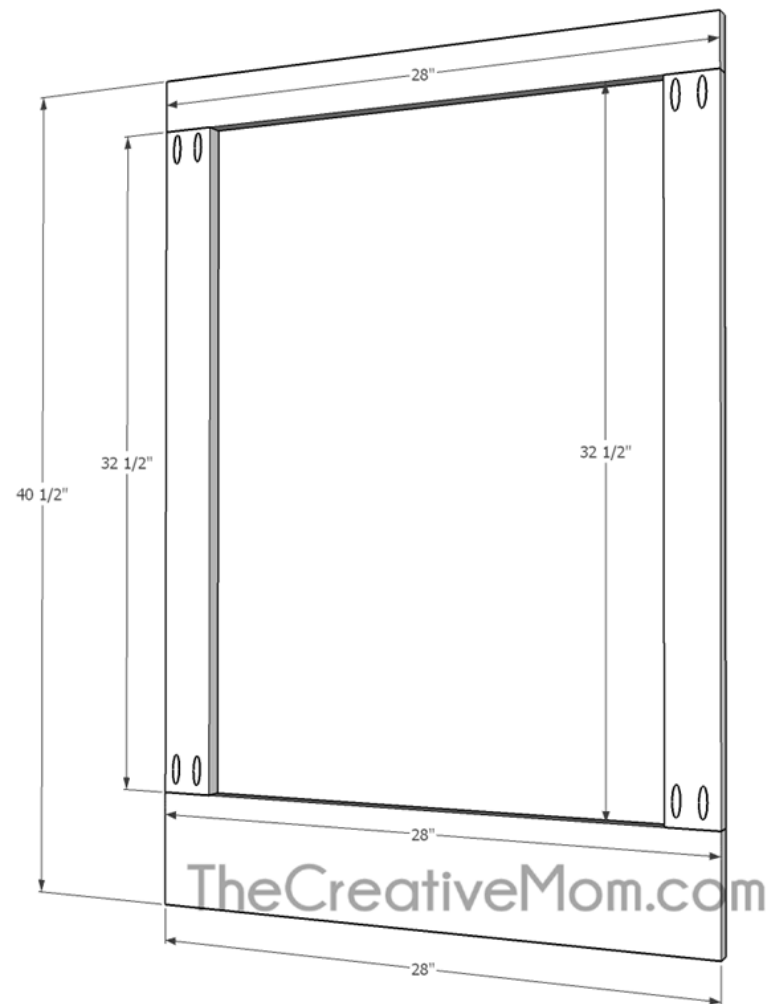

## 2


### Add Cross Supports

Cut one (23") 1x3 board. Drill pocket holes in both ends.

Cut one (9 1/2") 1x3 board. Drill pocket holes in both ends.

Using wood glue and 1 1/4" pocket hole screws, attach the 23" board horizontally, at 9 1/2" from the bottom.

Using wood glue and 1 1/4" pocket hole screws, attach the 9 1/2" board vertically, centered on the 1x6.

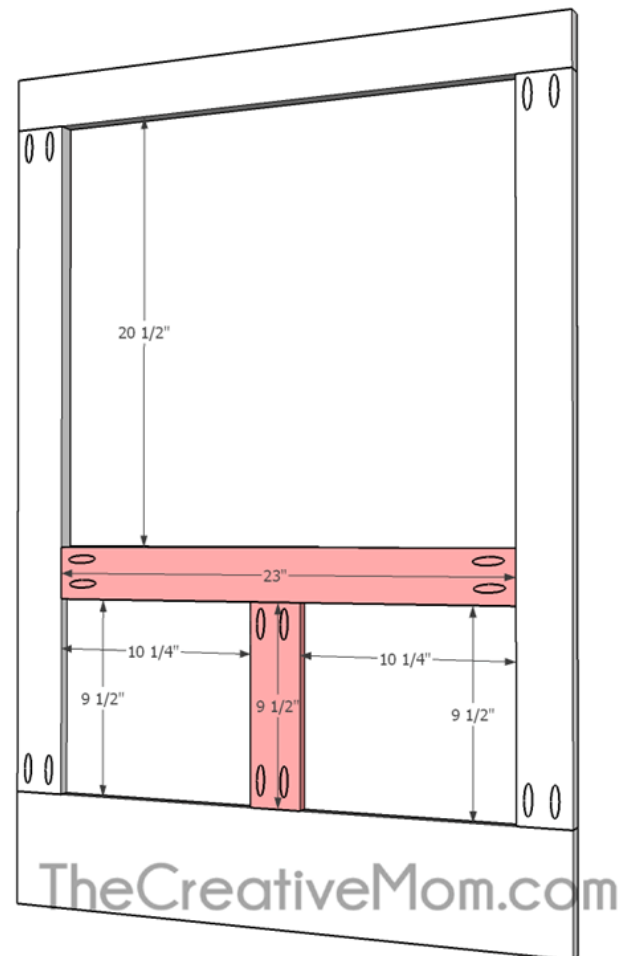




### 3

#### Start Building Shelving Unit

Cut two (11 1/4") 1x4 boards. Drill pocket holes in one end of each board, and across the left side of the first board, and the right side of the second board.


The pocket holes along the sides (length) of the board will be used to connect the entire shelving unit to the frame later.

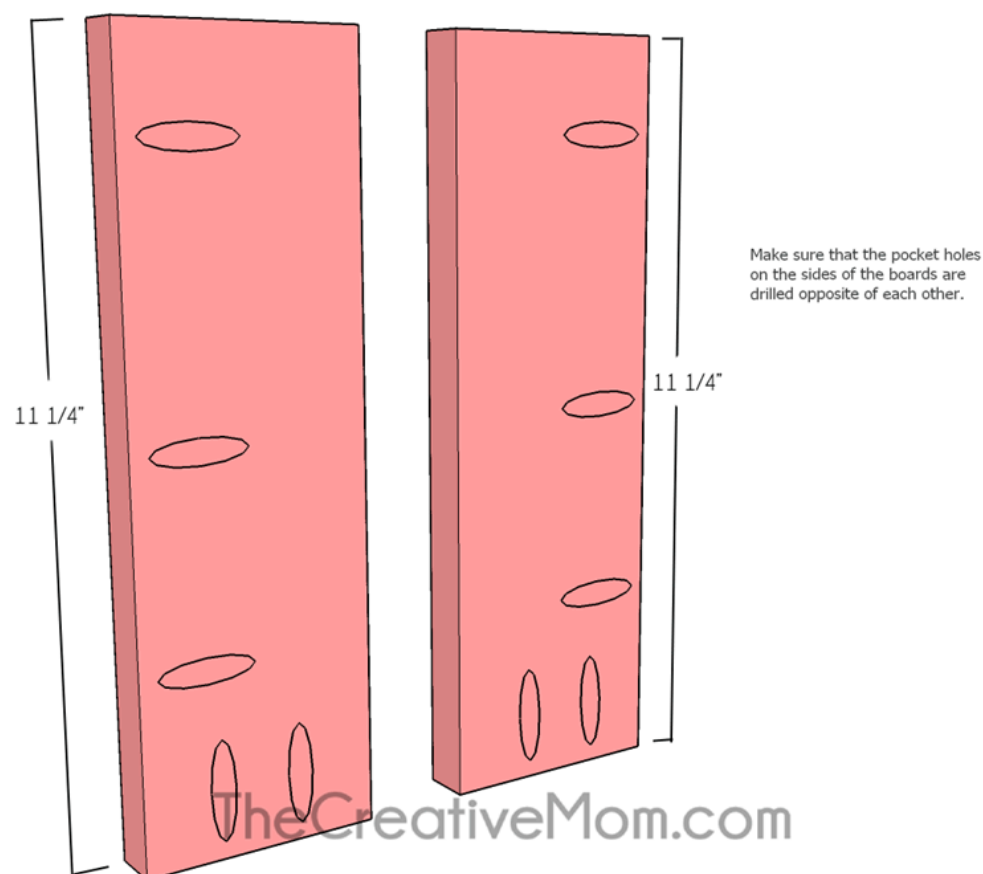

4

**Attach Shelf Bottom**


Cut one (14") 1x4 board. Using wood glue and 1 1/4" pocket hole screws, attach the boards together. The 14" board will be the shelf bottom.

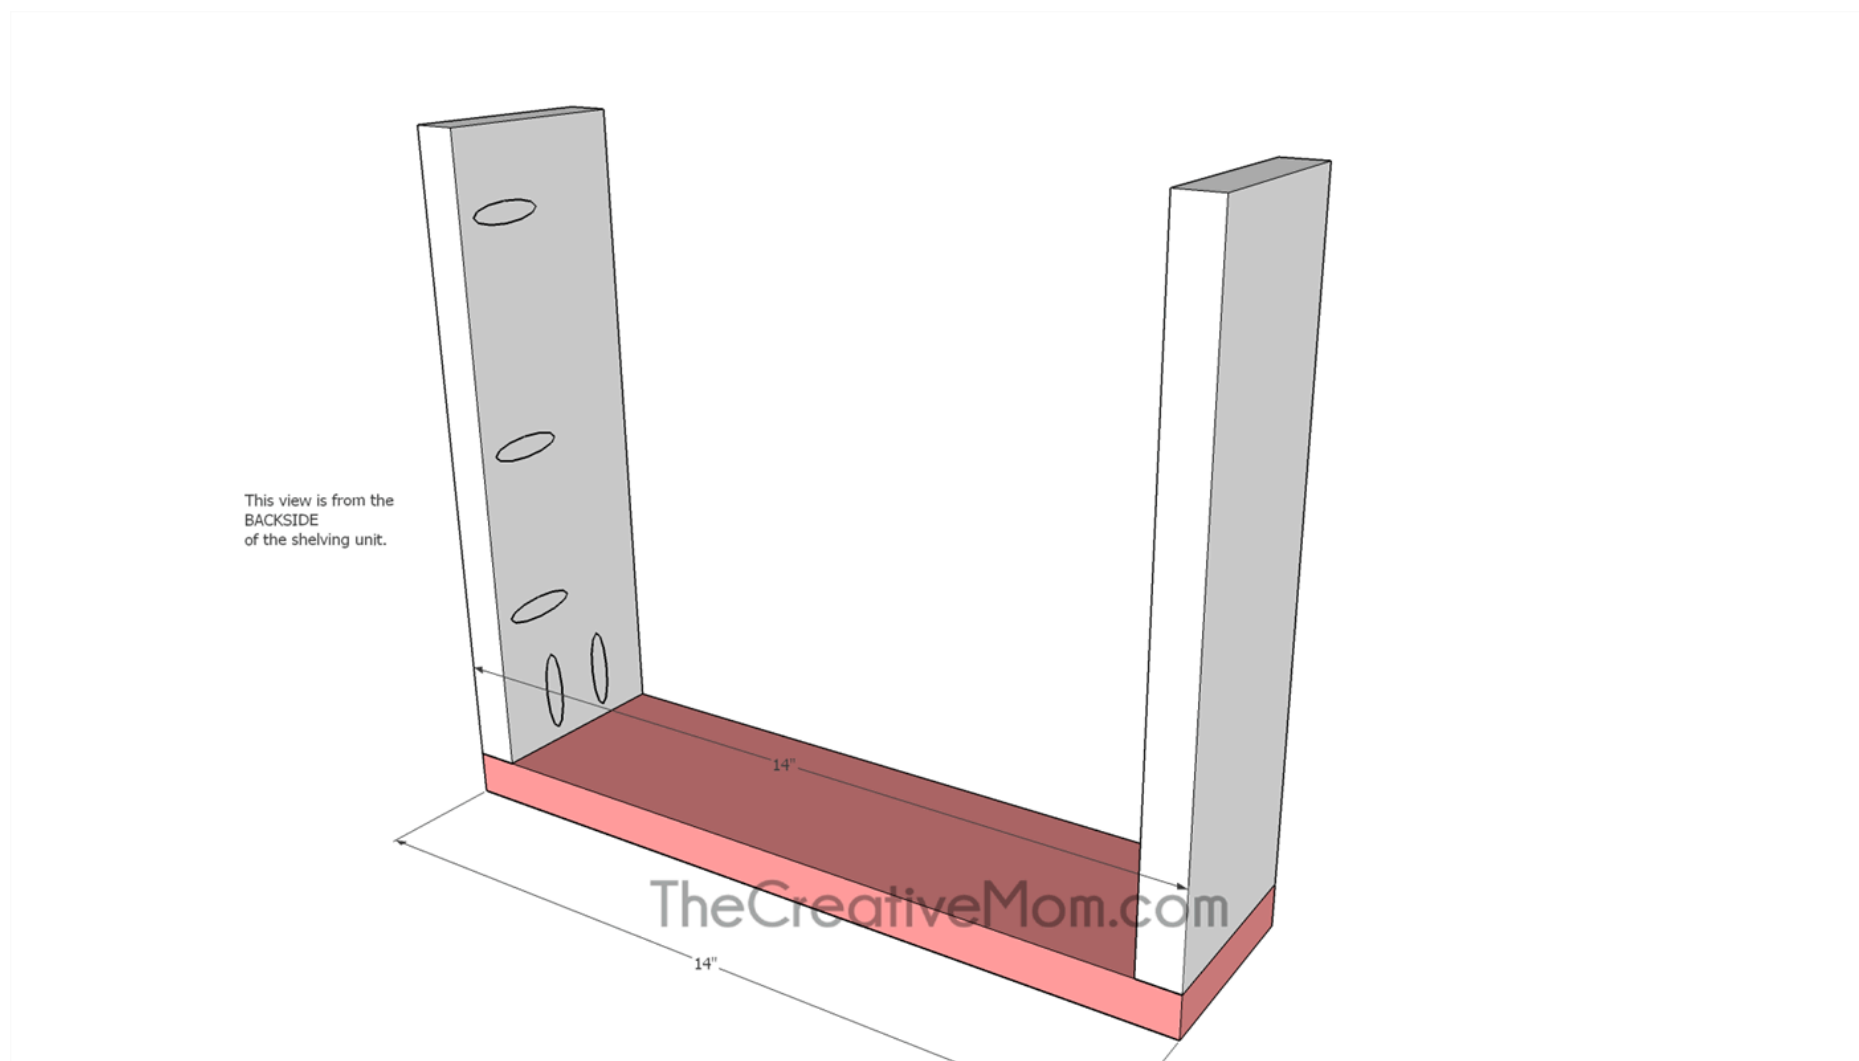

5

**Add Shelf Front**

Cut one (12 1/2") 1x4 board. Drill pocket holes in both ends. Using wood glue and 1 1/4" pocket hole screws, attach this board horizontally, across the front side of the vertical support boards.

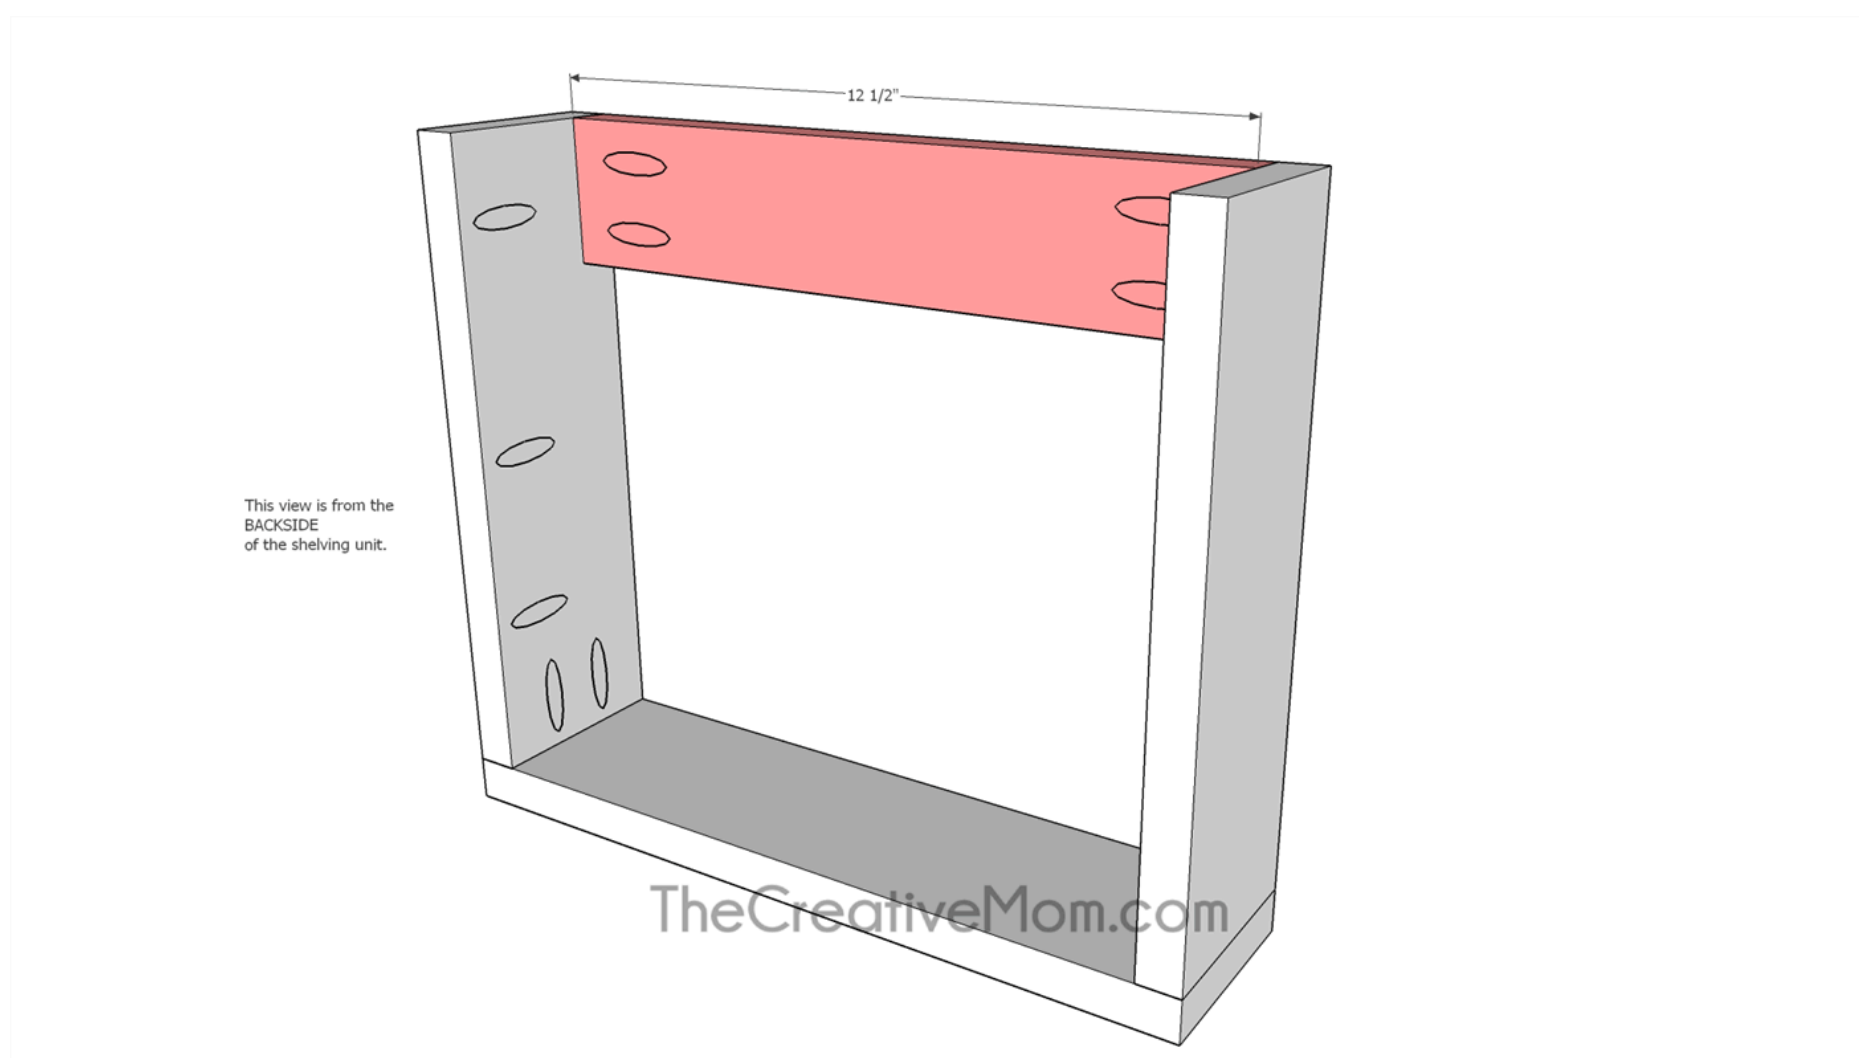




**6****Add Shelves**

Cut two (12 1/2") 1x4 boards. Drill pocket holes in each end. Using wood glue and 1 1/4" pocket hole screws, attach the shelves. The top shelf should be even with the bottom of the of the front you just attached. You can place the middle shelf wherever you want it.

This view is from the  
BACKSIDE  
of the shelving unit.

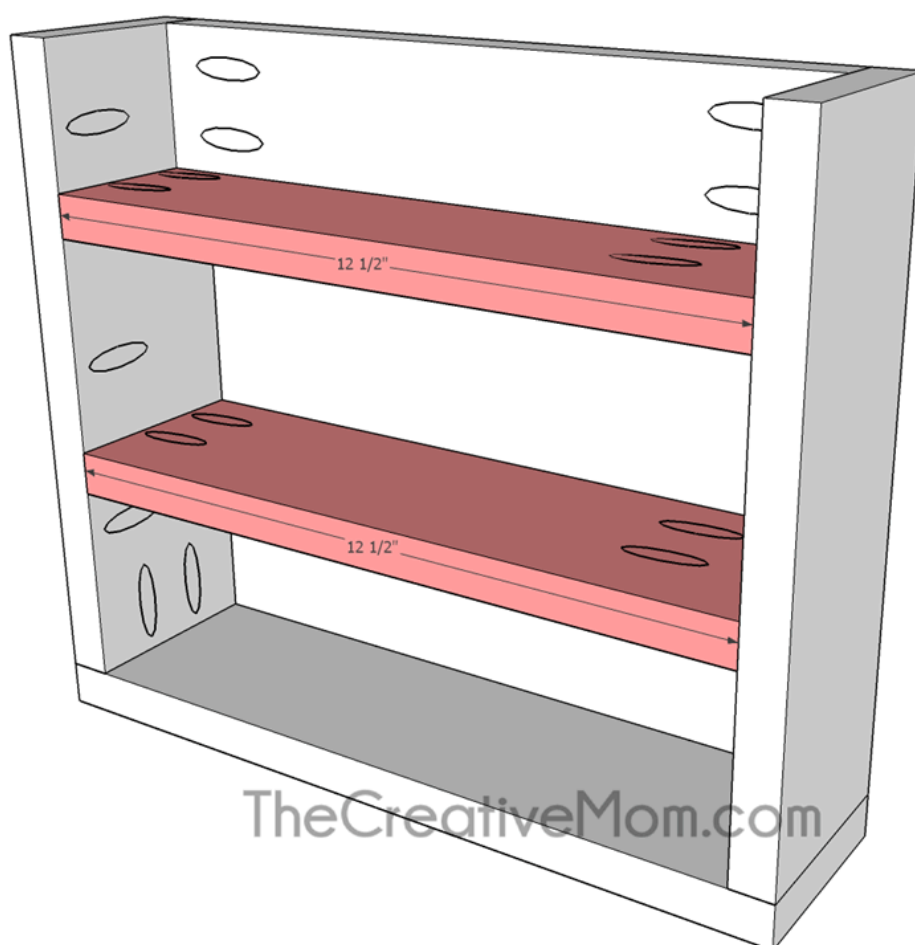


TheCreativeMom.com

## 7

**Attach Shelving Unit**

Use wood glue and 1 1/4" pocket holes to attach the shelving unit to the frame. You will use the pocket holes on the sides of the vertical shelf supports to attach.

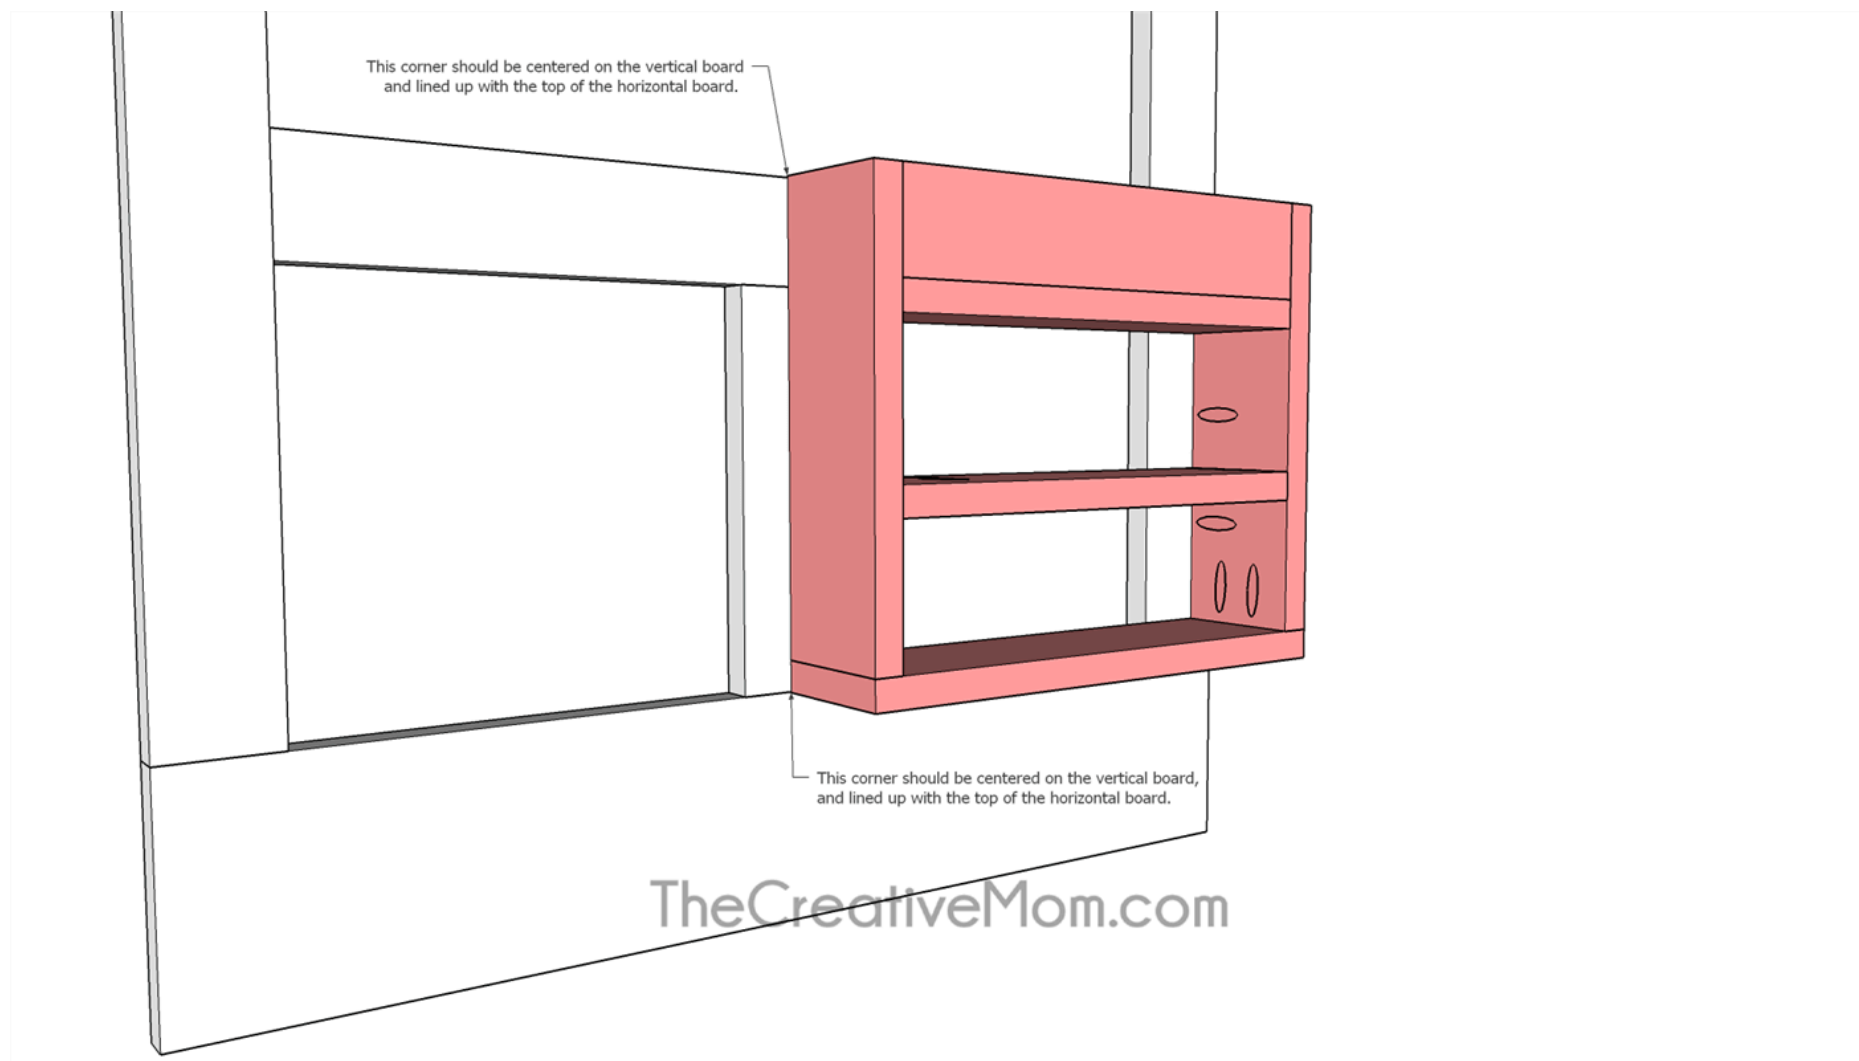


## 8

**Cut Triangle Supports**

Using a 1x3, you will cut FOUR triangle supports for the file holders.

Drill pocket holes along the long side of the triangles.

See plans for the diagram.

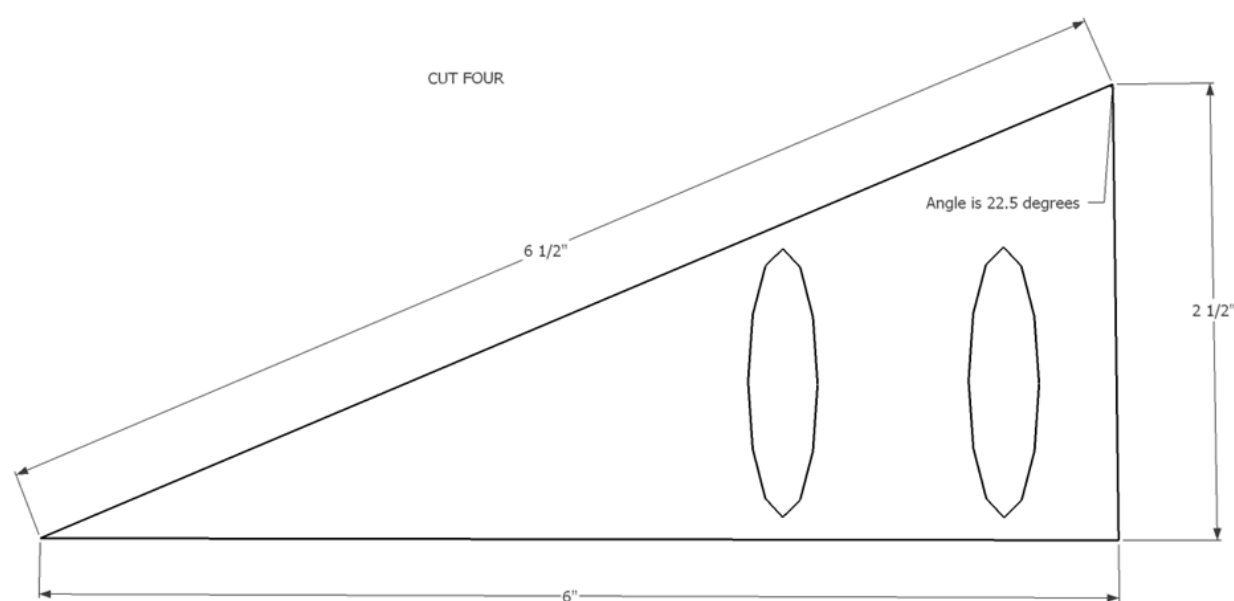


TheCreativeMom.com

# 9

## Attach Triangle Supports

Using wood glue and 1 1/4" pocket hole screws, attach the triangle supports to the vertical pieces of the frame.


These pieces should be flush up against the outside of the frame, and against the shelving unit you already attached.

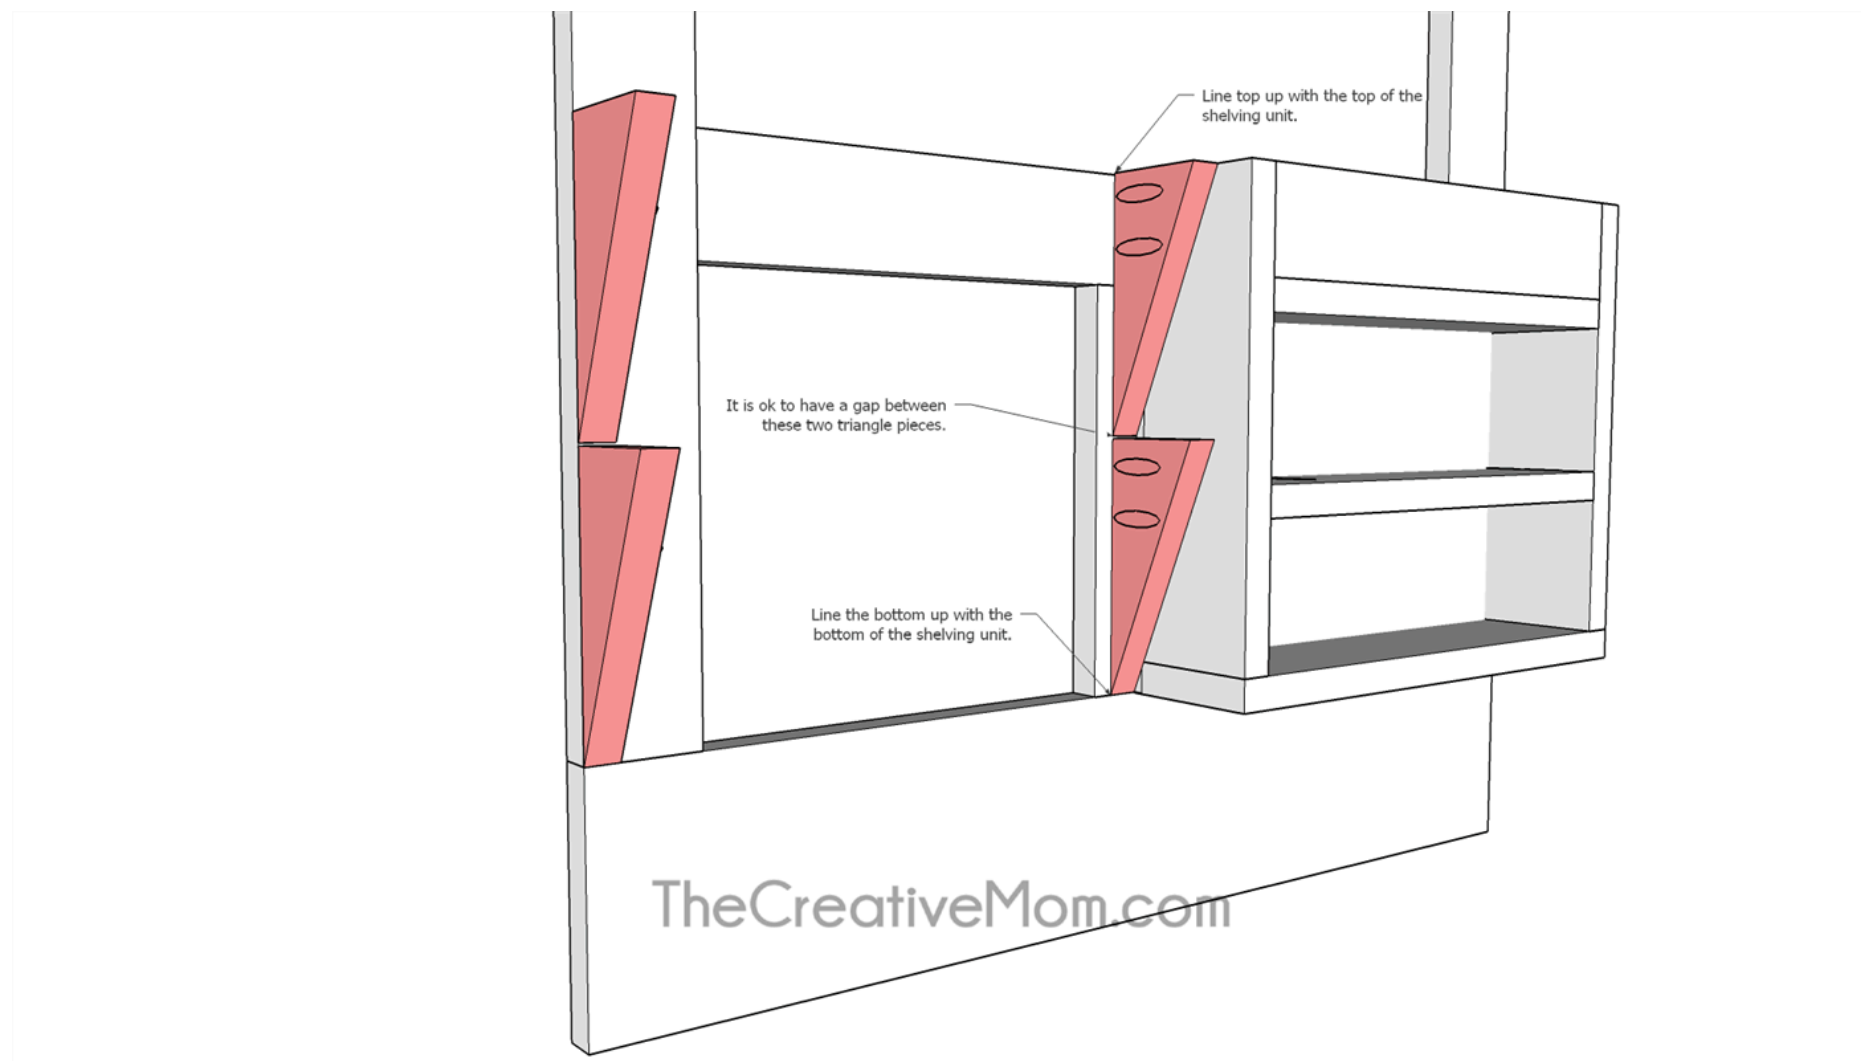

**10****Add File Holder Fronts**

Cut two (14" x 6 1/2") 1/4" plywood pieces.

Using wood glue, attach to the fronts of the triangle supports. You can secure with a brad nail or staple, if you'd like, to add support until the wood glue dries.

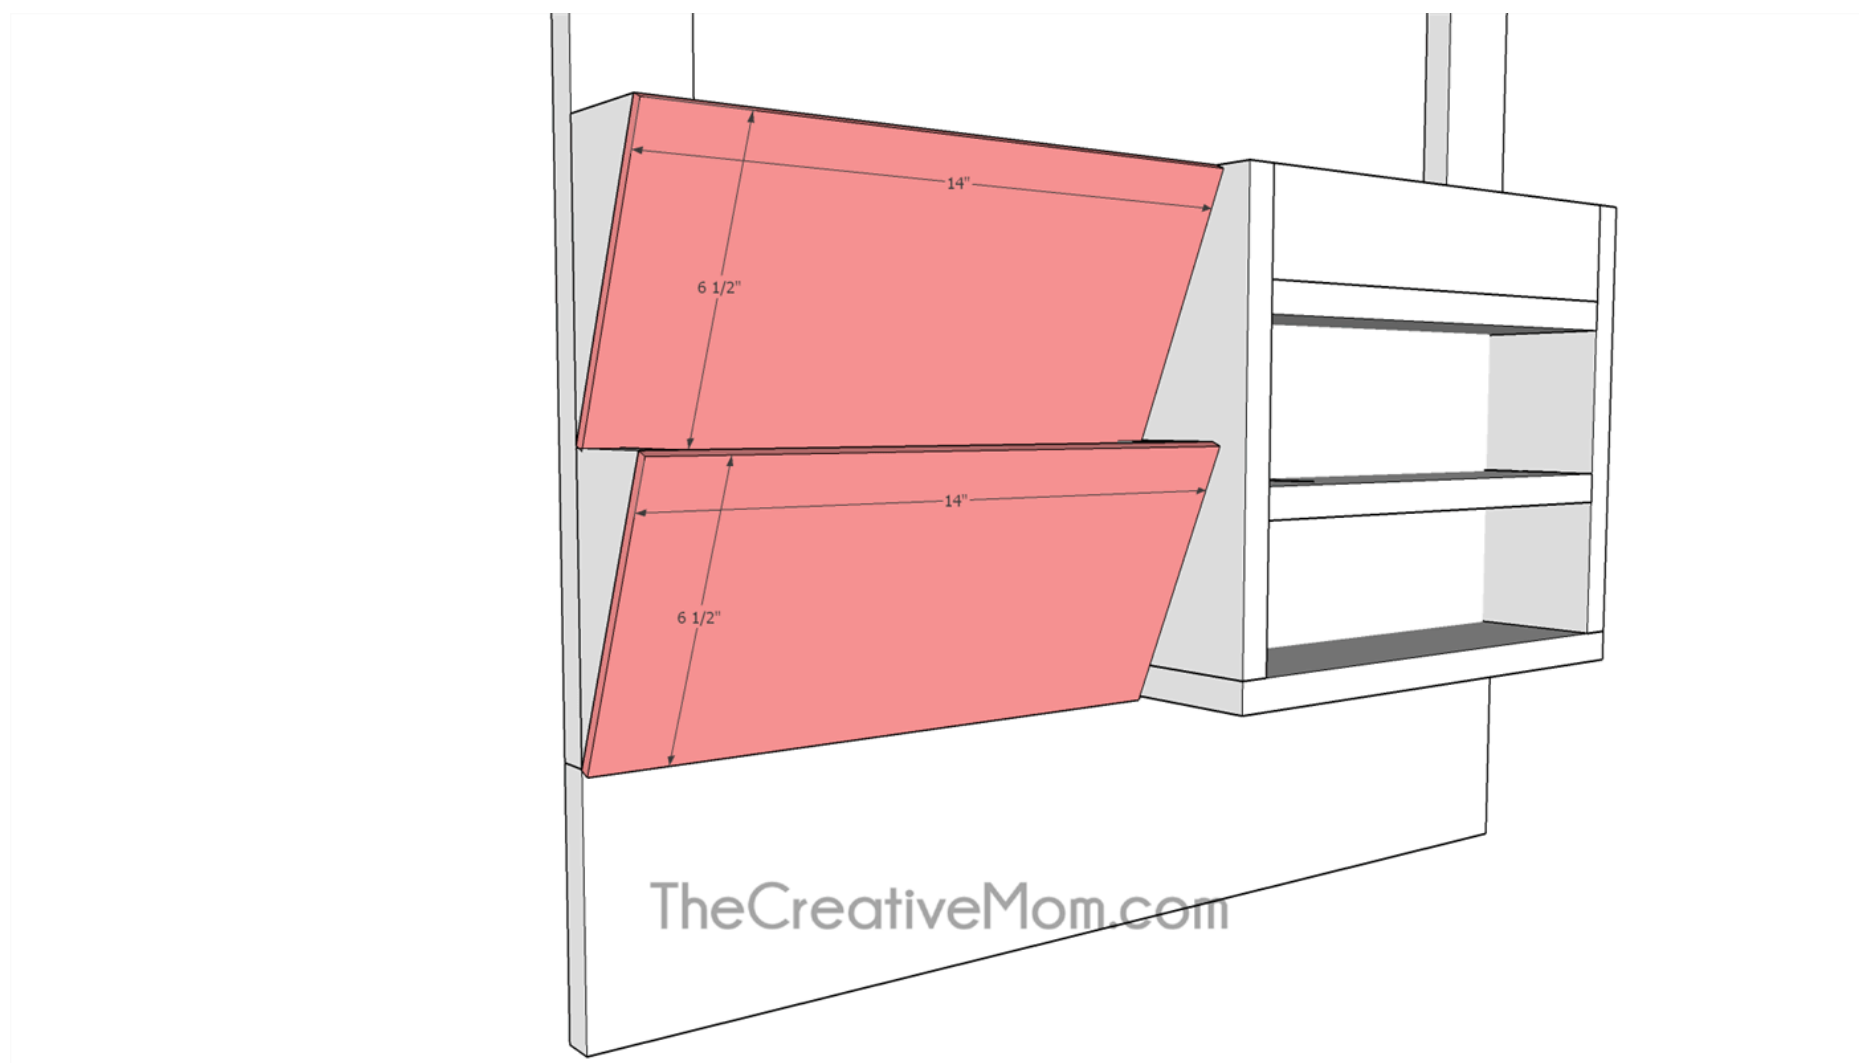


## 11

**Attach Chalkboard**

Cut a piece of chalkboard at 22" x 24". Most home improvement stores sell 1/4" thick chalkboard. Or you can paint a 1/4" plywood sheet with chalkboard paint or chalkboard spray paint.

Attach to the back of the frame with wood glue and either brad nails, staples, or short screws.


(Note: You may find it easier to paint or stain before adding the chalkboard.)

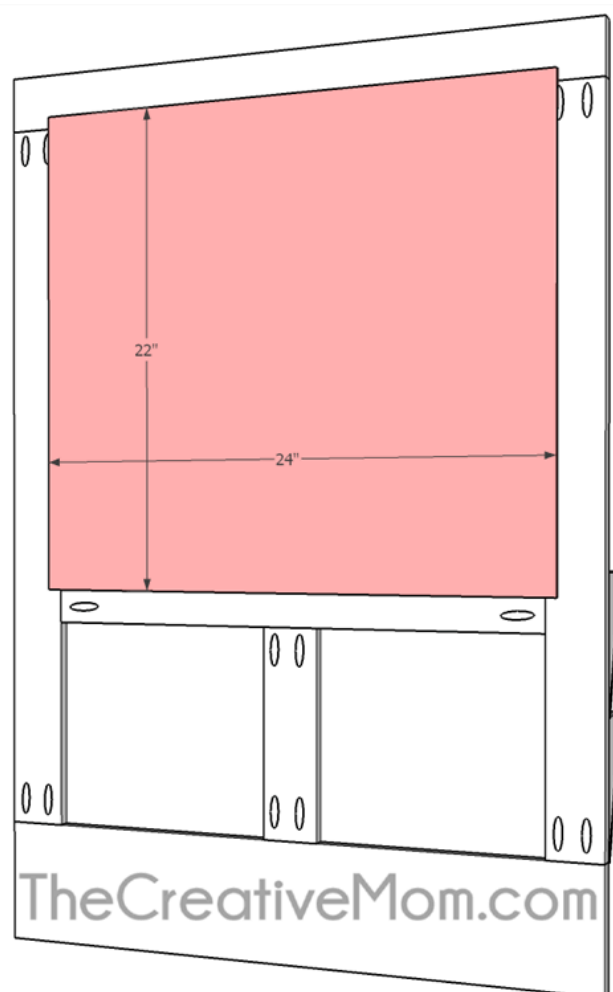

## 12

**Attach backing supports**

Cut two (10 1/4" x 9 1/2") 1/4 plywood pieces. Fit these inside the openings behind your shelving unit and behind the file holders. Where possible, secure with wood glue. Then add a few nails behind the plywood, holding it tight.

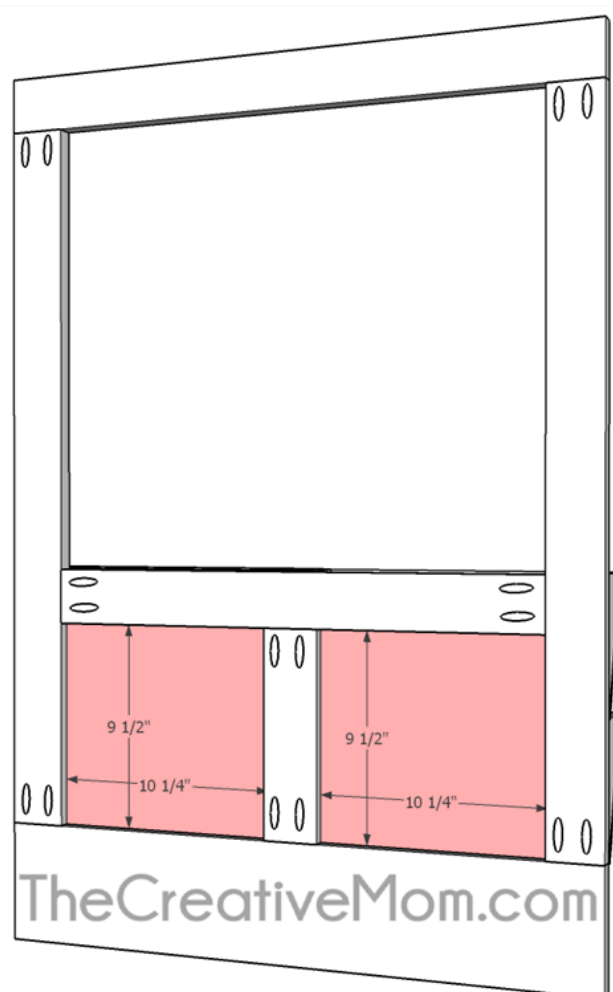



**13****Finish**

Fill pocket holes, sand, then paint or stain. (you can do this step before attaching your chalkboard to make it easier)




# 14

## Add Hooks

Add as many hooks as you'd like to the bottom. I used 7.

If you use 7 hooks, you will mark on center, then every 4 inches out from that mark, leaving the side marks 2 inches from the edges.

The Amazon links for the hooks, as well as the metal label plates are linked in the "extras" section of these plans.

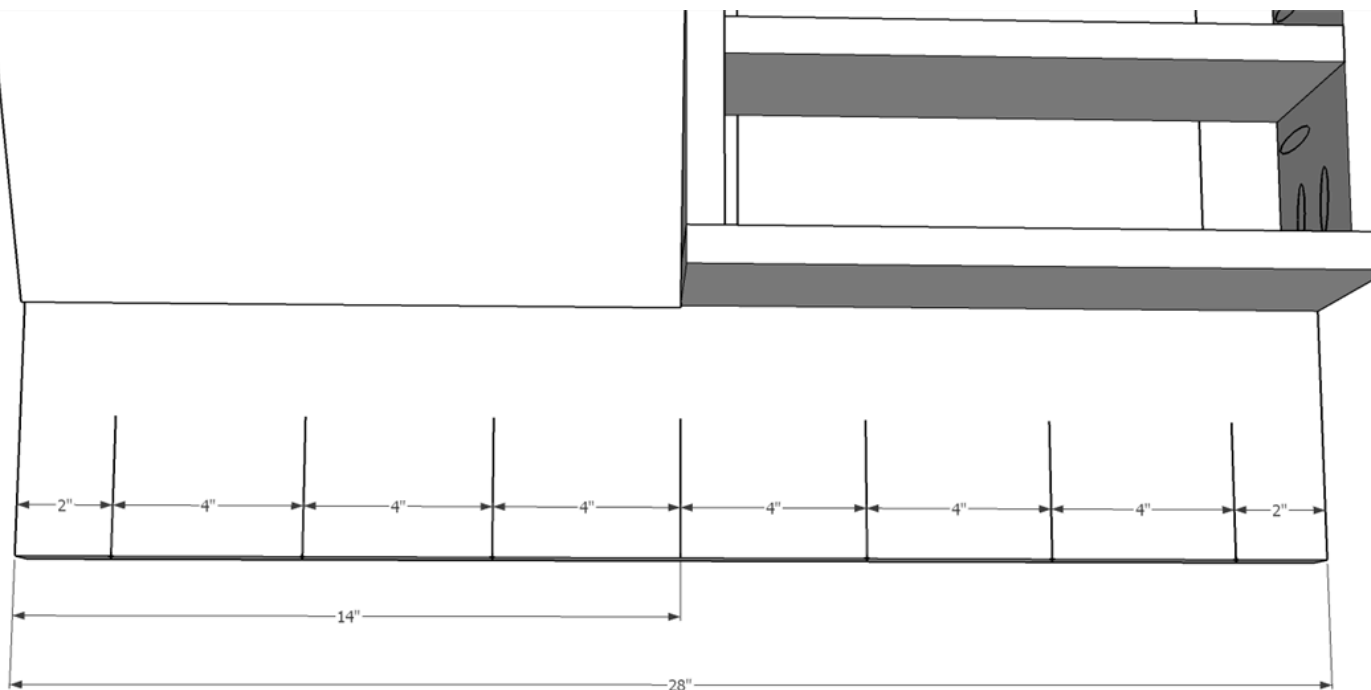

TheCreativeMom.com

## 15

**Hang**

The way you hang your command center depends on where you hang it, and how you intend to use it.

If you intend to hang backpacks, bags, purses, and other heavy items from the command center, make sure to properly secure it to the wall. It is a heavy piece, and can fall if not secured properly.

The best way to hang is to drill a 4 inch wood screw through the top and bottom frame pieces into a stud in the wall- anchored in 4 places.

