

Dining Room Sideboard

By Jaime Costiglio

Difficulty

Moderate

A smaller scale sideboard perfect for your average dining room. Plenty of storage with three drawers and counter space for serving food or drinks.















Tools

Kreg Tools





Other Tools

Miter Saw

Tape Measure

Drill (cordless)

Nail Gun

Sander

Materials

Wood Products

- **2** Board, 2x2, 72"
- **3** Board , 1x2 , 96"
- **1** Board, 1x3, 72"
- **1** Board , 1x8 , 72"
- **1** Board , 1x12 , 96"
- **2** Board , 1x6 , 96"
- 1 Plywood , 1/4" Thick , Quarter Sheet

Hardware & Supplies

- **50** 11/4" Pocket Hole Screws
- 6 11/4" Wood Screws
- 4 2" Wood Screws
- **50** 11/4" Finish Nails
- 1 Wood Glue



Cut List & Parts

- 4 Legs, $2x2 @ 35 \frac{1}{4}$ ", One End Tapered
- 4 Side Top Trim & Top Cross Support, 1x2 @ 7 1/4"
- 4 Side Bottom Trim & Bottom Cross Support , 1x3 @ 7 $\frac{1}{4}$ "
- 2 Sides, 1x8 @ 7 3/8"
- 4 Cross Supports , 1x2 @ 35 5/8"
- 4 Drawer Dividers & Drawer Stops , 1x2 @ 7 3/8"
- **2** Drawer Stops , 1x3 @ 7 3/8"
- 4 Drawer Guides, 1x2 @ 8"
- **1** Top, 1x12 @ 40 1/8"
- 1 Backing, 1/4" Plywood @ 8 7/8" X 38 5/8"
- 6 Drawer Short Sides , 1x6 @ 8 ¾"
- **6** Drawer Front & Back , 1x6 @ 9 5/8"
- **3** Drawer Base , 1/4" Plywood @ 11 1/8" X 8 3/4"
- **3** Drawer Front , 1x12 @ 11 1/4"



Directions

1

Dimensions

40 1/8"w x 11 1/4"d x 36"h








Step 1: Build the side panel as per the diagram. Predrill pocket holes in trim pieces for later attaching to legs. Use wood glue and 1 1/4" pocket hole screws to attach top and bottom trim.


Make 2 mirror copies.

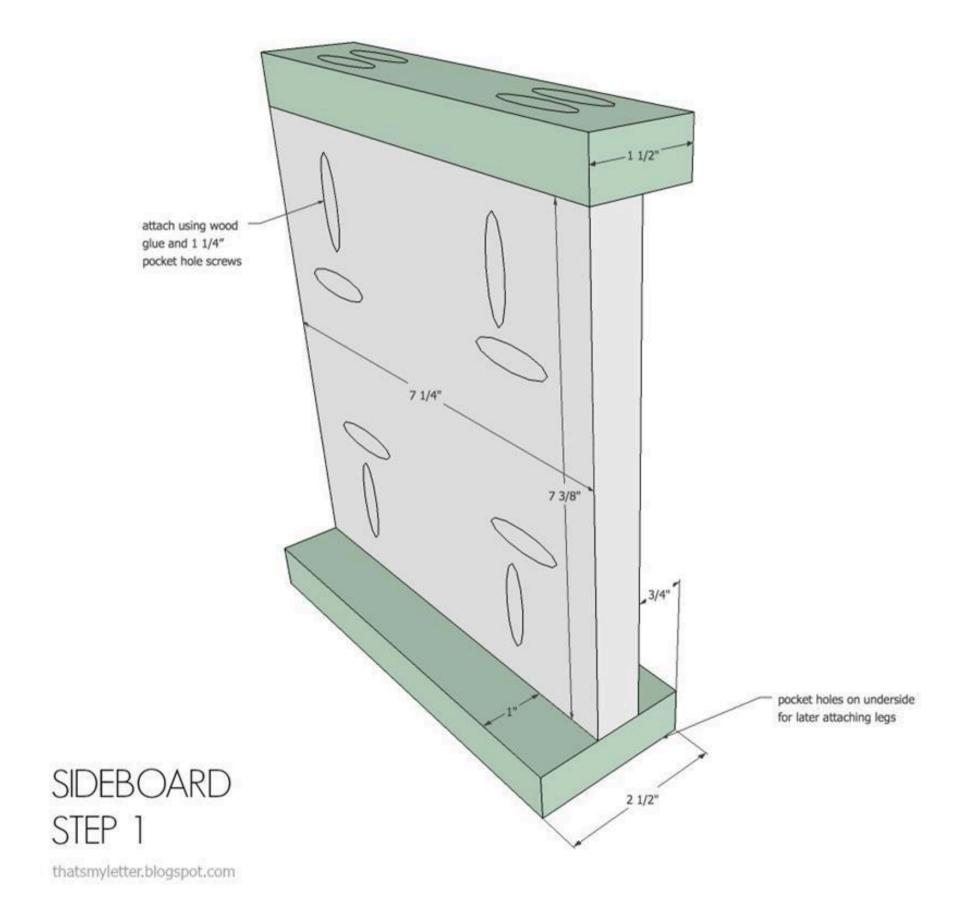






Step 2: Attach the legs using wood glue and 1 1/4" pocket hole screws.

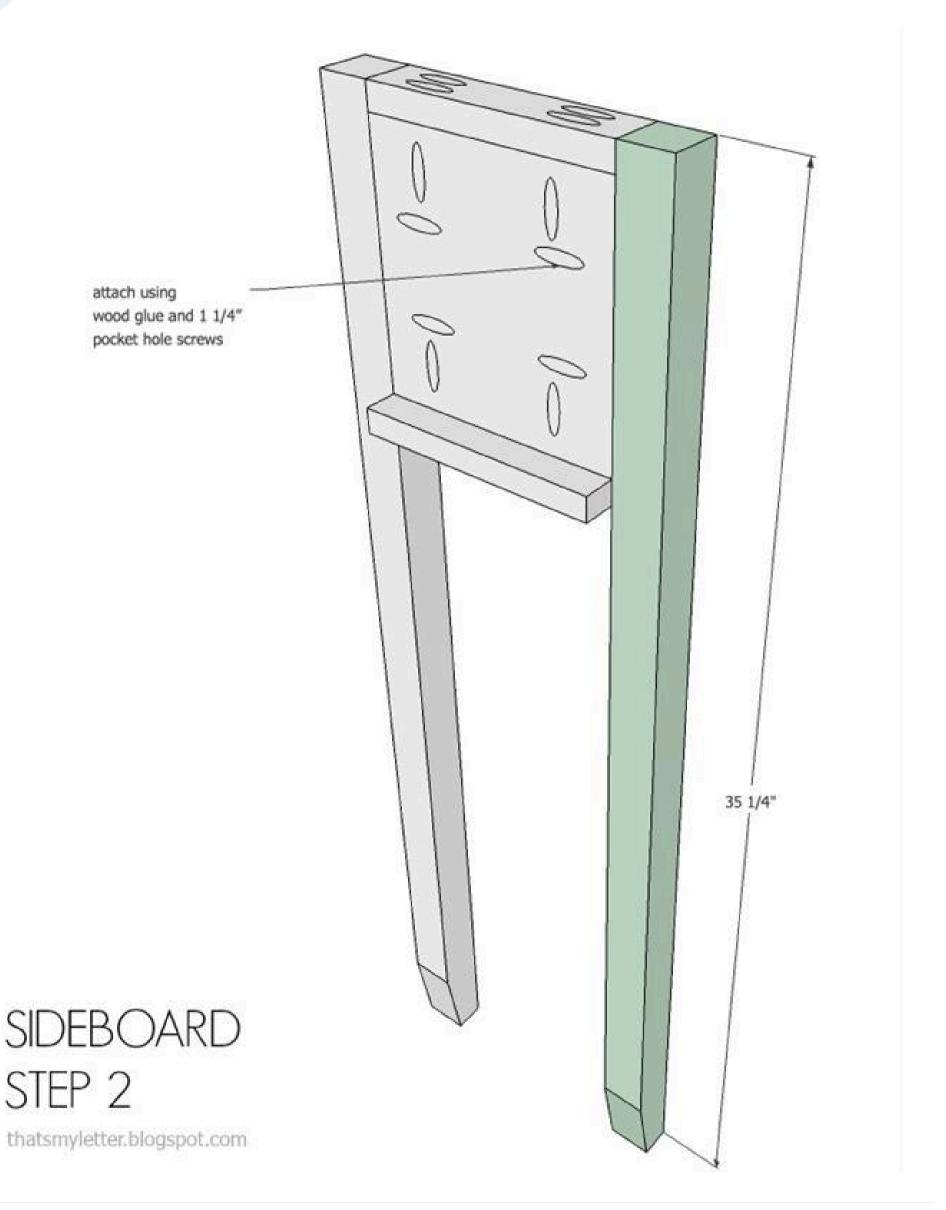






Step 3: Attach cross supports using wood glue and 1 1/4" pocket hole screws.

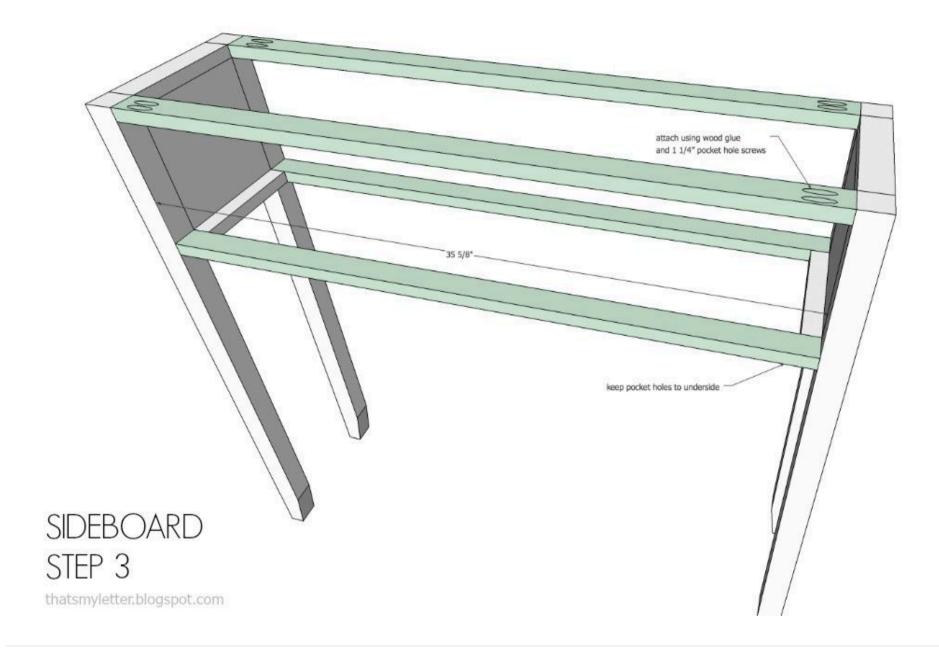





Step 4: Attach drawer dividers using wood glue and countersunk 2" wood screws.

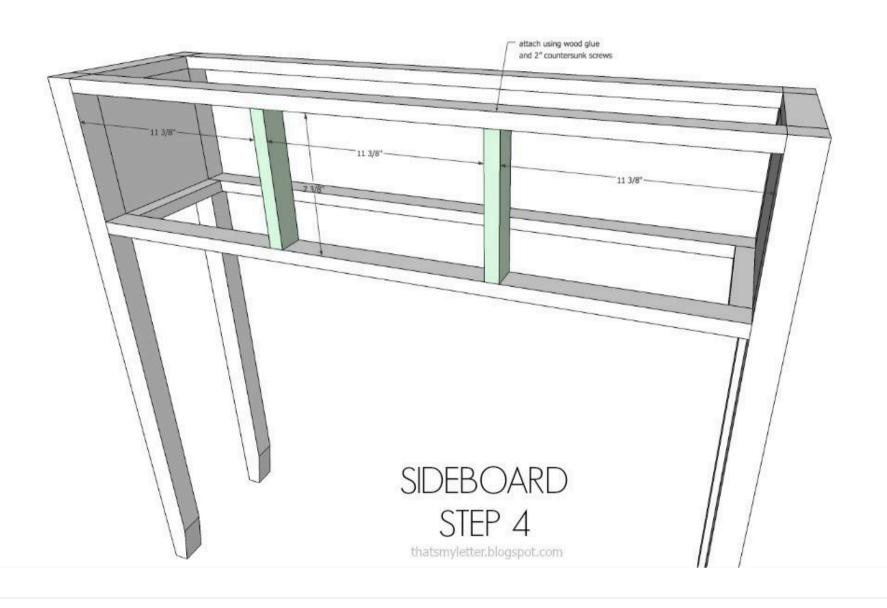






Step 5: Attach back drawer stops using wood glue and 1 1/4" pocket hole screws.

thatsmyletter.blogspot.com

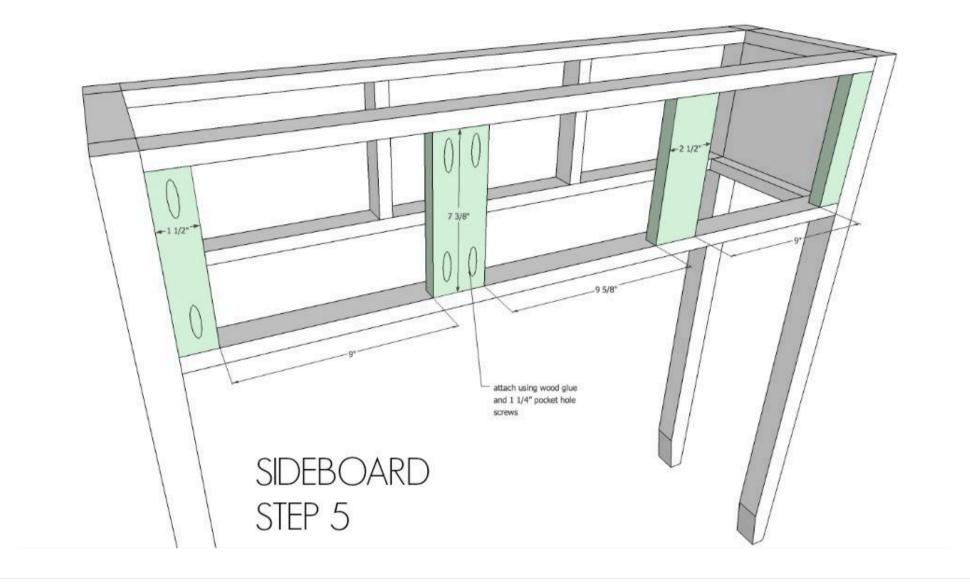






Step 6: Attach top and bottom cross supports using wood glue and 1 1/4" pocket hole screws.

thatsmyletter.blogspot.com

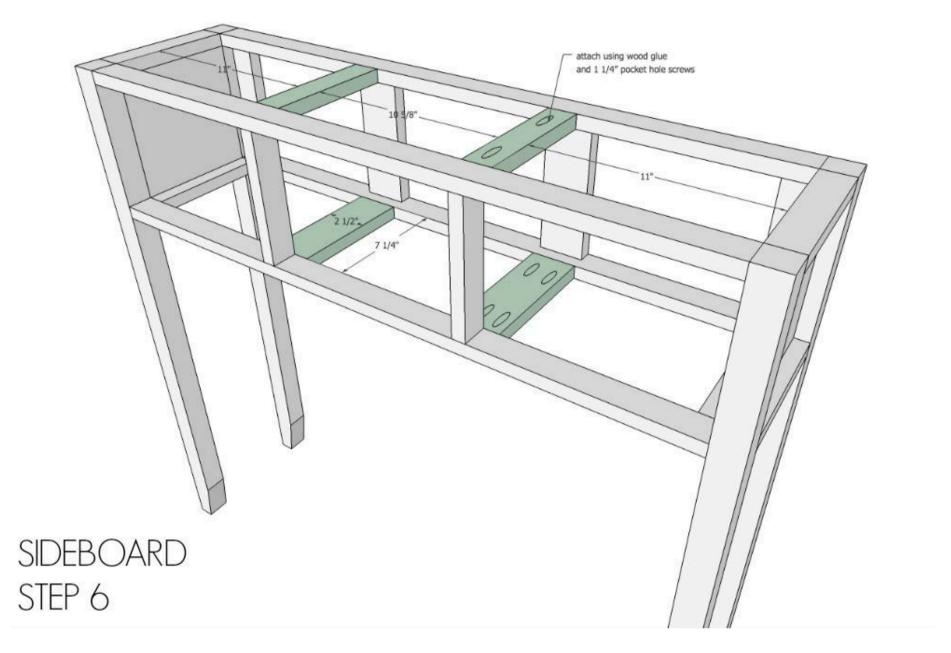






Step 7: Attach drawer guides using wood glue and 1 1/4" pocket hole screws.







Step 8: Attach top to frame using wood glue and 1 1/4" countersunk screws. Keep 3/4" overhang on all sides except back is 1/4".

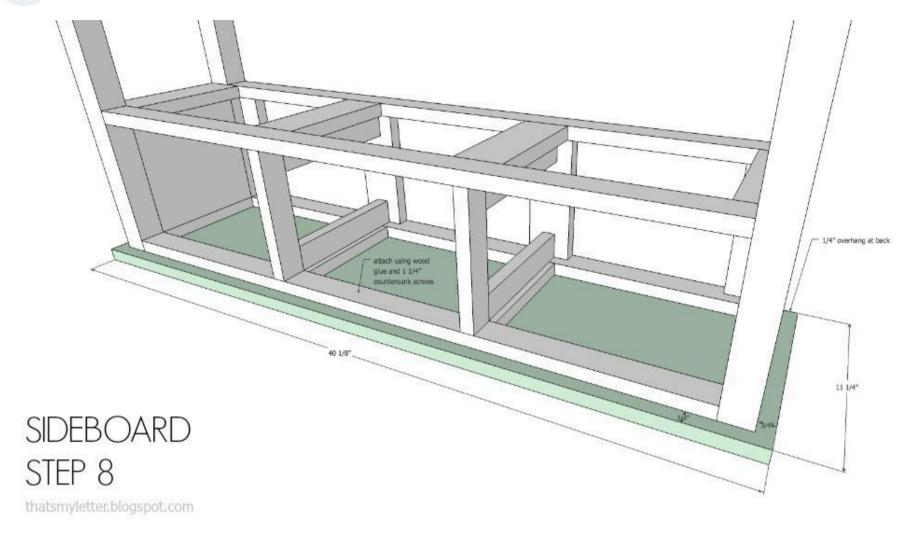






Step 9: Attach backing to frame using wood glue and 1 $\frac{1}{4}$ " finish nails.







Step 10: Make drawer boxes using wood glue and 1 1/4" finish nails. Attach drawer base using wood glue and 1 1/4" finish nails.

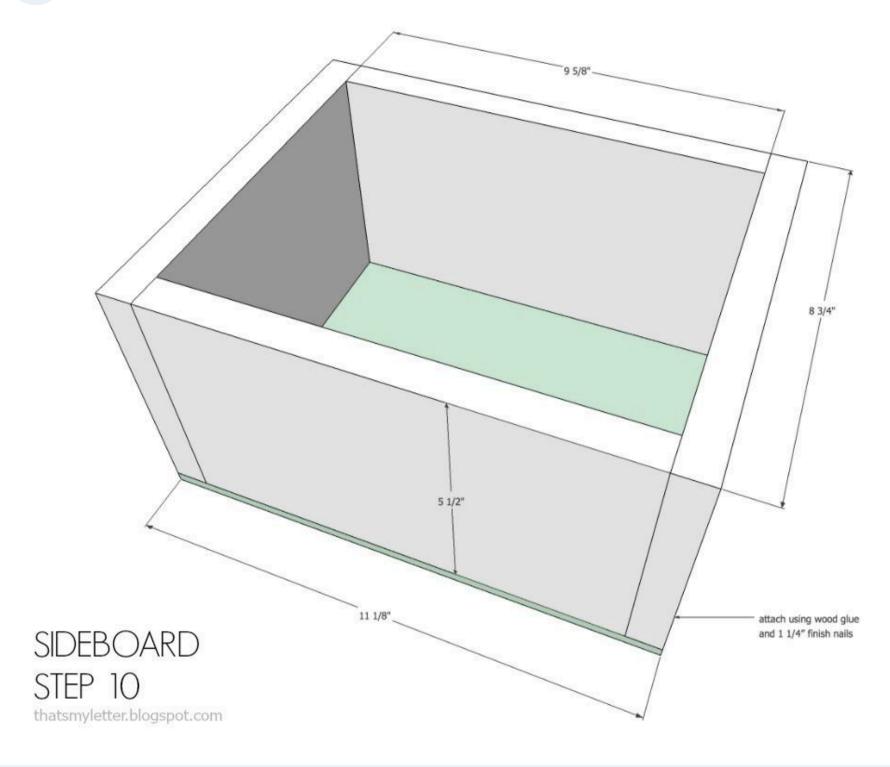





Step 11: Place drawer box in position and center drawer front keeping 1/16" spacing on all sides. Use wood glue and finish nails to attach then pull out drawer and attach from interior using countersunk 1 1/4" wood screws.

