


# DIY Modern Outdoor Chair

By **Cherished Bliss**

Difficulty

Easy

Build these comfy Modern Outdoor Chairs using only 2×4's. This chair sits a little low to the ground making it extremely comfortable to kick your feet out and relax around a fire or enjoy an evening with friends!

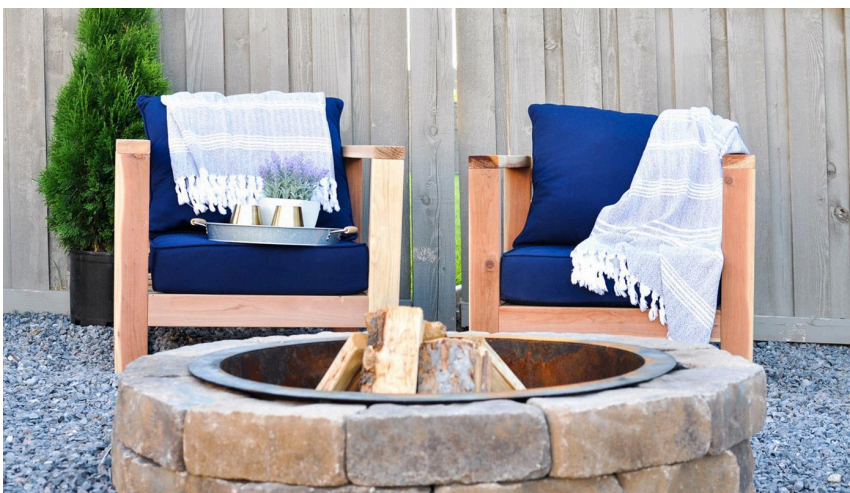

# Tools

## Kreg Tools



[Kreg® Pocket-Hole Jig 720](#)

## Other Tools

Miter Saw

Square

Table Saw

Drill (cordless)

Impact Driver

Sander

# Materials

## Wood Products

**4** Redwood Board , 2x4 , 144"

## Hardware & Supplies

**2** Boxes Kreg HD Screws (125 Ct)

**1** Box 2 1/2" Outdoor Wood Screws

# Cut List & Parts


- 4    Seat Back Supports , 2"x4"x24"
- 4    Seat Supports , 2"x4"x24"
- 2    Arm Boards , 2"x4"x 25 3/4"
- 4    Arm Boards , 2"x4"x24 1/4"
- 2    Arm Boards , 2"x4"x22 3/4"
- 2    Seat Board Supports , 1 1/2"x1 3/4"x22 3/4"
- 2    Side Supports , 2"x4"x22 3/4"

# Directions

1

## Build Arms (2)


Cut the boards for the arms according to the image. Drill Kreg HD Pocket Holes and assemble the pieces as shown using Kreg HD Screws.

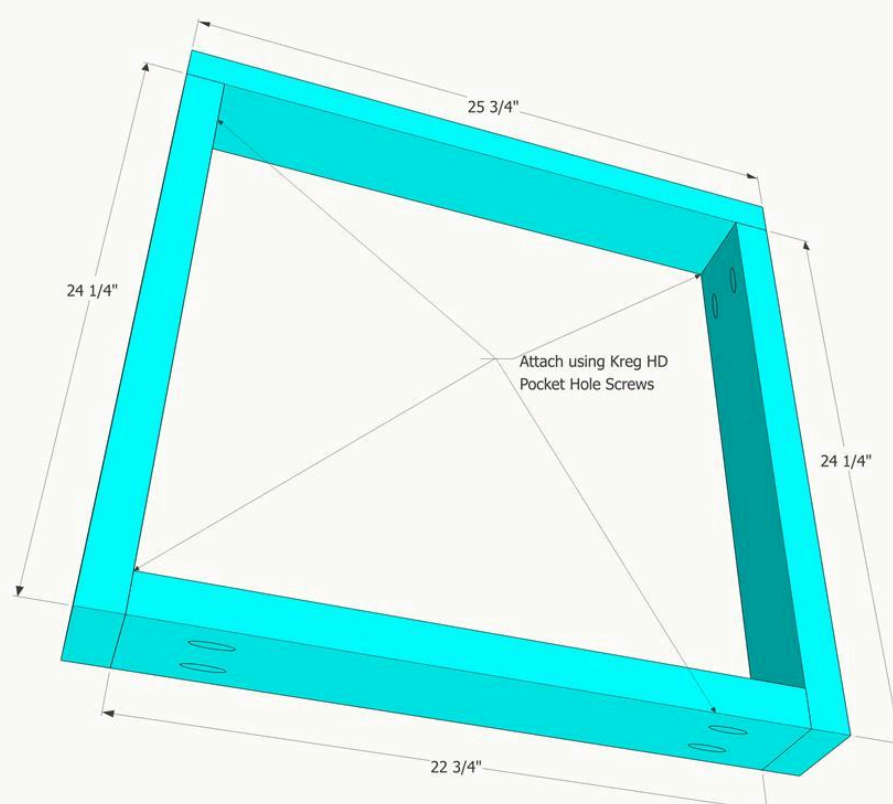

2

## Attach Back Supports


Attach the back supports to the two arms as shown in the diagram using Kreg HD Pocket Holes and Kreg HD Pocket Hole Screws.

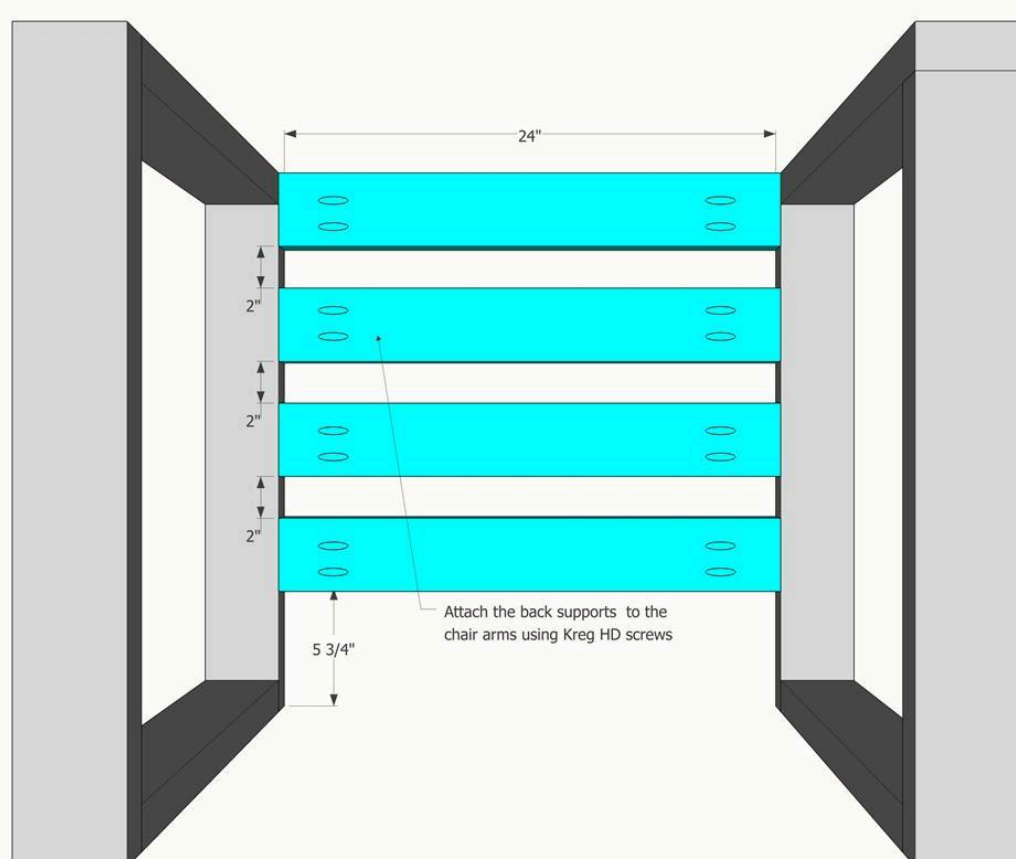

3

### Attach the Seat Facing


Attach the seat facing to the arms as shown using Kreg HD Pocket Holes and Kreg HD Screws.

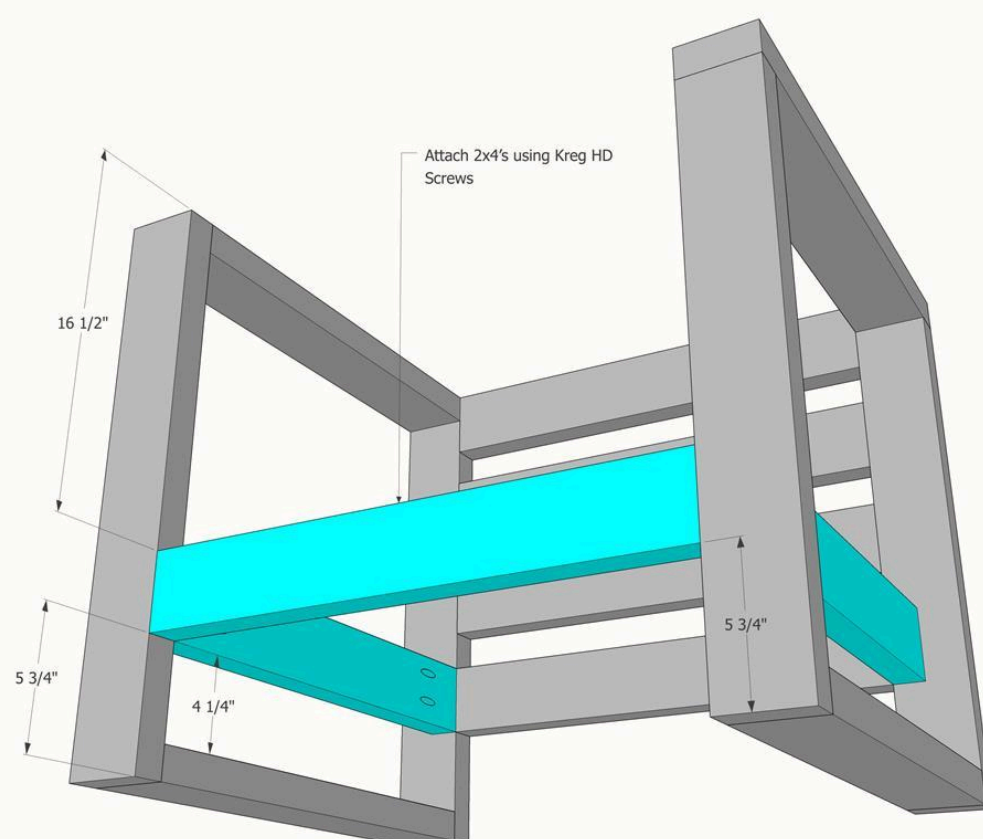

4

### Cut and Attach Side Rails

In order to get the two side rail supports ( $1\frac{1}{2}'' \times 1\frac{3}{4}'' \times 22\frac{3}{4}''$ ) use a table saw to rip a 2x4 cut to  $22\frac{3}{4}''$  in half. Attach as shown using  $2\frac{1}{2}''$  outdoor wood screws.

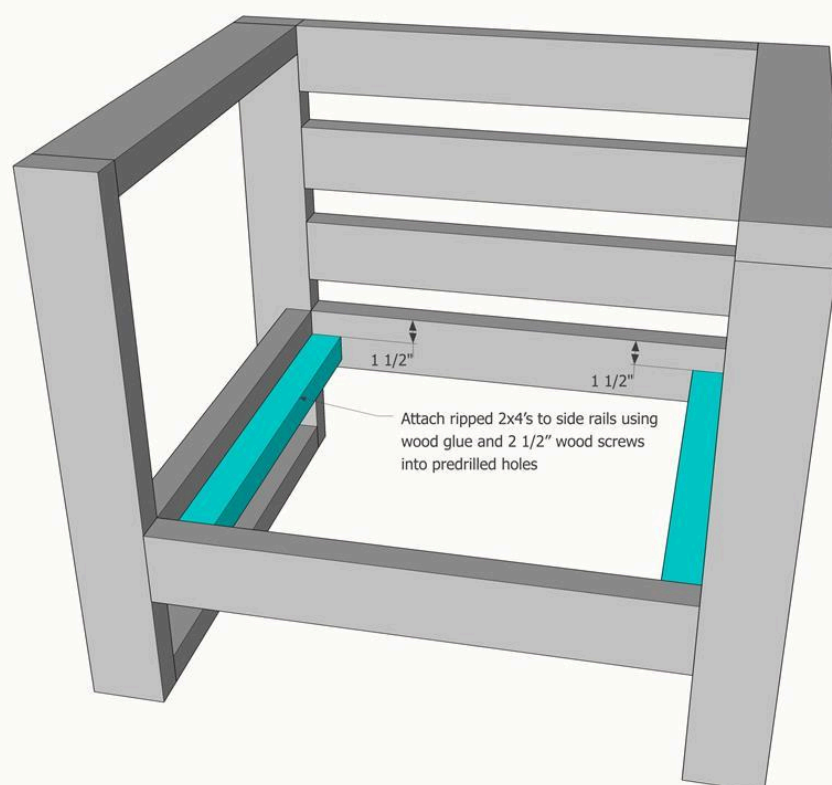



## 5

**Attach Seat Supports**

Attach the seat supports to the side rails using 2 1/2" wood screws as shown.

