


# DIY Retro Side Table

### By **DIY Huntress**

### Difficulty

### Moderate


Retro Mid Century Modern Decor is coming back in style. Get ahead of the old-times and build your own stylish retro side table with a storage drawer! A great, easy build for anyone who wants great style on a tight budget!

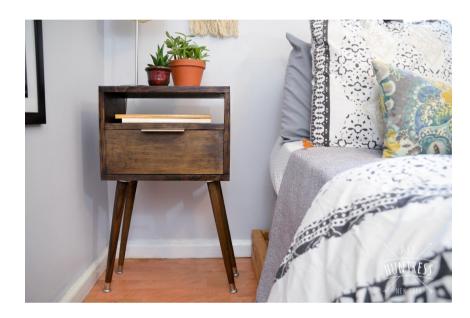



Page 1 of 11



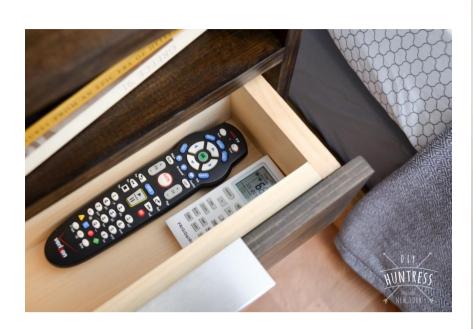



### Page 2 of 11



### Tools

Kreg Tools

Wood Project Clamp - 6"



#### Other Tools

Miter Saw

Drill (cordless)

Sander

### Materials

### Wood Products

- 1 Board , 1x10 , 72"
- 1 Board , 1x6 , 96"

#### Hardware & Supplies


- **50** 11/4" Kreg Pocket Hole Screws
- **10** 11/4" Brad Nails (Optional)
- 1 6" Set Drawer Slides
- 1 Drawer Pull
- 1 Wood Filler
- 1 Wood Stain & Sealer
- 4 Tapered Table Legs (Link For Product On Blog)
- 4 Angled Plates For Legs (Link For Product On Blog)

Page 3 of 11



## Cut List & Parts

- 1 Top Piece , 1 X 10 X 16"
- 1 Bottom Piece , 1 X 10 X 16"
- 2 Side Pieces , 1 X 10 X 10"
- 1 Shelf, 1 X 10 X 14 1/2"
- 1 Back Panel , 1 X 6 X 14 1/2"
- 2 Drawer Sides , 1 X 4 1/2 X 6"
- 2 Drawer Sides , 1 X 4 1/2 X 11 3/4"
- 1 Drawer Bottom , 1 X 4 1/2 X 11 3/4
- 1 Drawer Front , 1 X 6 X 14 1/2"

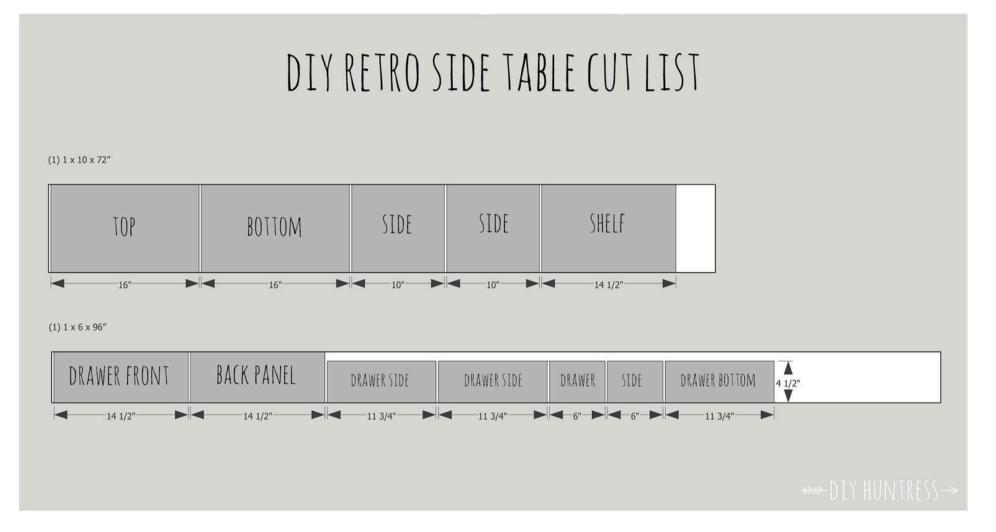

Page 4 of 11



## Directions

1

### **Check Dimensions & Cut List**

Prior to starting this project, check the dimensions and cut list.




Page 5 of 11



### 2 Assemble The Frame Once your frame pieces are d

Once your frame pieces are cut, attach the top & bottom panels to the side panels using wood glue and 11/4" pocket hole

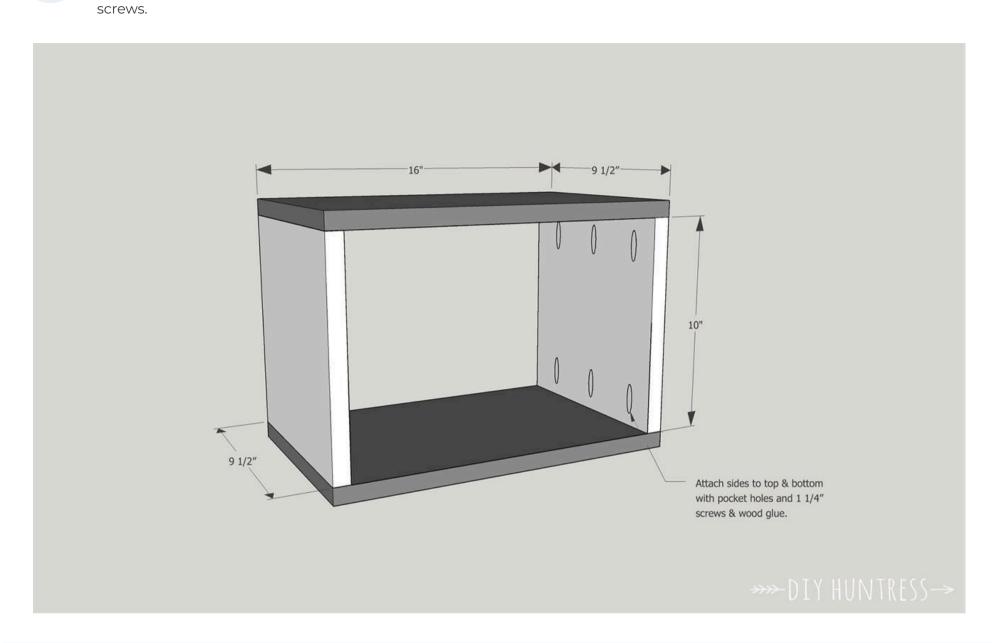


Page 6 of 11



### Add The Shelf

3

Add the shelf to the frame by using wood glue and pocket hole screws. You will need a compact drill here in order to get the screws in. If you do not have a compact drill, you can also use brad nails and wood glue to attach the shelf from the sides. Make sure to attach the frame 5 1/2" up to make room for the drawer.

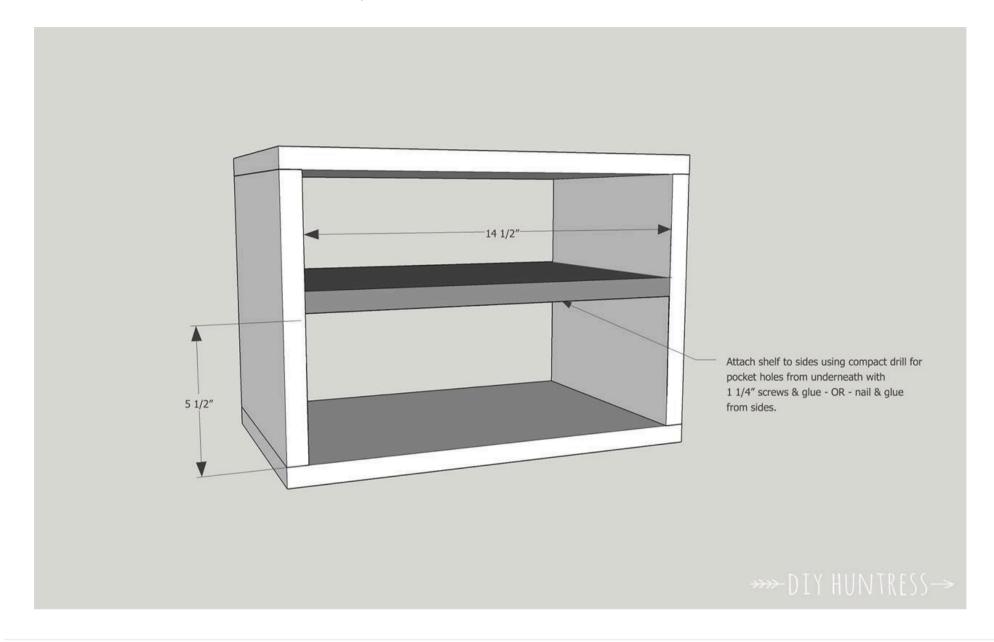


Page 7 of 11



### Attach Back Panel

Attach the back panel of the table to the frame underneath the shelf. You can attach this piece with pocket holes in the back. Use wood glue and 1 1/4" screws to adhere.

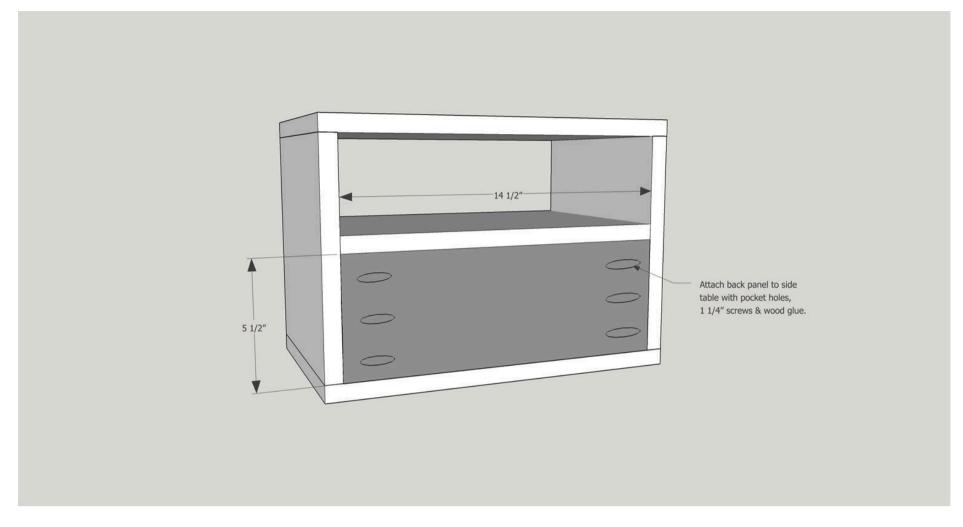


4

Page 8 of 11



### **Build The Drawer**

Assemble the drawer by attaching the sides with pocket holes & screws. Make sure to place the pocket holes in the back and front panels (they will be hidden by the drawer face and back panel). Next, attach the bottom panel of the drawer flush, inside the drawer frame with brad nails and wood glue. Lastly, attach the drawer front with brad nails or screws. You may have to sand and/or trim the panel in order to get it to fit without rubbing.

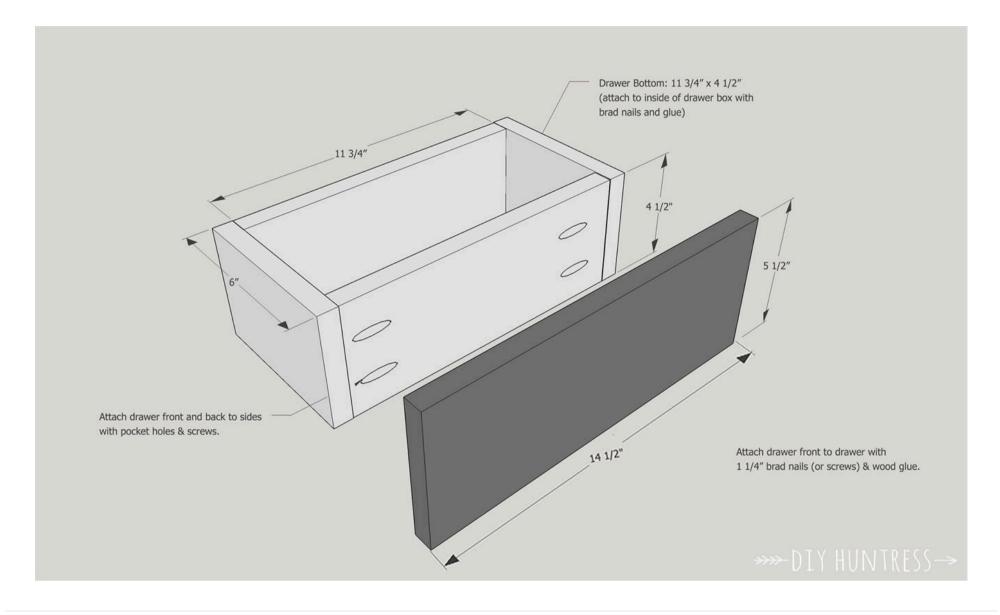


5

Page 9 of 11



### Install The Drawer

Install the drawer by adding 6" long drawer slides to the frame. Follow the directions provided with your drawer slides for installation.

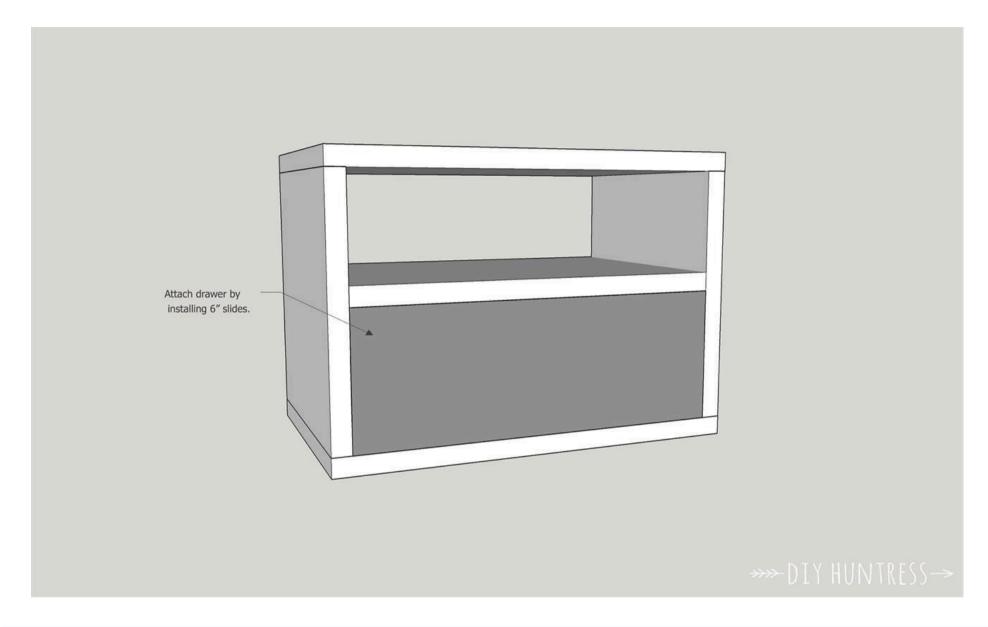

6

Page 10 of 11



### Finish It Up

7

Fill all pocket holes and sand down the table. Once sanded, stain the piece and add hardware and legs (you can find links for the products I used on my blog).



Page 11 of 11