


Long Rustic Modern Buffet Table

Difficulty
Advanced

A simple build that can be made with off-the-shelf lumber. At over 8 feet long, with 3 drawers and a lower shelf, this buffet /sideboard has plenty of storage and display space. A functional piece in the kitchen, dining, or living room.

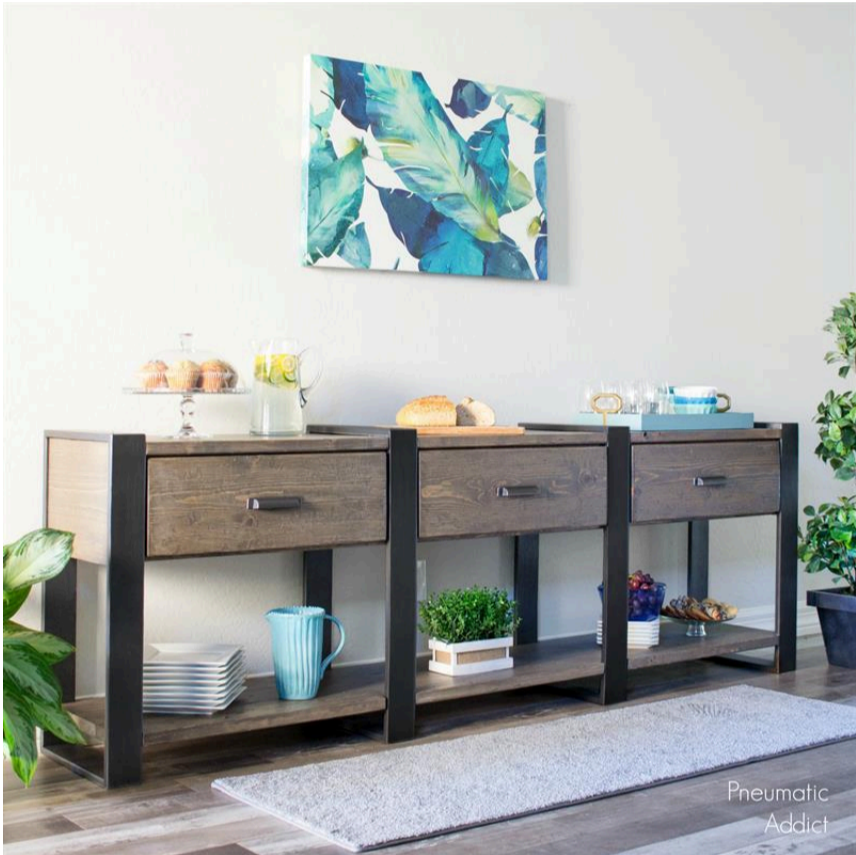



Tools

Kreg Tools

- Wood Project Clamp - 6"
[Wood Project Clamp - 6"](#)
- Kreg® Pocket-Hole Jig 720
[Kreg® Pocket-Hole Jig 720](#)
- Cabinet Hardware Jig
[Cabinet Hardware Jig](#)
- Drawer Slide Jig
[Drawer Slide Jig](#)

Other Tools

- Circular Saw (cordless)
- Miter Saw
- Square
- Tape Measure
- Drill (cordless)
- Hammer
- Nail Gun
- Sander
- Workbench

Materials

Wood Products

- 6 Board , 2x6 , 96"
- 1 Board , 2x2 , 96"
- 4 Board , 1x4 , 96"
- 1 Board , 1x12 , 48"
- 1 Board , 1x10 , 96"
- 3 Board , 1x3 , 96"
- 3 Board , 1x2 , 96"
- 1 Plywood , 1/4" Thick , Full Sheet

Hardware & Supplies

- 50 2-1/2" Pocket Hole Screws
- 50 2" Pocket Hole Screws
- 50 1-1/4" Pocket Hole Screws
- 12 3/4" Wood Screws
- 3 14" Drawer Slides
- 3 Drawer Knobs Or Pulls
- 200 1-1/4" 18-gauge Brads

Cut List & Parts


- 6 Table Top And Shelf Boards , 2 X 6 X 96"
- 8 Table Leg Sides , 1 X 4 X 32-1/4"
- 8 Table Leg Top & Bottom , 1 X 4 X 15"
- 2 End Boards , 1 X 12 X 15"
- 2 Drawer Frame Top & Bottom , 1 X 2 X 95-1/2"
- 6 Drawer Frame Sides , 1 X 2 X 6-3/4"
- 1 Plywood Back Panel , 1/4" X 9-3/4" X 95-1/2"
- 6 Slide Supports , 2 X 2 X 13-3/4"
- 3 Drawer Fronts , Approx. 1 X 10 X 27-3/4"

Directions

1**Make Table Top and Shelf**

Create the table top and lower shelf. Join three, 2 x 6 boards together, using glue and 2-1/2" screw through pocket holes.

Once the glue is fully dried, trim the edges square. The finished dimensions should be approximately 16-1/2" x 95-1/2".

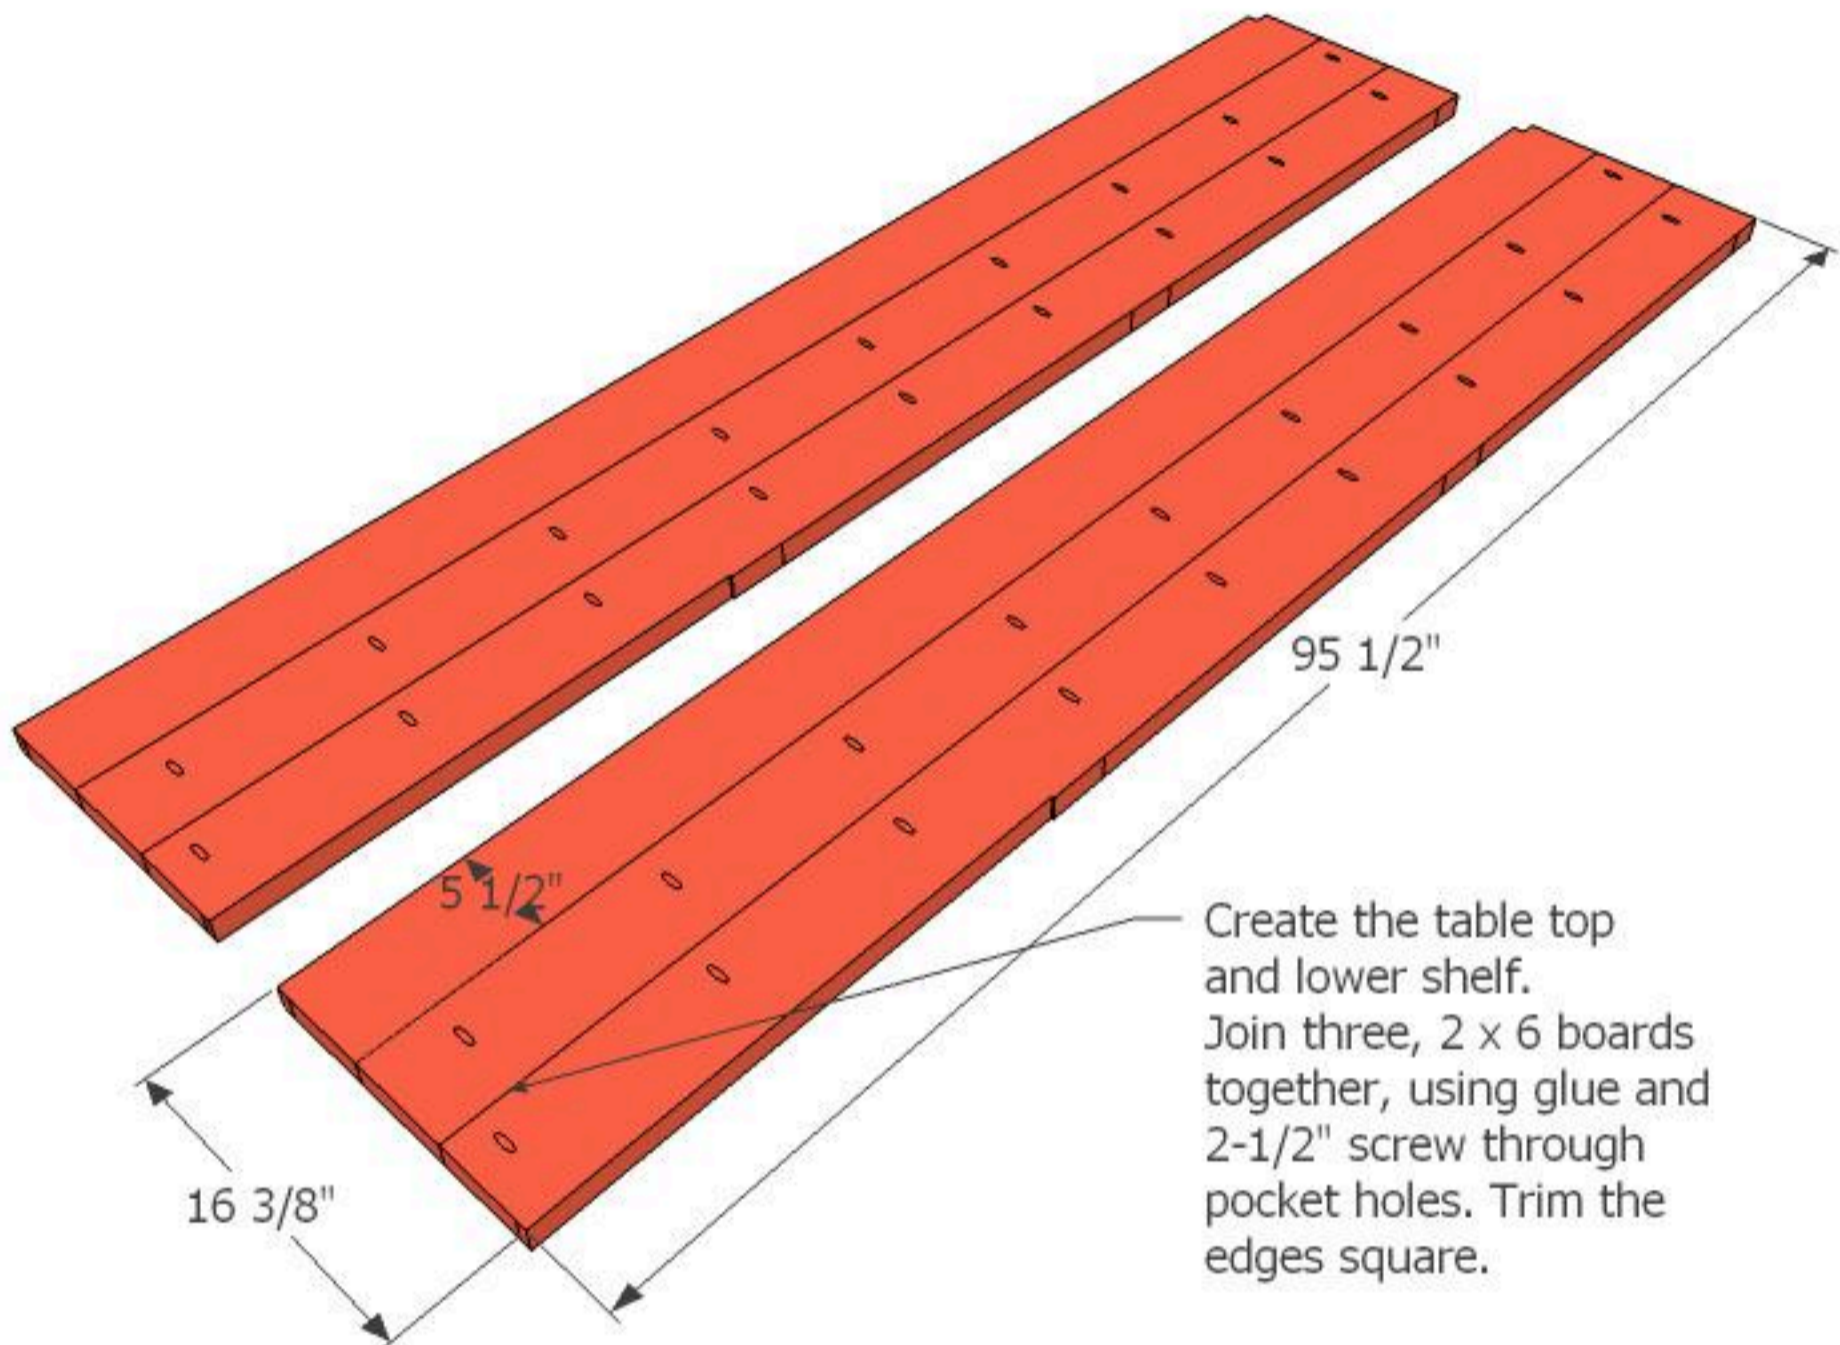


Pneumatic
Addict

2

Notch Table Top and Shelf

Following the diagram, create 3/4" deep notches on both sides of table top and lower shelf. You can use a jigsaw or circular saw. There should be 28" lengths between the center notches.

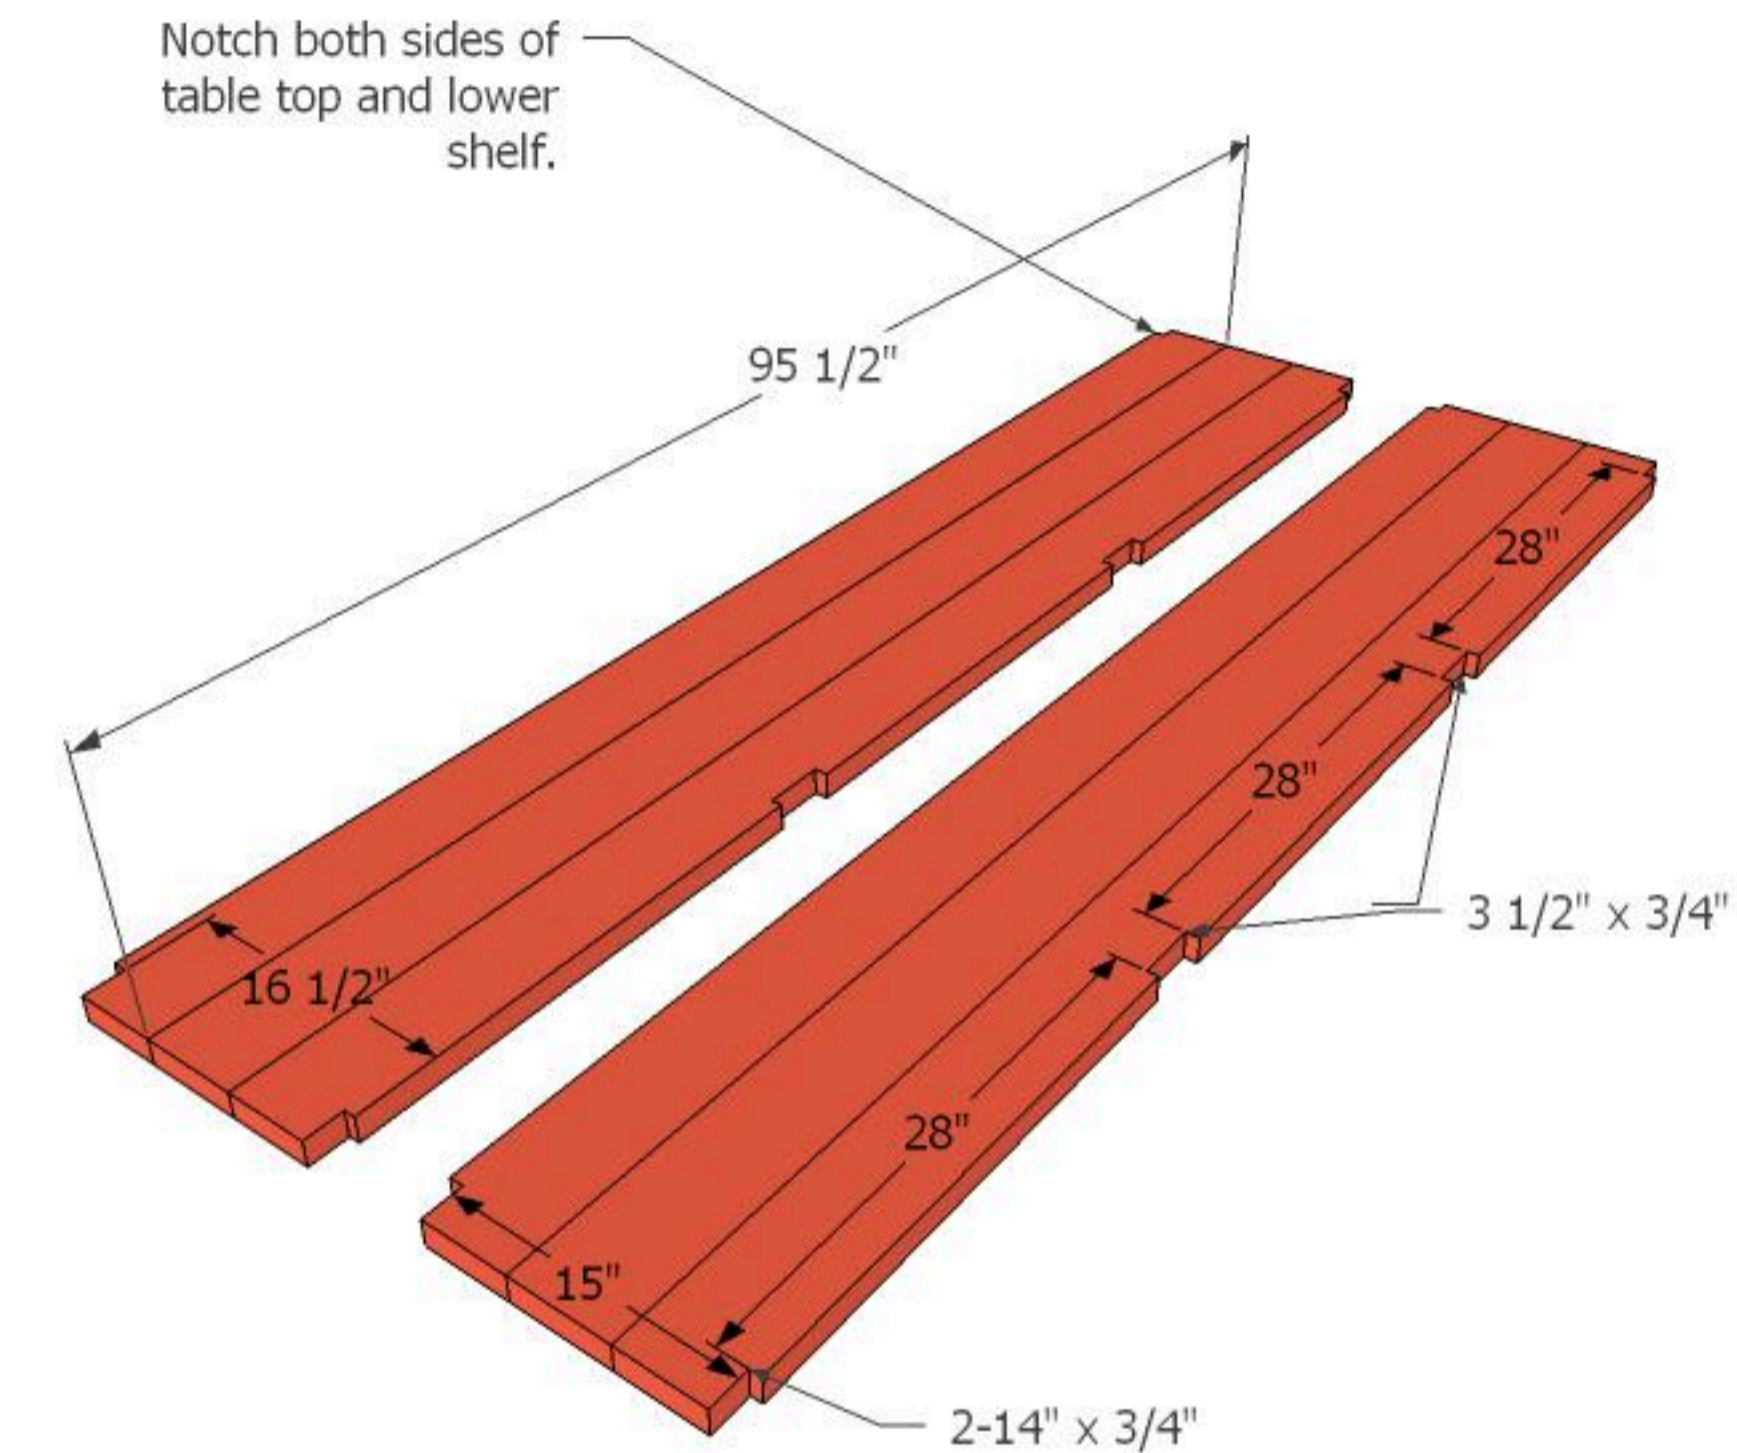


Pneumatic
Addict

3


Build Legs

Create four, 16-1/2" x 31-3/4" rectangular box legs. Join top and bottom plates to sides through pocket holes, using glue and 1-1/2" screws.

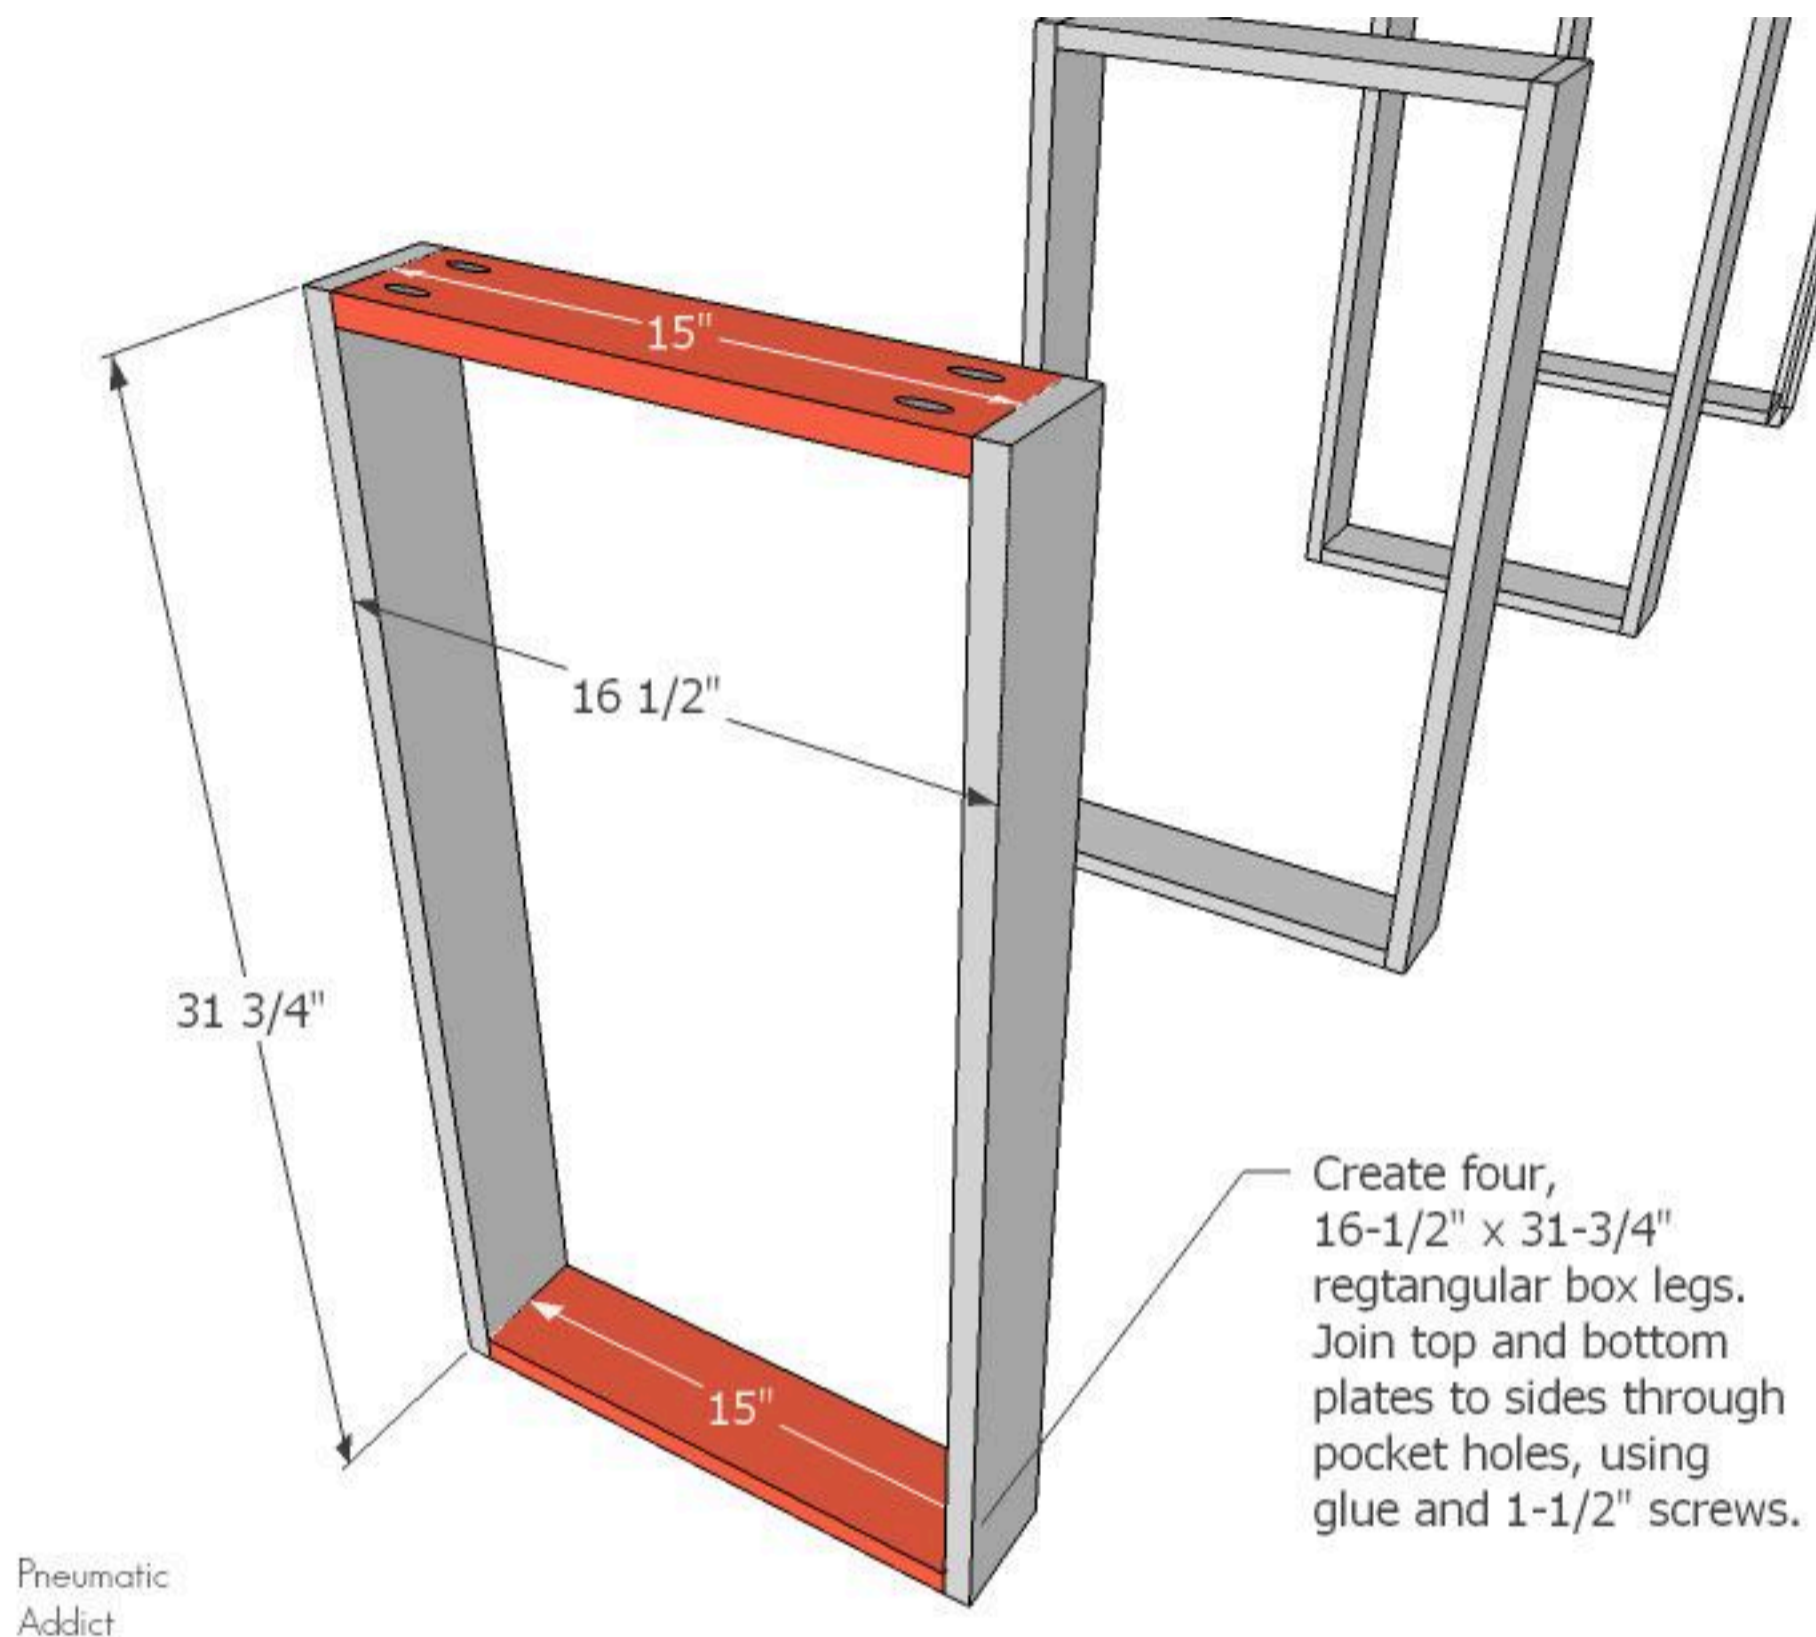

4**Attach Top to Legs**

Align table top flush to the underside of the legs. Attach using glue and 2" screws through pocket holes and pre-drilled, vertical holes.

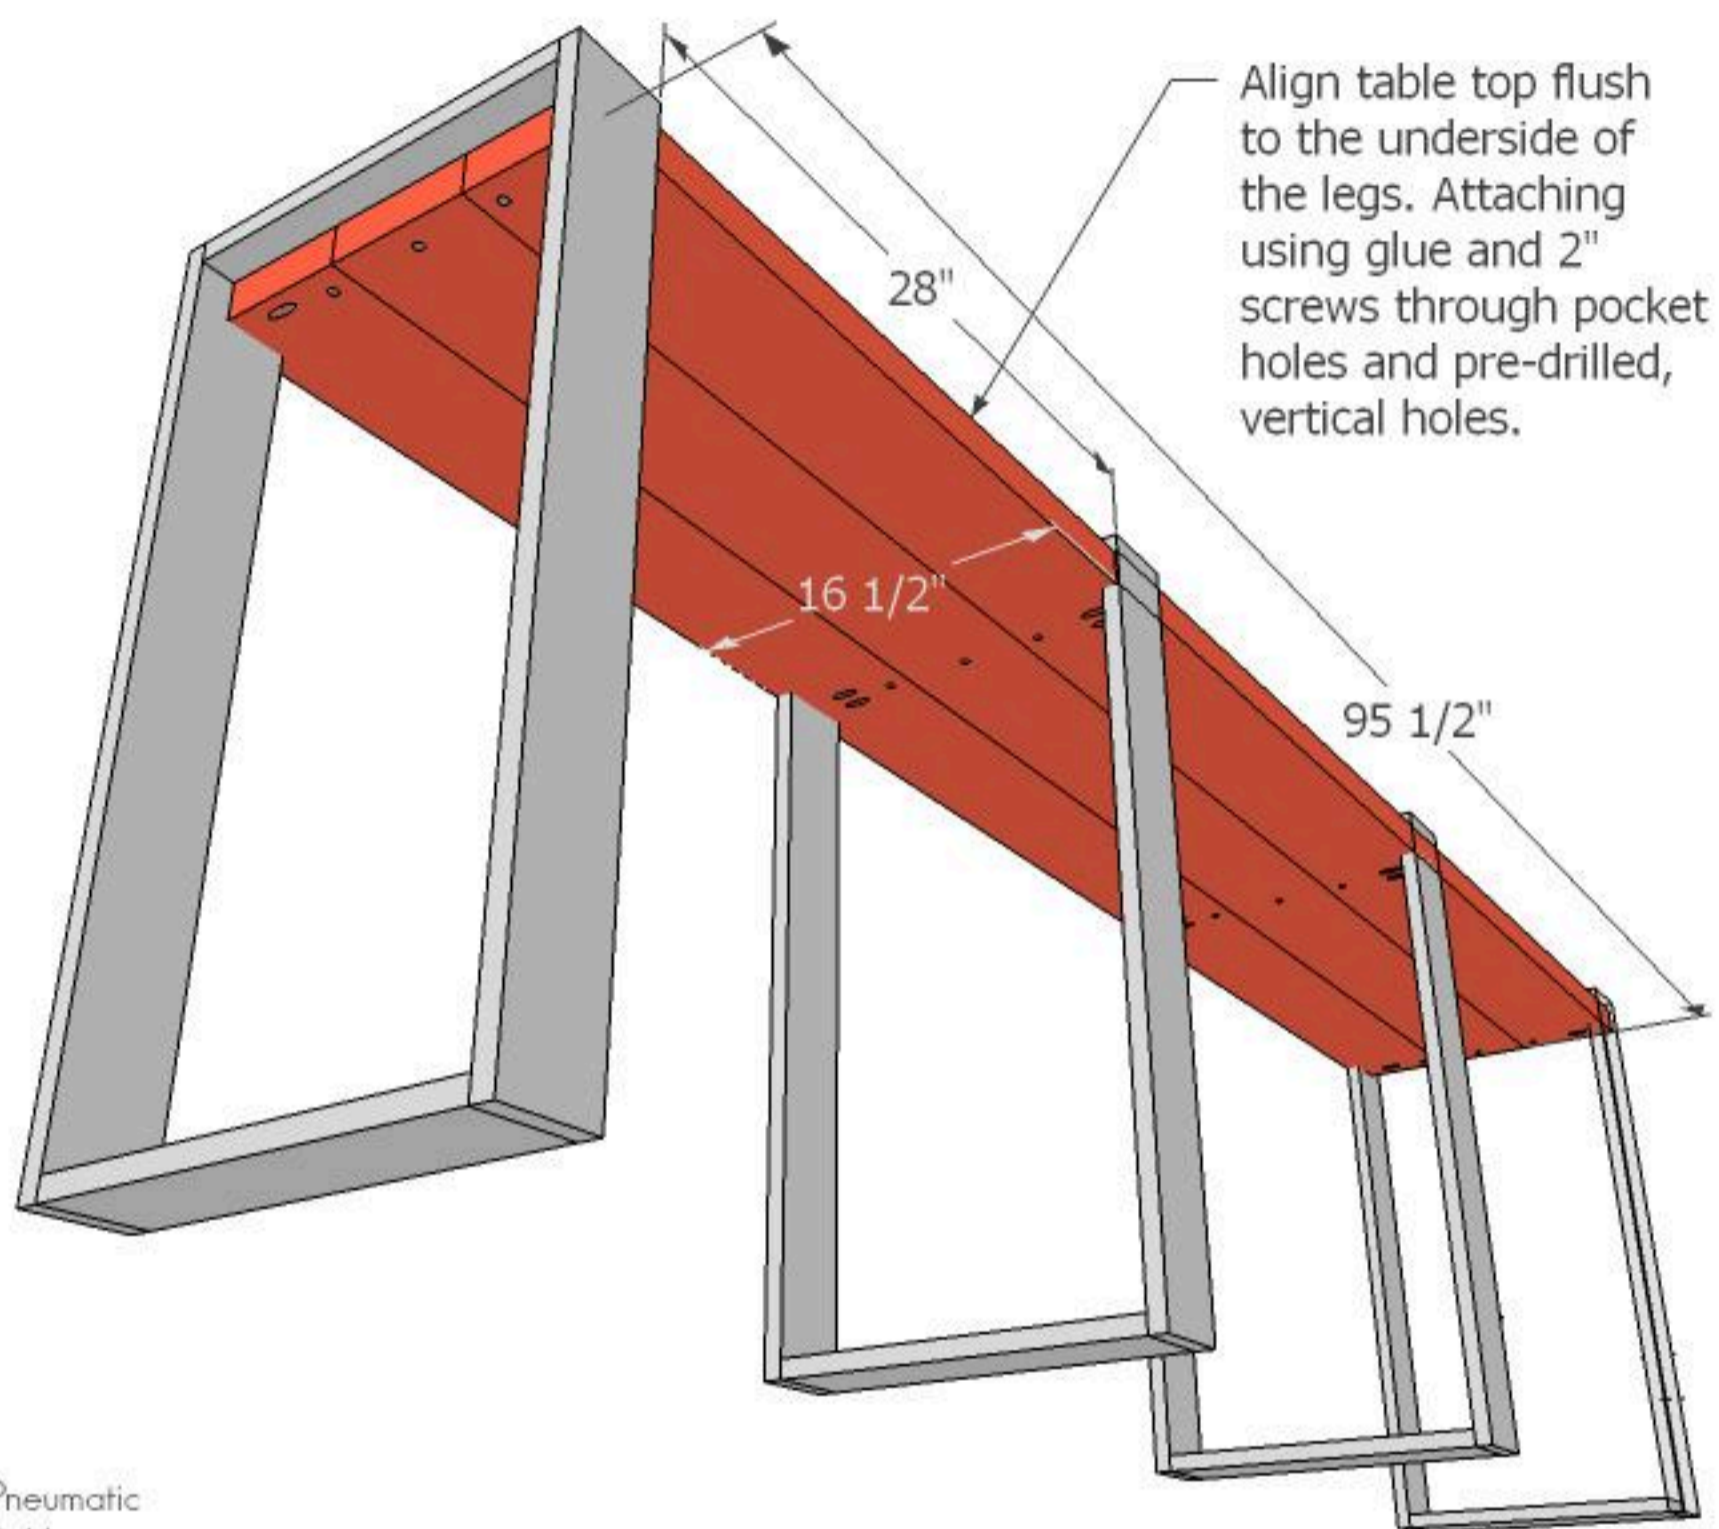


Pneumatic
Addict

5

Add End Boards

Align side boards between end legs and flush against the ends of table tops. Secure through pocket holes using glue and 1-1/4" screws.

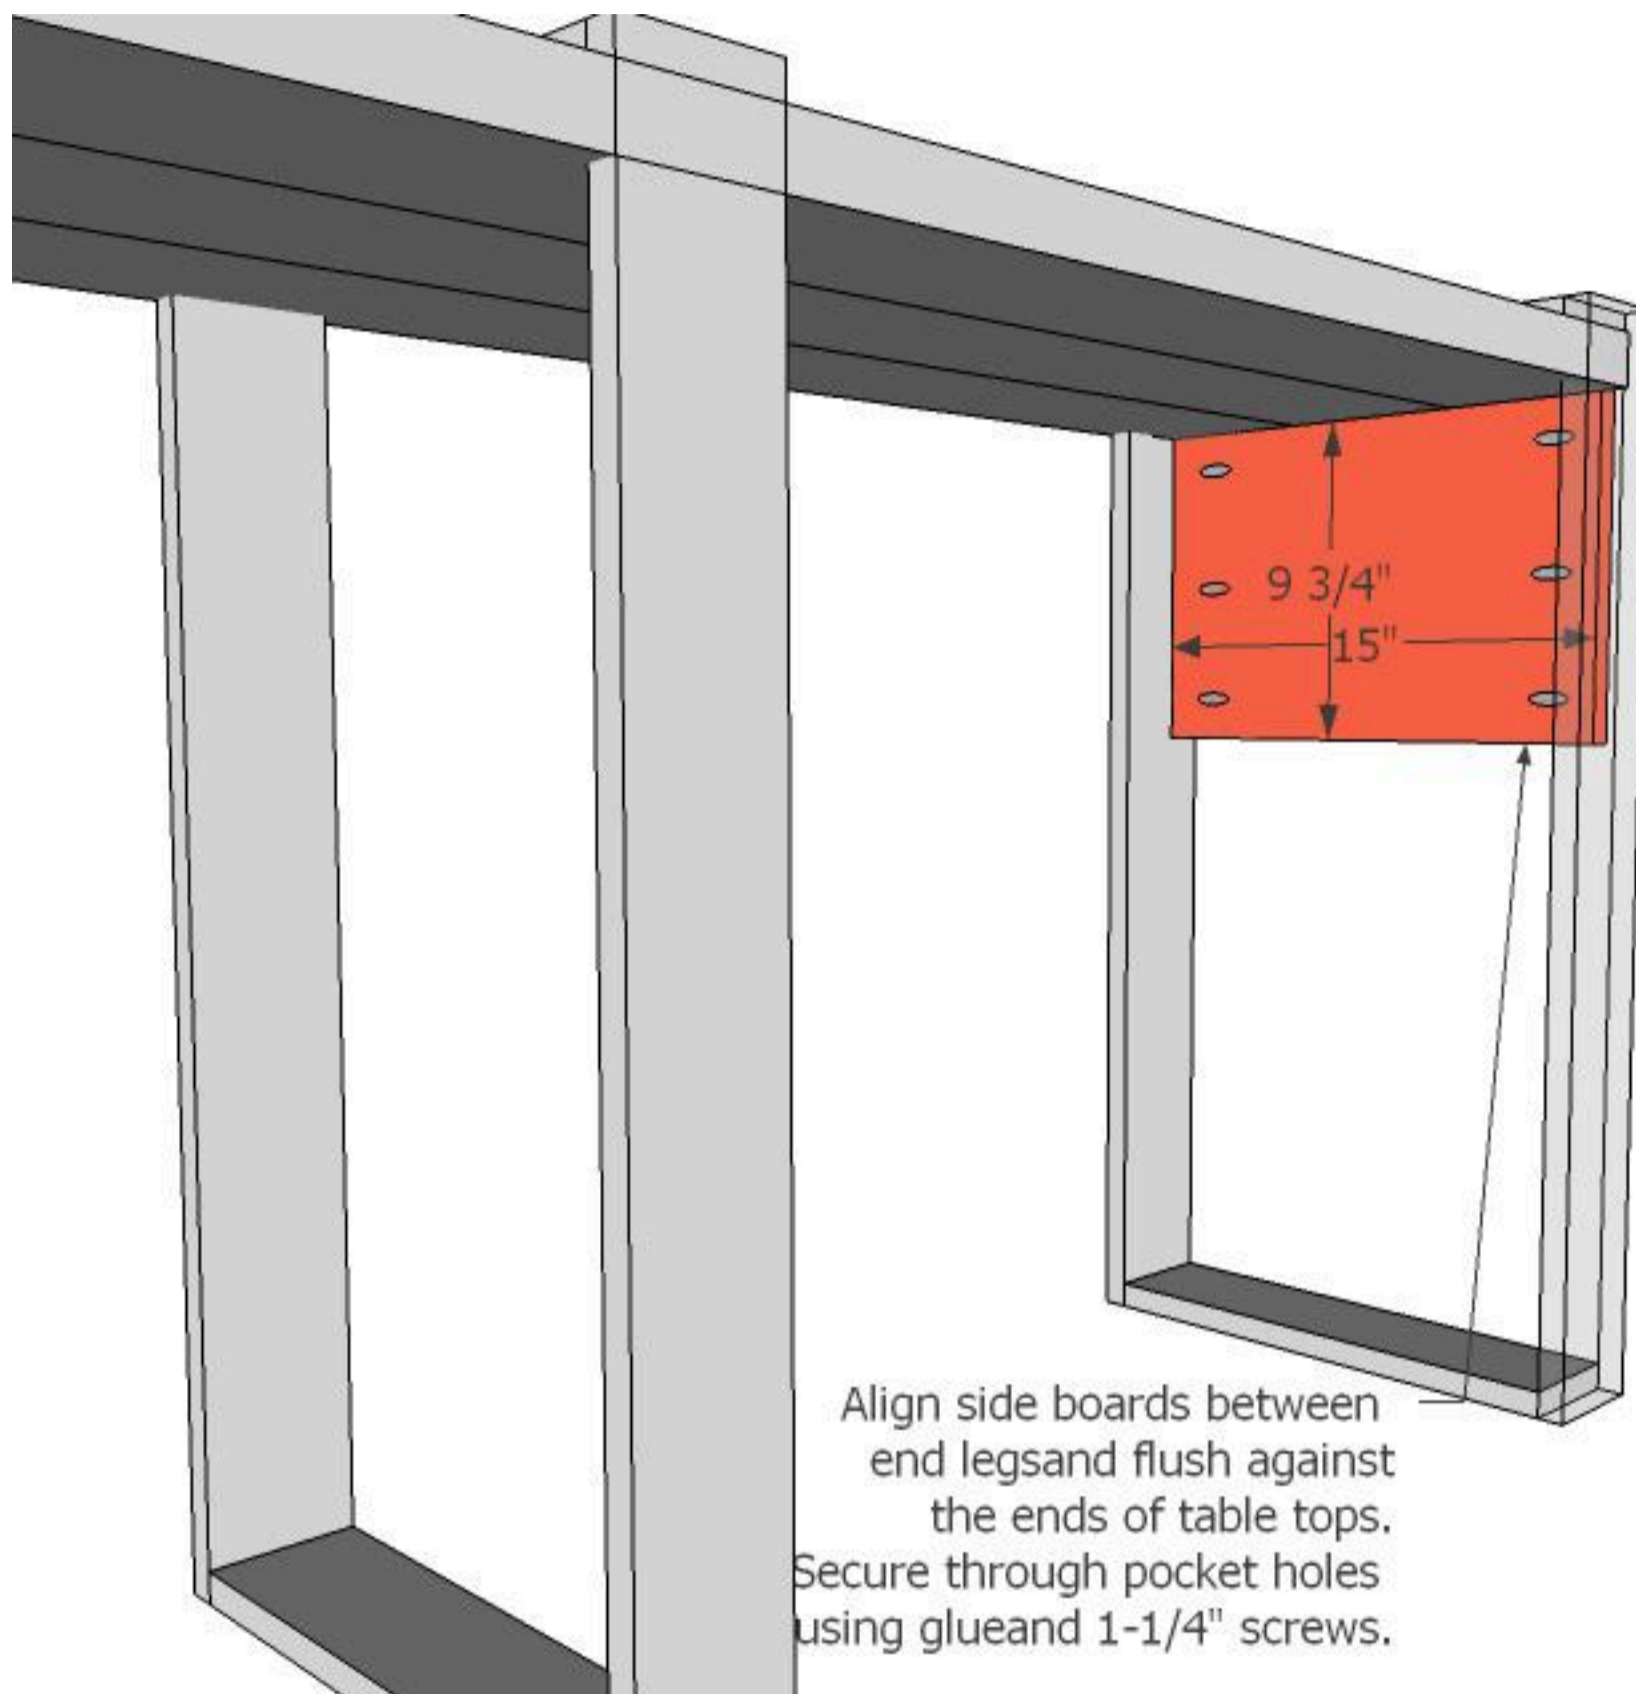


Pneumatic
Addict

6

Add Back Panel

Place back panel between end boards and flush to the underside of the table top. Secure using glue and 3/4" screws driven from the inside.

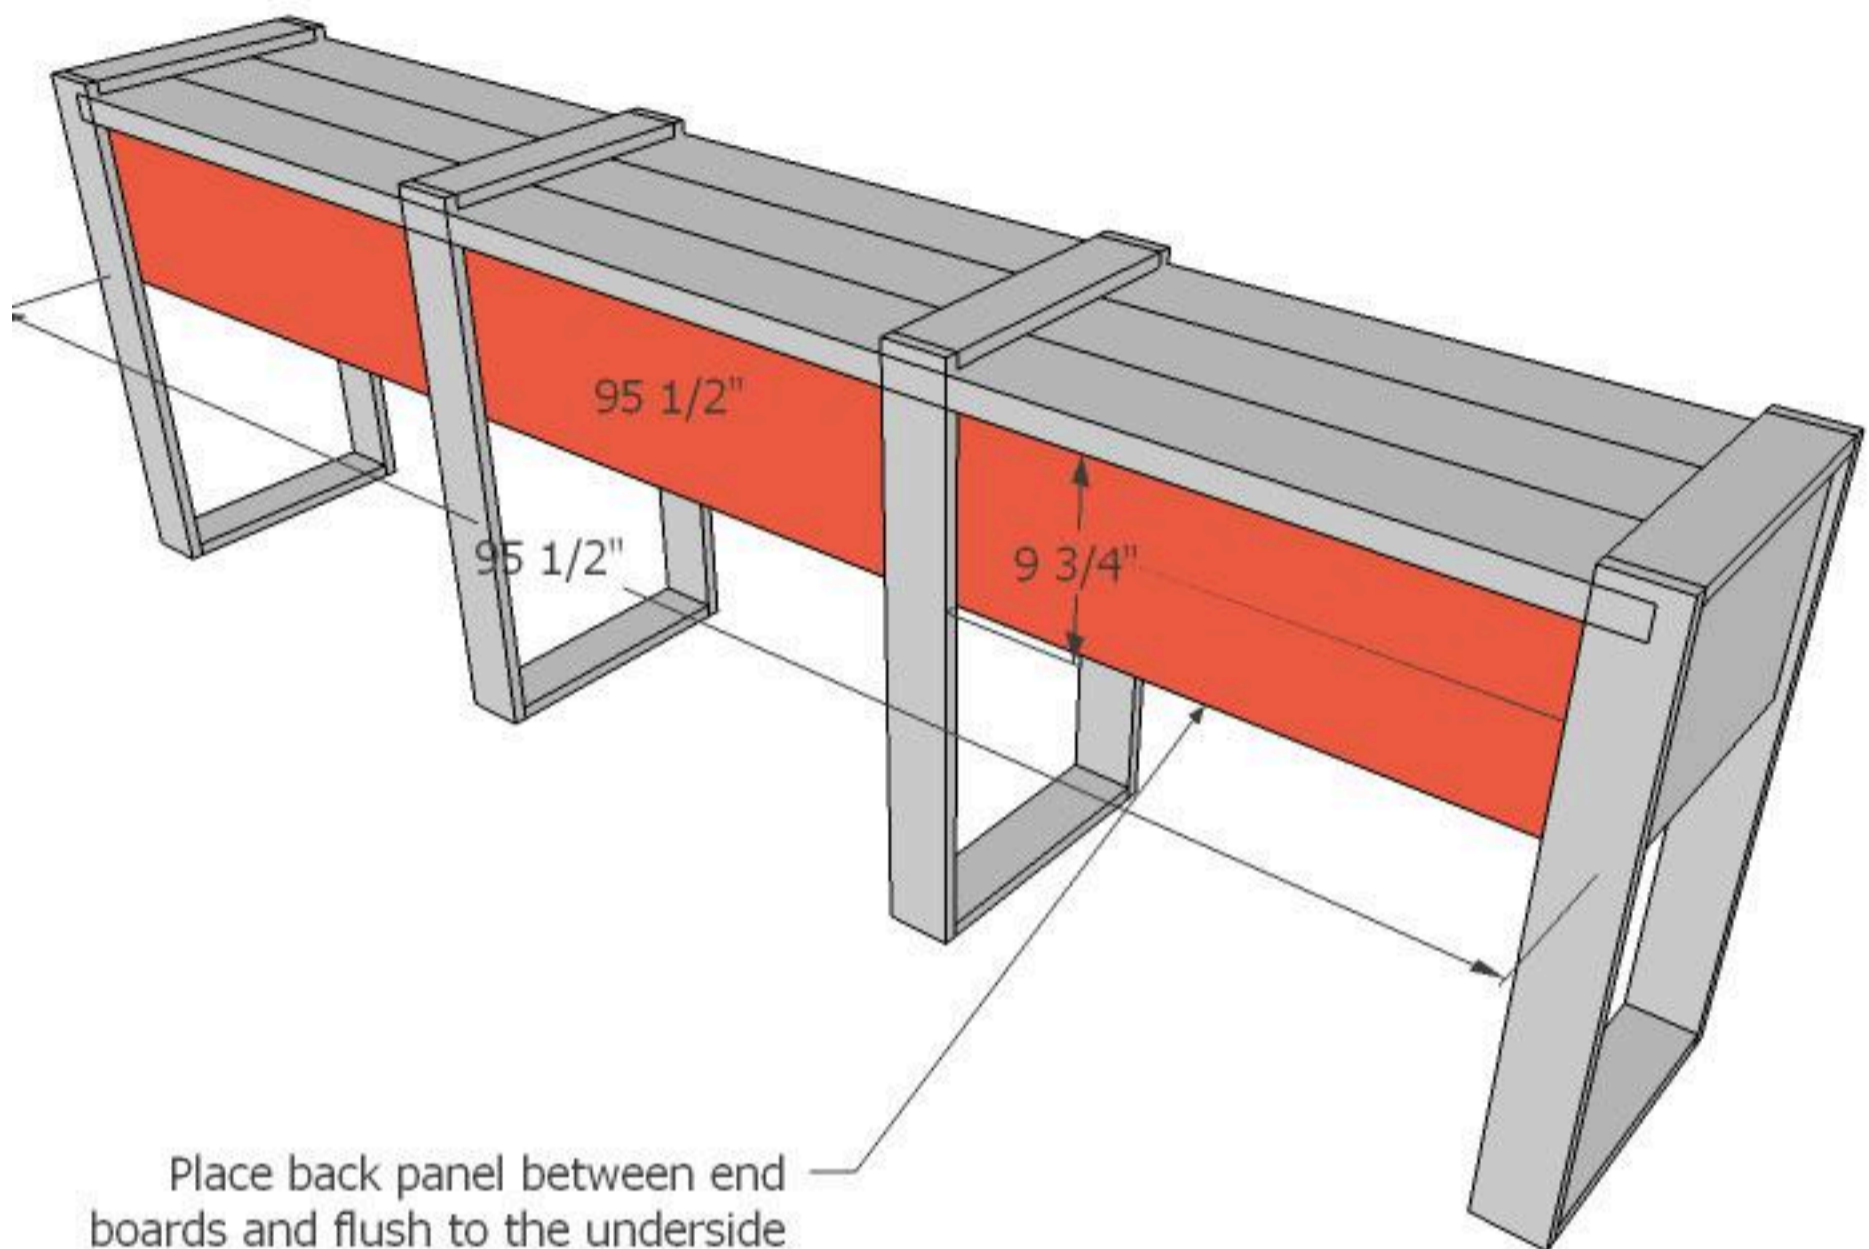


Place back panel between end boards and flush to the underside of the table top. Secure using glue and 3/4" screws driven from the inside.

Pneumatic
Addict

7

Drawer Frame Top & Bottom

Align long, top and bottom frame pieces behind the front of the legs. Allow a 6-3/4" space between pieces and make sure the top frame piece is flush to the underside of the table. Secure using glue and 1-1/4" brads.

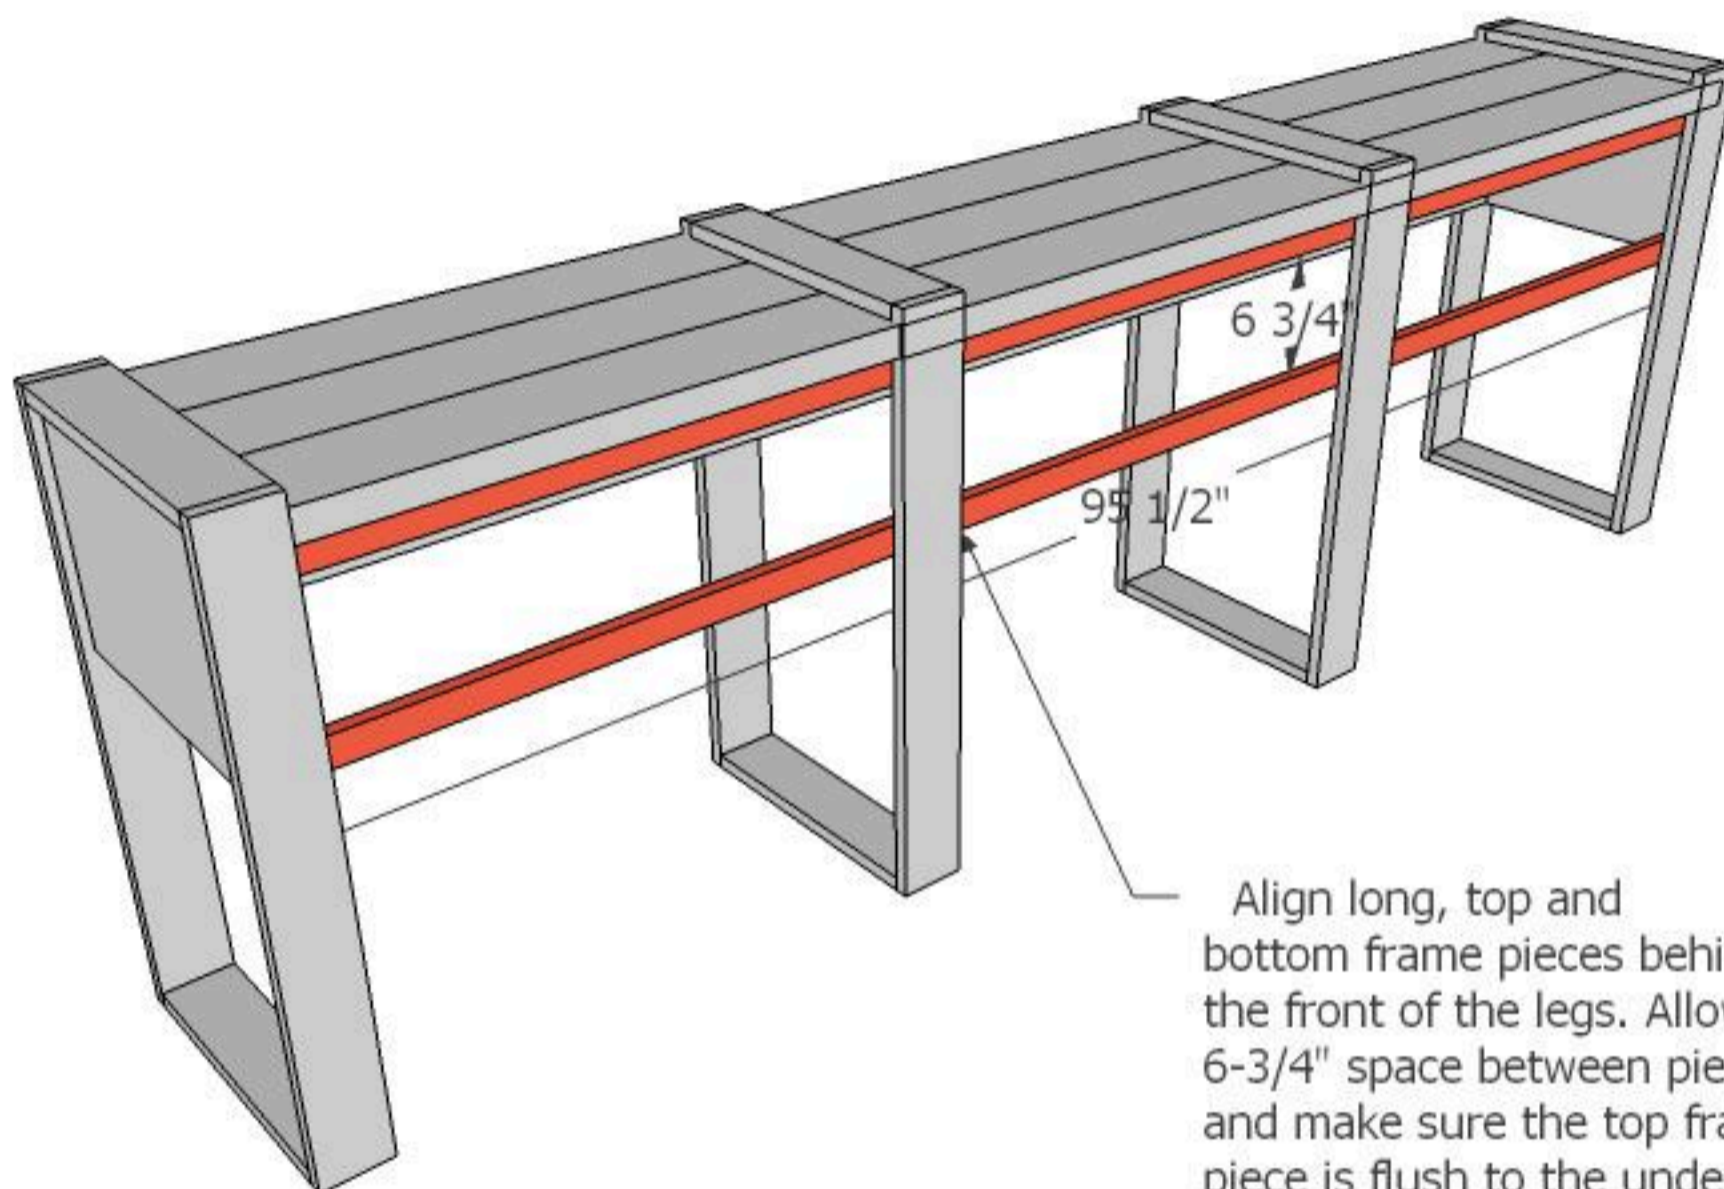


Align long, top and bottom frame pieces behind the front of the legs. Allow a 6-3/4" space between pieces and make sure the top frame piece is flush to the underside of the table. Secure using glue and 1-1/4" brads.

Pneumatic
Addict

8**Drawer Frame Sides**


Add frame side pieces between top and bottom rails. Secure using glue and 1-1/4" brads from the backside.

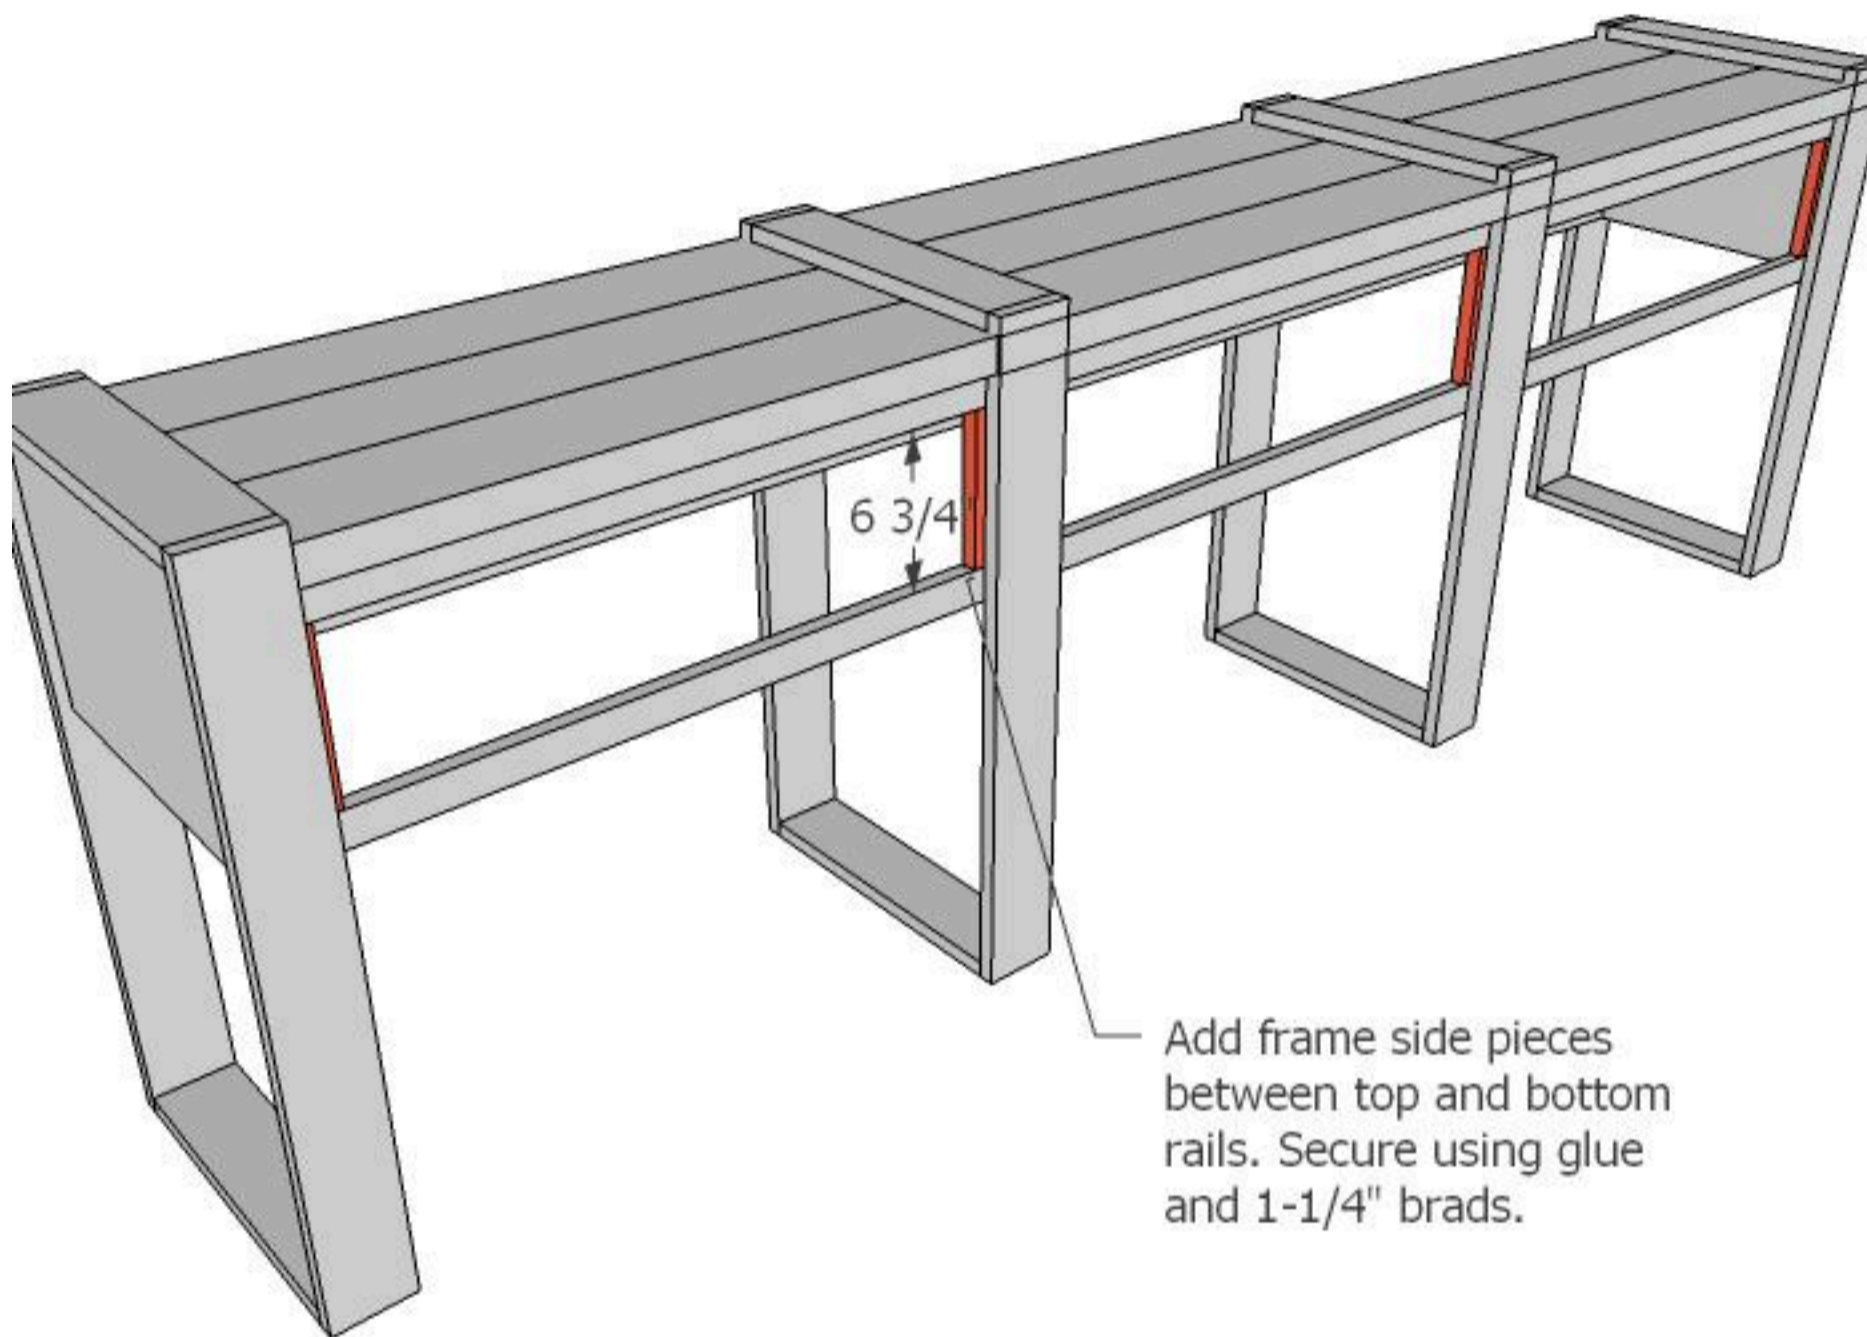

Pneumatic
Addict

9**Attach Slide Supports**

Use the Kreg Drawer Slide Jig to attach drawer slide supports, flush to the side frames. Secure to the front and back legs using glue and 2" screws.

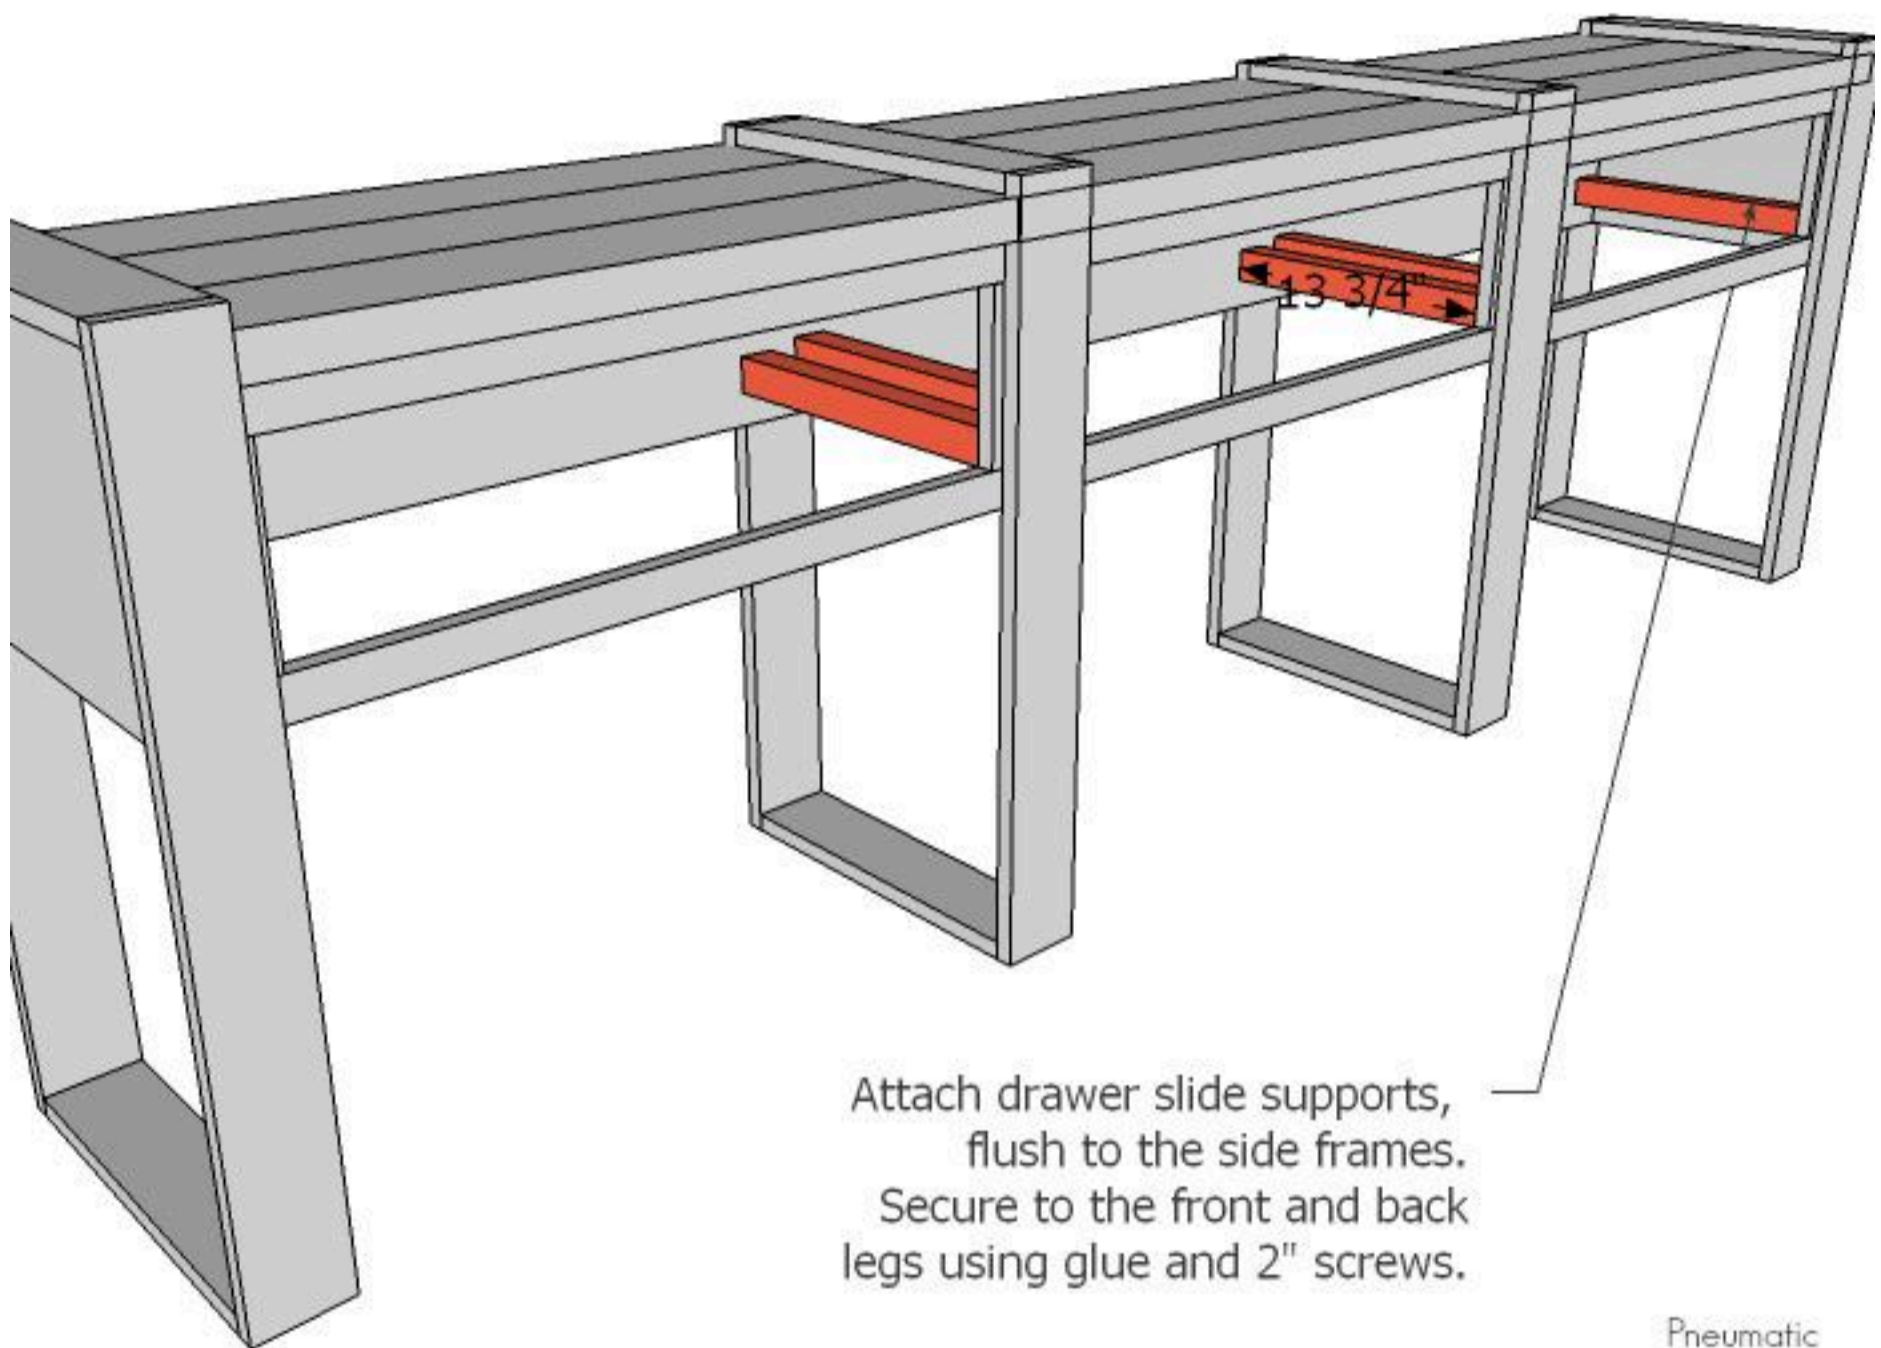


Pneumatic
Addict

10

Add Lower Shelf

Attach lower shelf to the legs. Allow a 5-1/2" space from the bottom rail. Secure using glue and 2" screws.

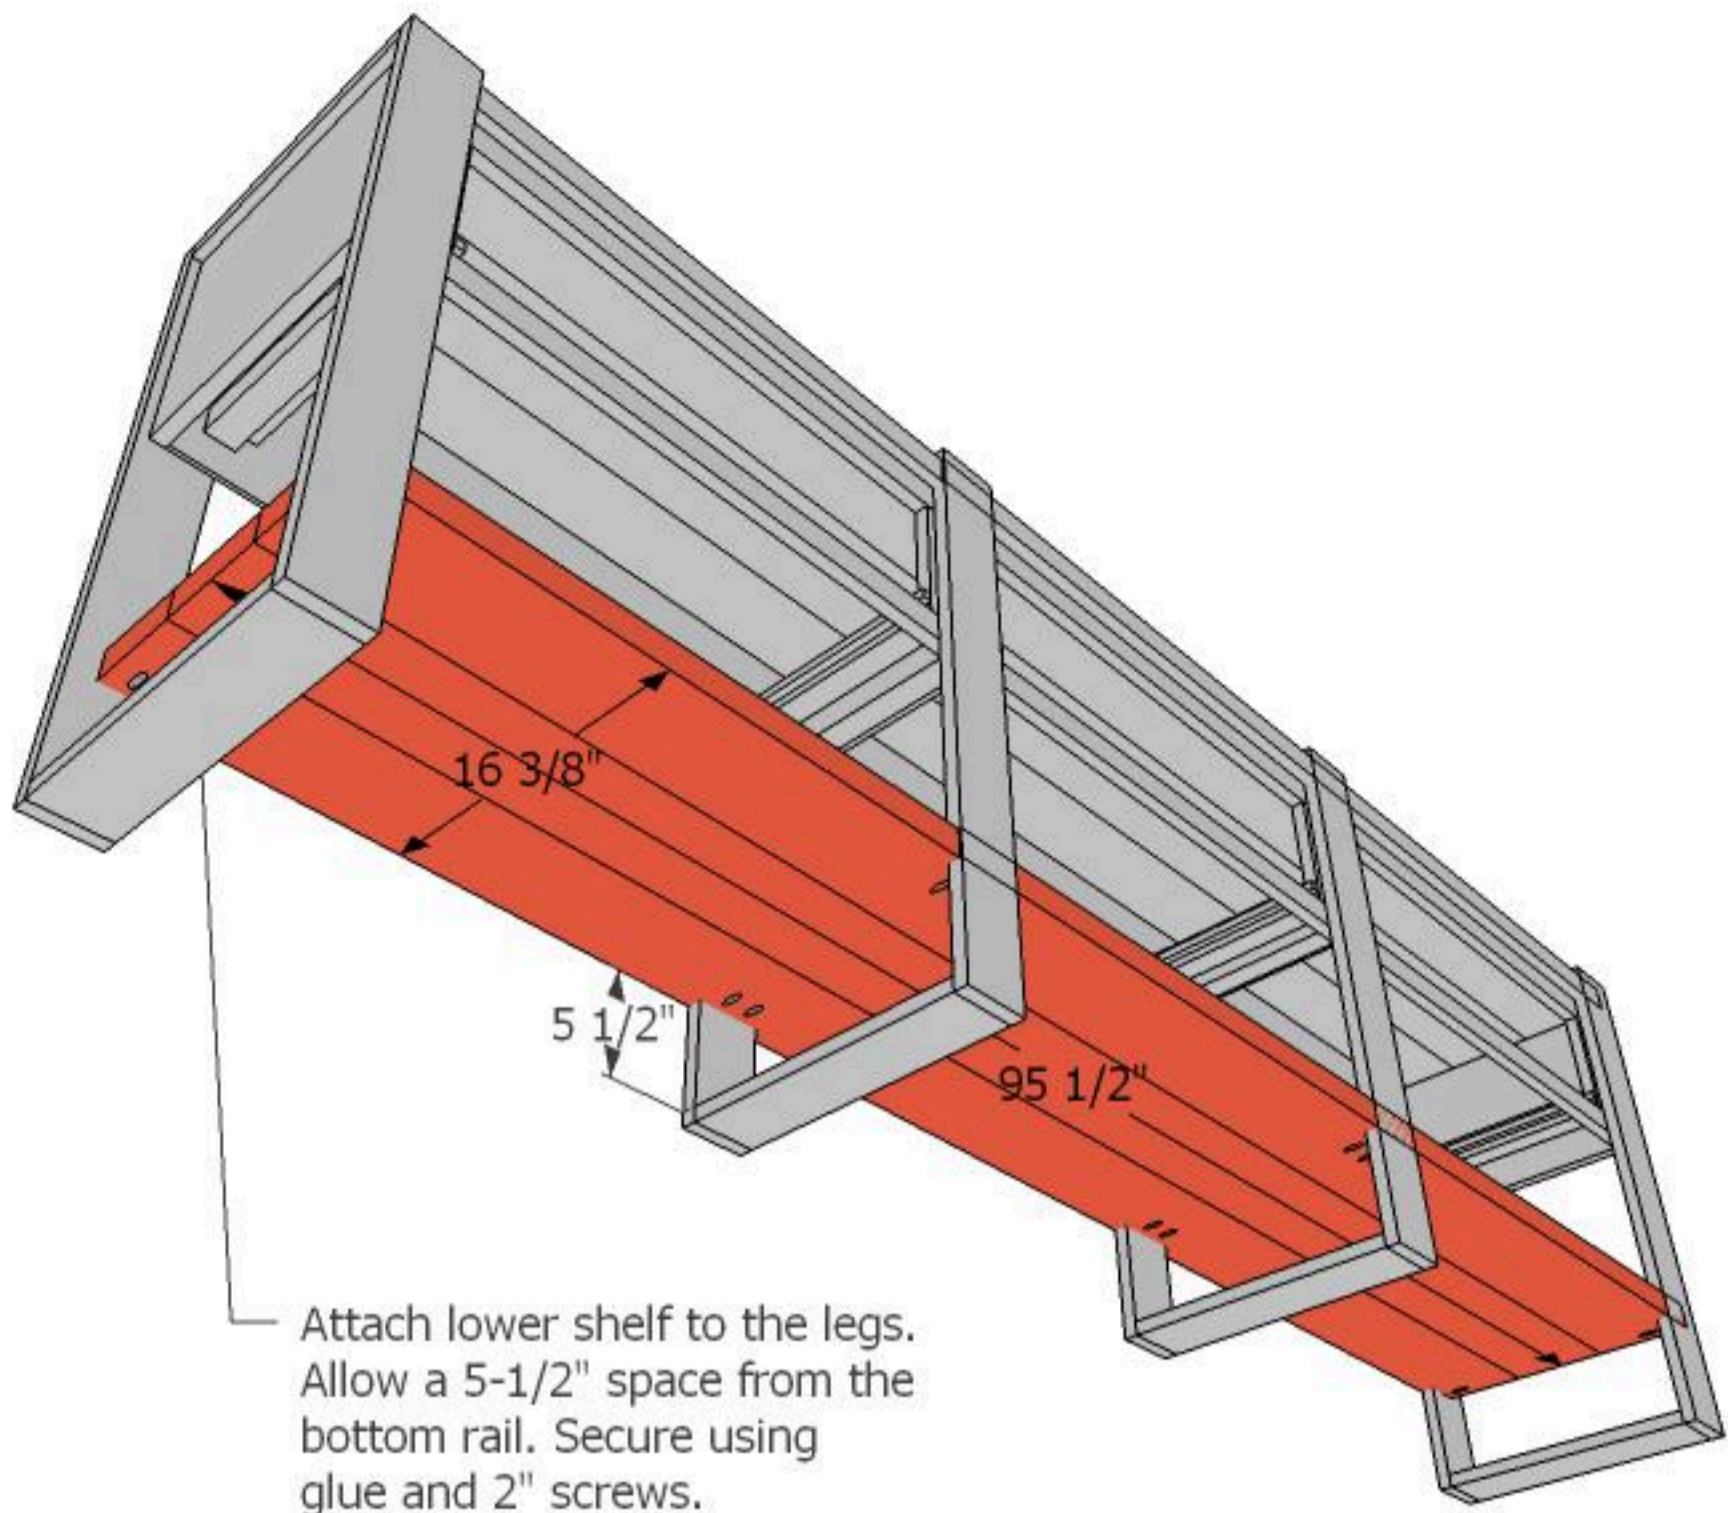


Pneumatic
Addict

11**Build Drawer Boxes**

Use your favorite technique to build three drawer boxes approximately 27" x 14". Before building, measure the exact width between slide supports and use that specific measurement as your drawer box width.


Install drawer boxes inside frames using 14" slides.

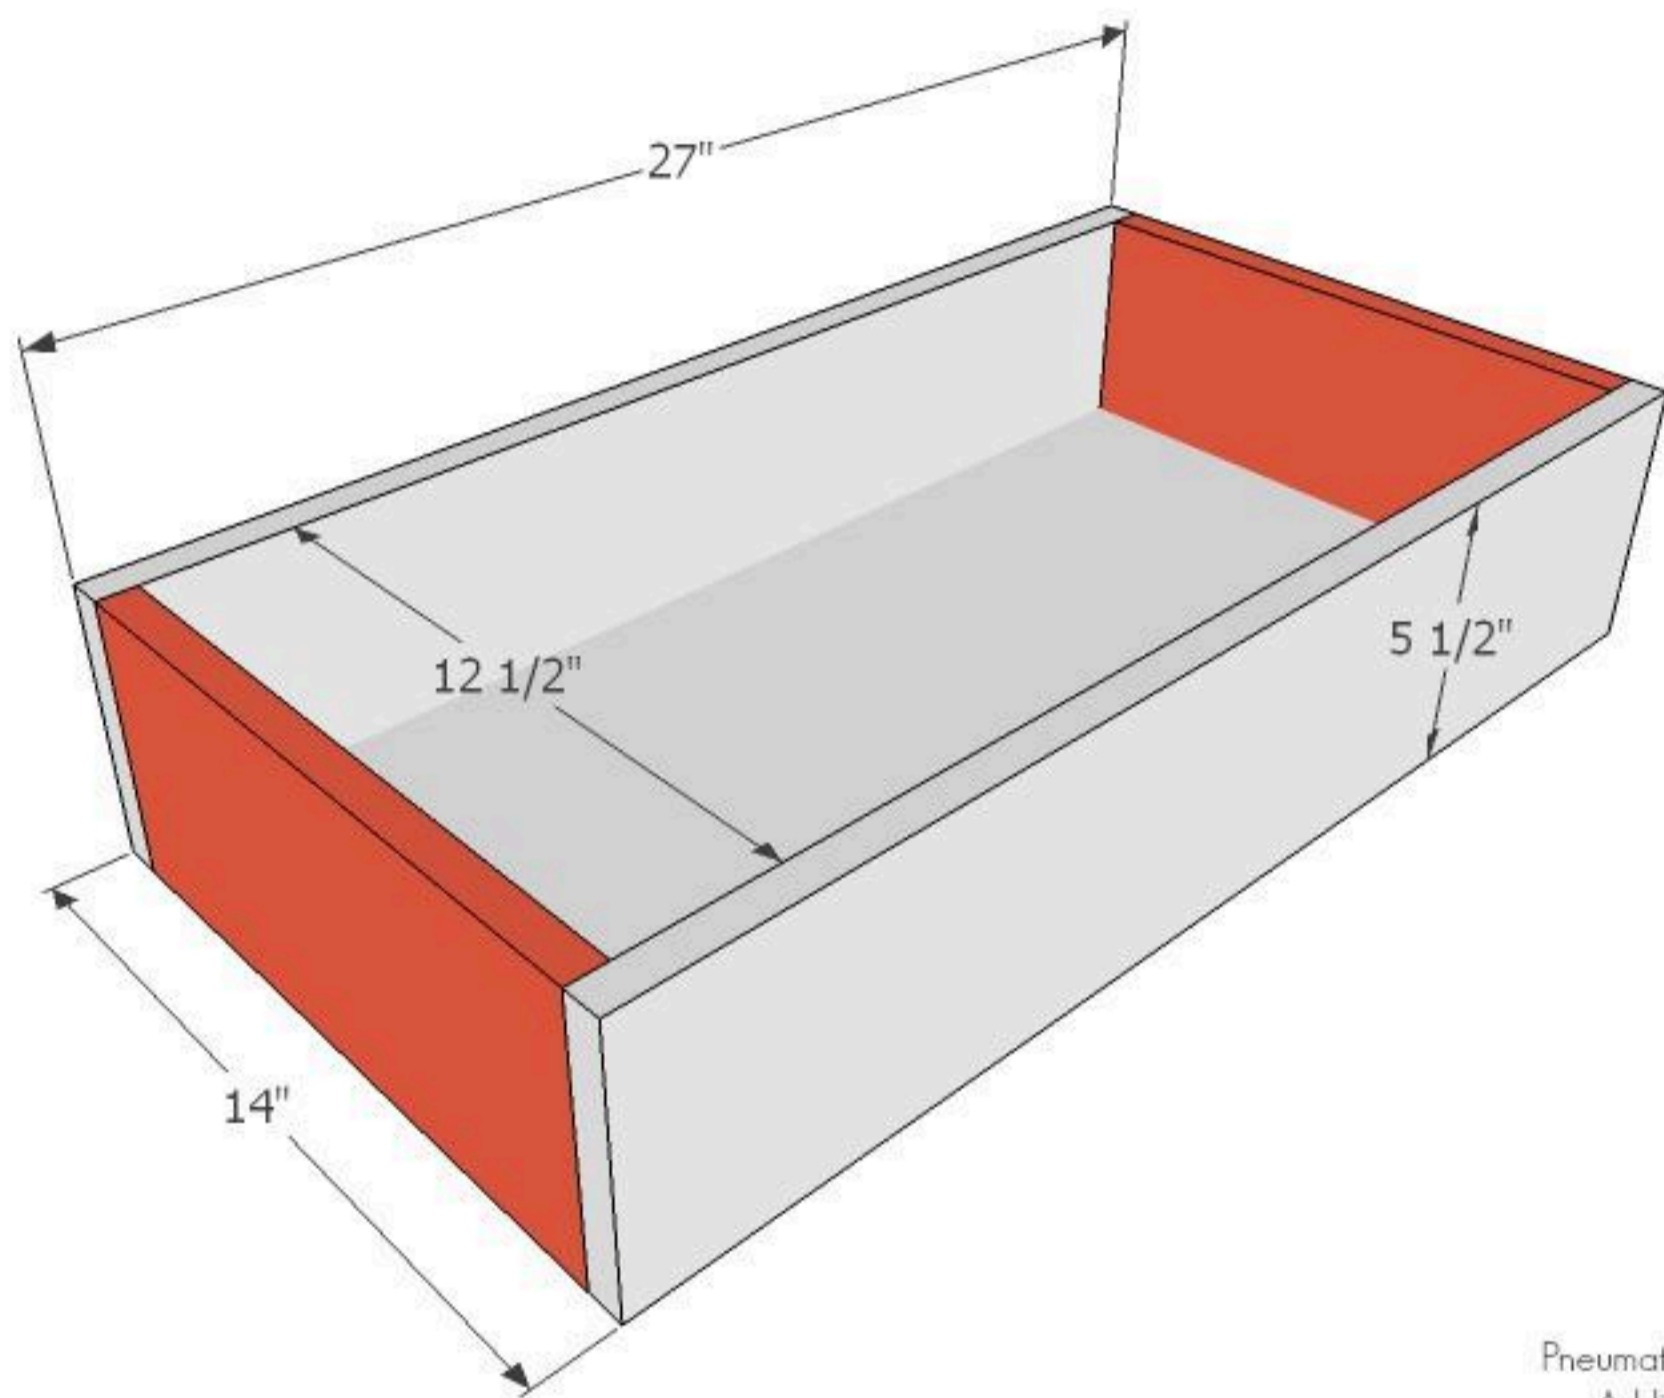

Pneumatic
Addict

12**Attach Drawer Fronts**


Attach drawer fronts to drawer boxes by using 1-1/4" screws driven from the inside.

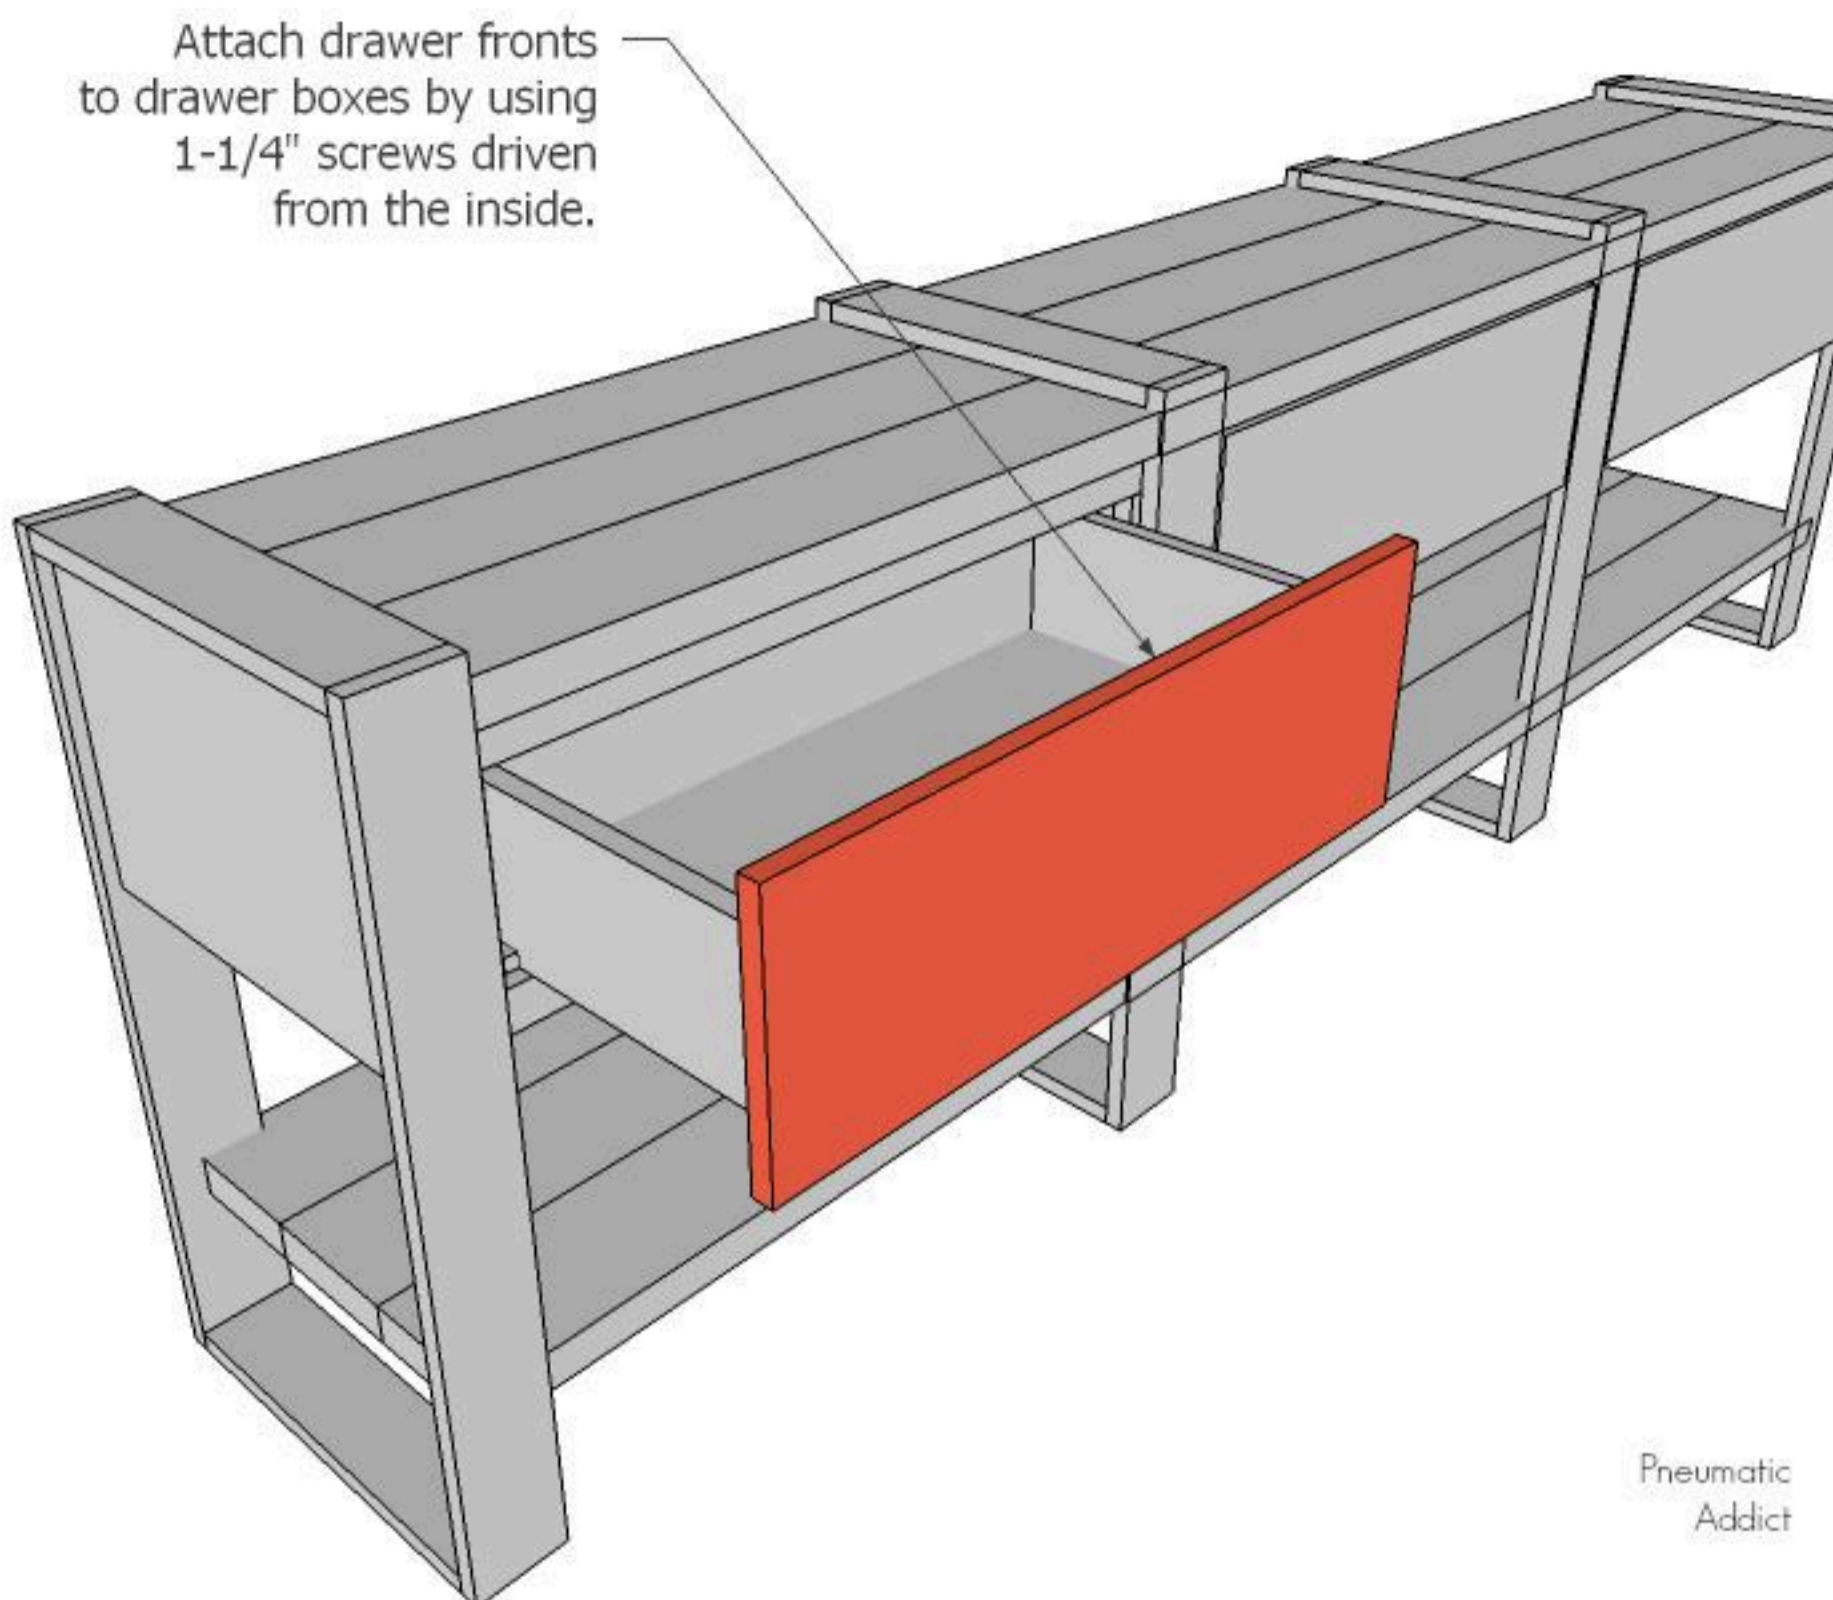

Pneumatic
Addict

13**Add Drawer Pulls**

Use the Kreg Cabinet Hardware Jig to attach drawer pulls or knobs to drawer fronts.

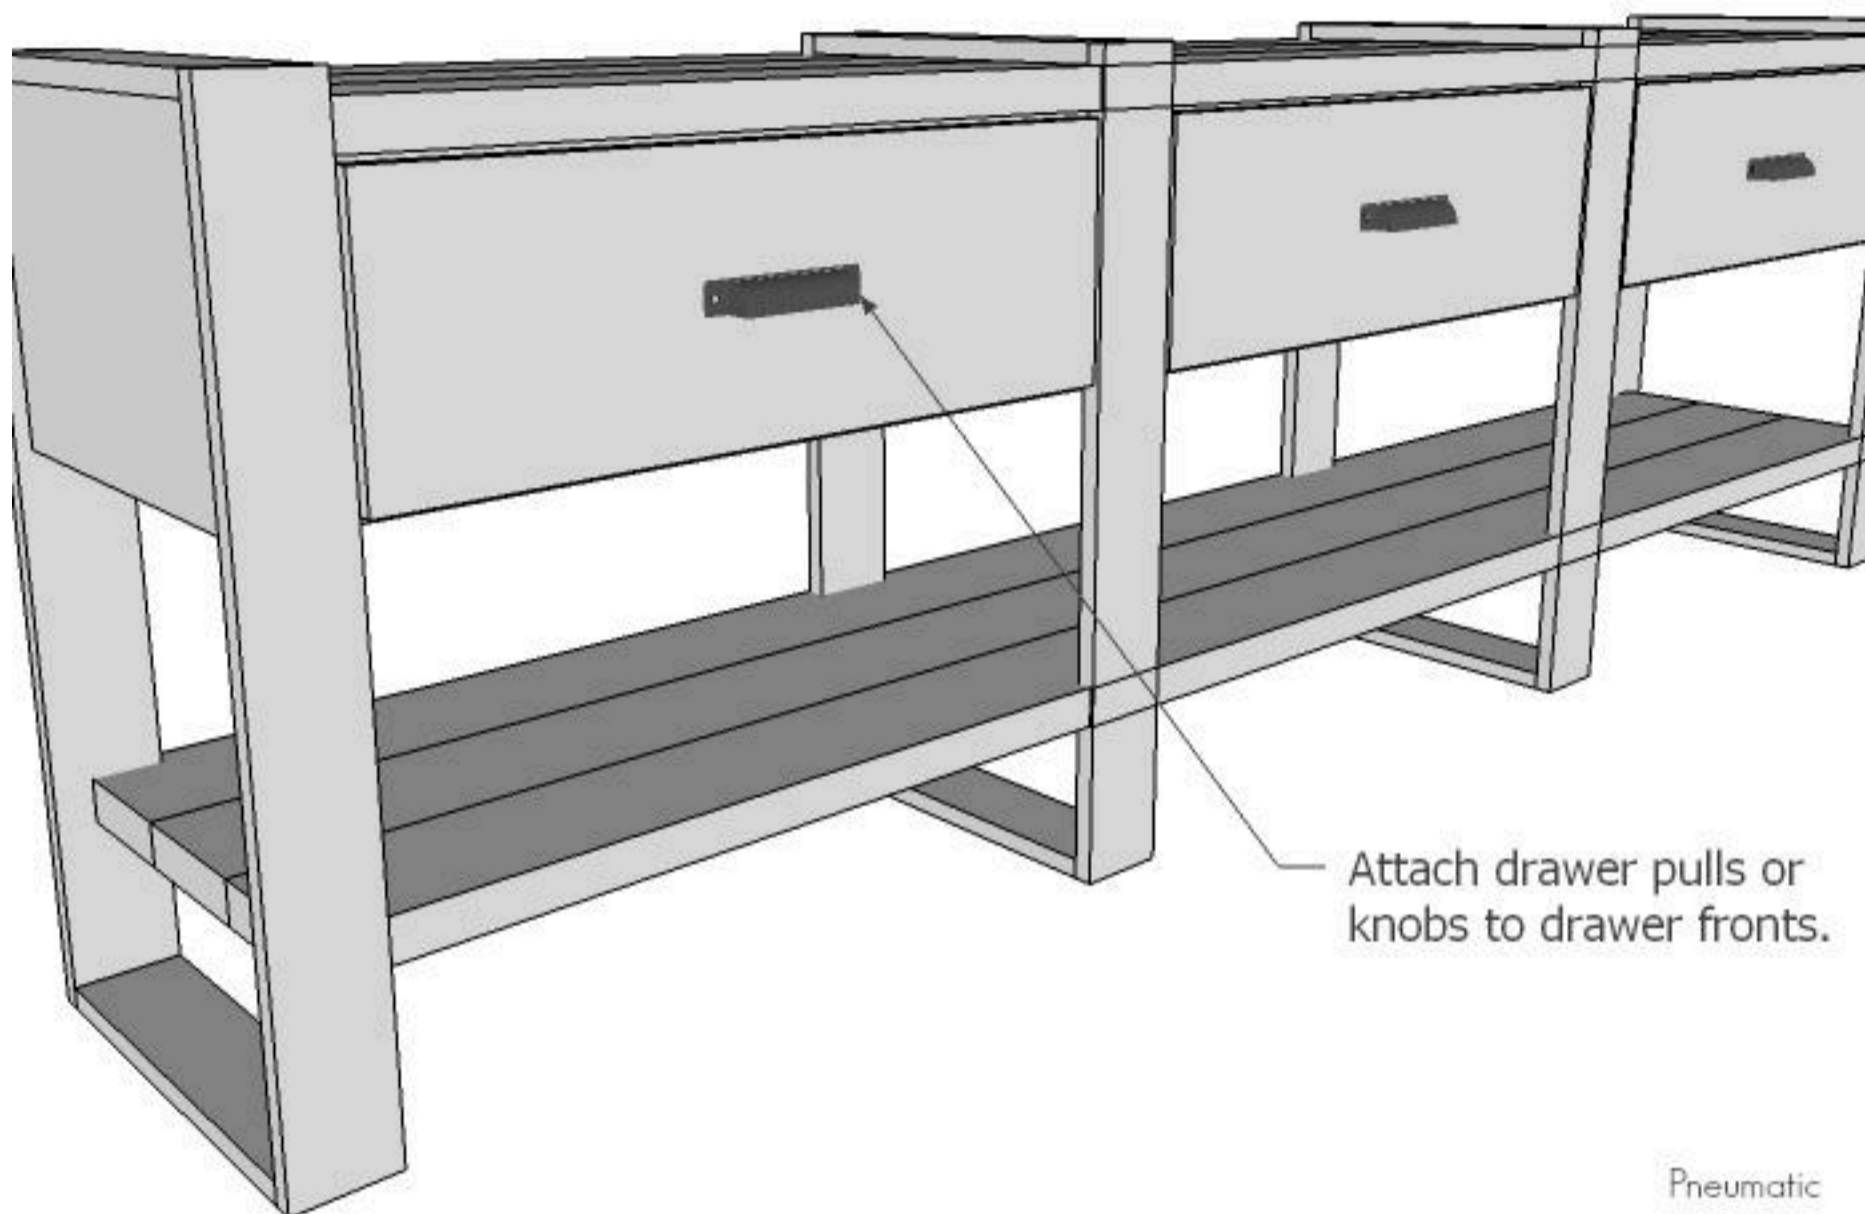

Attach drawer pulls or
knobs to drawer fronts.

Pneumatic
Addict

14

Head to Pneumatic Addict

Head to PneumaticAddict.com for finishing and painting tips, as well more free building plan and ideas.



PNEUMATIC
ADDICT