


One Sheet Plywood Console

By **Jen Woodhouse**

Difficulty
Moderate

Build this stylish console table out of a single sheet of plywood! Its minimalist yet chic design makes it a versatile piece that will look stunning anywhere in your home.

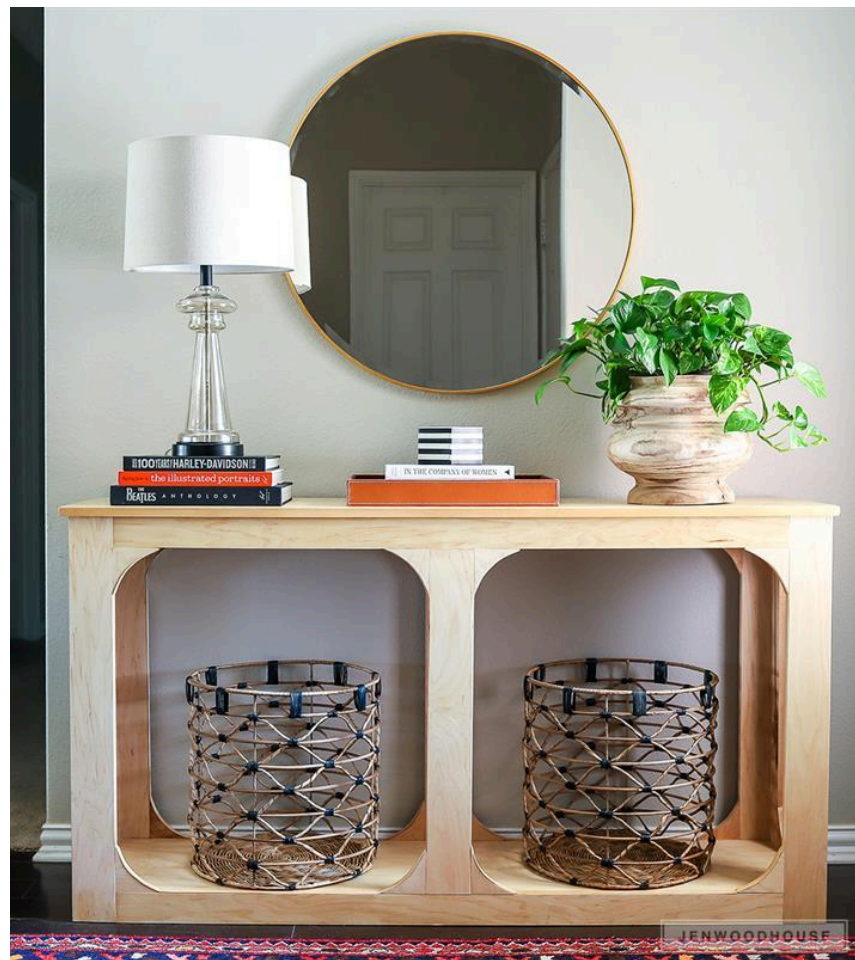

Tools

Kreg Tools



Other Tools

Circular Saw (cordless)

Jigsaw

Scroll Saw

Square

Table Saw

Tape Measure

Drill (cordless)

Nail Gun

Sander

Materials

Wood Products

1 Plywood , 3/4" Thick , Full Sheet

Hardware & Supplies

1 3/4-inch Wood Veneer Edge Banding

1 1 1/4-inch Pocket Screws


1 1 1/4-inch Brad Nails

1 1 Inch Brad Nails

1 Wood Glue

Cut List & Parts

- 1 Top , 3/4" X 61" X 16-1/2"
- 1 Bottom , 3/4" X 58-1/2" X 14"
- 4 Long Aprons , 3/4" X 53" X 2-1/2"
- 4 Short Aprons , 3/4" X 9" X 2-1/2"
- 6 Front, Back, Middle Legs , 3/4" X 32-1/2" X 3-1/2"
- 4 Side Legs , 3/4" X 32-1/2" X 2-1/2"
- 24 Curved Pieces , 3/4" X 3-1/2" X 3-1/2"

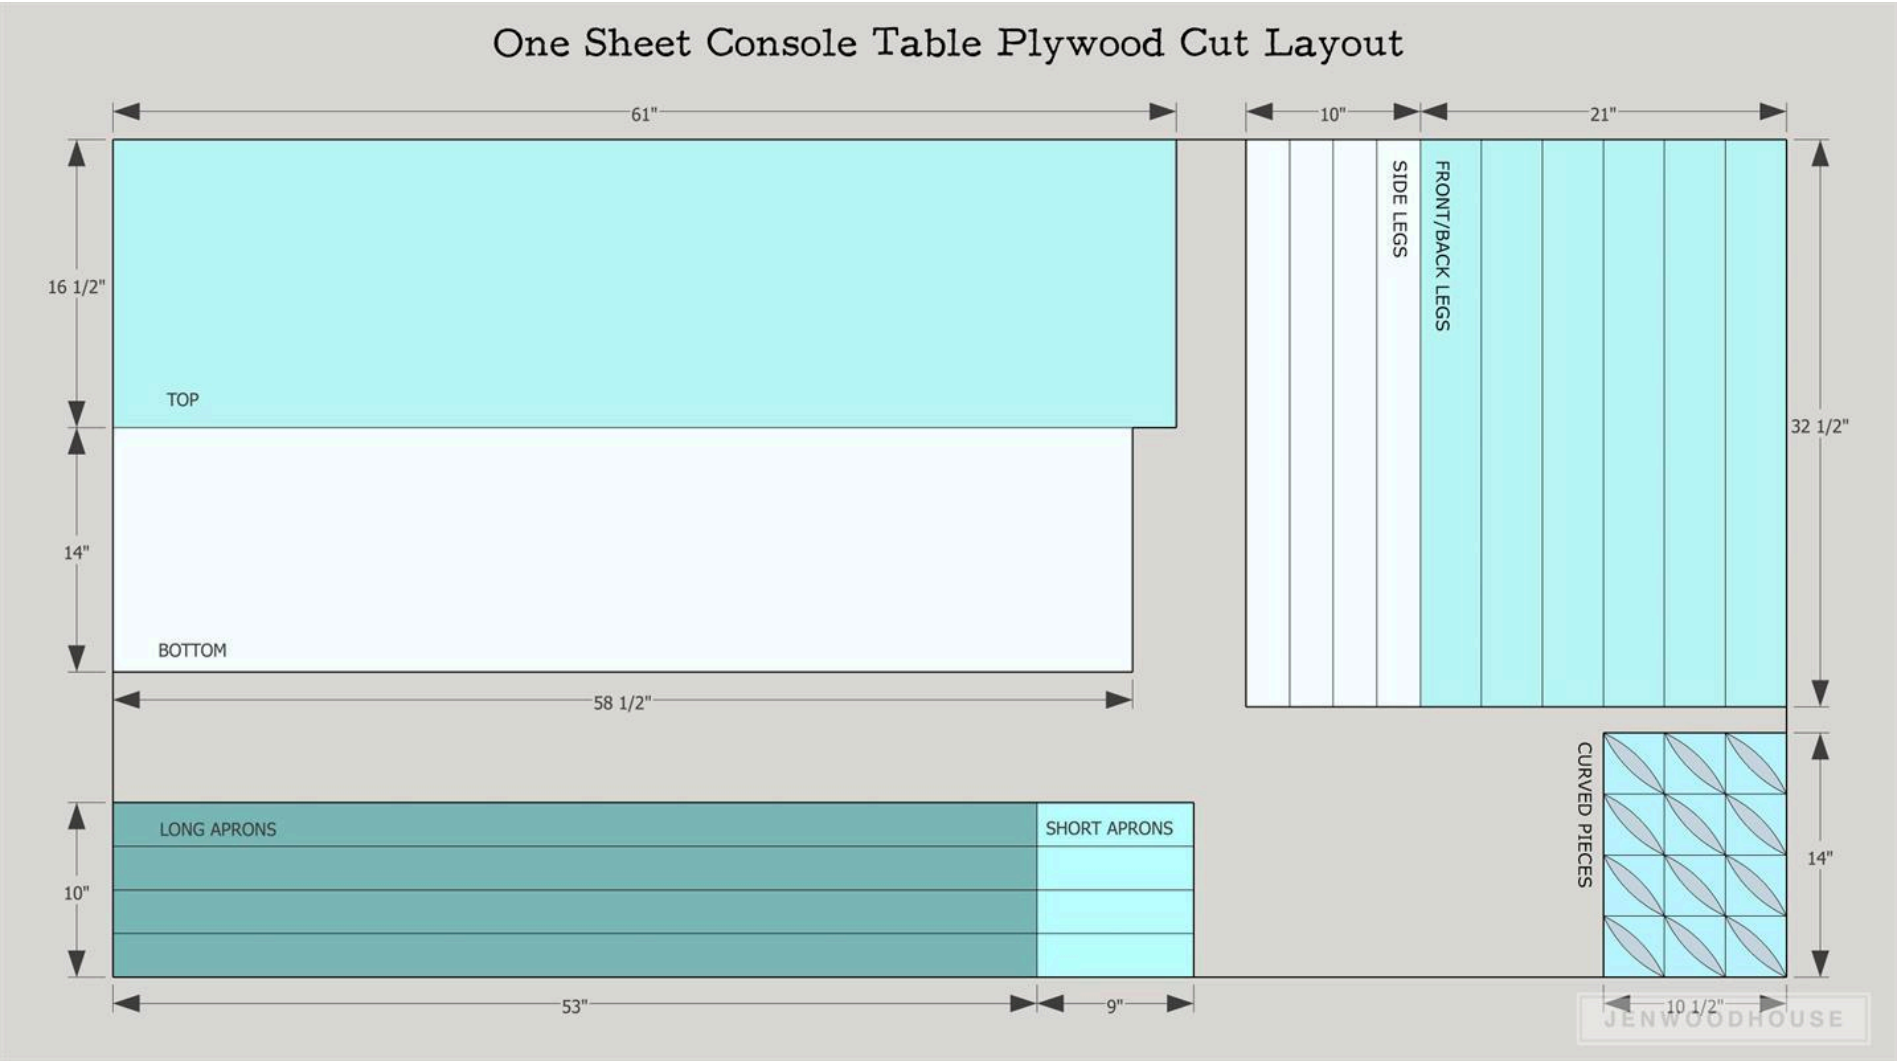


Directions

1

Build the Two Sides

Measure, mark, and cut side legs and short aprons to size. Drill 3/4-inch pocket holes into the ends of the short aprons and attach to the side legs with 1 1/4-inch pocket screws. Be sure to drill 3/4-inch pocket holes facing up in the side legs to attach the top in later steps.

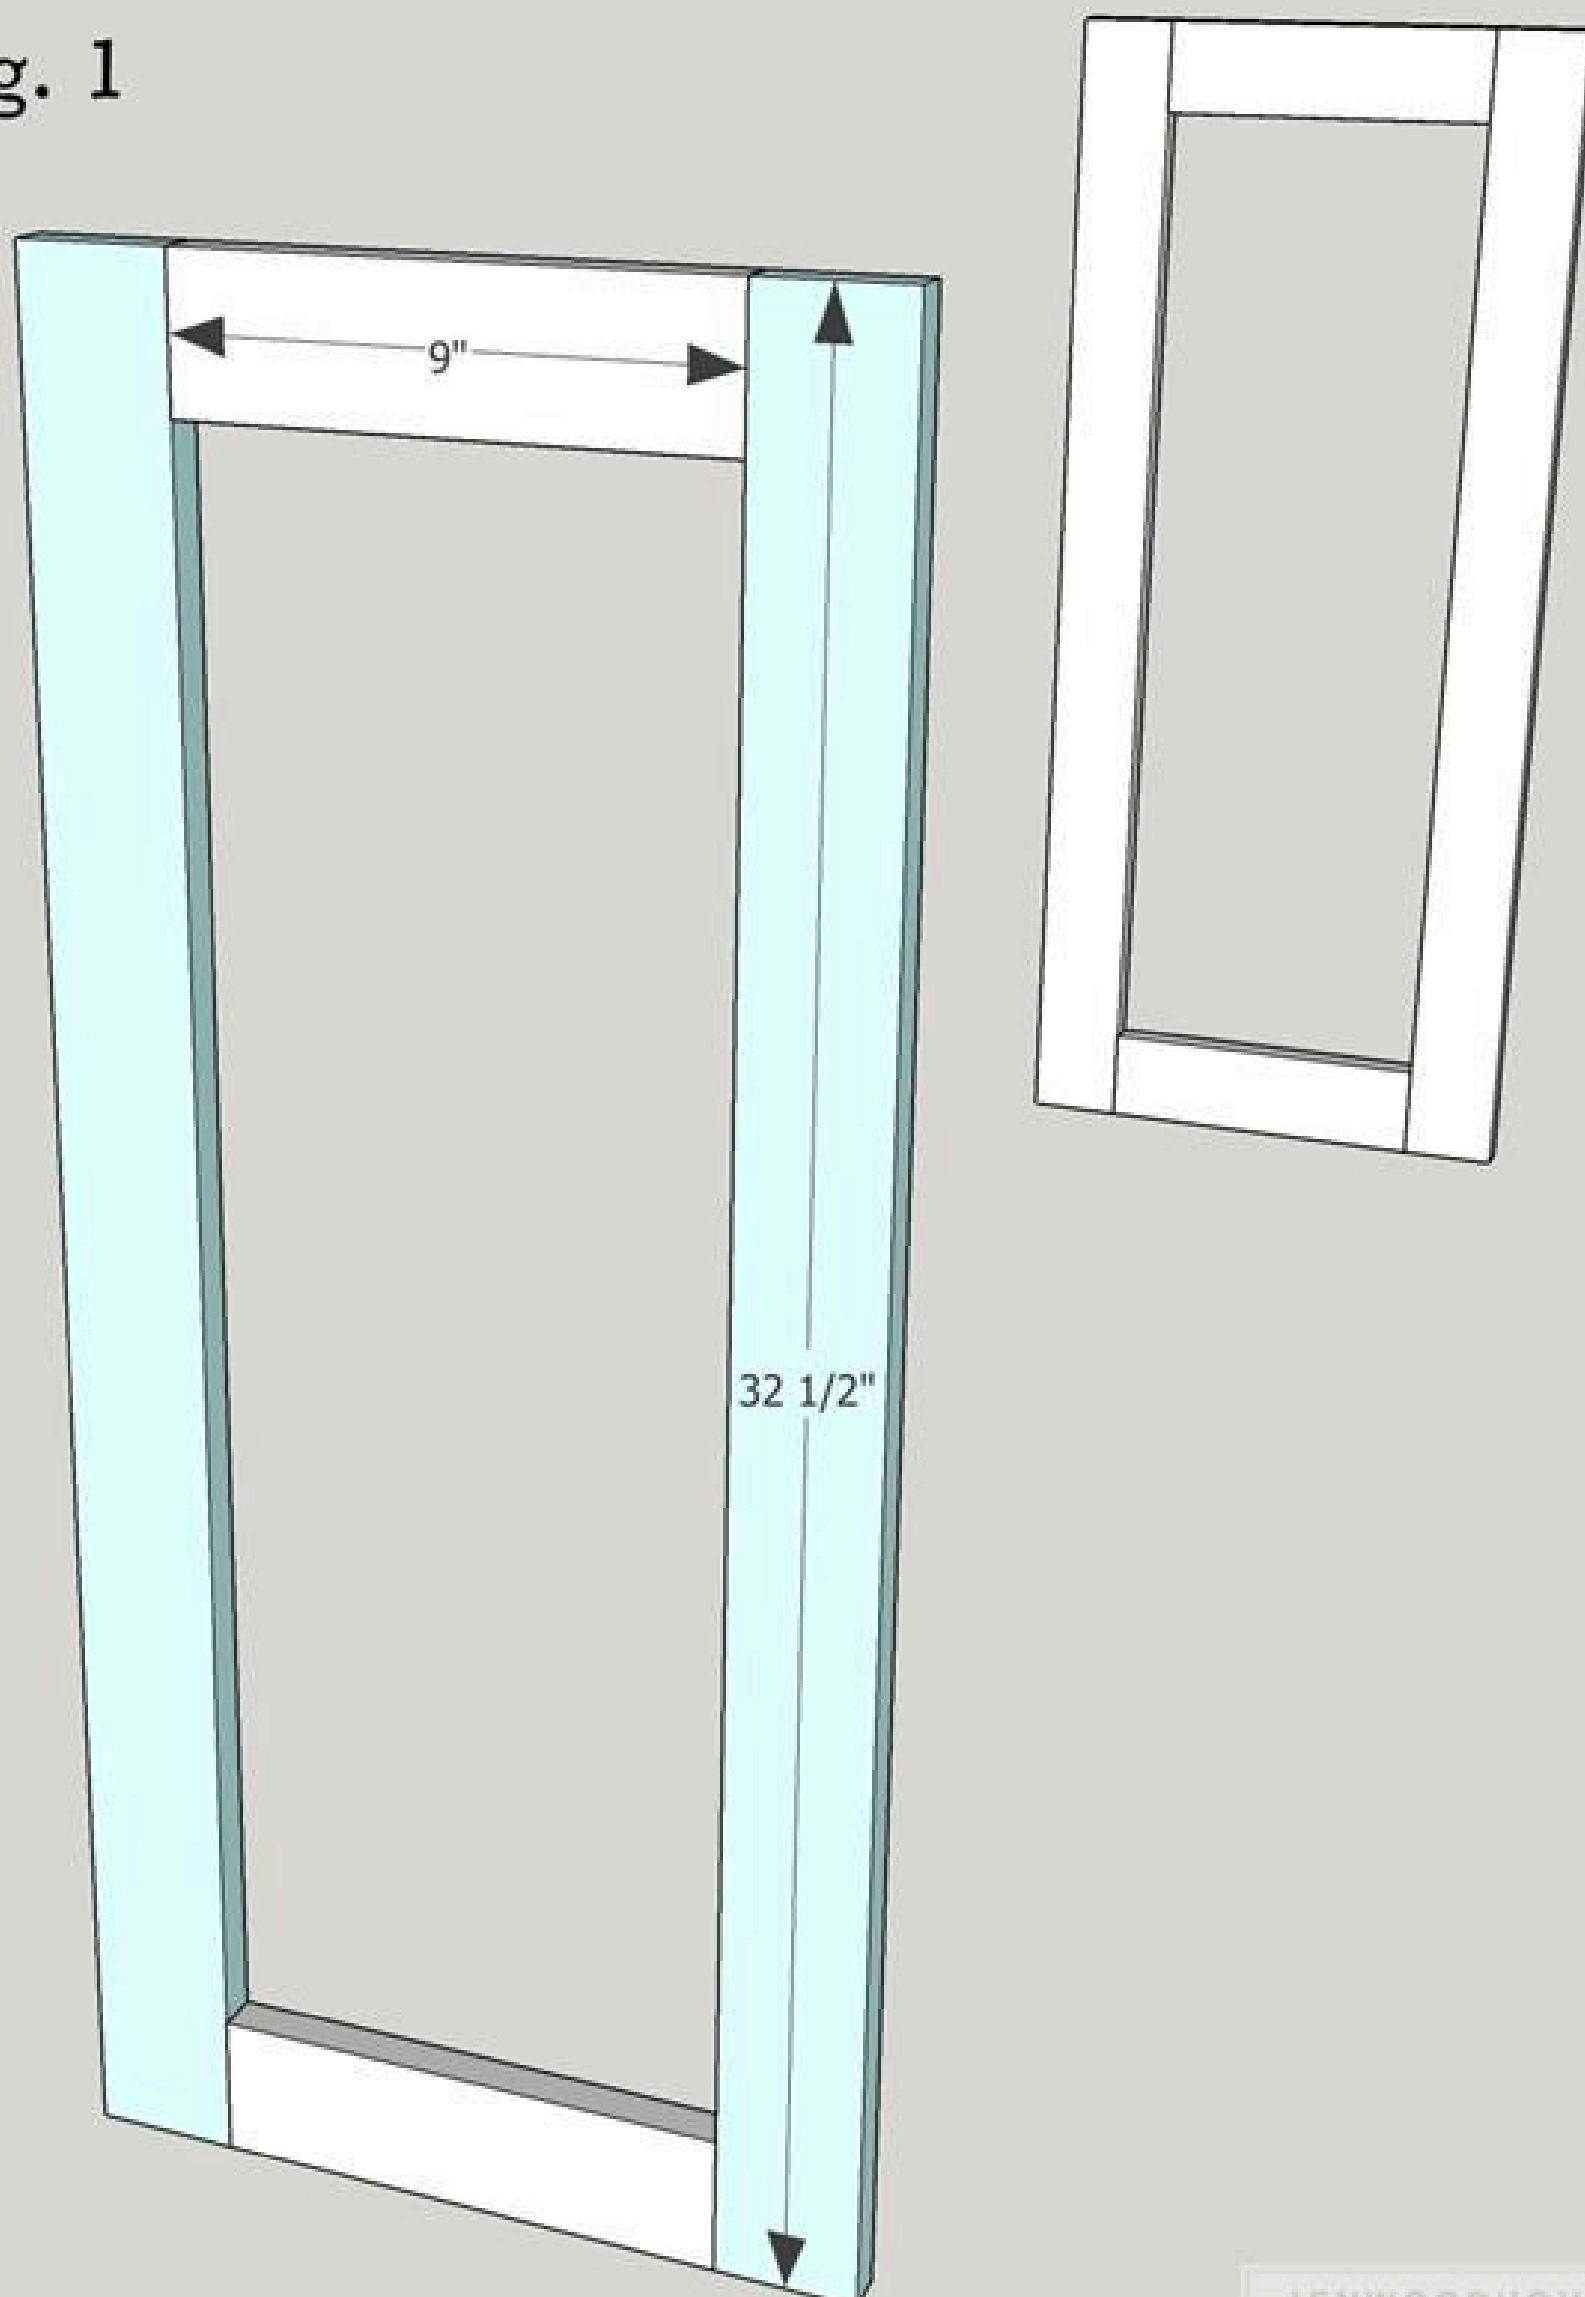Fig. 1

JENWOODHOUSE

2

Add the Front and Back Legs

Measure, mark, and cut the front and back legs to size. Attach the front and back legs to the side legs with 1 1/4-inch brad nails and wood glue.

Fig. 2




3

Attach the Bottom Shelf

Measure, mark, and cut bottom shelf to size. Drill 3/4-inch pocket holes into the ends and attach to the sides with 1 1/4-inch pocket screws.

Fig. 3

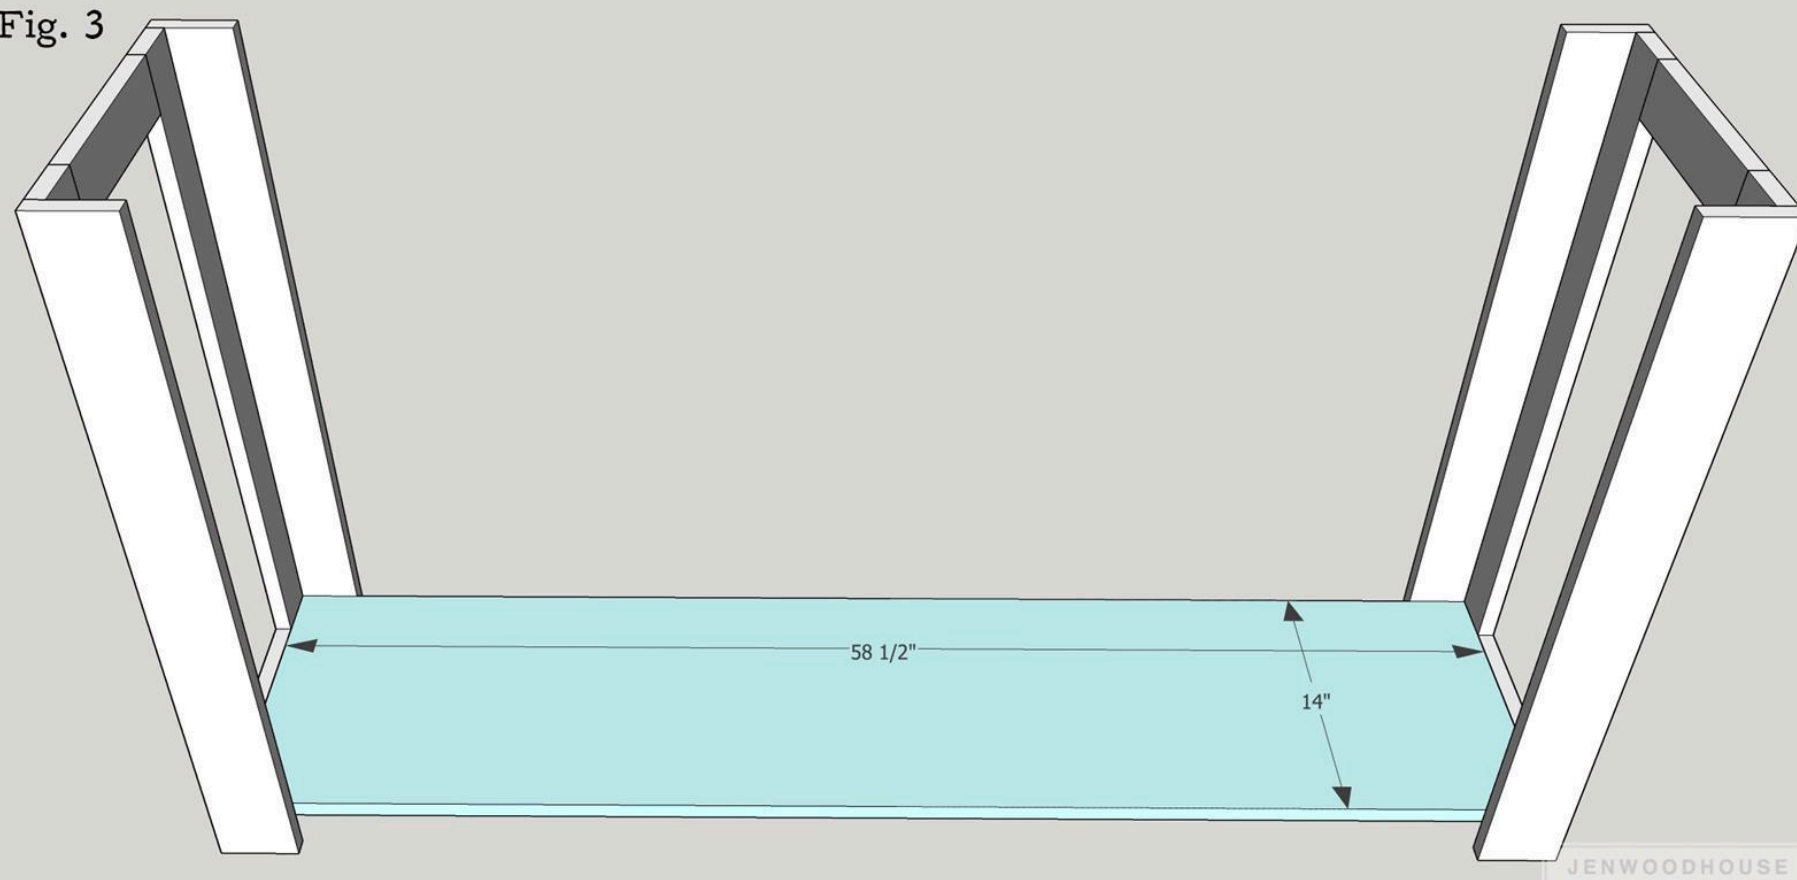


4

Add the Long Aprons To the Bottom

Measure, mark, and cut long aprons to size. Attach to carcass as shown with 1 1/4-inch brad nails and wood glue.

Fig. 4

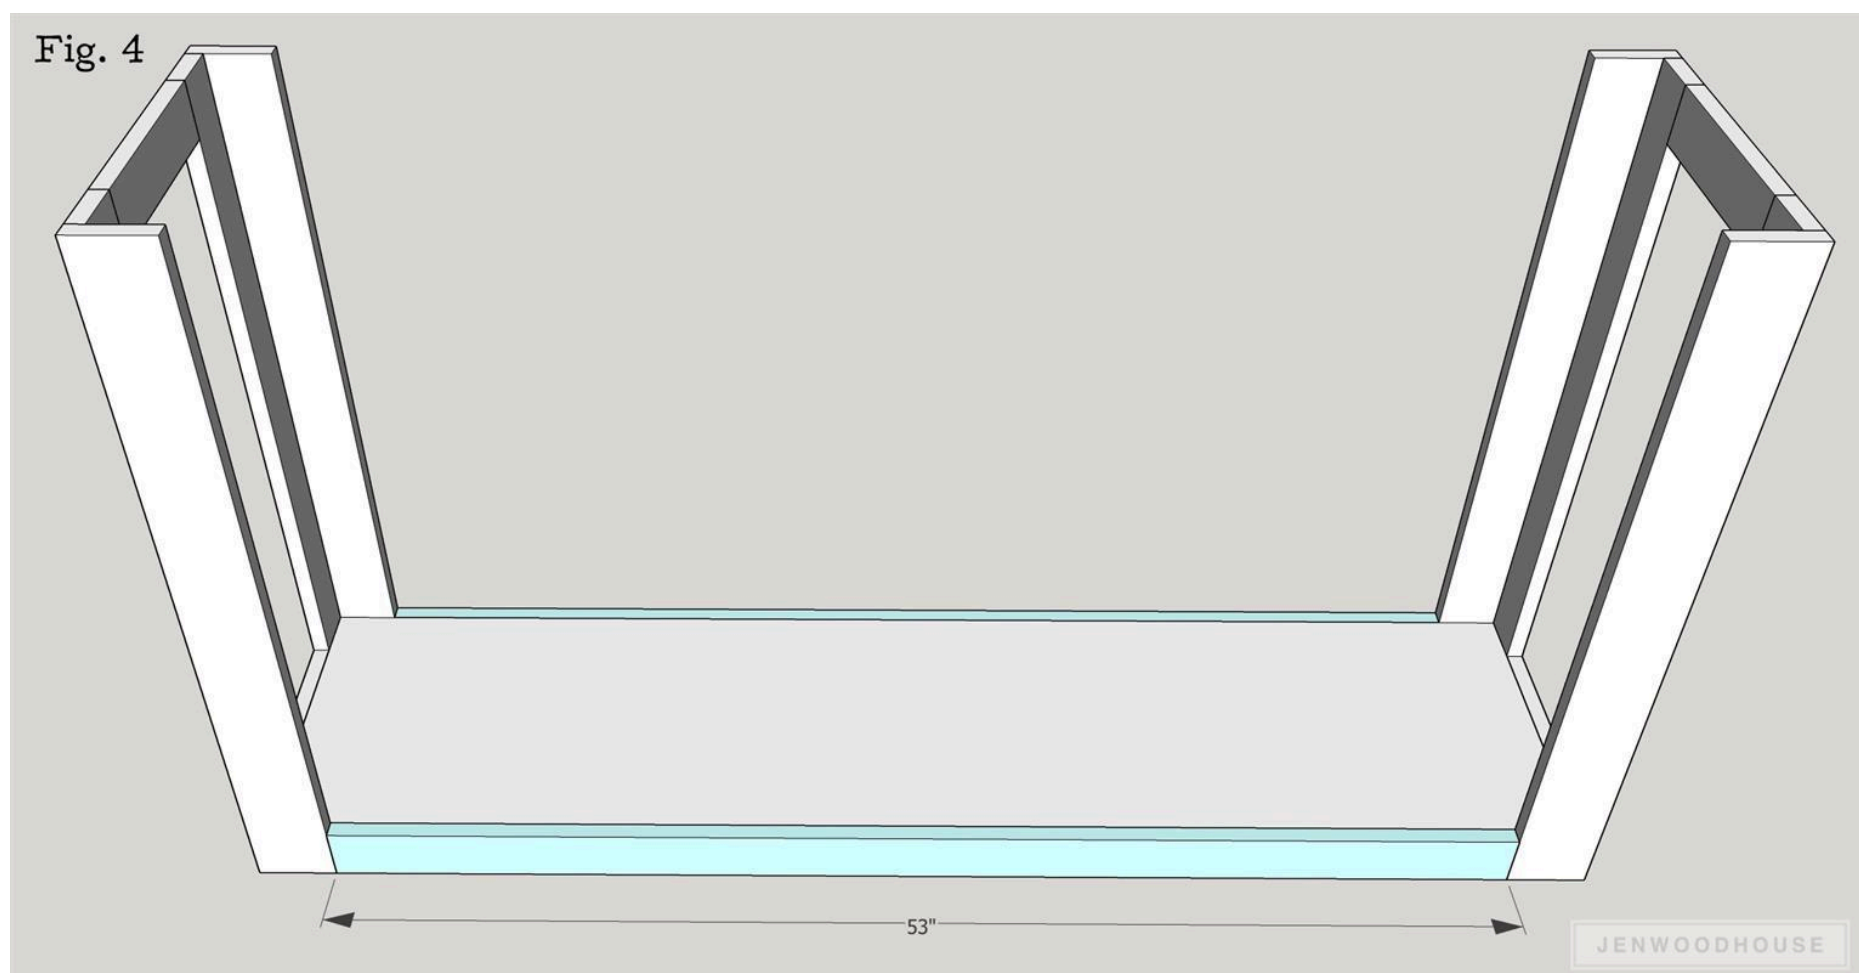


5

Add the Long Aprons To the Top

Measure, mark, and cut long aprons to size. Drill 3/4-inch pocket holes into the ends and attach to carcass with 1 1/4-inch pocket screws. Be sure to drill 3/4-inch pocket holes facing up to attach the top in later steps.

Fig. 5

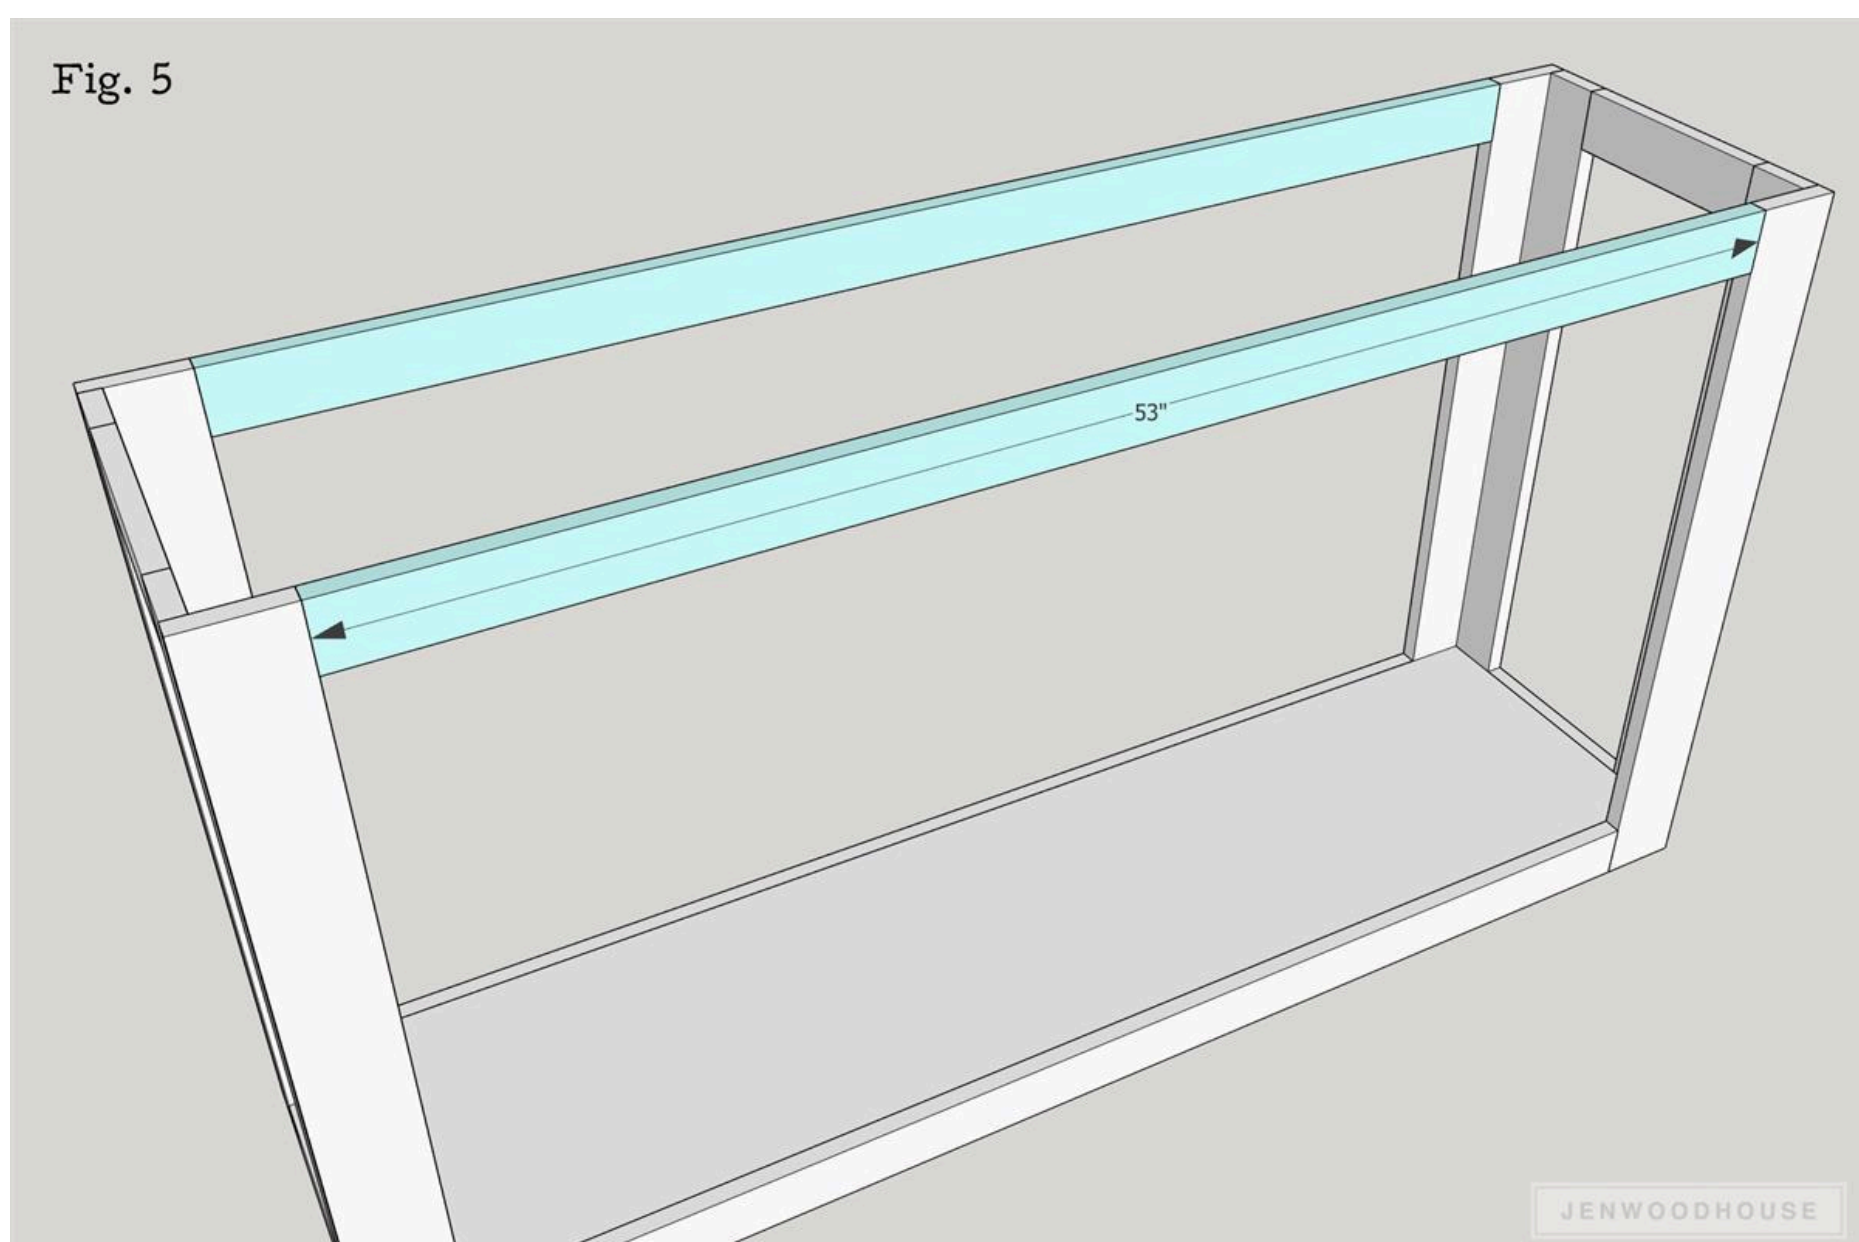


6

Attach the Middle Legs

Measure, mark, and cut middle legs to size. Drill 3/4-inch pocket holes into the ends, find the midpoint in the carcass and attach middle legs with 1 1/4-inch pocket screws.


Fig. 6

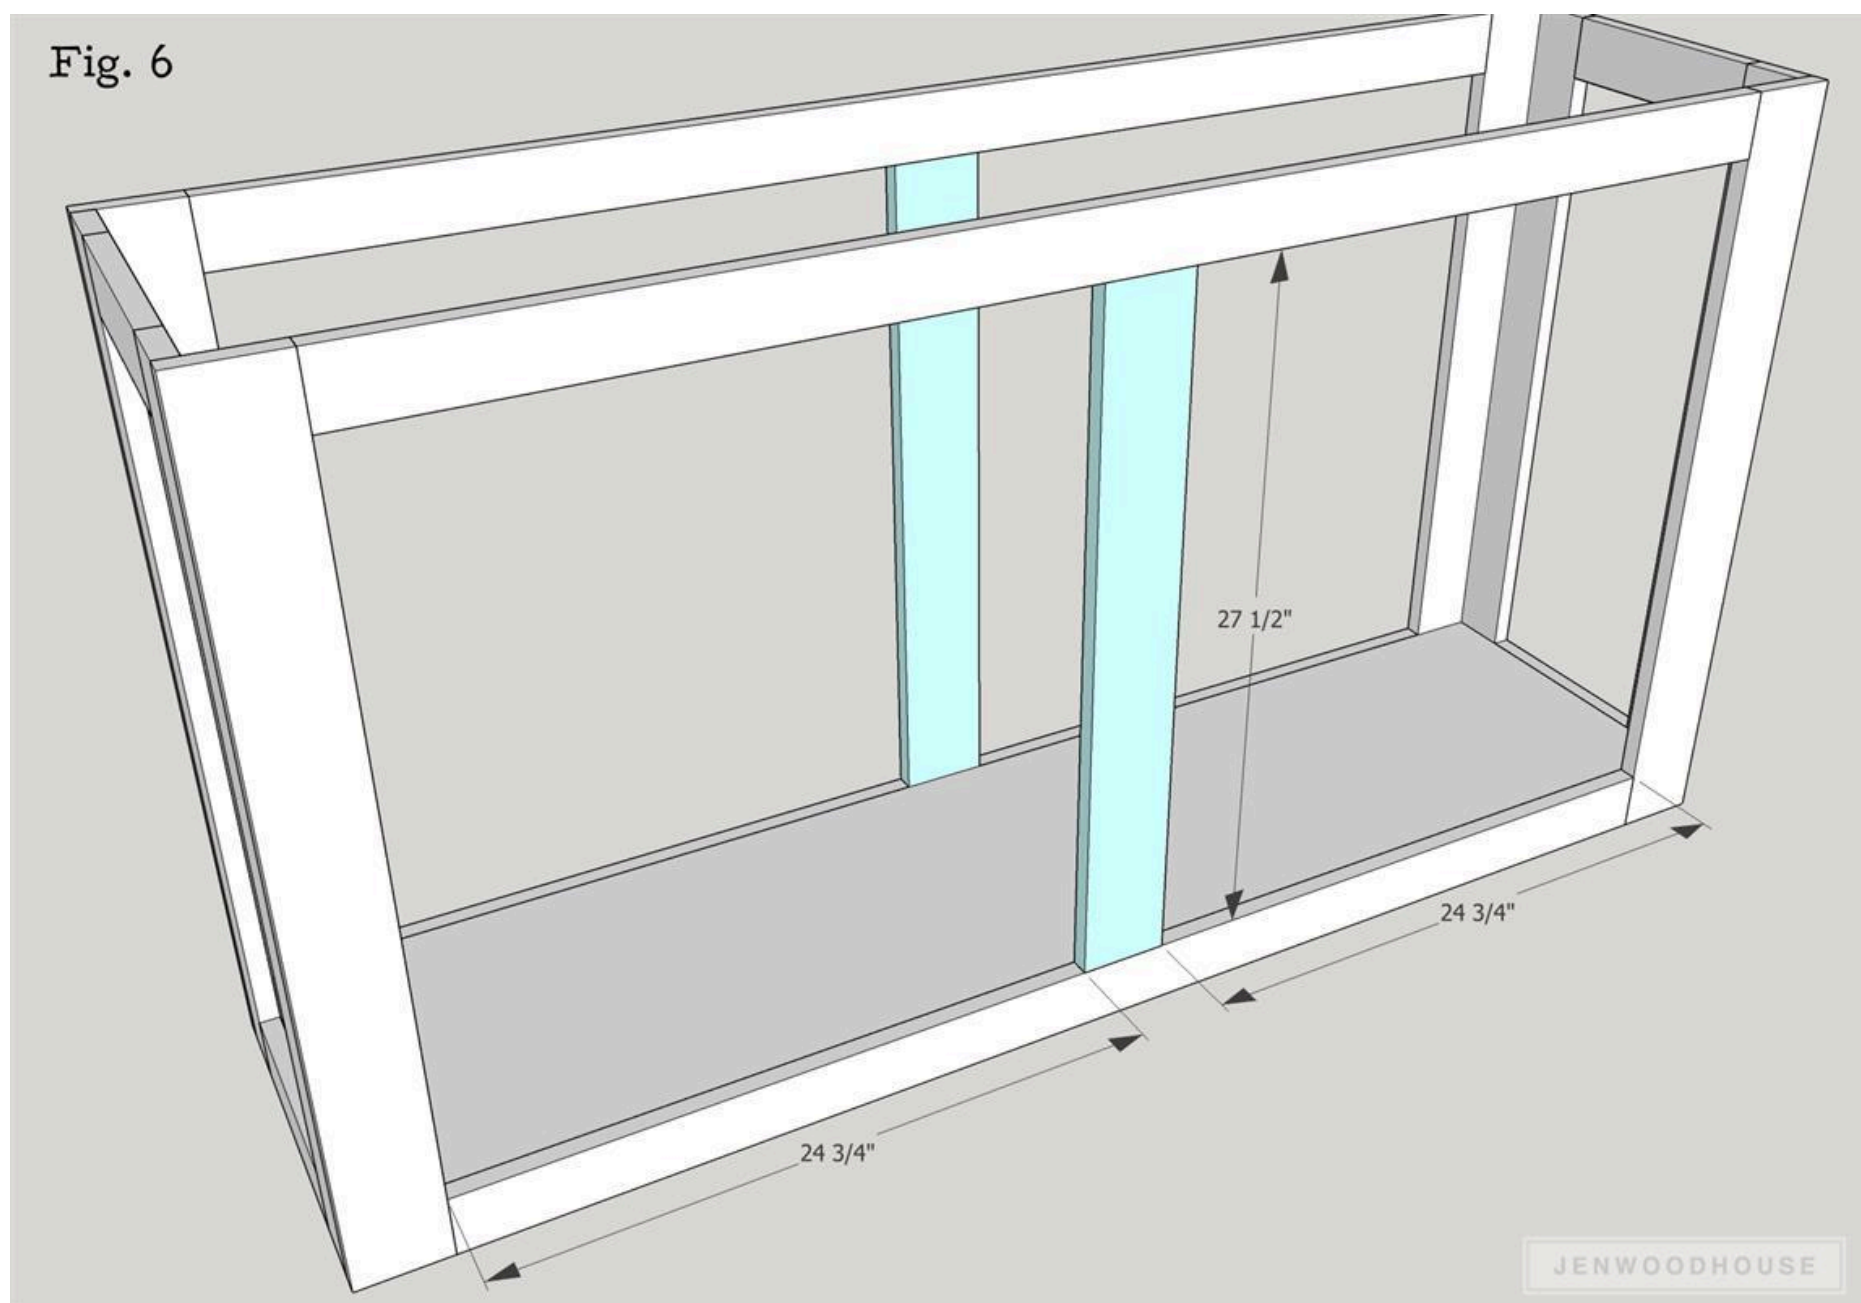

7**Add the Curved Details**

Measure, mark, and cut curved pieces out with a jigsaw, bandsaw, or scroll saw. Attach as shown with wood glue and 1 inch brad nails.


Fig. 7

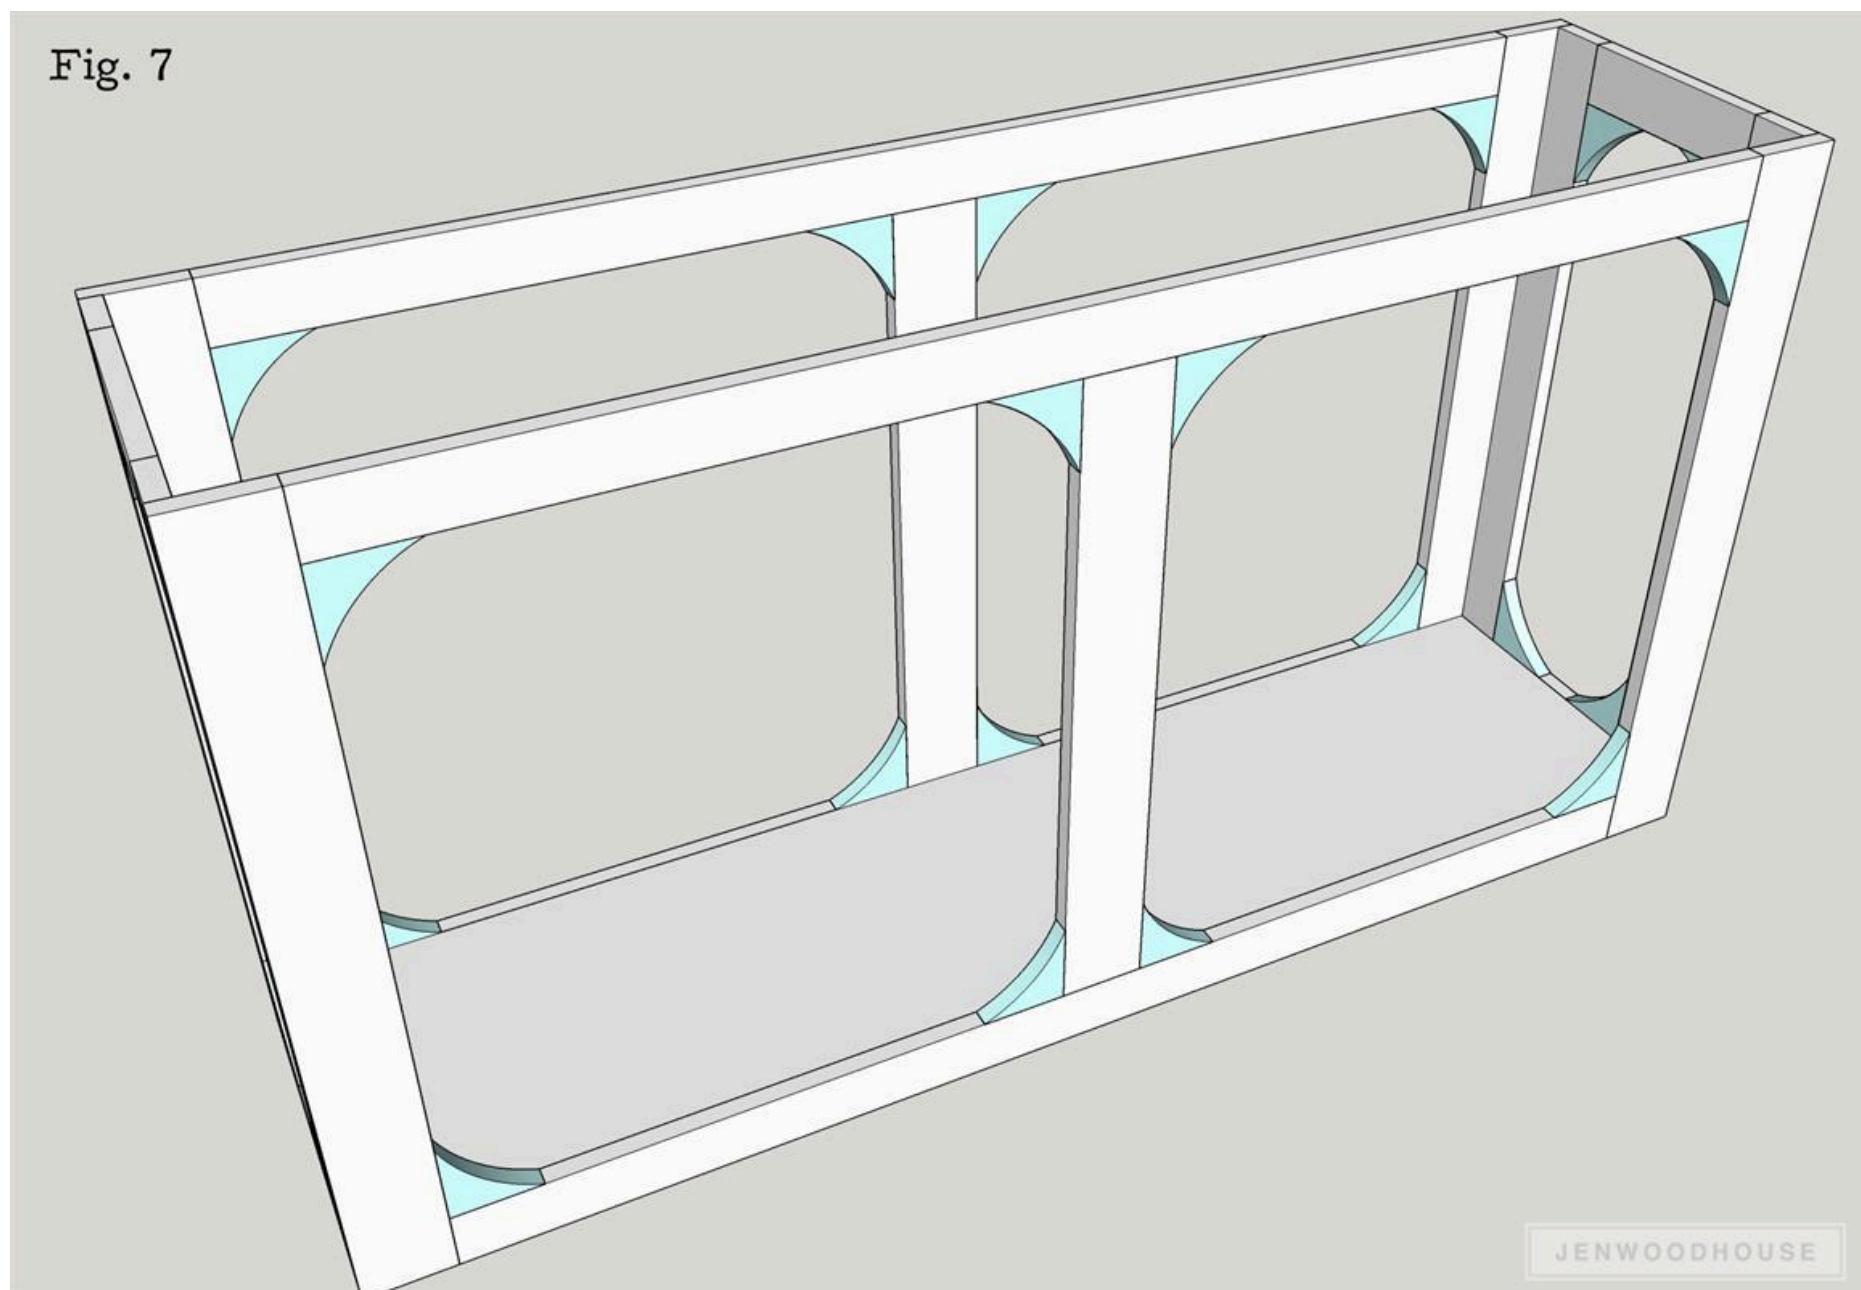

8

Add the Underside Support


Measure, mark, and cut middle support to size. Drill 3/4-inch pocket holes into ends and attach as shown with 1 1/4-inch pocket screws.

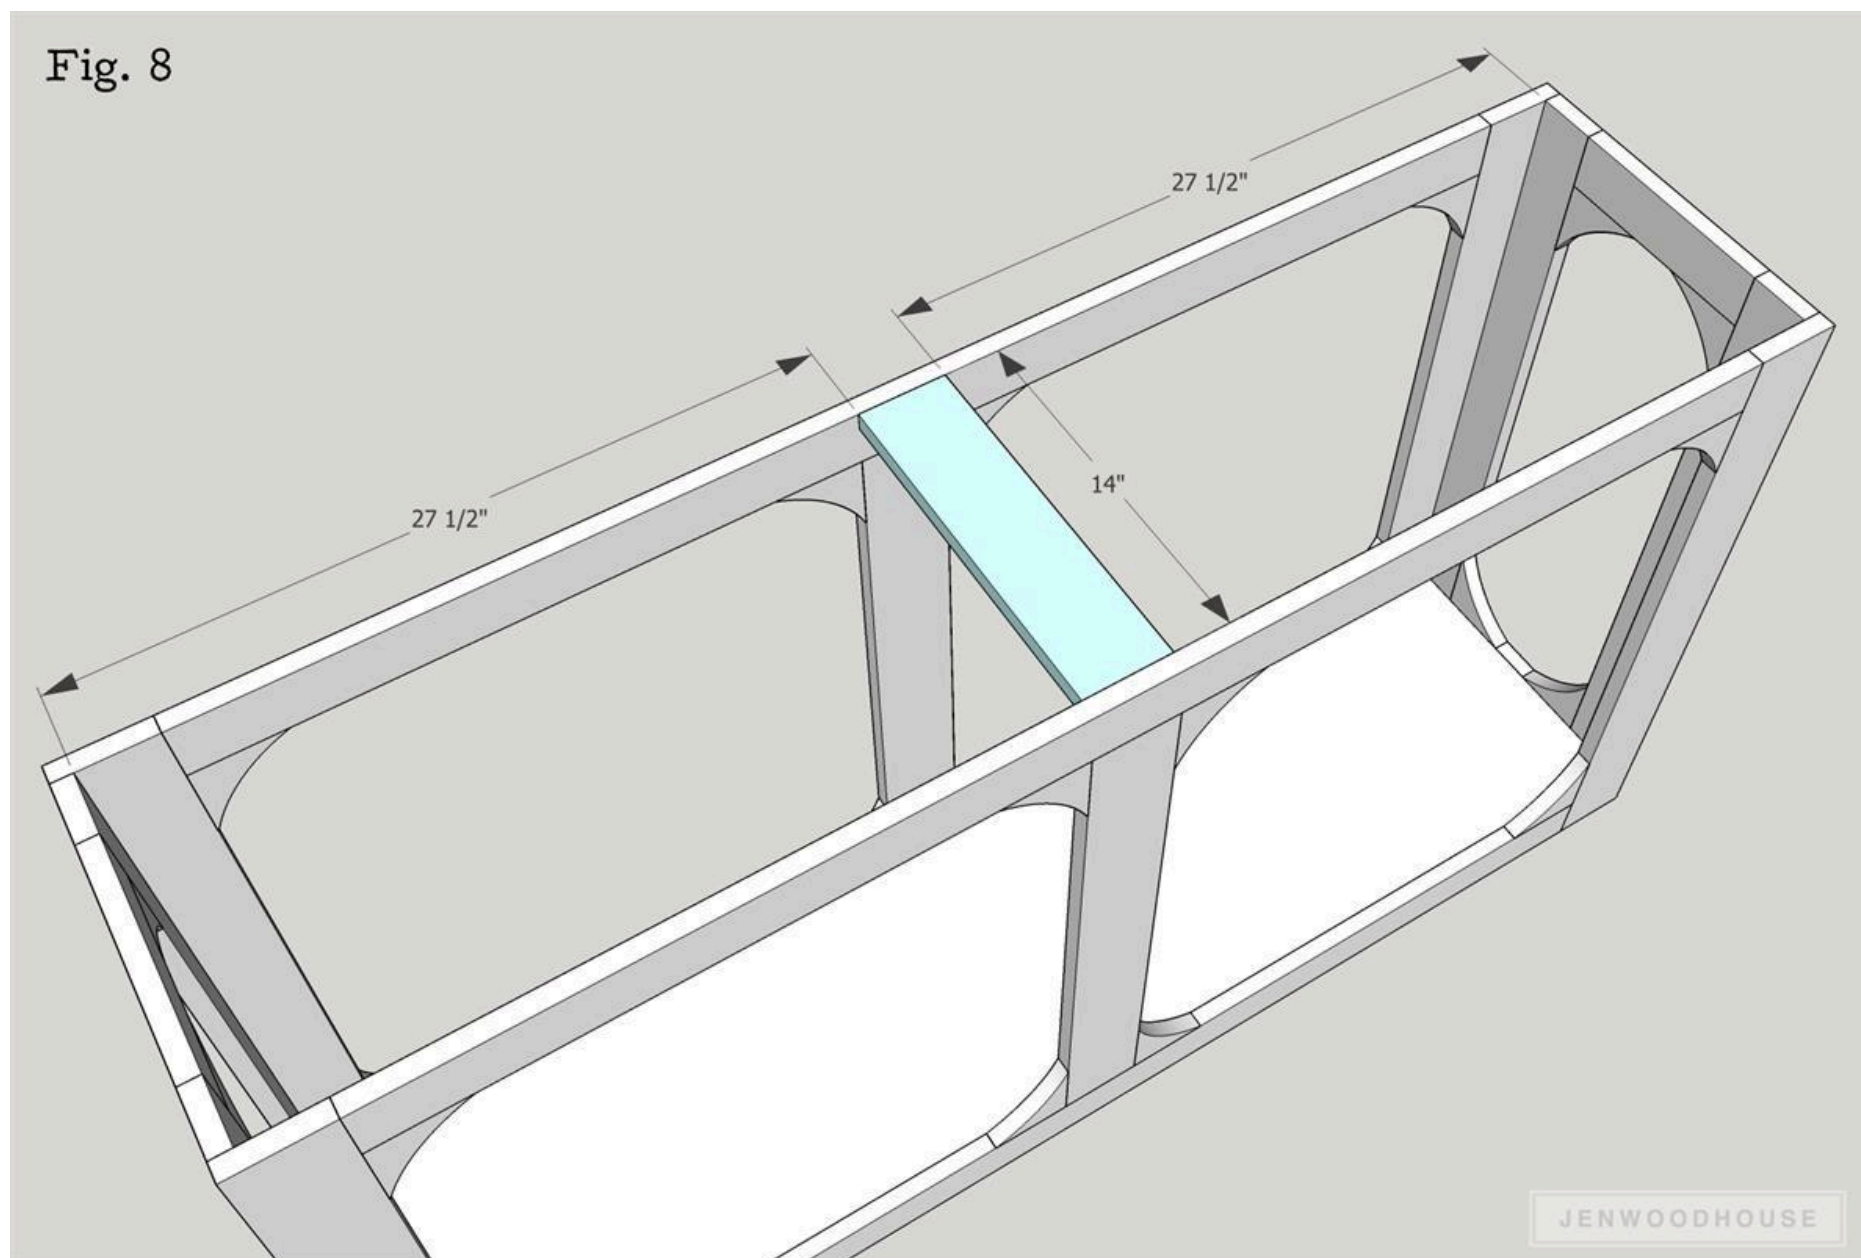Fig. 8

9

Attach the Top

Measure, mark, and cut top to size. Position over the carcass with a 1/2-inch overhang on all sides. Attach with 1 1/4-inch pocket screws driven from the aprons underneath.

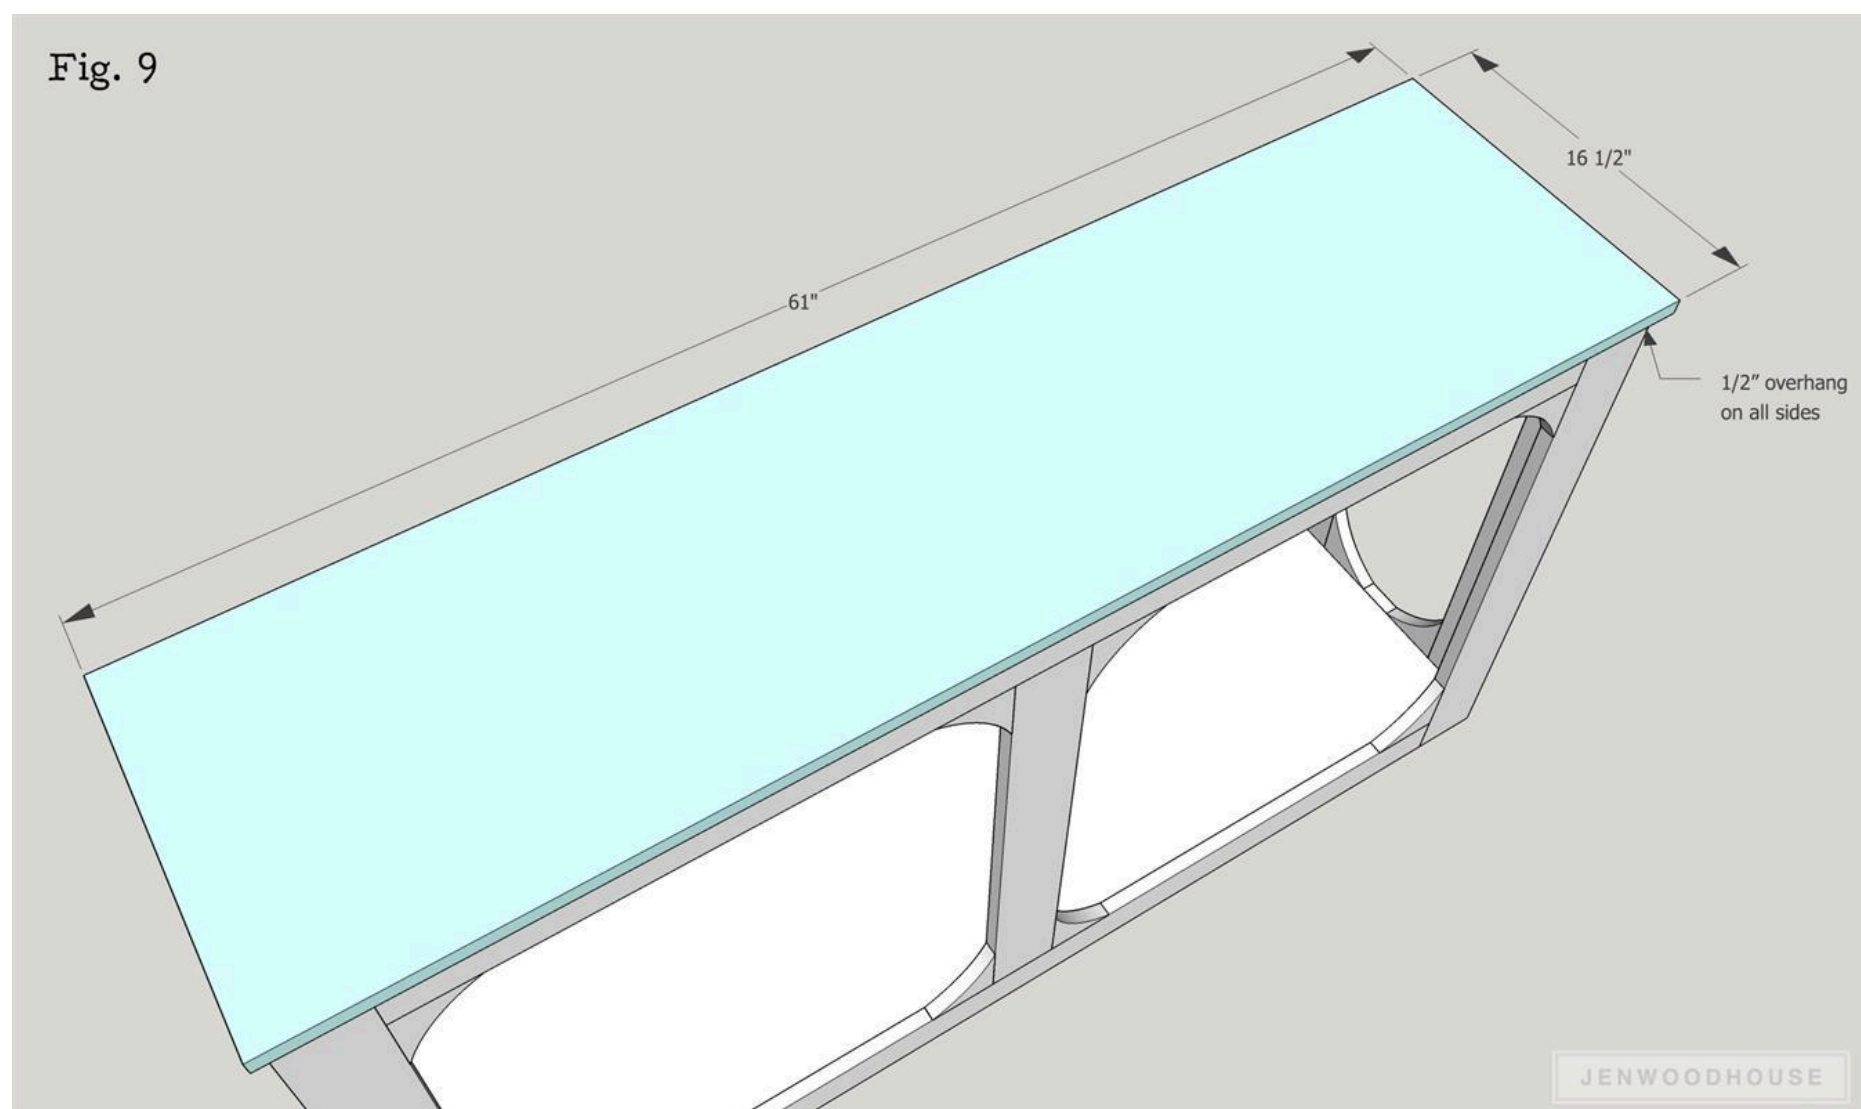

10

Visit JenWoodhouse.com

Visit JenWoodhouse.com for more information, DIY project ideas, and building plans.

