

Plywood Shelves for Closet


By **Jaime Costiglio**

Difficulty

Easy

Make that closet space function like it should with easy plywood shelving. You'll be kicking yourself for not installing these plywood shelves a long time ago. Customize to fit your closet space and you'll want to tackle all the closets in your home!



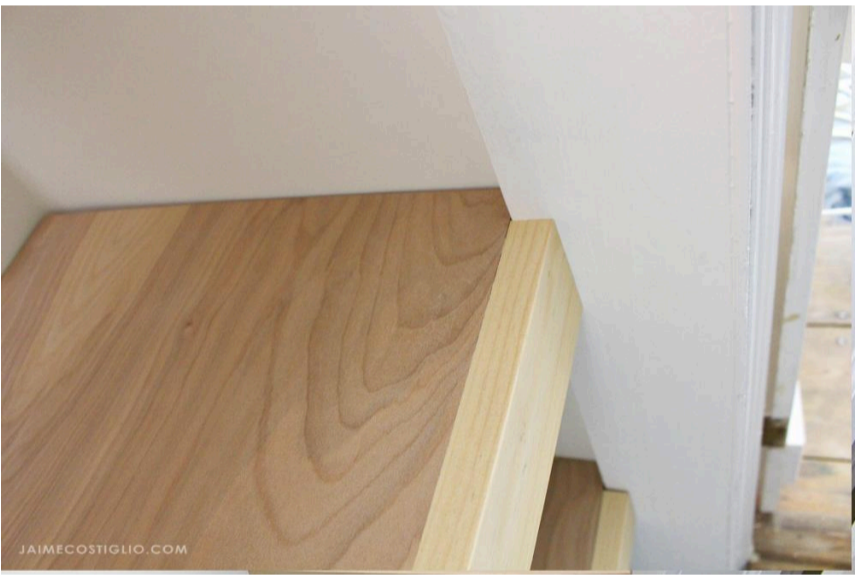

Tools

Kreg Tools



Accu-Cut™

Other Tools

Circular Saw (cordless)

Miter Saw

Square

Tape Measure

Nail Gun

Materials

Wood Products

1 Plywood , 3/4" Thick , Full Sheet

2 Board , 1x2 , 96"

2 Board , 1x3 , 96"

Hardware & Supplies

50 2" Finish Nails

25 1 1/4" Finish Nails

Cut List & Parts

5 Shelves , 3/4" X 13" X 23"

10 Wall Cleats , 1 X 2 X 13"

5 Shelf Trim , 1 X 3 X 22 1/4"

Directions

1

Step 1

Cut 1x2 wall cleats to fit the depth of your closet space. Two cleats per shelf.

2

Step 2

Attach 1x2 cleats to wall using construction adhesive and 2" finish nails. Be sure to use a level and keep cleats in pairs.



3

Step 3

Cut plywood shelves to fit. Measure depth of space x width of closet space. Place shelves into position on 1x2 cleats.



4

Step 4

Cut 1x3 front trim to fit each shelf front.

