

# Rustic Coffee Table


#### Difficulty

### Easy

This rustic coffee table is an easy weekend build. It has many fun design elements such as nuts and bolts to give it a rustic yet industrial look. This is a great addition to most living room decors.





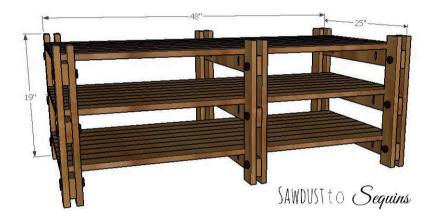



# Tools

### **Kreg Tools**



#### **Other Tools**

Miter Saw

Tape Measure

Drill (cordless)

Sander

Sawhorse

# Materials

#### **Wood Products**

- **18** Board, 1x3, 96"
- **2** Board , 1x2 , 96"

#### Hardware & Supplies


- **18** 1 1/4" Pocket Hole Screws
- **18** 3/8-in-16 X 3-in Bolts
- **18** 3/8-in-16 Hex Nuts
- **18** 3/8-in X 7/8-in Flat Washers
- 48 1 1/4" Wood Screws
- 1 120 Sandpaper
- 1 Kona Wood Stain



# Cut List & Parts

- **24** Shelf Boards , 3/4"x2.5"x48
- **12** Table Leg Height Boards , 3/4"x2.5"x19"
- **9** Table Leg Width Boards , 3/"x2.5"x25"
- 6 Shelf Joiner Boards , 3/4"x1.5"x18"

Cut	t List			18	-	1x3x96"	Boards
235	3-0-1	48"				48"	
	A+CHE-	48"			37-9-	48"	P. L. Control
		48"				48"	
	3+011-	48"			-	48"	
	The second second	48"		-	SHE	48"	S. A. Carrier
		48"	The second second	48"			
	-	48"		48"			
	48"				48"		
	A COLUMN	48"			48"		
3	The said of the said of	48"	4	48"			
vin	48"				48"		
<i>b</i>	THE PARTY IS	48"			5-6-		
AWDUST to Sequins	19"	19"		19"		19"	19"
	19"	19"		19"	4	19"	19"
2		25"	25"	ALC: N	3	19"	19"
55	THE PERSON	25		25			25"
9	25"			-	25" 25"		
$\forall$	25"						

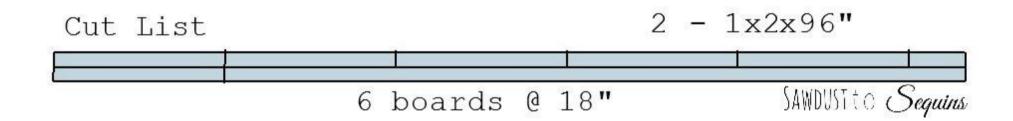



# Directions






# Cut boards and drill holes needed

Cut all boards according to the cut list. Drill holes with a 3/8" spade bit in the (12) 19" boards and the (9) 25" boards. The picture shows the location of the holes.



# Spade bit cuts

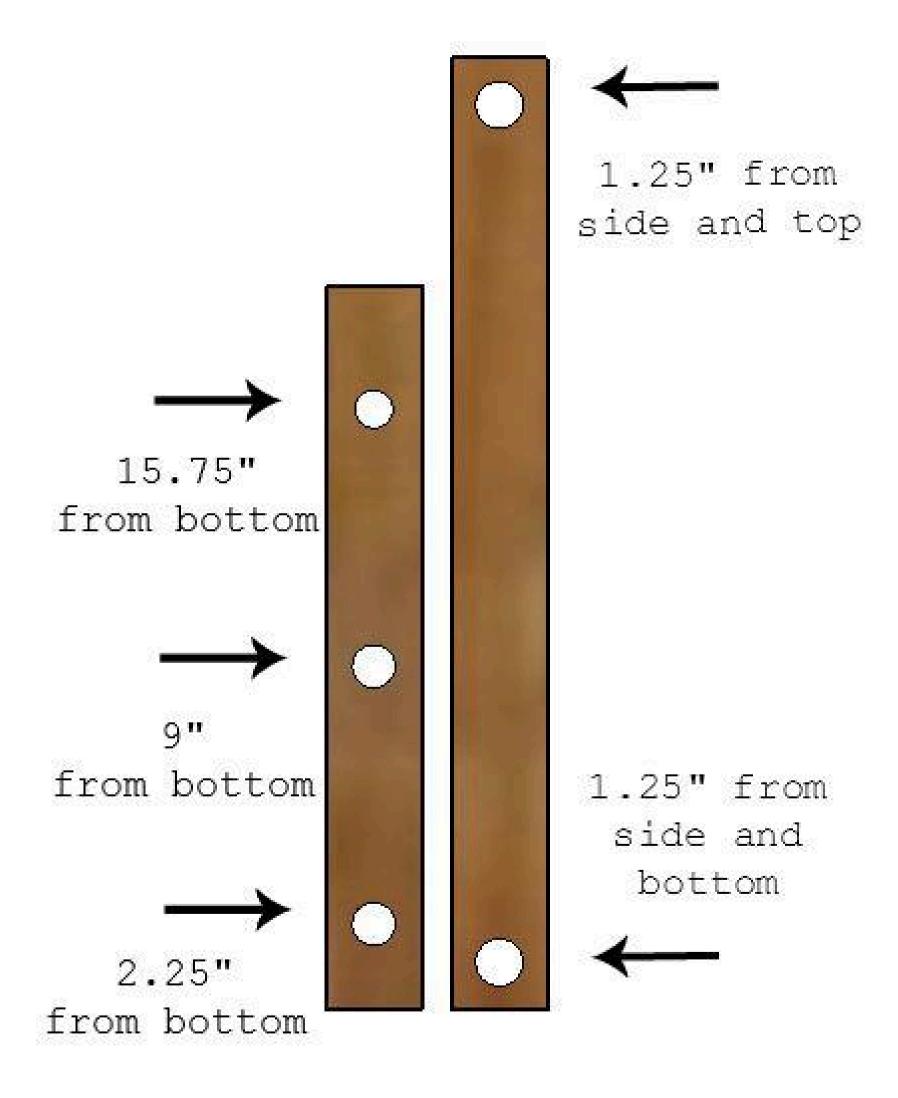


SAMONIST to Sequins



2

# **Drill pocket holes**

Drill pocket holes in the 25" boards. They should be 6" from the edge of each side.

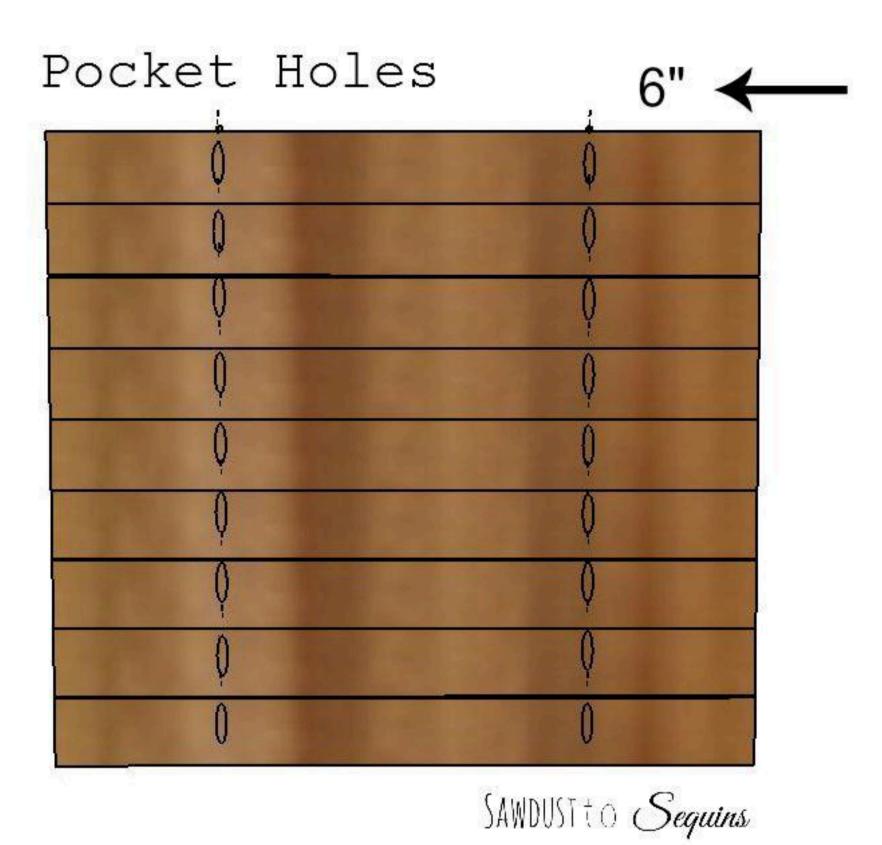

3

#### Sand or Paint Boards


Completely sand your boards and paint or stain. This is very difficult to do once the table is assembled.





### **Assemble Shelves**

Place two of the 18" 1x2 boards across eight of your 48" 1x3 boards and screw in with 1 1/4" wood screws. Repeat until you have three shelf units. 1x2 boards should be placed 6" from each edge.

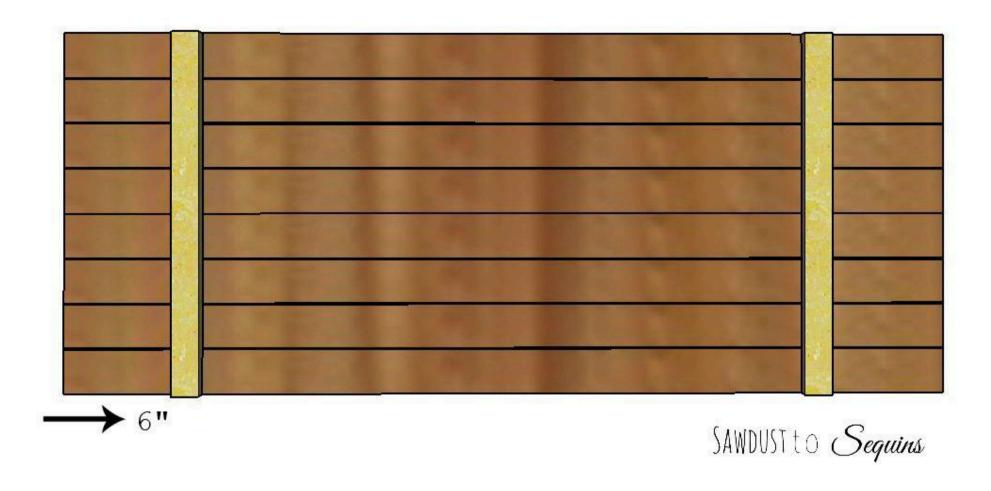





# **Assemble Legs of Table**

Place 3 – 1x3 @ 25" between
3- 1x3 @ 19". Secure with a
bolt, washer, and hex nut.
The holes drilled with the spade
bit will be the placement of the
boards. Tighten the nuts to ensure
the stability of the table. Make three
of these.







# **Install Shelf Units to Legs**

Attach the shelf units you assembled in step 4 to the leg supports with pocket hole screws.

