

Rustic Coffee Table

By The Crafted Maker

Difficulty

Easy

This rustic coffee table is an easy weekend build. It has many fun design elements such as nuts and bolts to give it a rustic yet industrial look. This is a great addition to most living room decors.







Page 1 of 10



Tools

Kreg Tools



Other Tools

Miter Saw

Tape Measure

Drill (cordless)

Sander

Sawhorse

Materials

Wood Products

- 18 Board , 1x3 , 96"
- 2 Board , 1x2 , 96"

Hardware & Supplies

- **18** 1¹/₄" Pocket Hole Screws
- **18** 3/8-in-16 X 3-in Bolts
- 18 3/8-in-16 Hex Nuts
- 18 3/8-in X 7/8-in Flat Washers
- 48 11/4" Wood Screws
- 1 120 Sandpaper
- 1 Kona Wood Stain

Page 2 of 10



Cut List & Parts

- **24** Shelf Boards , 3/4"x2.5"x48
- 12 Table Leg Height Boards , 3/4"x2.5"x19"
- 9 Table Leg Width Boards , 3/"x2.5"x25"
- 6 Shelf Joiner Boards , 3/4"x1.5"x18"

Cut Lis	st		18	- 1x3x90	6" Boards	
The second	48"			4	8"	
Collars Col	48"			48"		
State Anda	48"			48"		
and the second second	48"			48"		
48"				48"		
48"			and the set	48"		
48"			and the second second	48"		
48"				48"		
48"			and the sea	48"		
48"			a particular of the	48"		
48"			1 10 10 10 10 10 10 10 10 10 10 10 10 10	48"		
48"			and the second	48"		
19"	19"	N. R. M. Marine	19"	19"	19"	
19"	19"	and the second	19"	19"	19"	
25" 25"			-	19"	19"	
R TRACE	25"				25"	
R. C. March	25"			25" 25"		
	And a second				25"	

Cut List

SAMDUST to Cequins

2 - 1x2x96"

6 boards @ 18"

SAWDUSTto Sequins

Page 3 of 10



Directions

Page 4 of 10



Cut boards and drill holes needed


1


Cut all boards according to the cut list. Drill holes with a 3/8" spade bit in the (12) 19" boards and the (9) 25" boards. The picture shows the location of the holes.

Page 5 of 10



Spade bit cuts

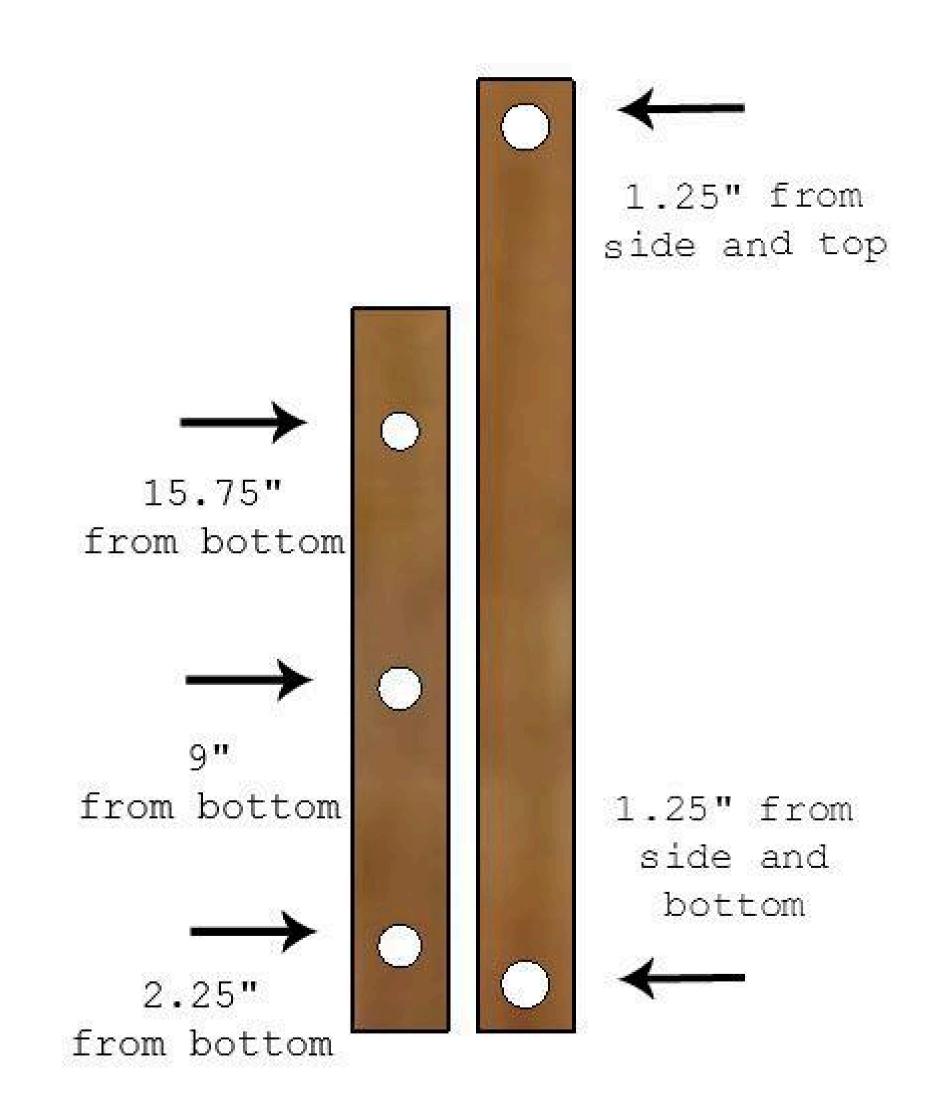






2

Drill pocket holes

Drill pocket holes in the 25" boards. They should be 6" from the edge of each side.

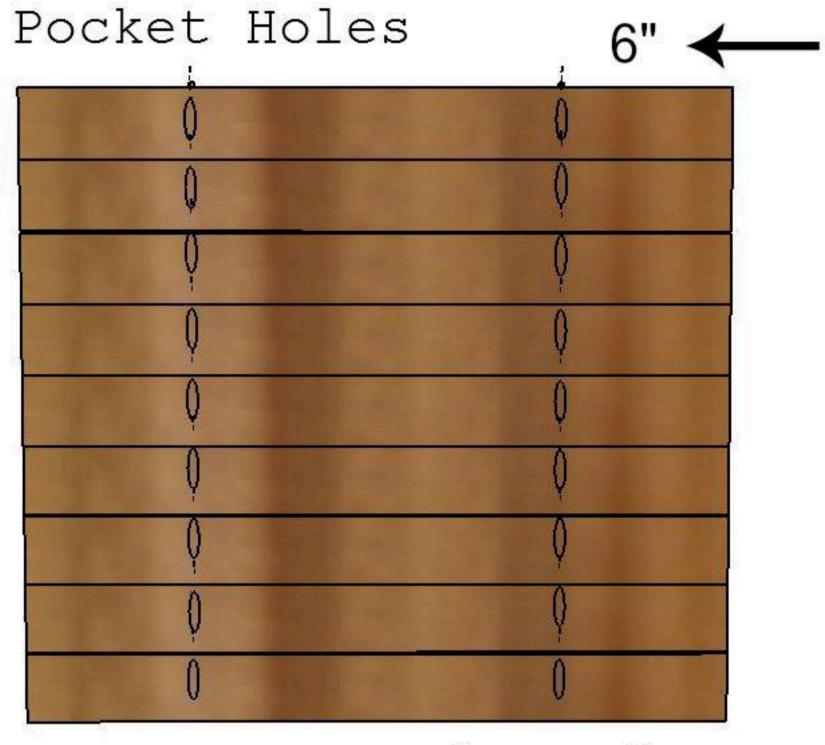

SAWDUSTto Sequins



3


Completely sand your boards and paint or stain. This is very difficult to do once the table is assembled.




4

Assemble Shelves

Place two of the 18" 1x2 boards across eight of your 48" 1x3 boards and screw in with 1 ¼" wood screws. Repeat until you have three shelf units. 1x2 boards should be placed 6" from each edge.

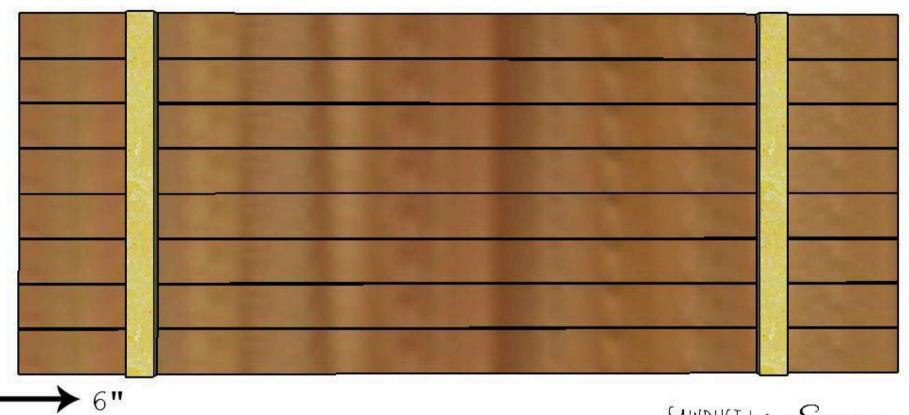



Page 8 of 10



Assemble Legs of Table

5

Place 3 – 1x3 @ 25" between 3- 1x3 @ 19". Secure with a bolt, washer, and hex nut. The holes drilled with the spade bit will be the placement of the boards. Tighten the nuts to ensure the stability of the table. Make three of these.



Page 9 of 10



Install Shelf Units to Legs

6

Attach the shelf units you assembled in step 4 to the leg supports with pocket hole screws.



SAWDUSTLO Sequins

Page 10 of 10