

West Elm Knock Off Media Cabinet

By **Infarrantly Creative**

Difficulty

Moderate

Make a media cabinet to fit perfectly underneath your family room windows. It is a really easy build and the two tone look gives it the high end look.



Tools

Kreg Tools



[Kreg® Pocket-Hole Jig 720](#)

Other Tools

Miter Saw

Square

Table Saw

Tape Measure

Clamps

Drill (corded)

Sander

Materials

Wood Products

- 1 Plywood , 3/4" Thick , 96"
- 1 Board , 2x4 , 24"
- 1 Plywood , 1/4" Thick , 36"

Hardware & Supplies

- 4 Euro Hinges
- 2 Knobs

Cut List & Parts

- 2 Top & Bottom , 3/4" X 31" X 19"
- 2 Sides , 3/4" X 16" X 18"
- 1 Shelf , 3/4" X 29 1/2" X 18"
- 2 Doors , 3/4" X 16" X 15 7/16"
- 1 Back , 1/4" X 31" X 16"
- 4 Legs (Cut At A 10 Degree Angle) , 2" X 4" X 4"

Directions

1

Pocketholes

1. Drill pocketholes into the sides on the 16" side both at the top and bottom. Repeat for the other side.



2

Pocketholes in the Shelf

2. Drill pocketholes into the shelf on the 18" side on both the left and right side of the piece of wood.


3**Legs**

3. To cut the legs take a 2 x 4 scrap and cut a 10 degree angle. Then cut a 4" leg. Repeat that three more times.



4**Leg Pocketholes**

4. Drill 2 pocketholes into the legs going from the shorter edge into the longer edge.

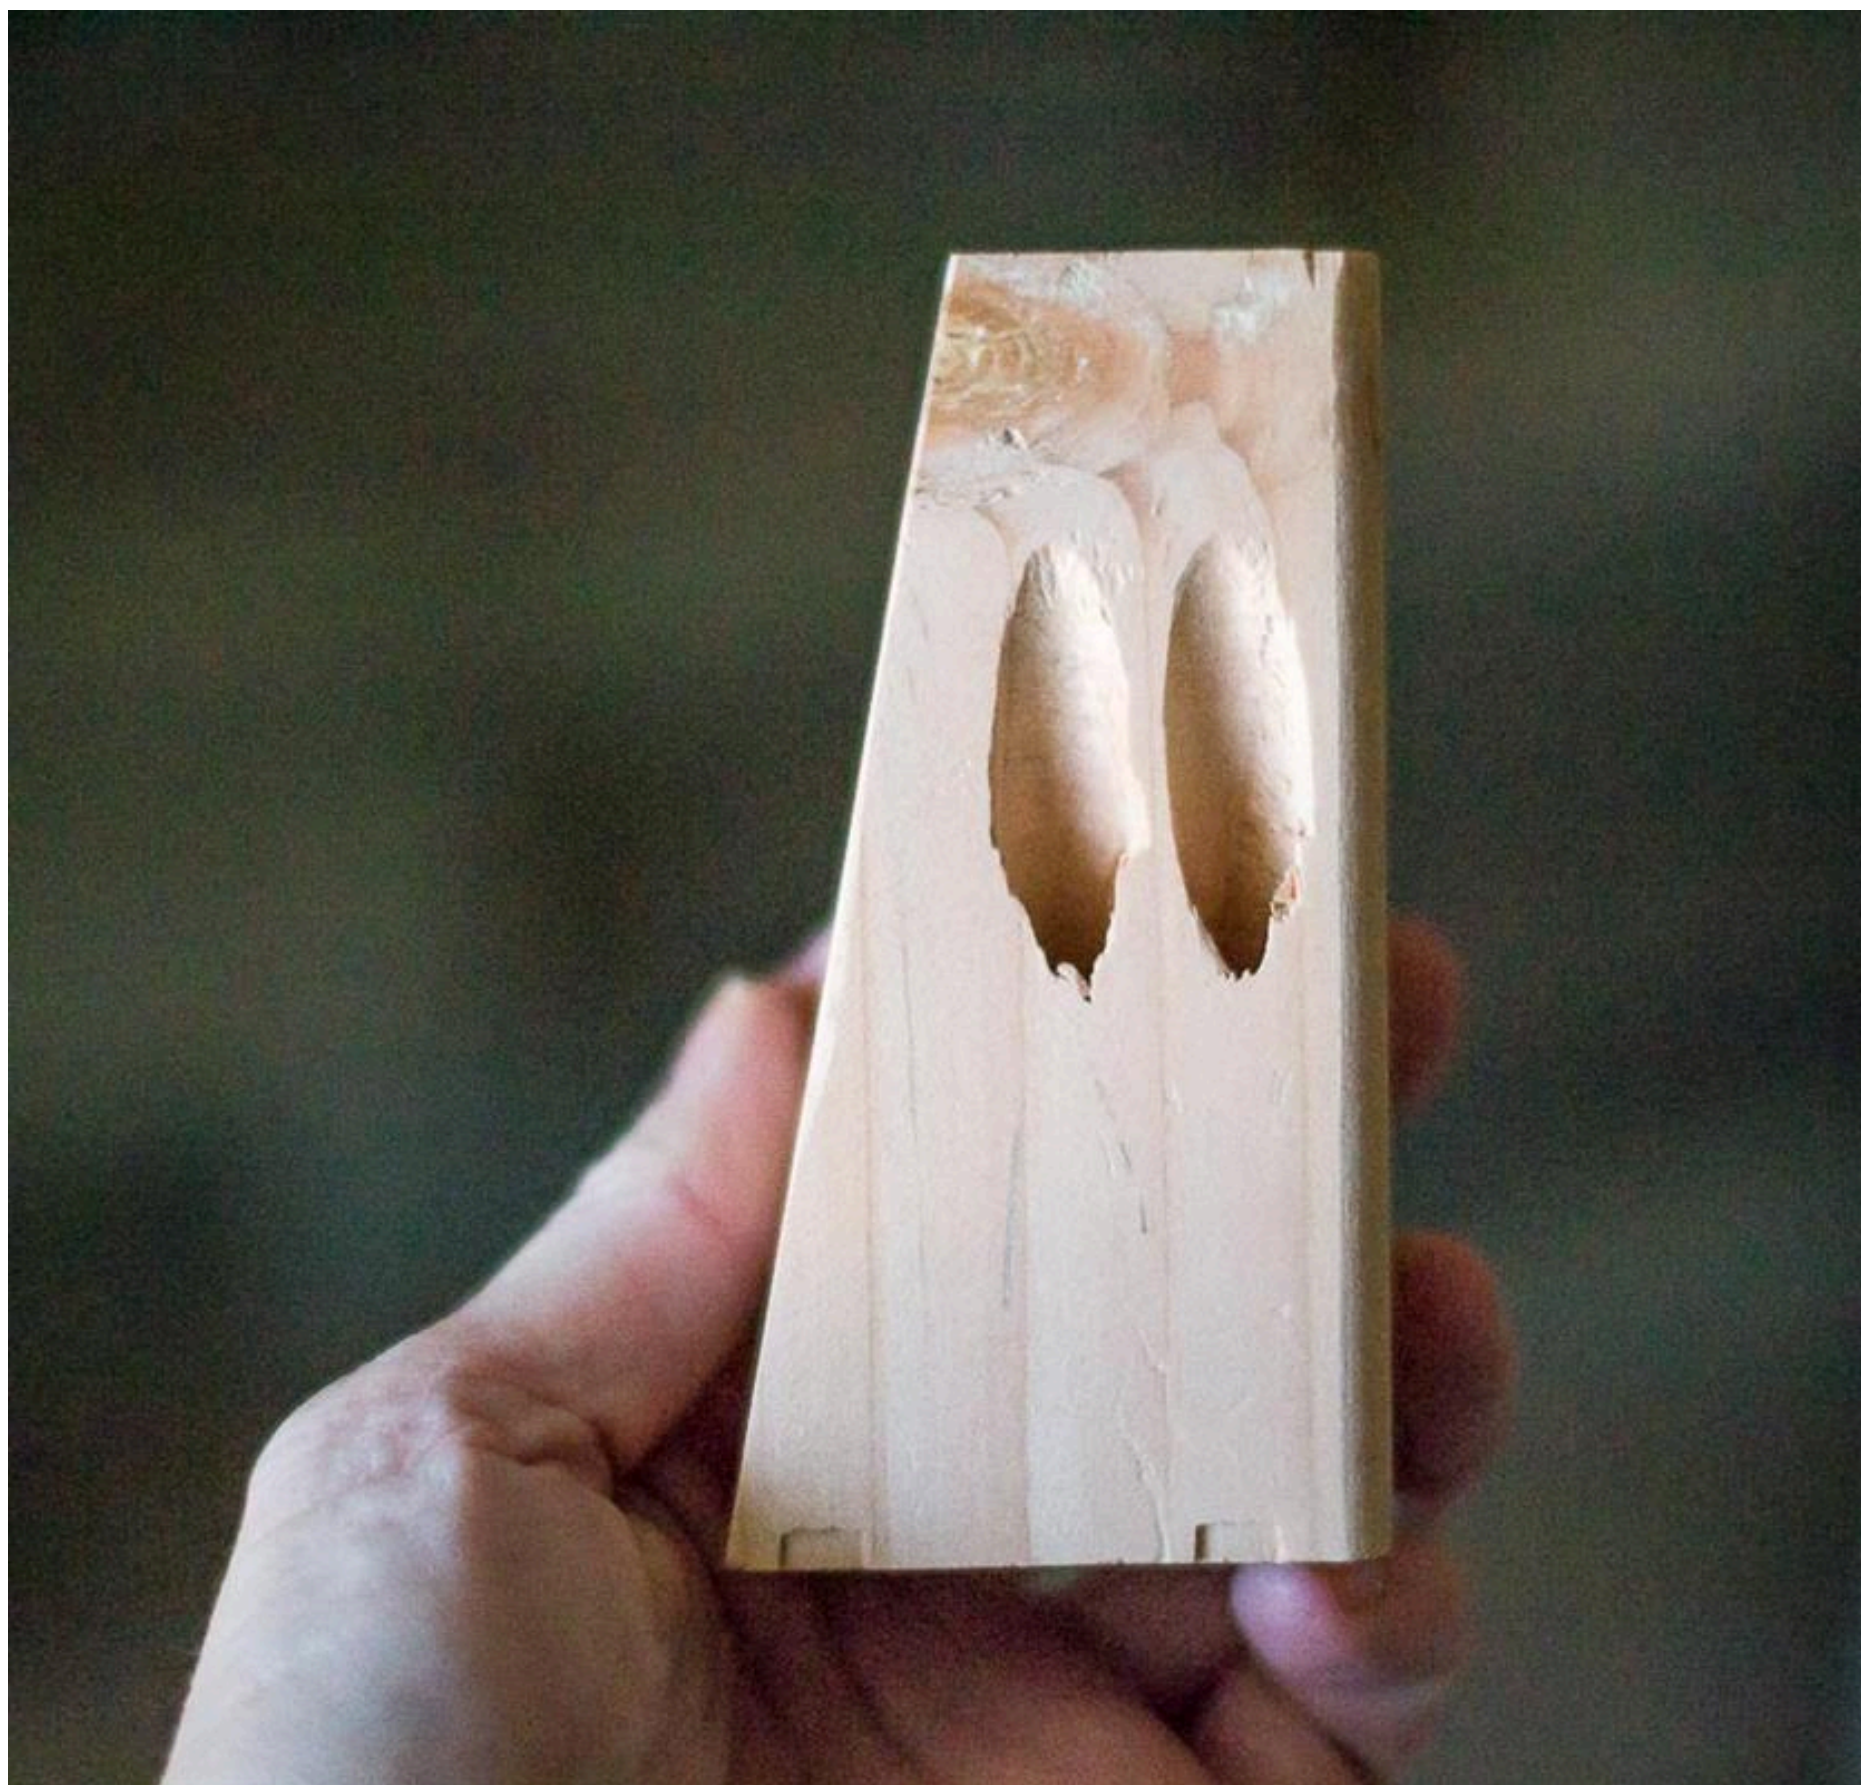

5**Veneer Edging**

5. Add veneer edging to all of the plywood edges that will be shown using an iron. Use a veneer trimmer to clean up the edges.

**6****Shelf Placement**

6. Drill your shelf into the height that you want it.

7**Euro Hinges**

7. Drill your holes for your euro hinges using a euro hinge jig.

8**Assembling Cabinet**


8. To assemble the cabinet drill the sides into the top and bottom inseting them in 1/4" from the back and 3/4" from the front.



9

Adding Feet

9. Flip your cabinet over and add your feet to the bottom making sure the pocketholes are facing the back.

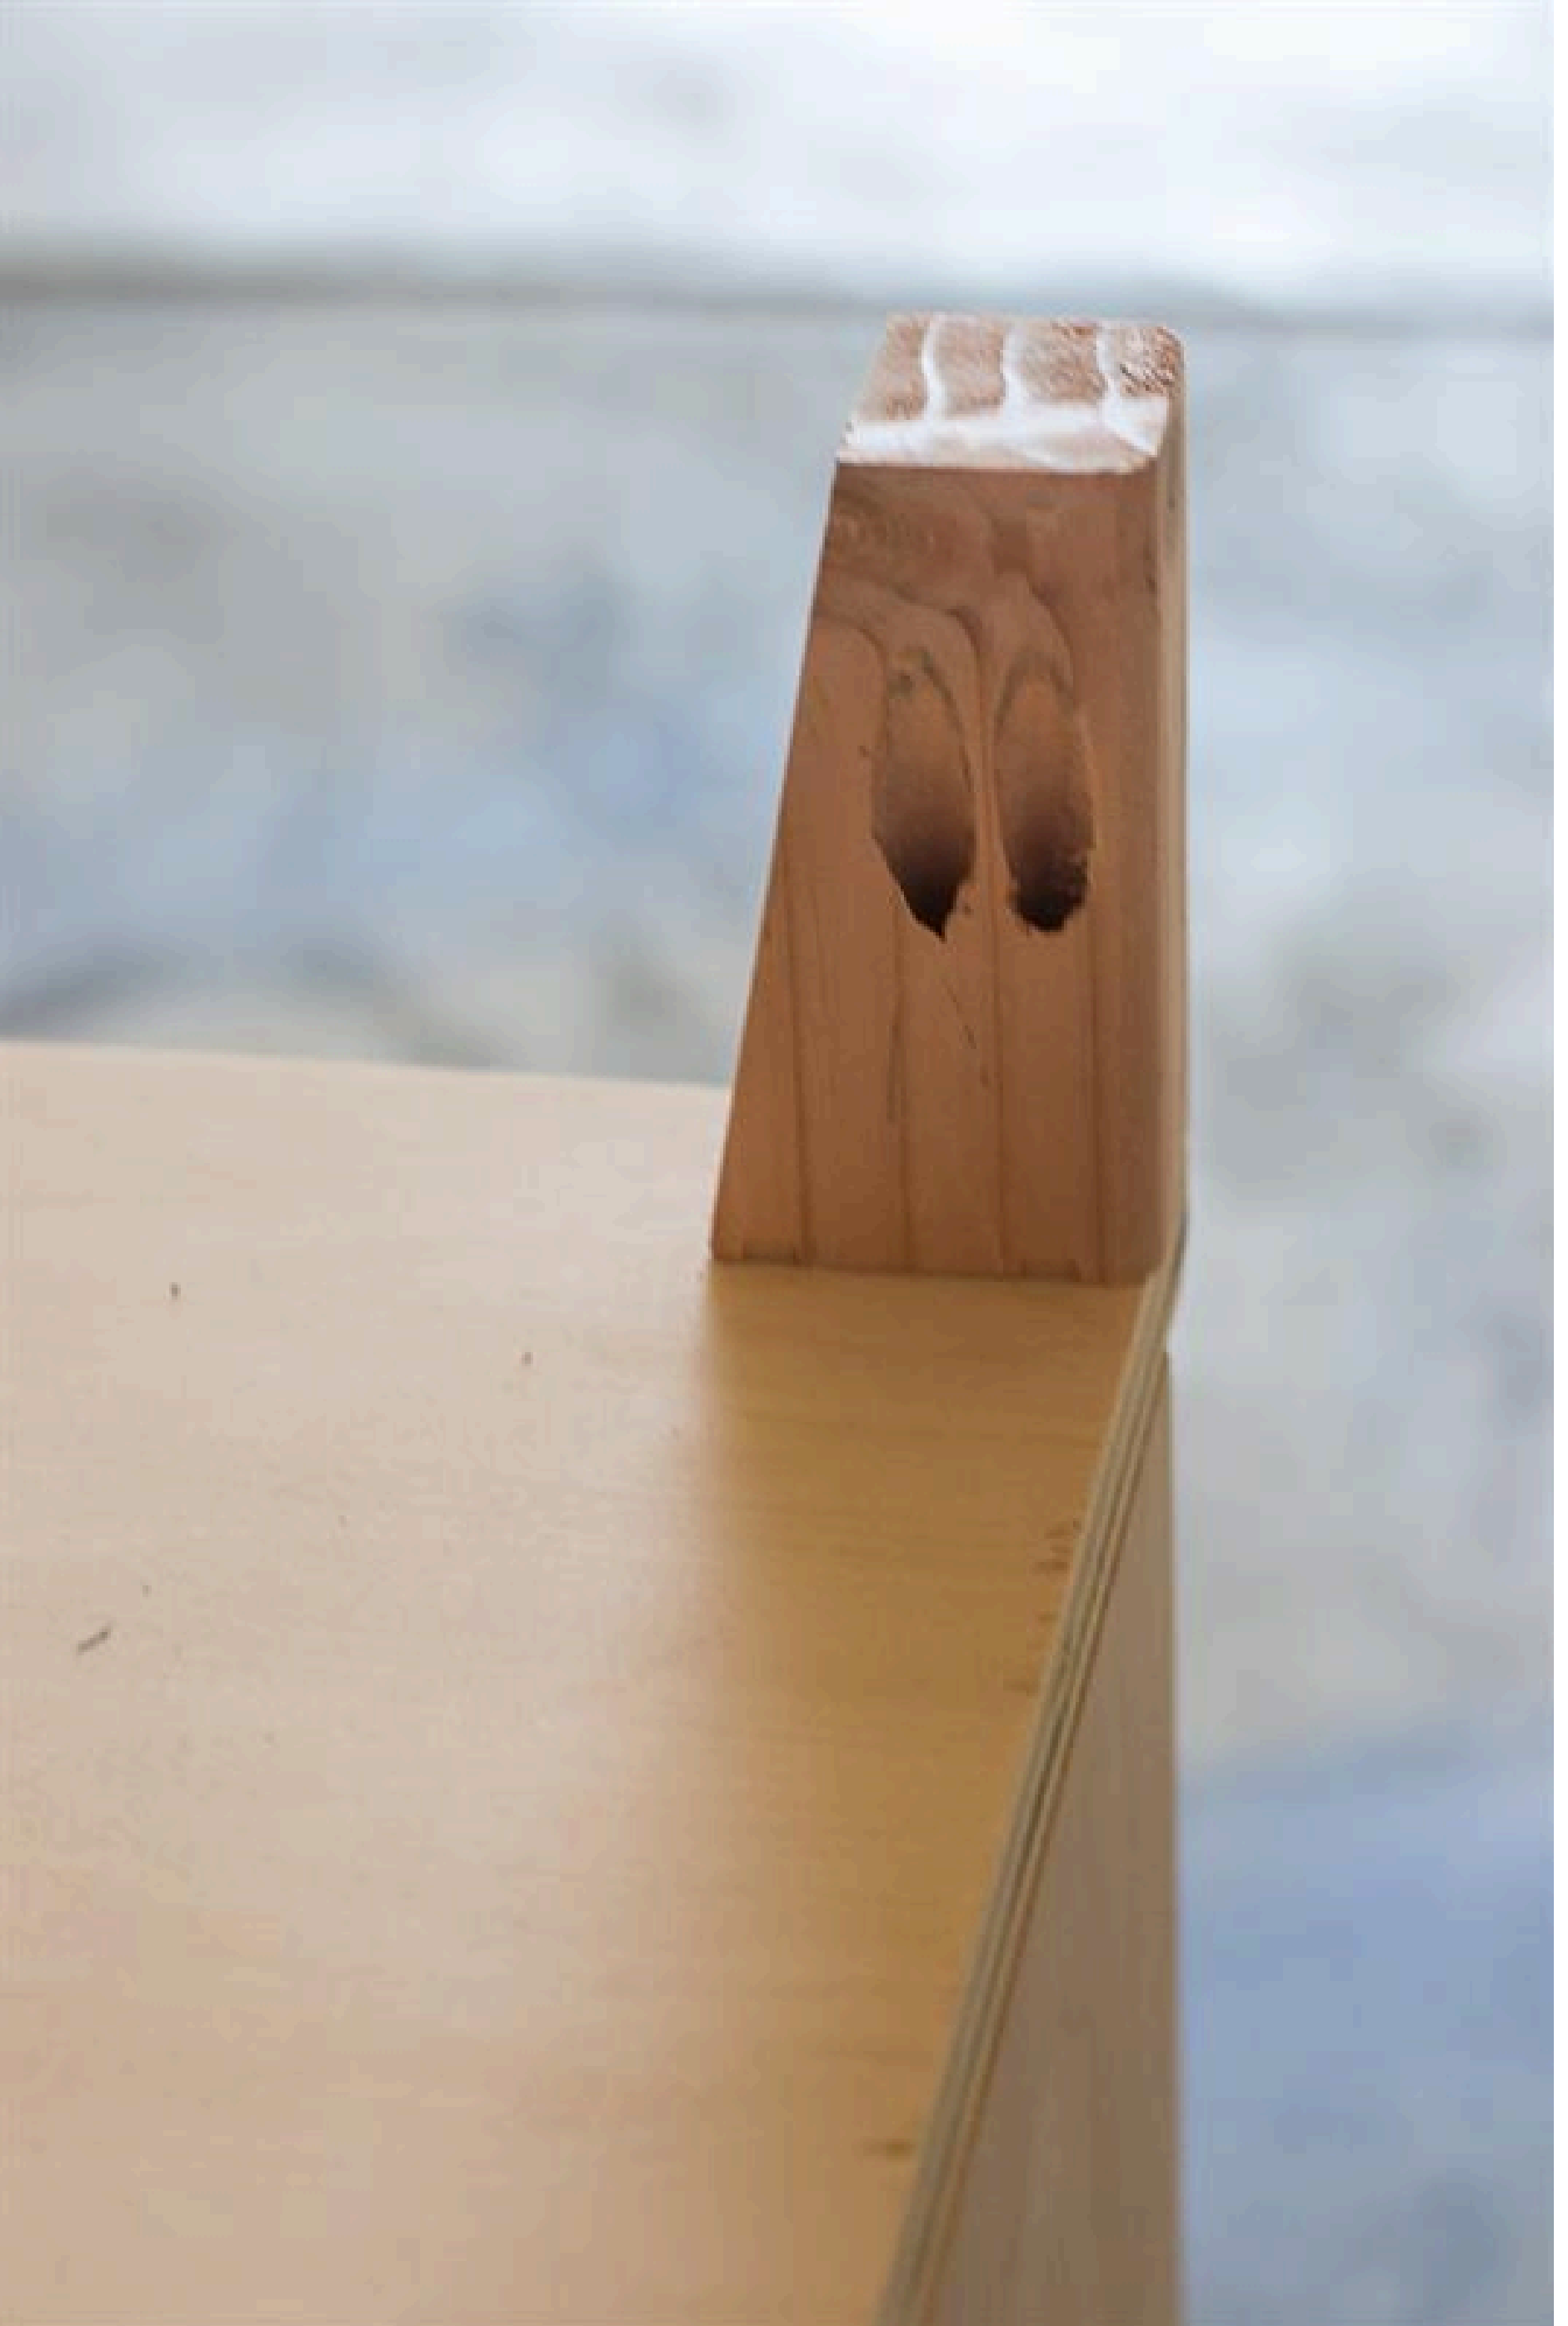

10**Doors**

10. Add your doors. Drill your holes for your knobs.

