

X-leg Console Table with shelves

By **Anika's DIY Life**

Difficulty

Moderate

Looking for the perfect entryway table? This X-leg Console table combines style and function. The shelves provide added storage and can look amazing when styled. This unique design blends right in with any decor – farmhouse or modern.



Tools

Kreg Tools



[Kreg® Pocket-Hole Jig 720](#)

Other Tools

Miter Saw

Drill (cordless)

Sander

Materials

Wood Products

2 Board , 2x4 , 96"

3 Board , 2x6 , 120"

Hardware & Supplies

50 2 1/2" Pocket Hole Screws


6 1 1/2" Wood Screws

1 Wood Glue

1 Wood Filler

Cut List & Parts

- 4 Leg Supports , 2 X 4x 16 1/2"
- 1 Bottom Divider , 2x6x12 3/4"
- 2 Top Divider , 2 X 6 X 14 1/4"
- 3 Top , 2 X 6 X 50"
- 2 Middle Shelf , 2 X 6 X 39 1/8"
- 2 Bottom Shelf , 2 X 6 X 37 1/8"
- 2 Long Angled Cut (See Picture) , 2 X 4 X 30"
- 4 Short Angled Cut (See Picture) , 2 X 4 X 15"

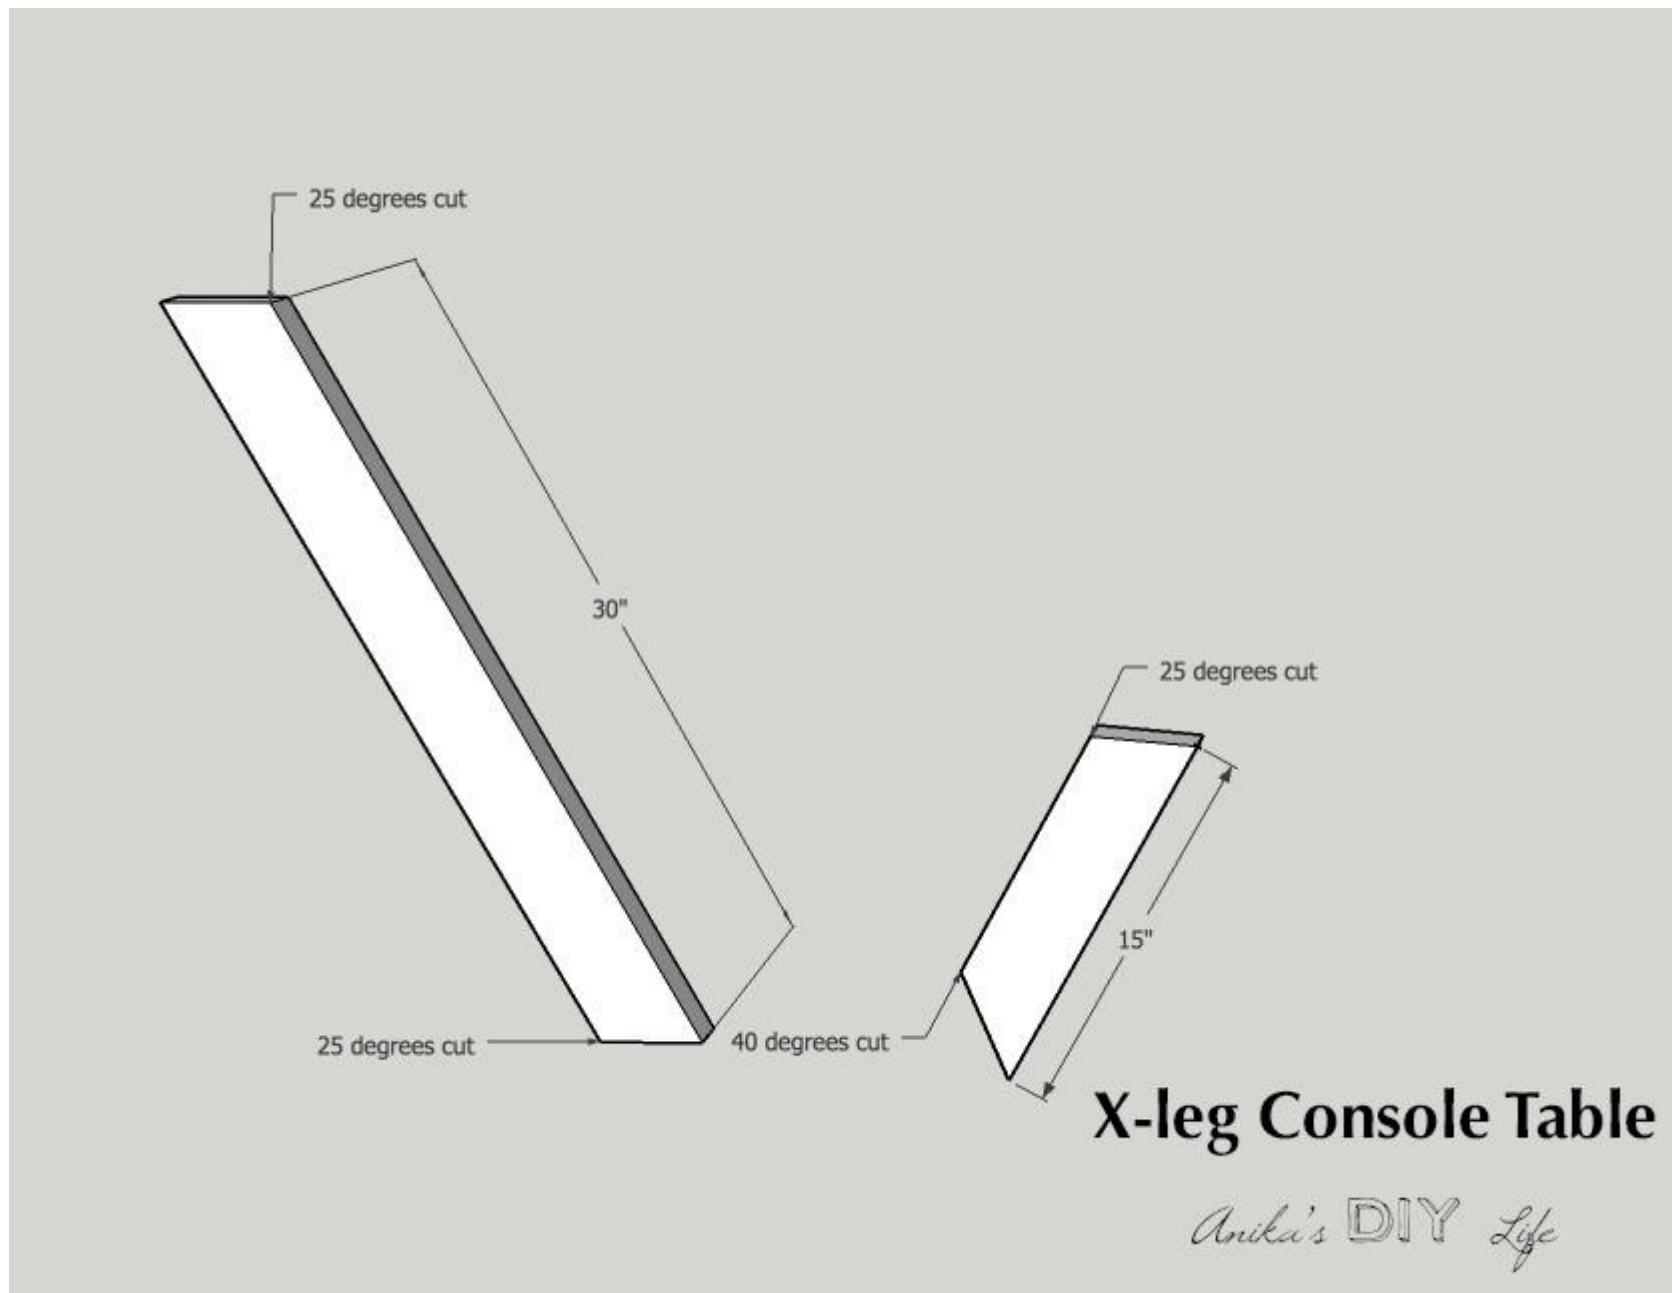

Directions


1

Build the legs

Drill 1 1/2" pocket hole screws and attach the long angled cut to the legs supports using 2 1/2" pocket screws.

Attach the short angled cuts using 2 1/2" pocket screws to create the X.

Note - the 40-degree angle is towards the middle of the X.

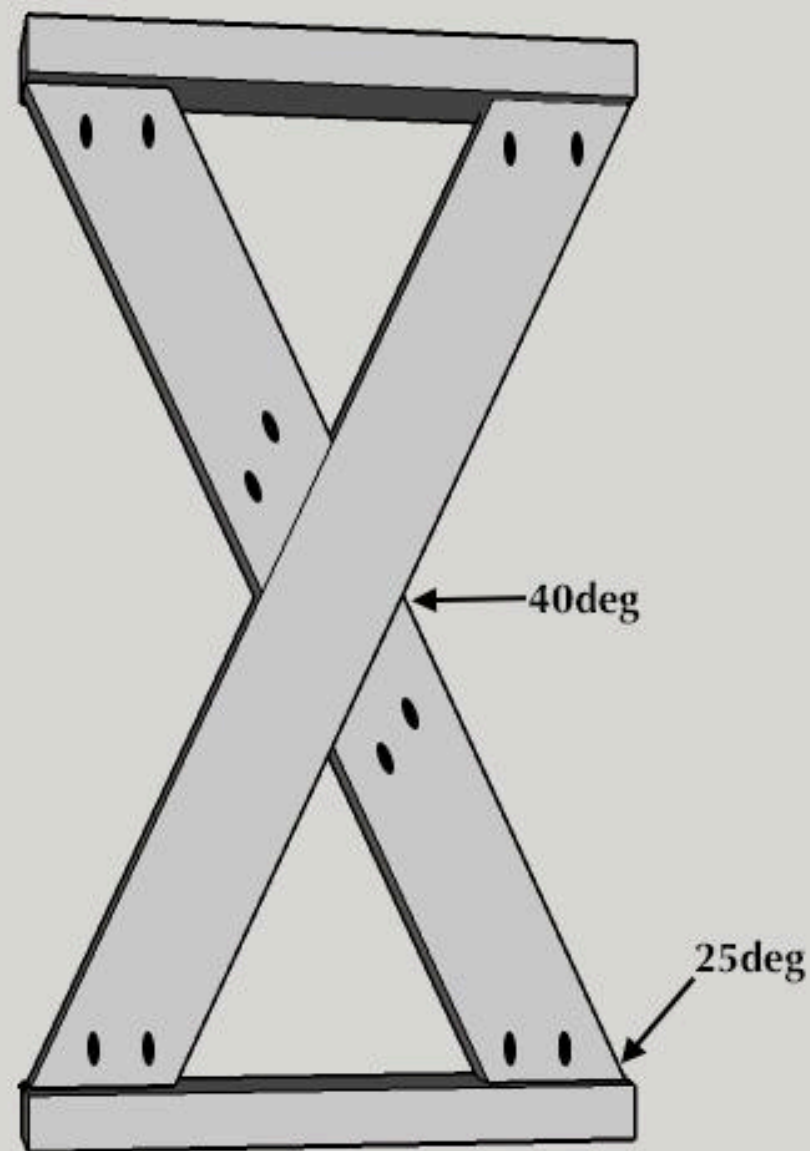


X-leg Console Table

Anika's DIY Life


2**Build shelves and Top**

Drill 1 1/2" pocket hole screws and put together the two shelves and top using 2 1/2" pocket screws.

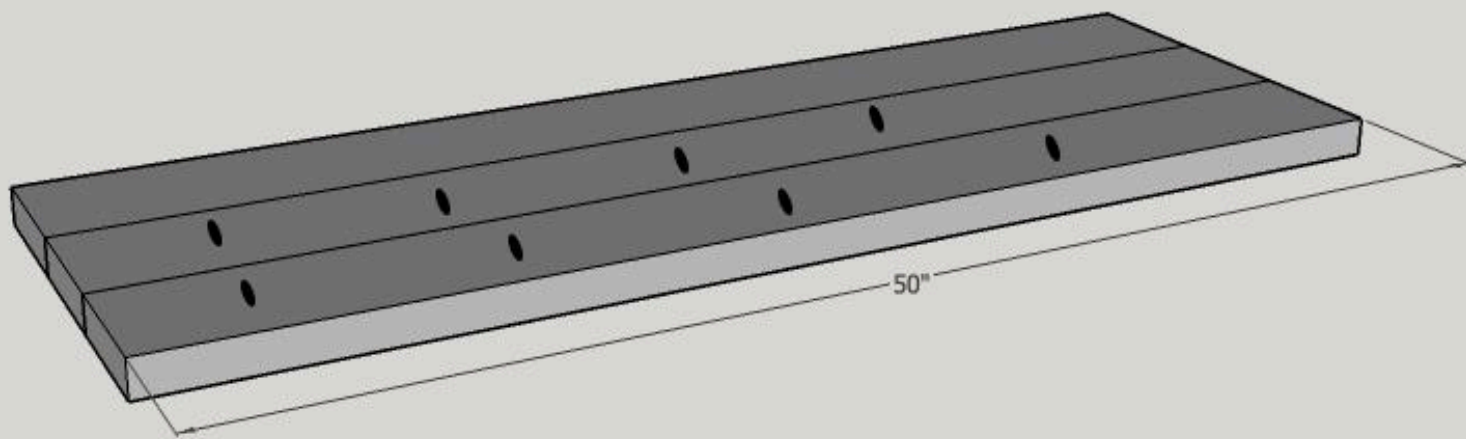**X-leg Console Table***Anika's DIY Life*

3**Attach legs to top**

Lay the top face down and attach the two X-legs using 1 1/2" wood screws drilled into the leg supports. Make sure the pocket holes face inside.

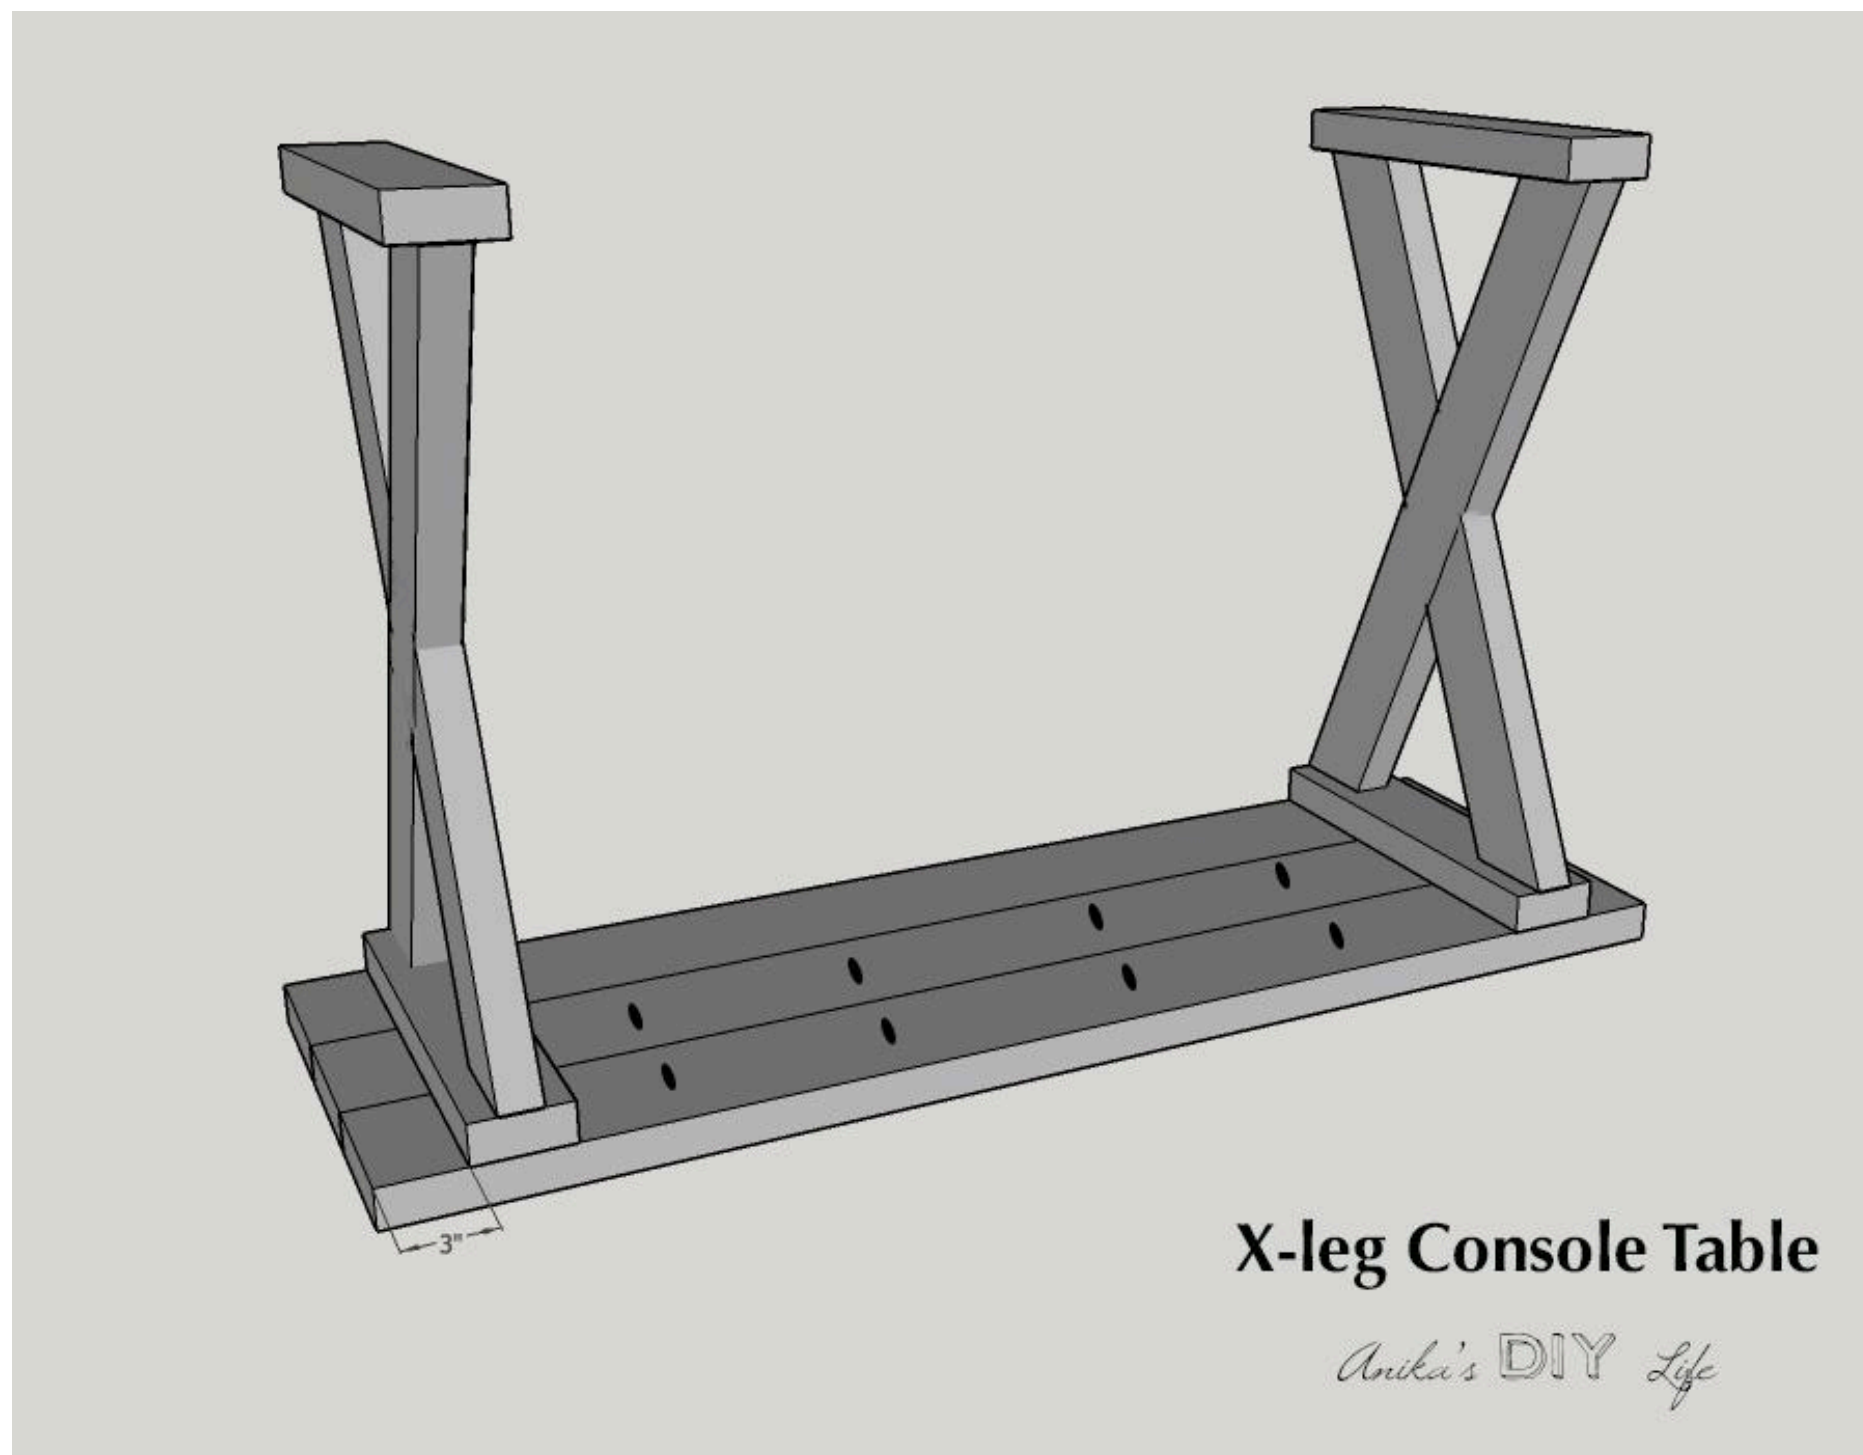

4**Attach middle shelf**


Attach the top dividers and the middle shelf.

Use 1 1/2" pocket holes and 2 1/2" pocket screws.

The dividers are 12 1/4" from each end.

The shelf is 13 1/2" from the Top.

There are pocket holes on the ends of the shelf that attach to the middle of the X.

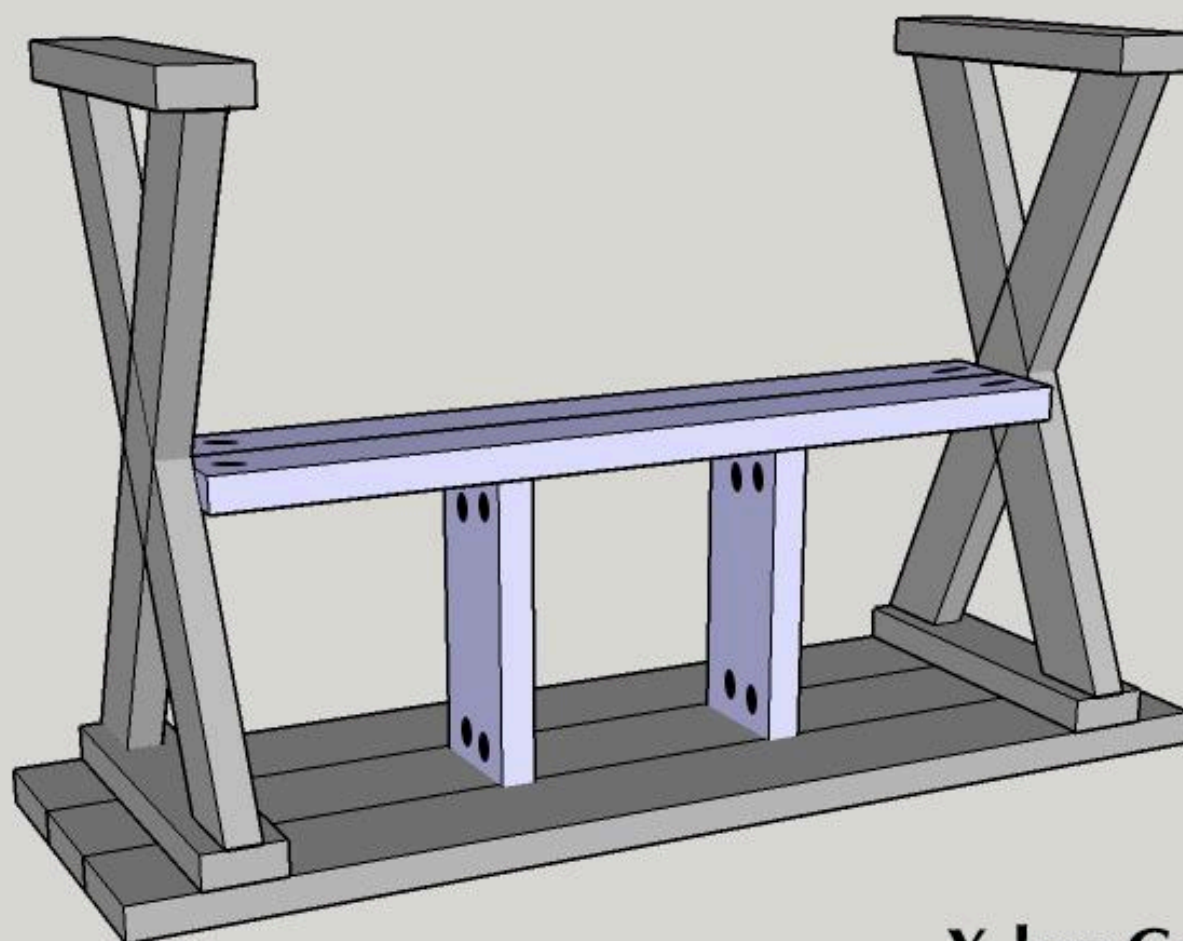


X-leg Console Table

Anika's **DIY** *Life*

5**Attach bottom shelf**

Attach the bottom divider and the bottom shelf using 1 1/2" pocket holes and 2 1/2" pocket screws. The divider is 18 1/4" from one end.

The Bottom shelf is attached to the leg supports using pocket holes and screws.

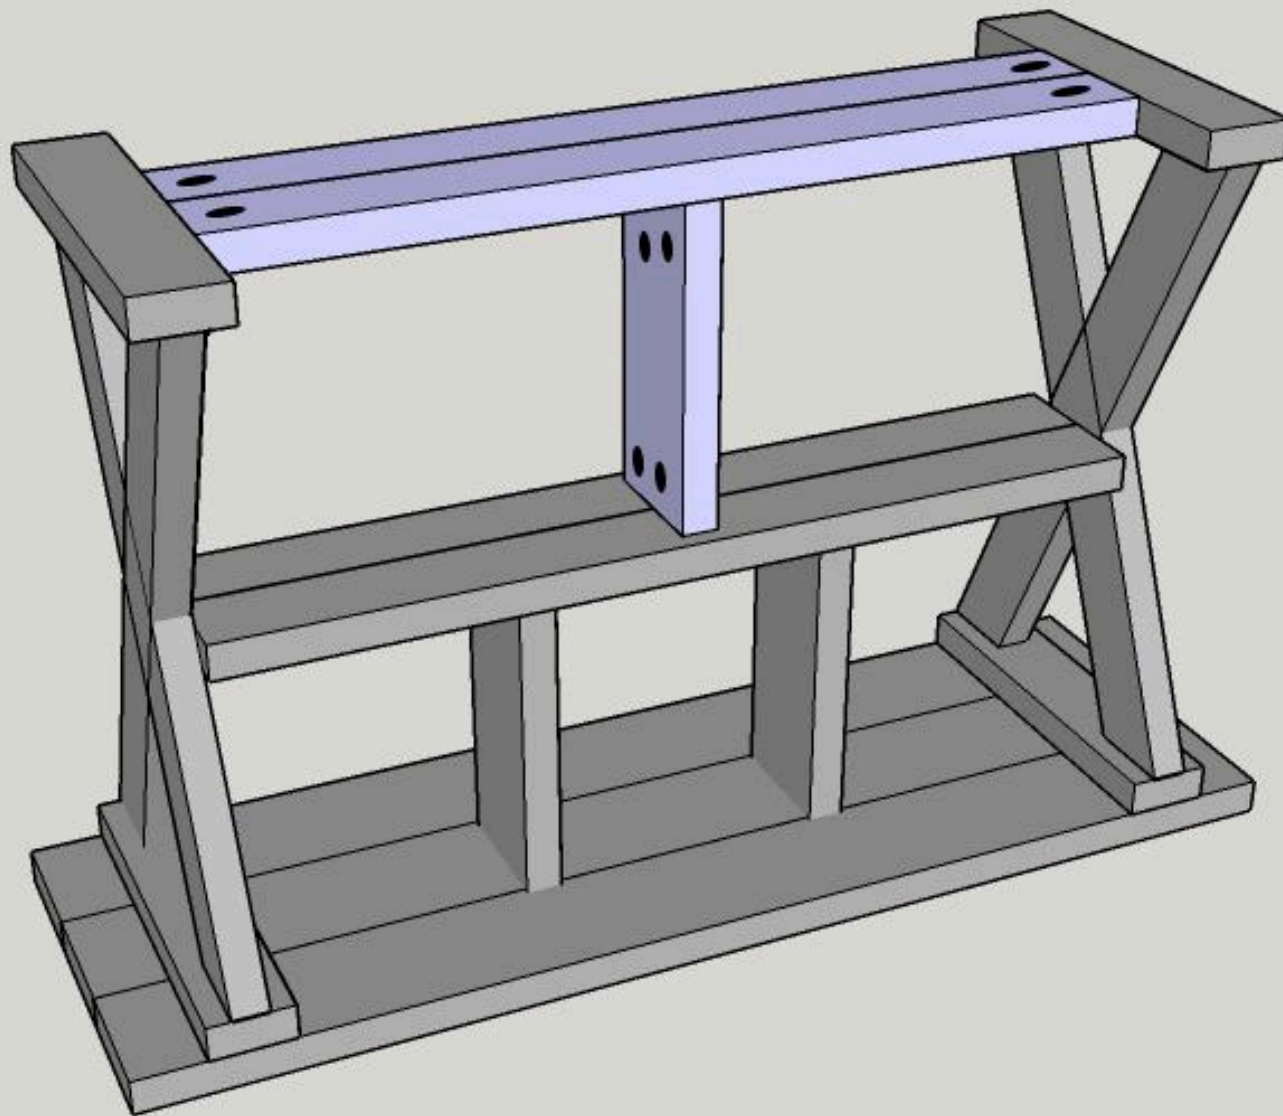


X-leg Console Table

Anika's **DIY** Life

6**Final steps**

The X-leg console table is ready.

Sand and finish as desired.

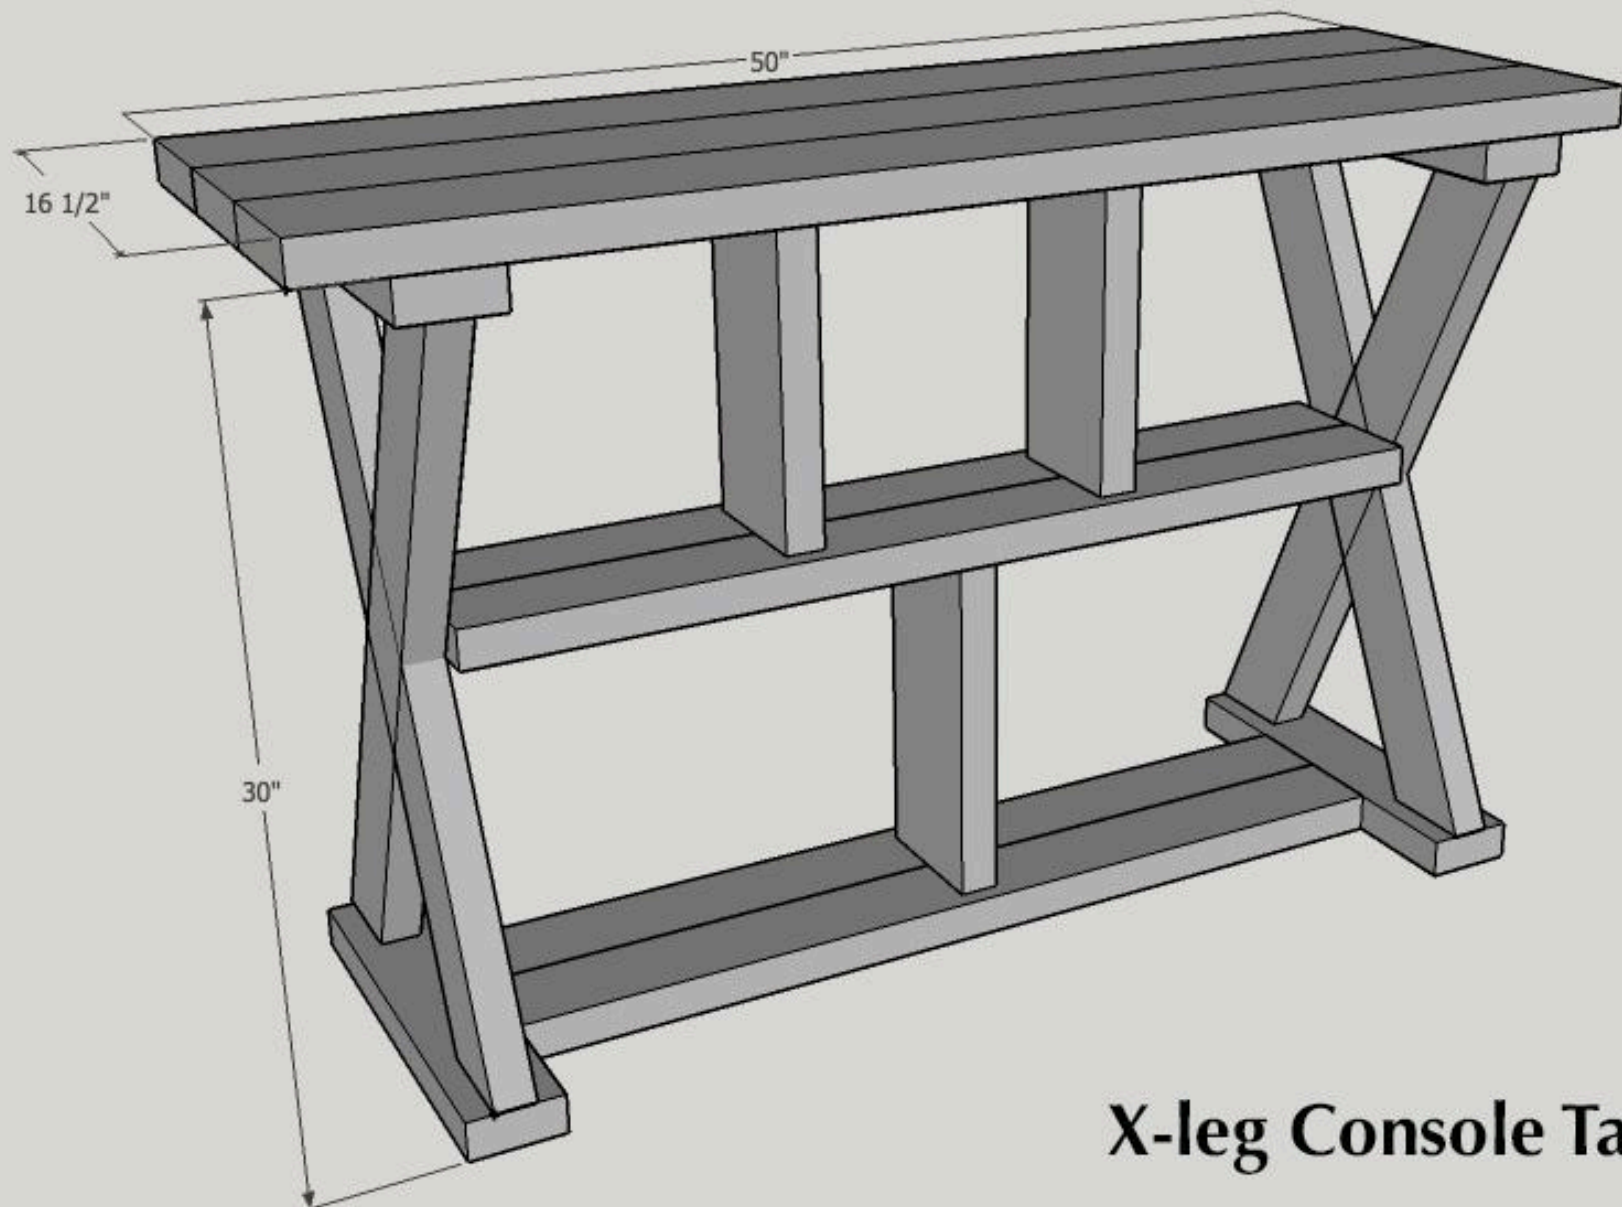

X-leg Console Table

Anika's DIY Life

7**Visit anikasdiylife.com**

For lots more plans and projects visit www.anikasdiylife.com