



## 3 DRAWER NIGHTSTAND

[JAIMECOSTIGLIO.COM](http://JAIMECOSTIGLIO.COM)

### Supplies:


- 2 – 2x2x8 boards
- 3 – 1x2x8 pine boards
- 1 sheet –  $\frac{3}{4}$ " plywood
- 1 sheet –  $\frac{1}{4}$ " plywood
- 1 – 1x8x6 pine board
- 1 - 1x3x6 pine board
- 2 – 1x6x8 pine boards
- 2  $\frac{1}{2}$ " pocket hole screws
- 1  $\frac{1}{4}$ " pocket hole screws
- 2" wood screws
- $\frac{3}{4}$ " wood screws
- $\frac{3}{4}$ " brad nails

## Cut List:


- 4 – 2x2 @ 29 1/4" (legs)
- 2 – 3/4" plywood @ 16" x 22 1/4" (side panels)
- 4 – 1x2 @ 25 1/2" (cross supports)
- 2 – 2x2 @ 25 1/2" (cross supports)
- 1 – 3/4" plywood @ 20" x 30" (top)
- 2 – 1x8 @ 25 1/4" (large drawer fronts)
- 1 – 1x3 @ 25 1/4" (small drawer front)
- 4 – 1x6 @ 16" (large drawers short sides)
- 4 – 1x6 @ 22 3/4" (large drawers long sides)
- 2 – 1x2 @ 16" (small drawer short sides)
- 2 – 1x2 @ 22 3/4" (small drawer long sides)
- 3 – 1/4" plywood @ 16" x 24 1/4" (drawer bottoms)
- 6 – 1x2 @ 16" (drawer glide supports)
- 1 – 1/4" plywood @ 25 1/2" x 22 1/4" (backing)

3 DRAWER NIGHTSTAND  
STEP 1

JAIMECOSTIGLIO.COM

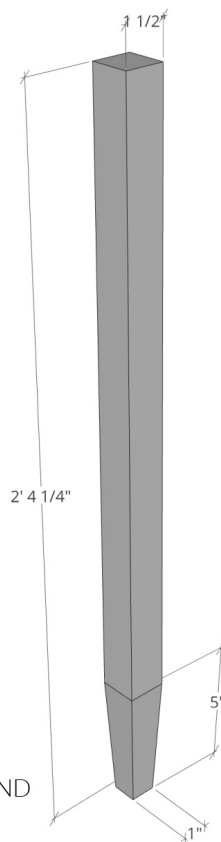

**Step 1:** If desired use a tapering jig to make bottom portion of legs tapered.

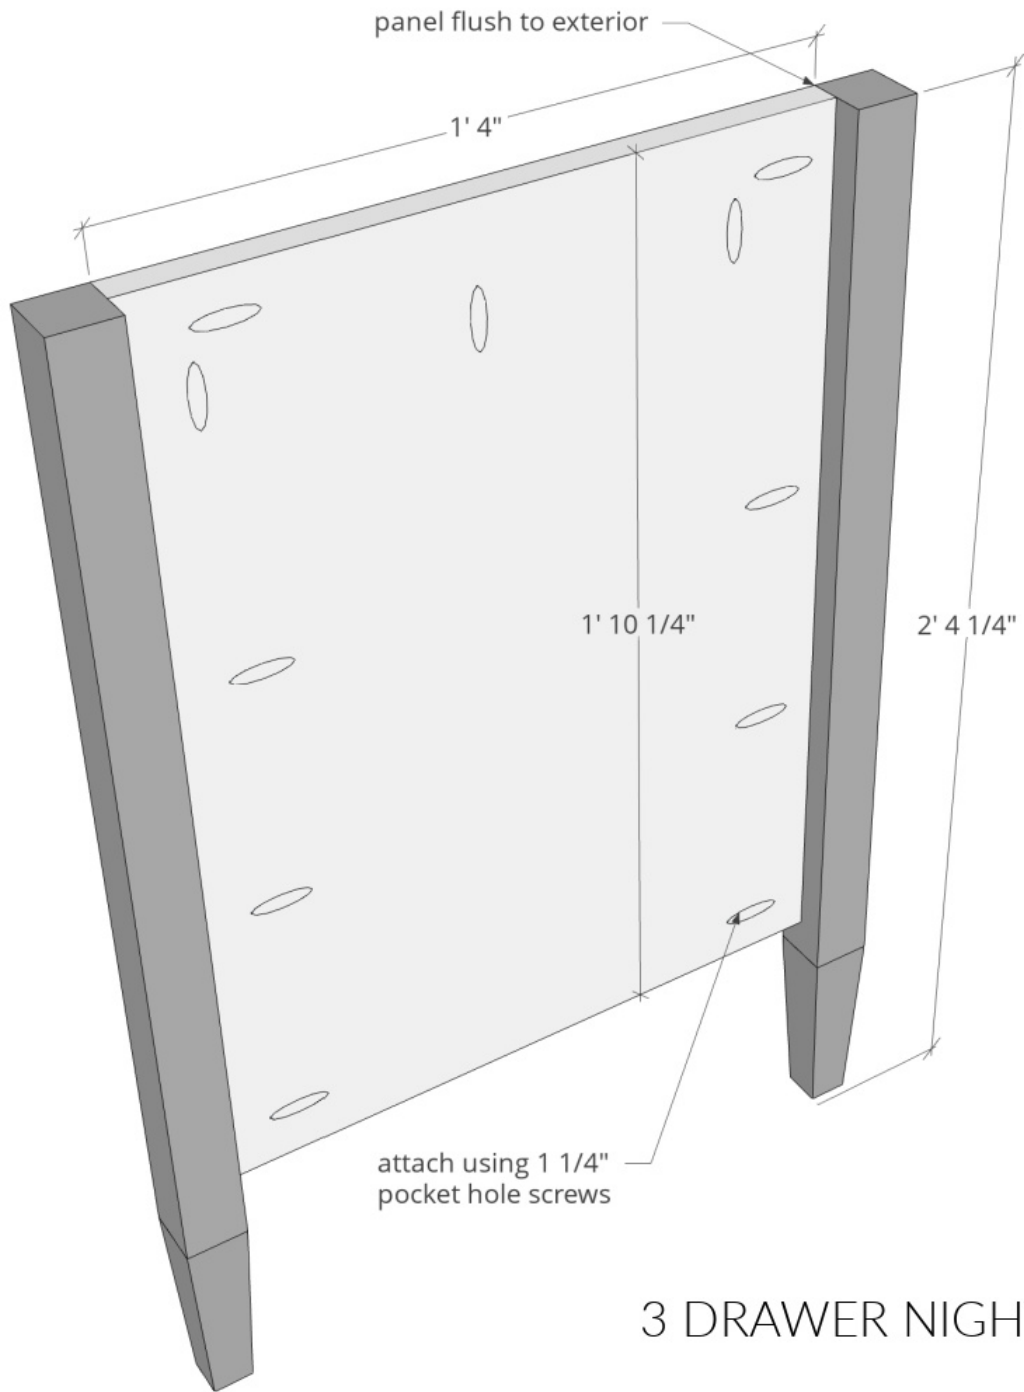


## 3 DRAWER NIGHTSTAND STEP 2

[JAIMECOSTIGLIO.COM](http://JAIMECOSTIGLIO.COM)


**Step 2:** Attach legs to side panels using 1 1/4" pocket hole screws. Keep side panel flush to leg at exterior.

Make 2.

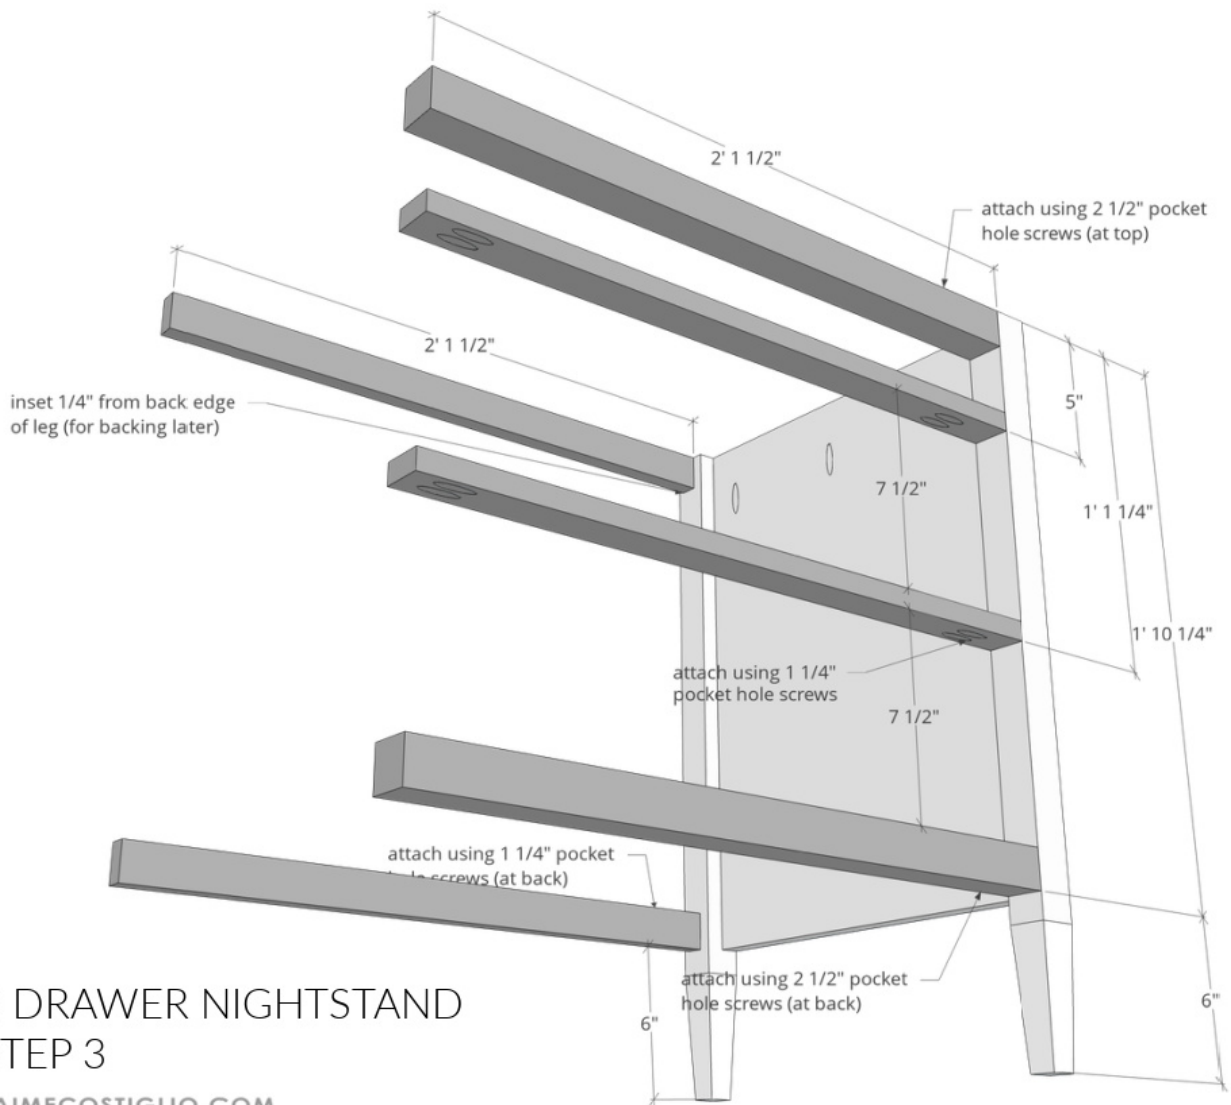


**Step 3:** Attach cross supports to side panel. Use wood glue and corresponding pocket hole screws. Keep pocket holes at back, top or underside when possible.

## 3 DRAWER NIGHTSTAND STEP 4

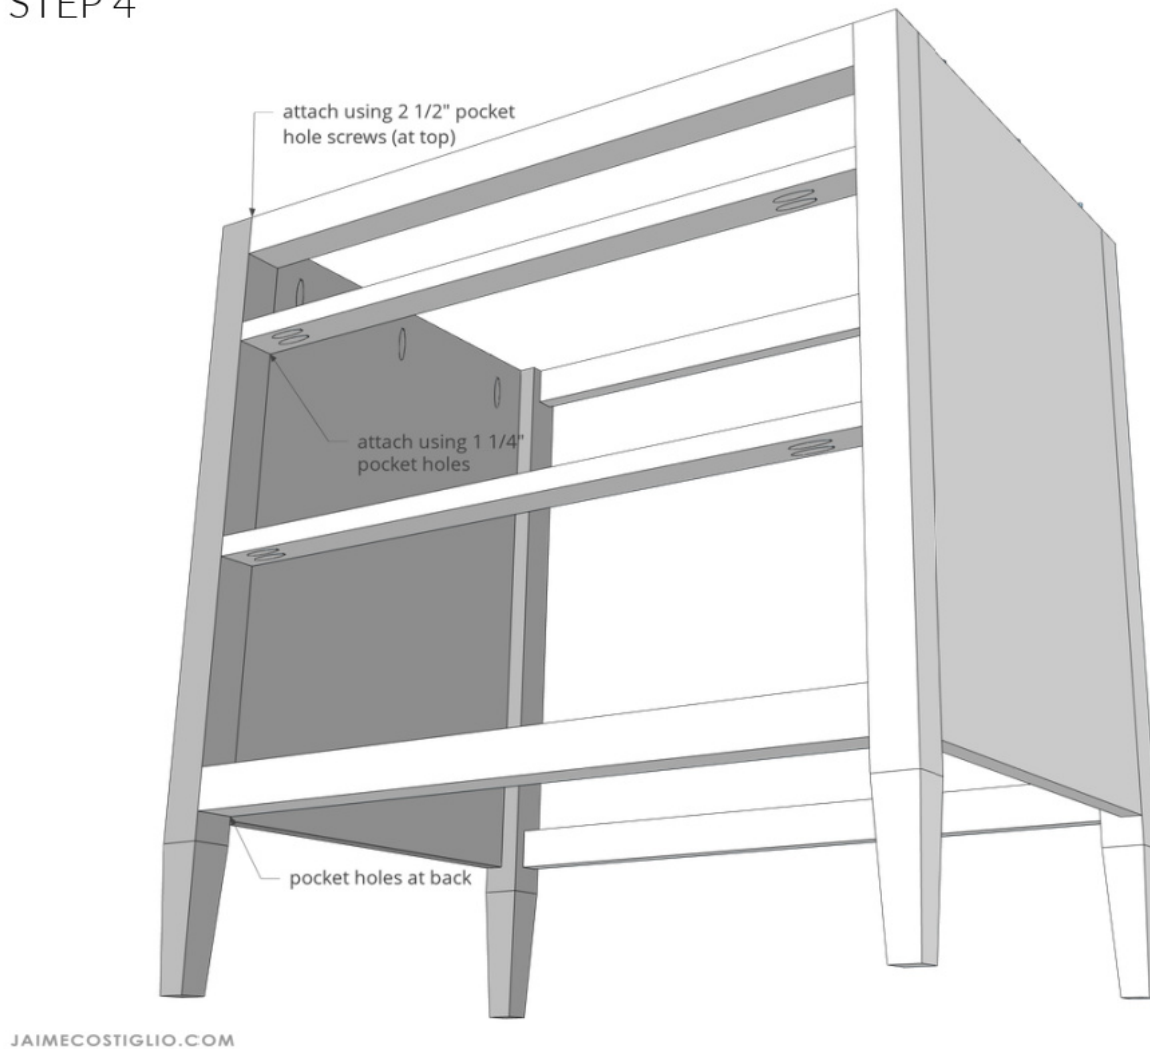


**Step 4:** Attach other side panel to cross supports, same as Step 3.

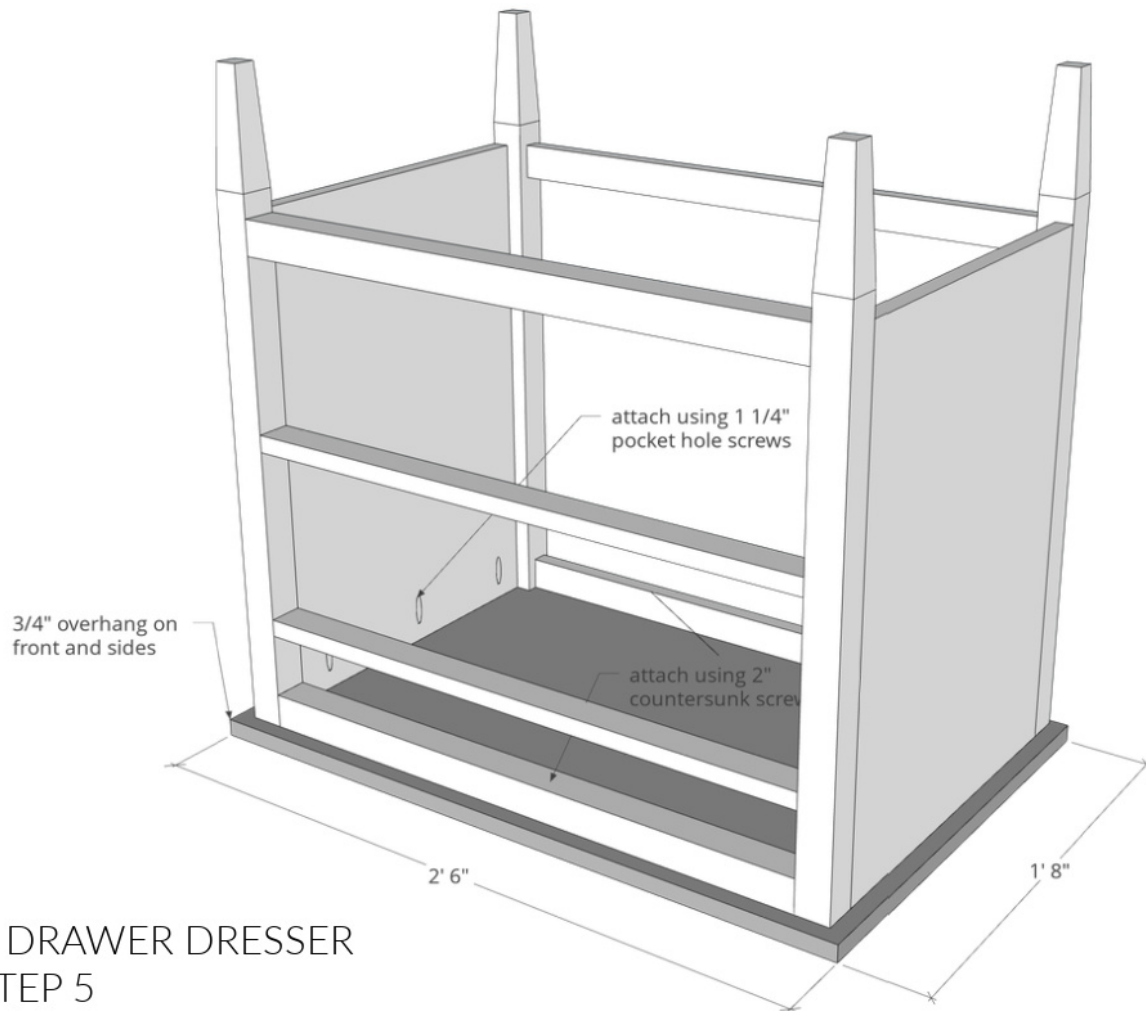

### 3 DRAWER DRESSER STEP 5


[JAIMECOSTIGLIO.COM](http://JAIMECOSTIGLIO.COM)

**Step 5:** Attach top to body using 1 1/4" pocket hole screws. Keep 3/4" overhang at front and sides. Secure front and back cross supports to top using 2" countersunk wood screws.

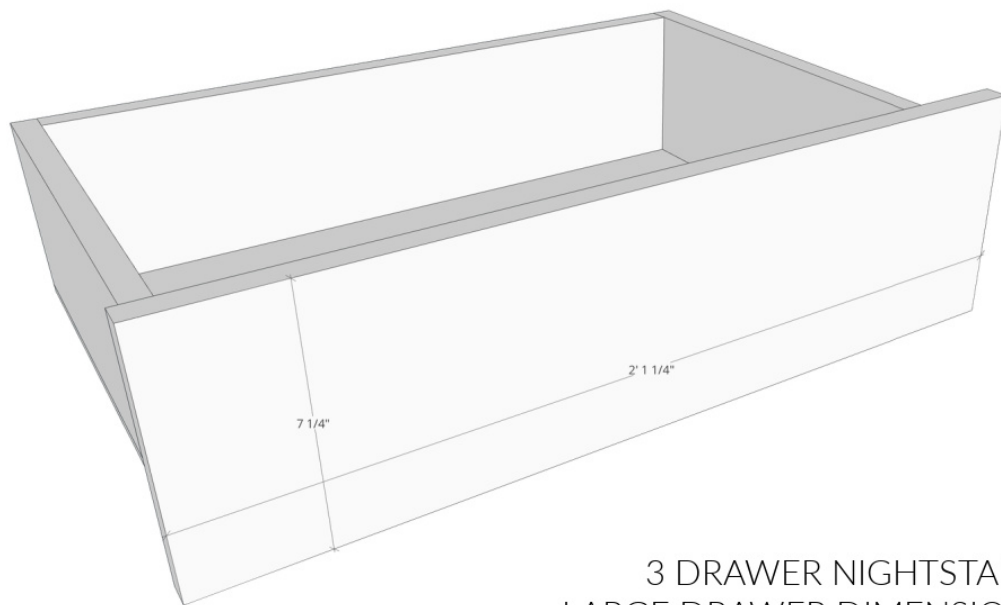

3 DRAWER NIGHTSTAND  
LARGE DRAWER DIMENSIONS


JAIMECOSTIGLIO.COM

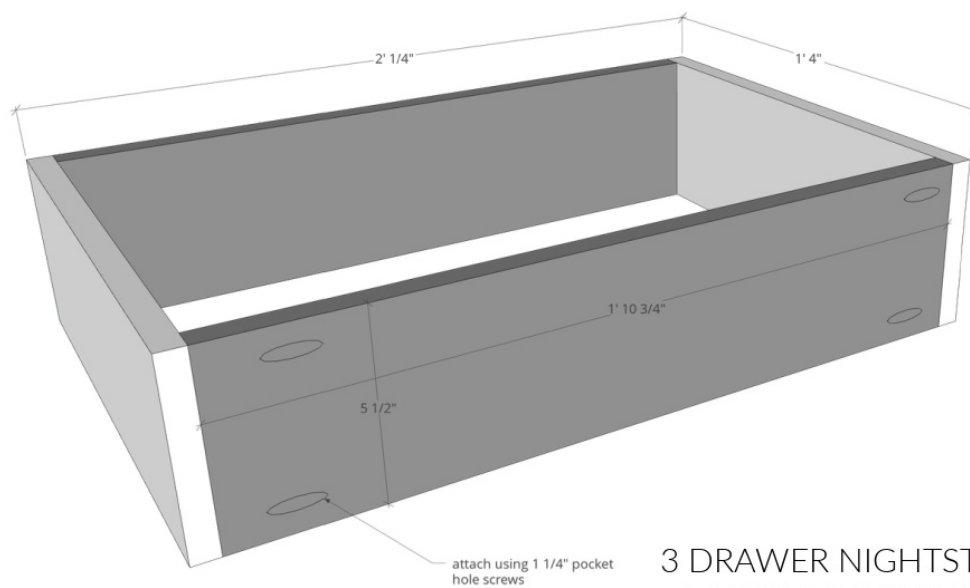

3 DRAWER NIGHTSTAND  
LARGE DRAWER STEP 1

JAIMECOSTIGLIO.COM


**Step 1:** Attach long sides to short sides using wood glue and 1 1/4" pocket hole screws.

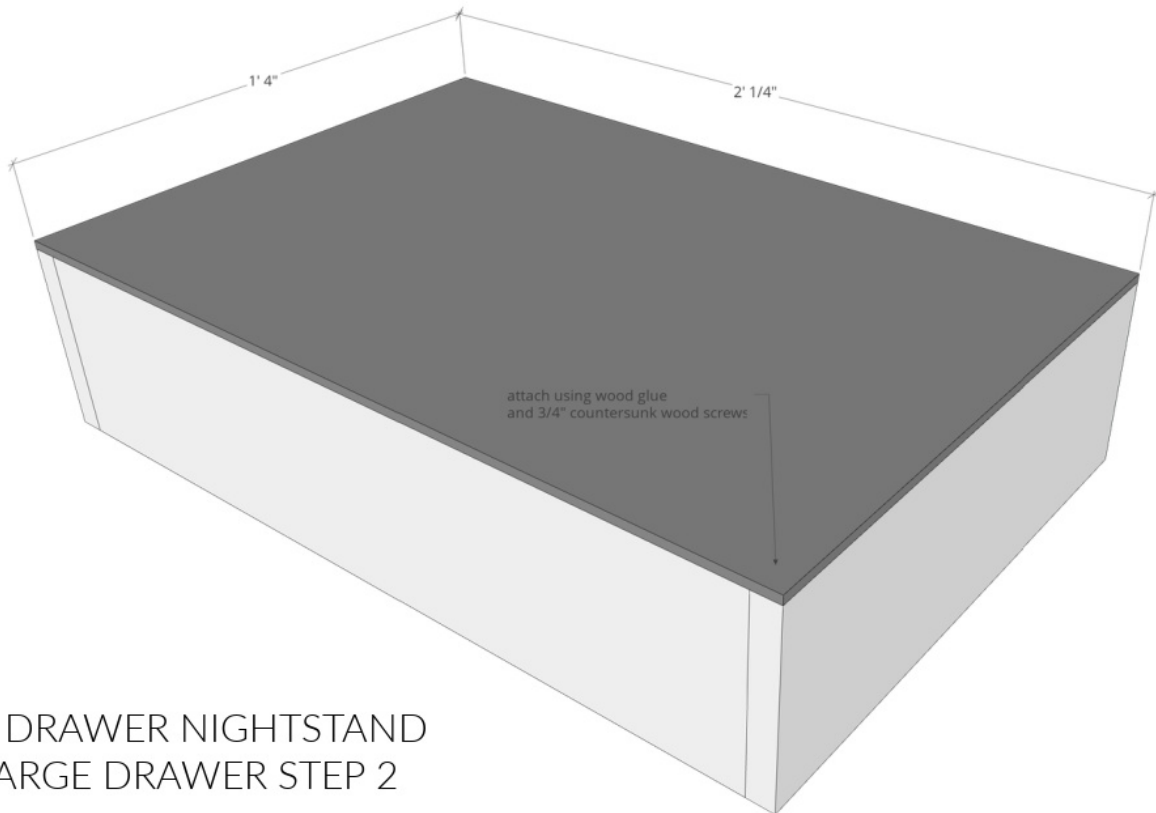

### 3 DRAWER NIGHTSTAND LARGE DRAWER STEP 2

JAIMECOSTIGLIO.COM


**Step 2:** Attach drawer bottom to box using wood glue and  $\frac{3}{4}$ " countersunk wood screws.

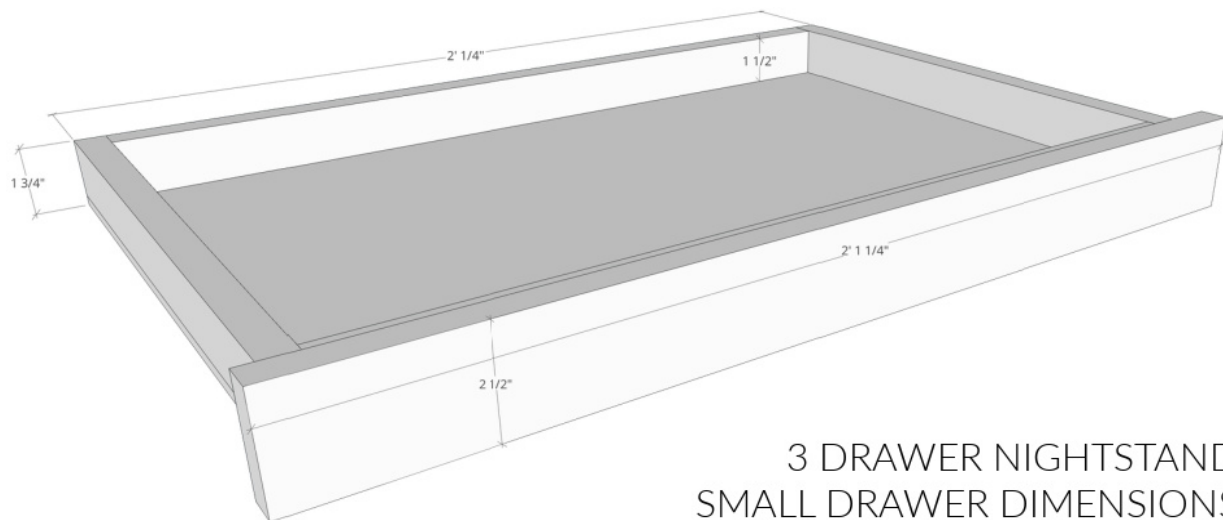


### 3 DRAWER NIGHTSTAND SMALL DRAWER DIMENSIONS

JAIMECOSTIGLIO.COM




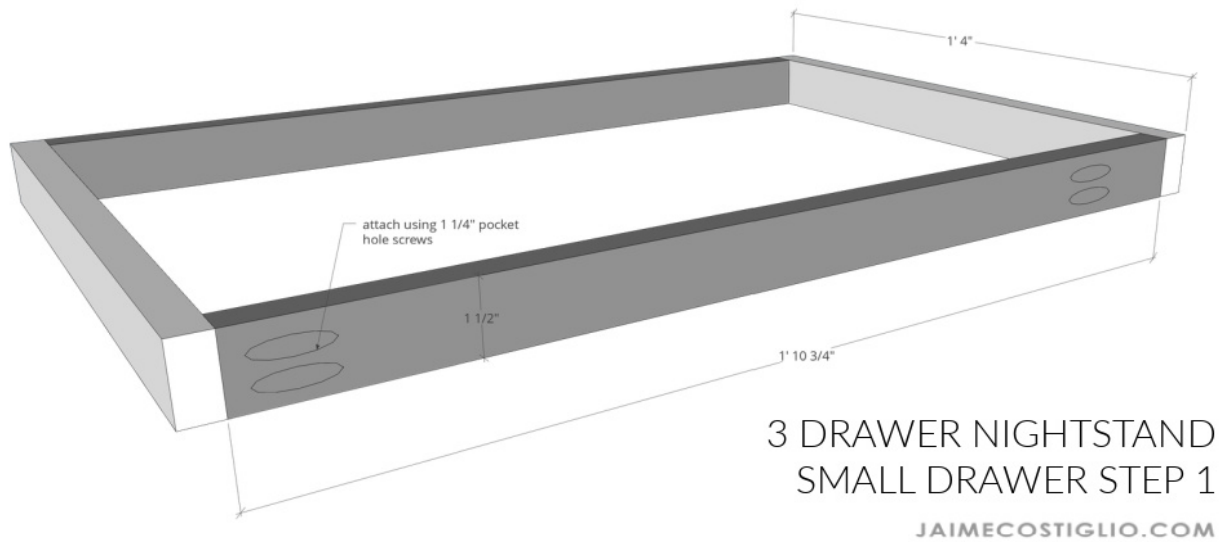

**Step 1:** Attach long sides to short sides using wood glue and 1 1/4" pocket hole screws.

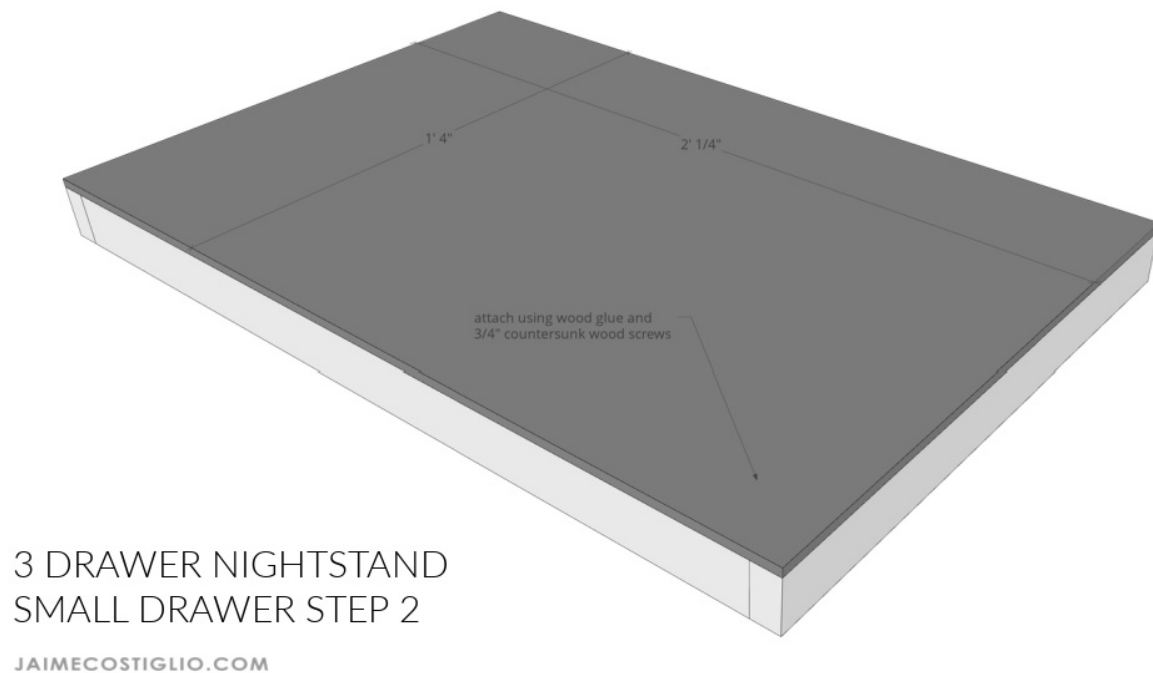

**Step 2:** Attach drawer bottom to box using wood glue and 3/4" countersunk wood screws.

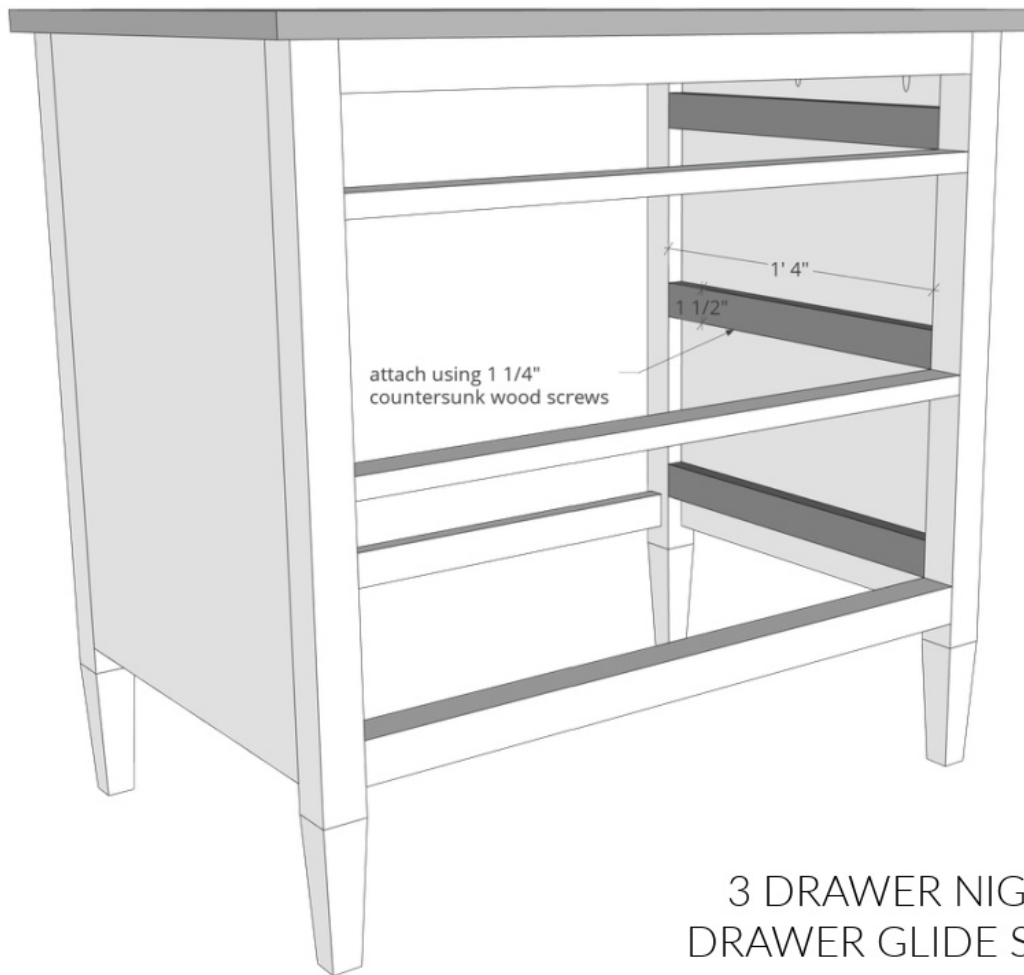


### 3 DRAWER NIGHTSTAND DRAWER GLIDE SUPPORTS

[JAIMECOSTIGLIO.COM](http://JAIMECOSTIGLIO.COM)

Before installing drawer glides attach supports to interior side panels using wood glue and 1 1/4" countersunk wood screws.

## 3 DRAWER NIGHTSTAND STEP 6

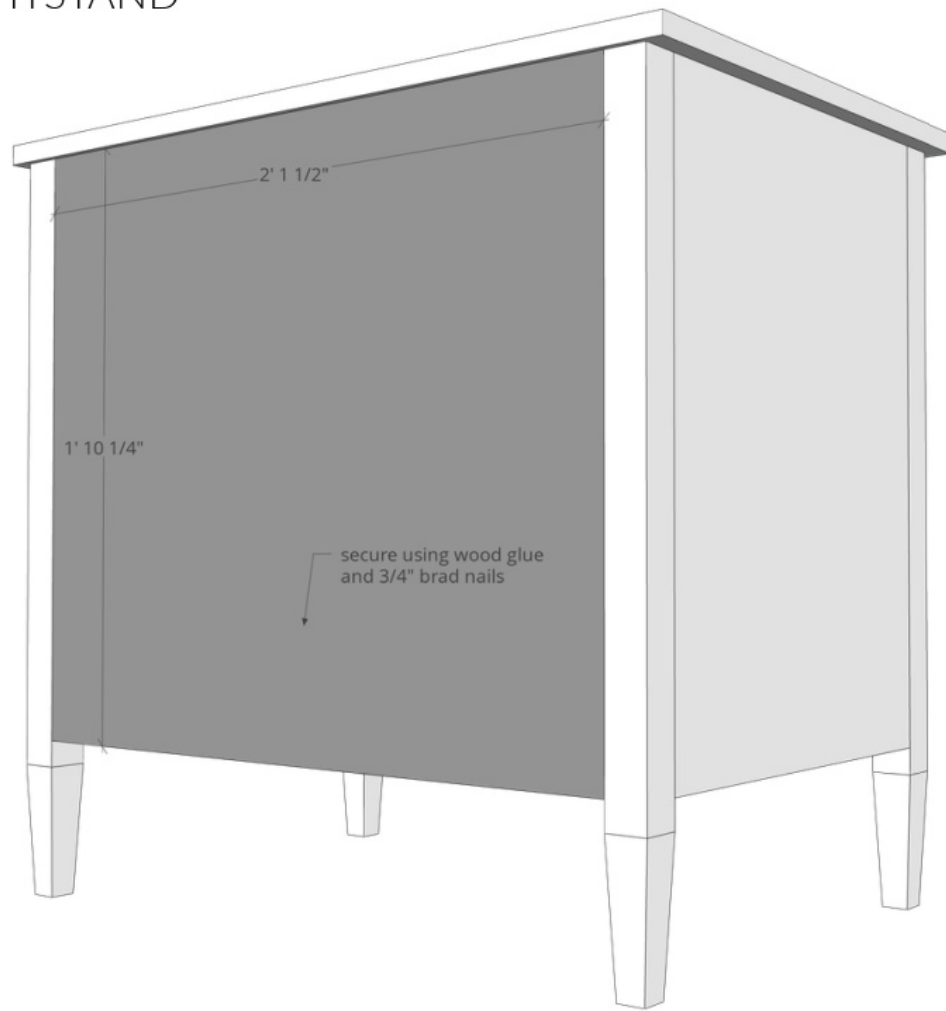

[JAIMECOSTIGLIO.COM](http://JAIMECOSTIGLIO.COM)

**Step 6:** Attach backing to cross supports using wood glue and  $\frac{3}{4}"$  brad nails.