


FRONT




TOP

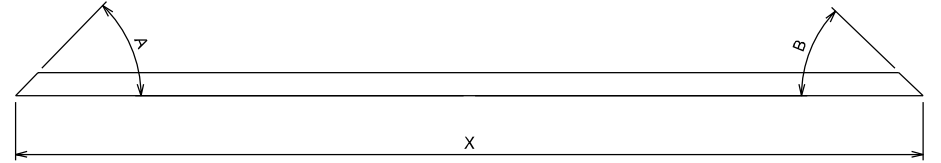


BOTTOM

KREG POCKET HOLE LOCATIONS


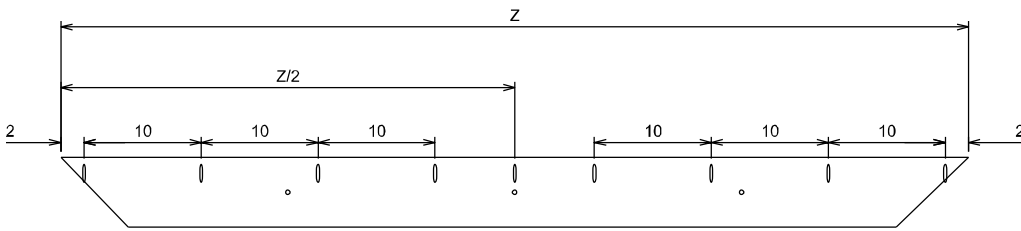


BOTTOM SHOWN (TYPICAL TOP AND BOTTOM)
DRILLED INTO INSIDE FACE

3/8" dia. FORSTNER HOLE COUNTER BORED
1/4" DEEP w/ 1/8" DIA HOLE DRILLED ALL THE
WAY THROUGH THE BOARD

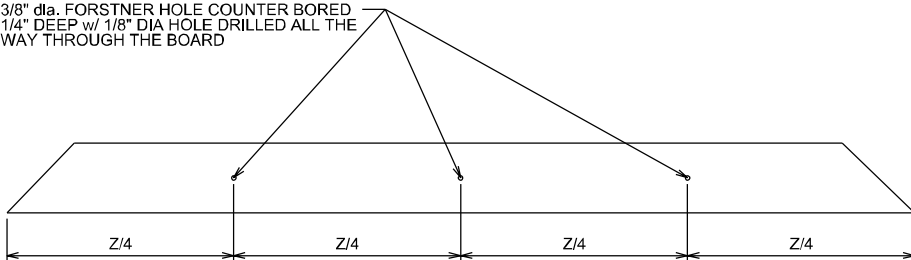

BOTTOM SHOWN
DRILLED INTO OUTSIDE FACE

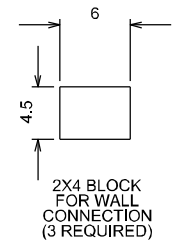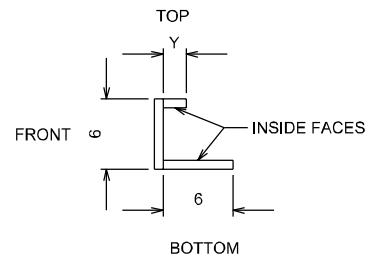

2X4 BLOCK
FOR WALL
CONNECTION
(3 REQUIRED)

NTS

