


# TILT OUT TRASH BIN


Woodworking Plans

By: Making Manzanita

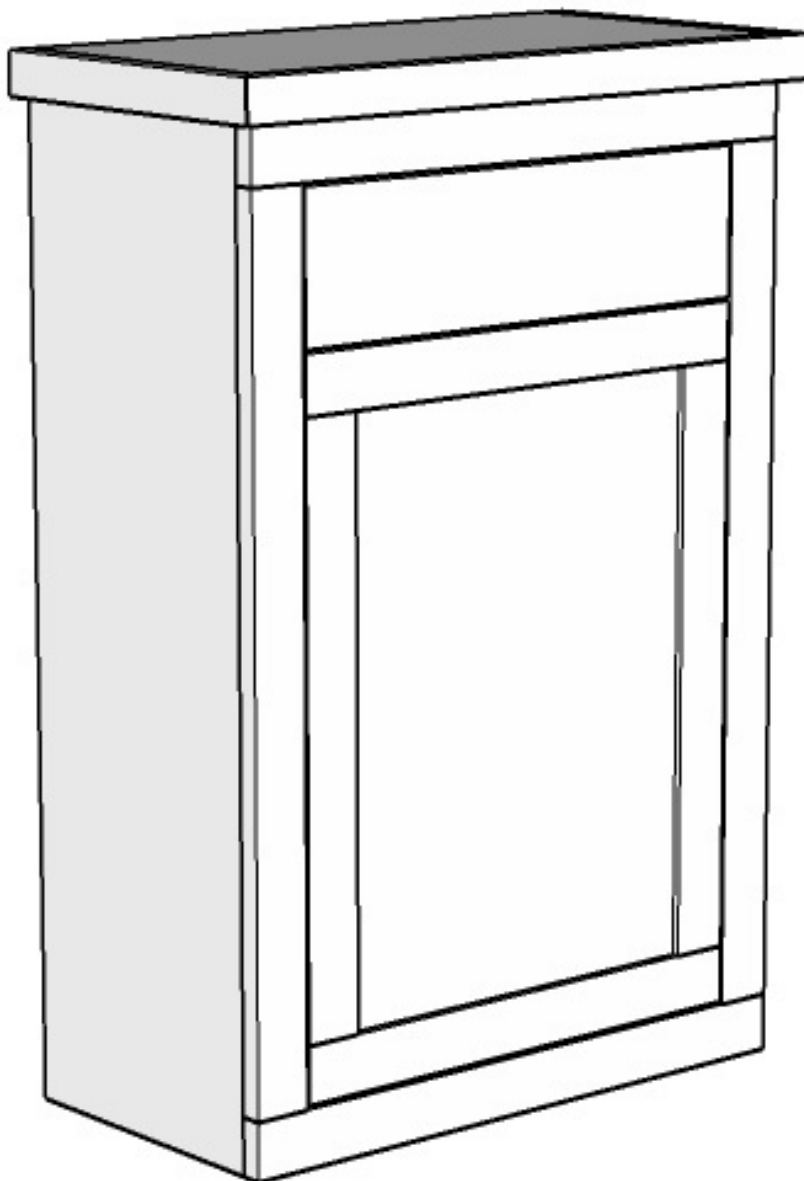


# TRASH BIN ( DRAWER ): VISUAL CUT LIST


DRAWER BOTTOM (QTY 1)

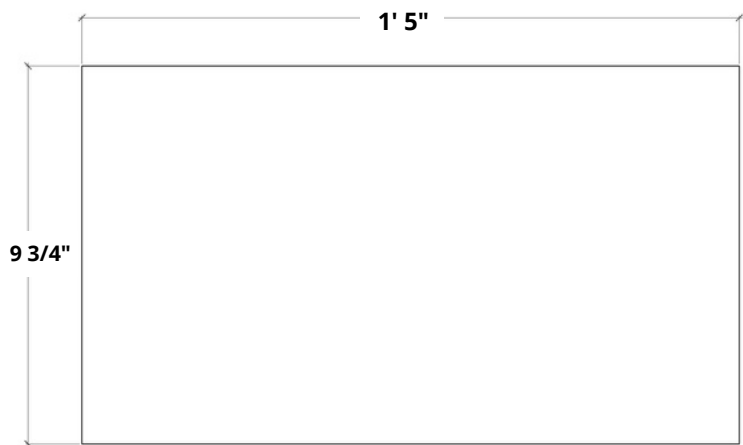


DRAWER FACE (QTY 1)

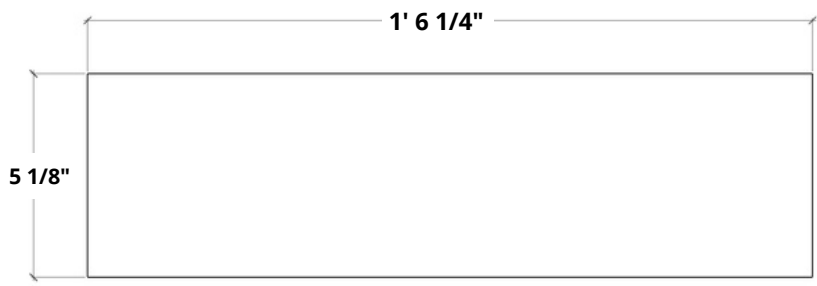

DRAWER FRONT & BACK (QTY 2)

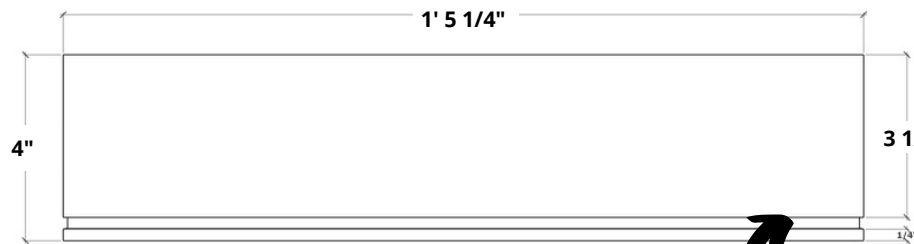


DRAWER SIDE (QTY 2)

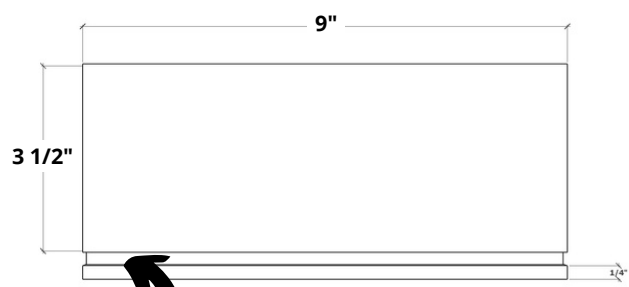

Dado channels for  
drawer bottom  
(see Step #2)


Drawer face  
added in Step #17

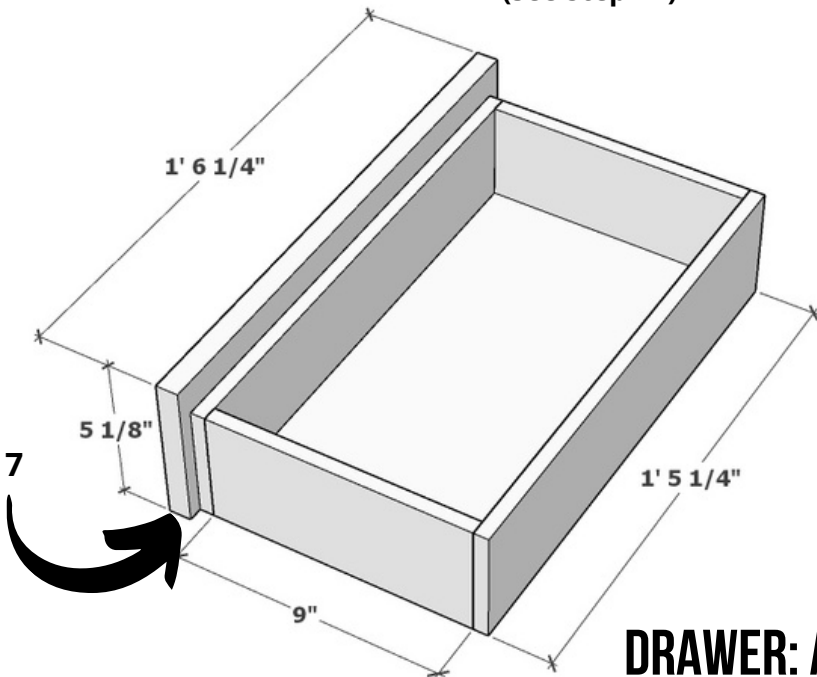


DRAWER: ASSEMBLED

# TRASH BIN ( DOOR ): VISUAL CUT LIST

## DOOR PANEL INSERT (QTY 1)

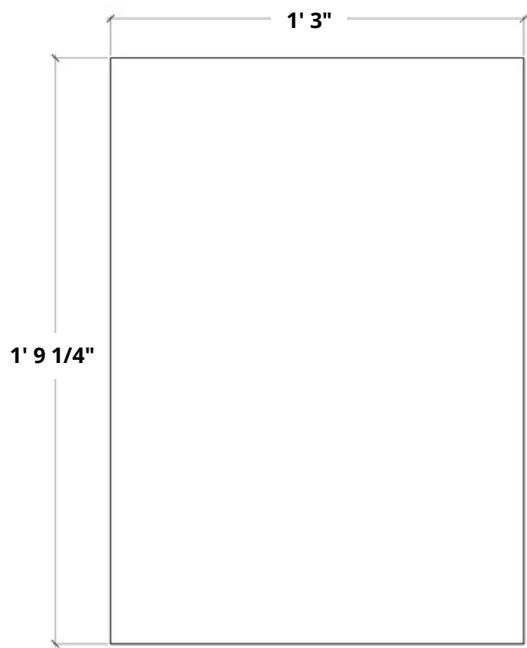


## DOOR STILE (QTY 2)

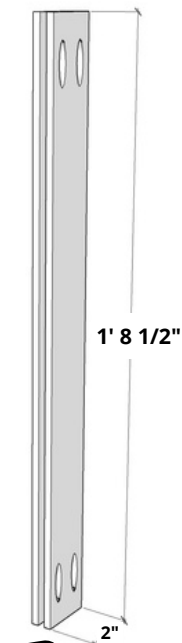


Grooves for  
door panel insert  
(see Step #3)

## DOOR: ASSEMBLED

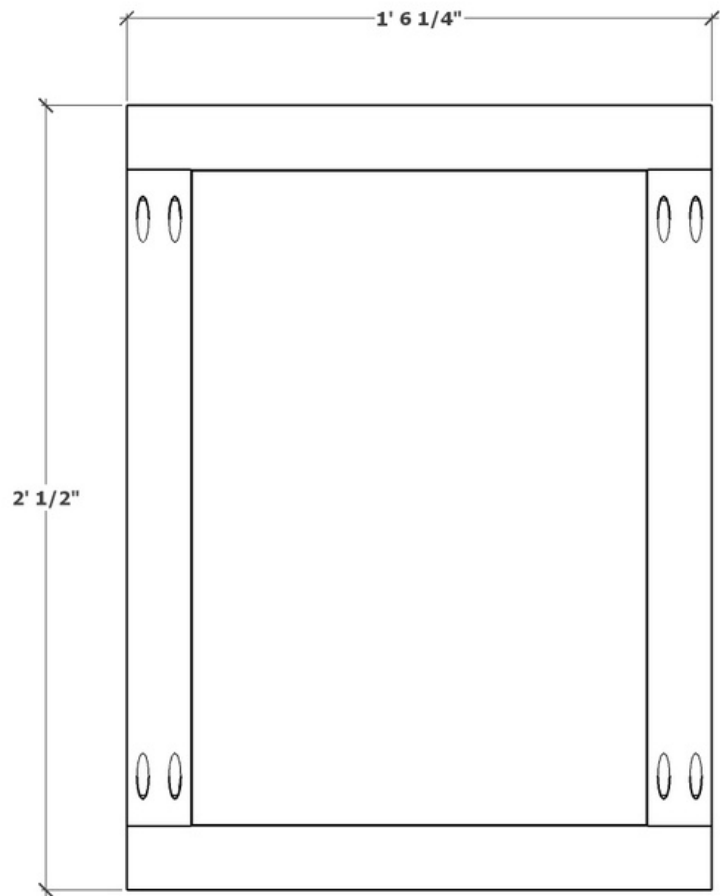


## DOOR RAIL (QTY 2)

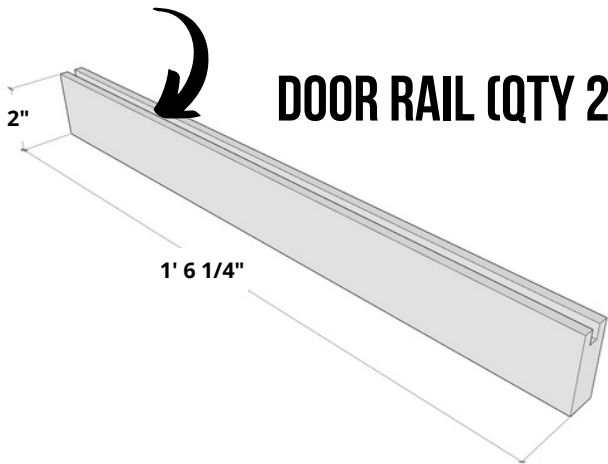


# TRASH BIN ( FACE FRAME ): VISUAL CUT LIST


## FACE FRAME SIDES (QTY 2)

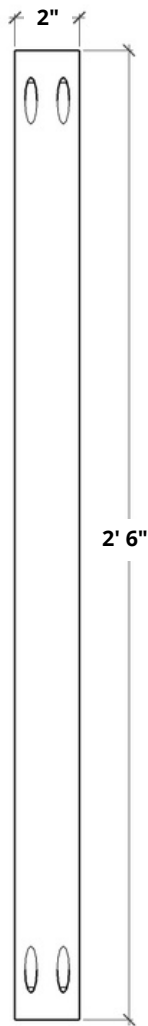

## FACE FRAME TOP & BOTTOM (QTY 2)

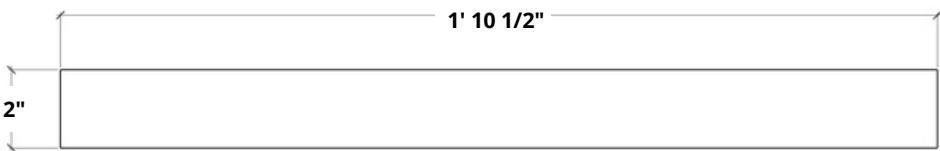


## FACE FRAME: ASSEMBLED

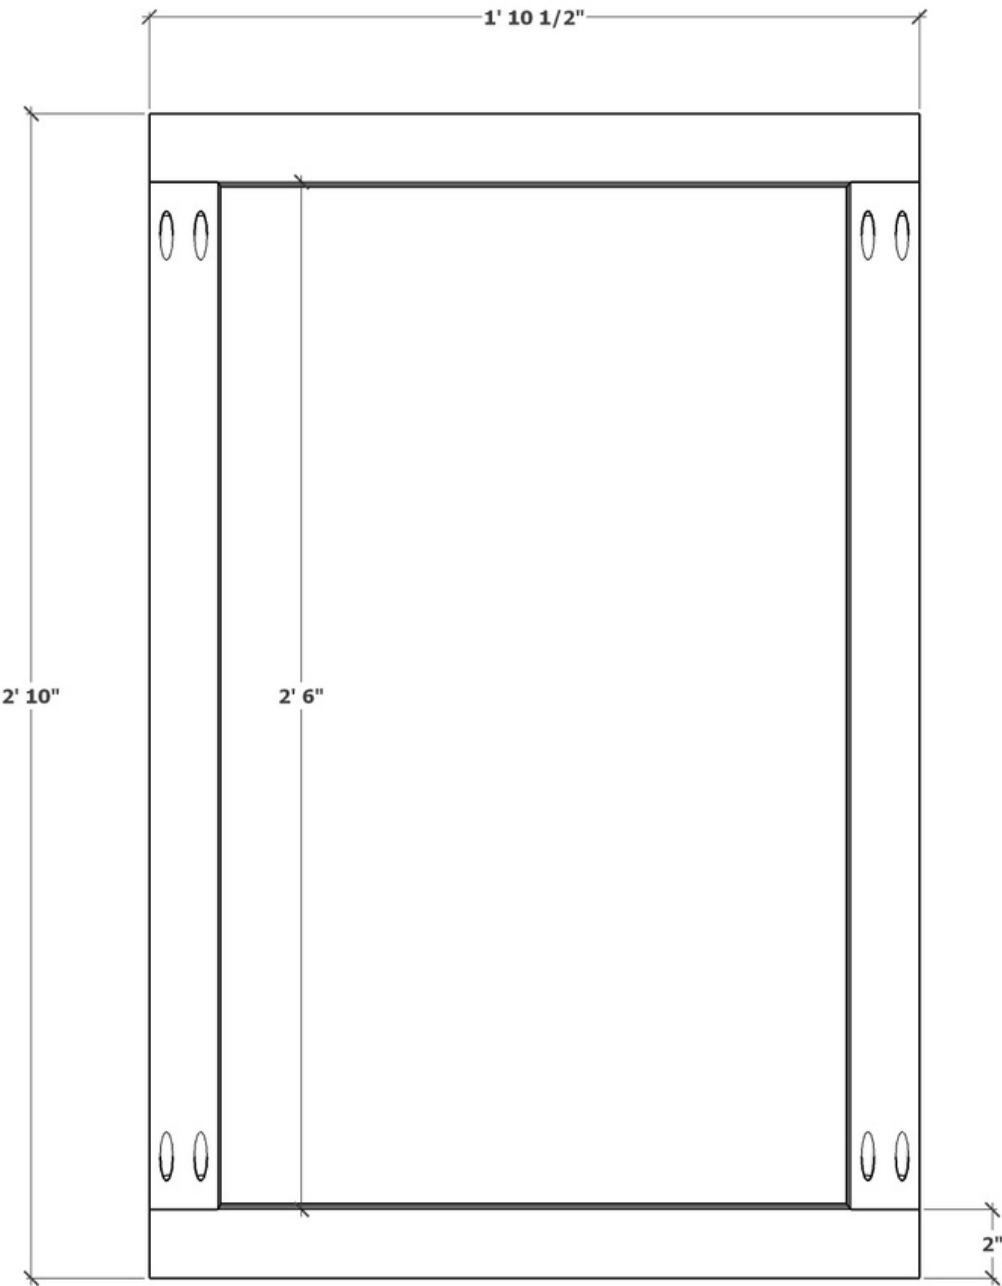


# TRASH BIN ( CABINET ): VISUAL CUT LIST


## CABINET SIDE PANELS (QTY 2)

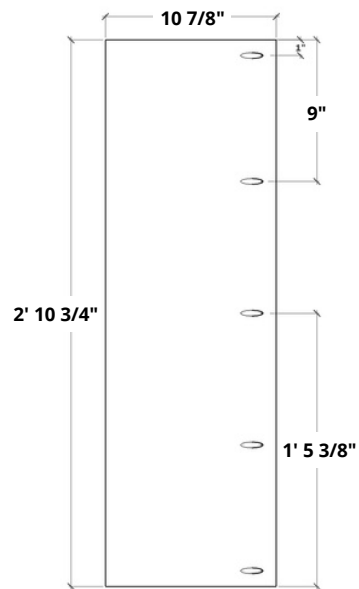


## CABINET TOP PANEL (QTY 1)

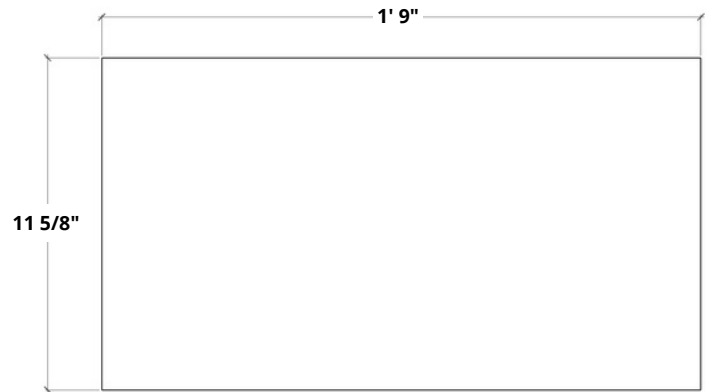


## CABINET BOTTOM SUPPORTS (QTY 2)




## CABINET BOTTOM PANEL (QTY 1)

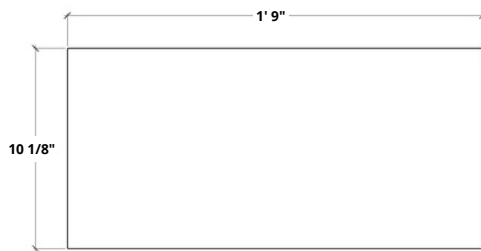

## CABINET: ASSEMBLED

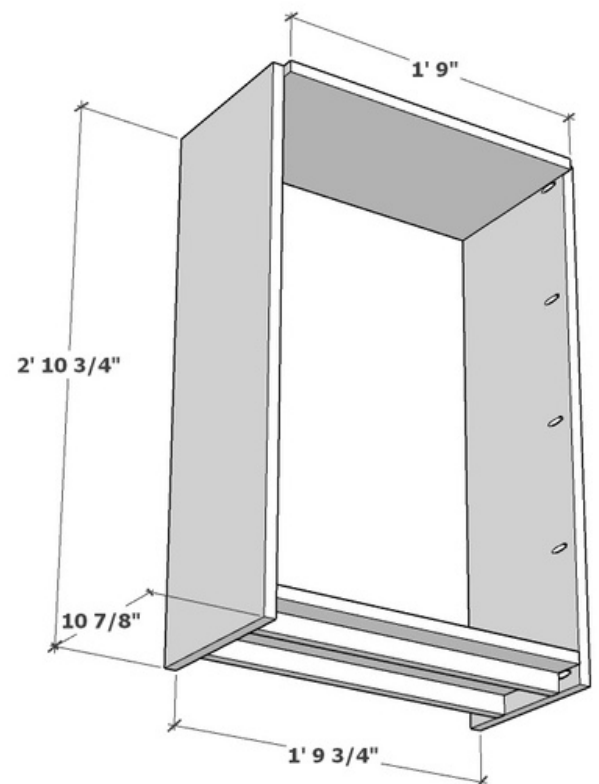


## CABINET BACK PANEL (QTY 1) \* ADDED IN STEP 17

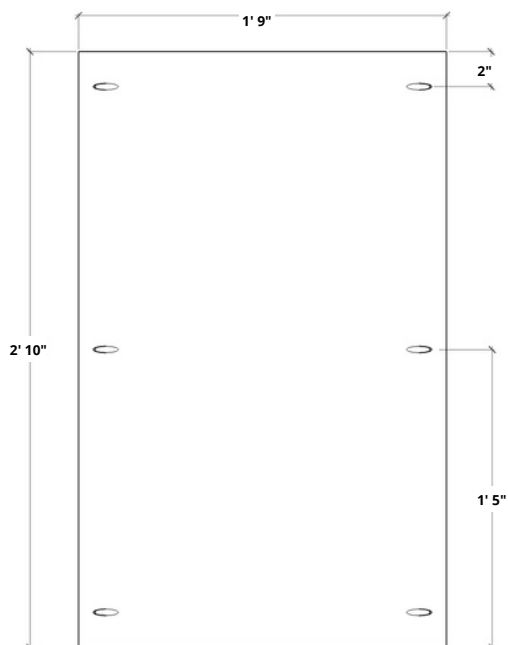


# TRASH BIN ( TOP ): VISUAL CUT LIST


## TOP PANEL (QTY 1)

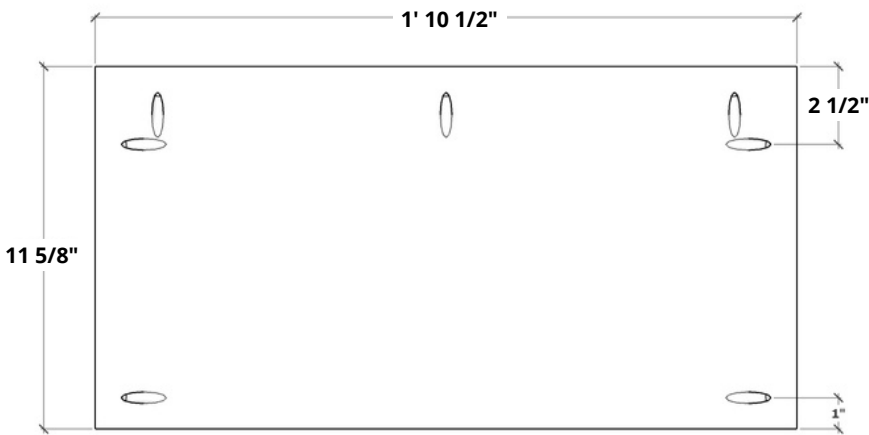


## TOP SIDE TRIM (QTY 2)

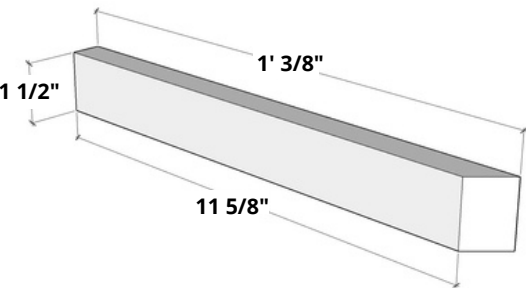

## TOP FRONT TRIM (QTY 1)

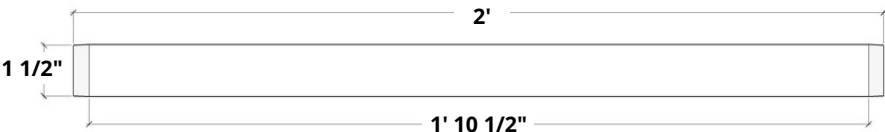


## TOP: ASSEMBLED

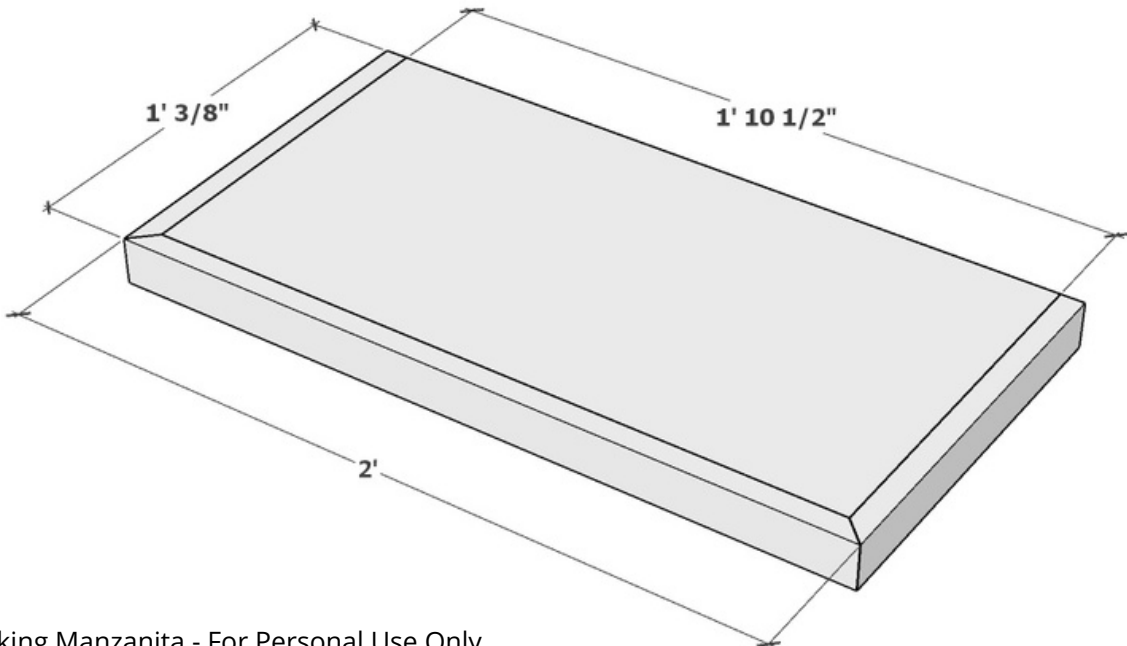


## TRASH BIN ( TILT PLATFORM ): VISUAL CUT LIST

## TRASH BIN TILT PLATFORM BASE (QTY 1)

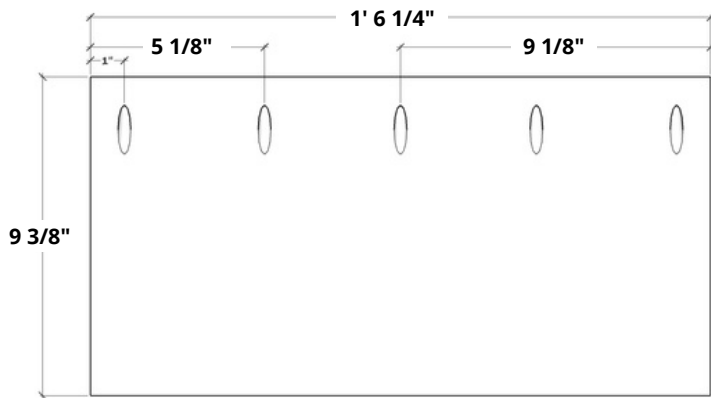

## TILT SUPPORT TRIANGLES (QTY 2)


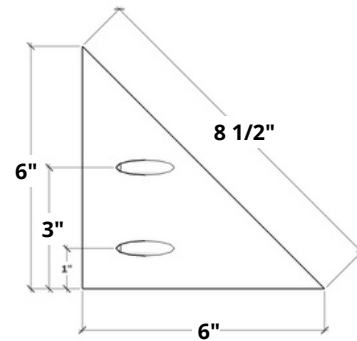


## TILT PLATFORM: ADDED TO DOOR



**see Step #12**

## TILT PLATFORM: ASSEMBLED

**see Step #12**

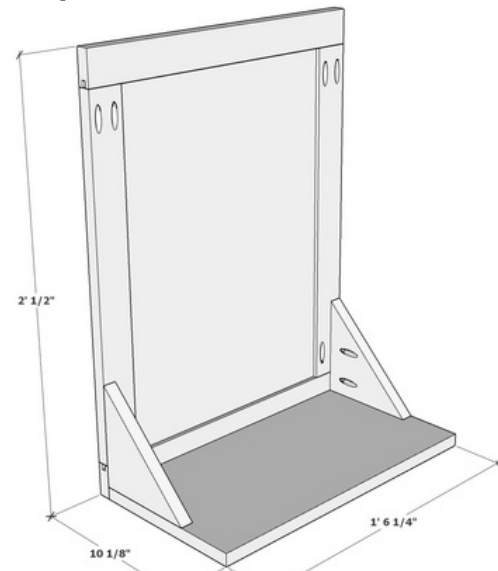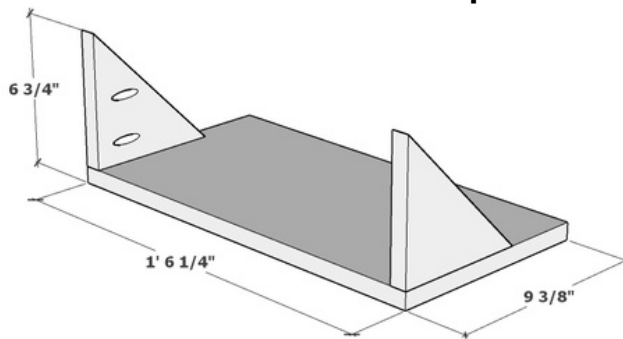

## TILT STOPS (QTY 2)

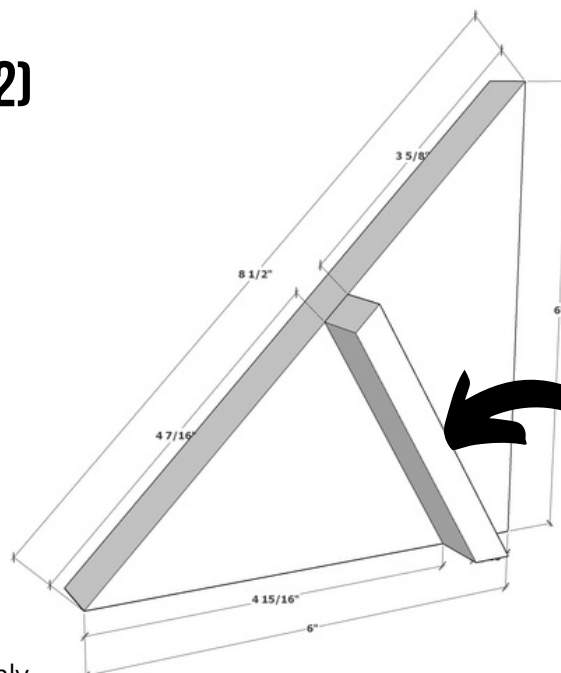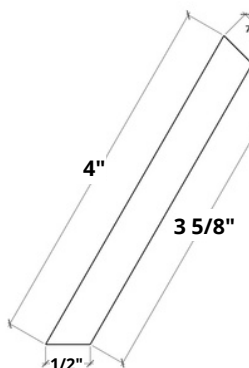

## Tilt stop added in Step #15