



## PLYWOOD MIRROR SHELF


This DIY Mirror shelf features a 24" diameter mirror that is perfect for a bathroom vanity. The shelf is made entirely from 3/4" plywood.

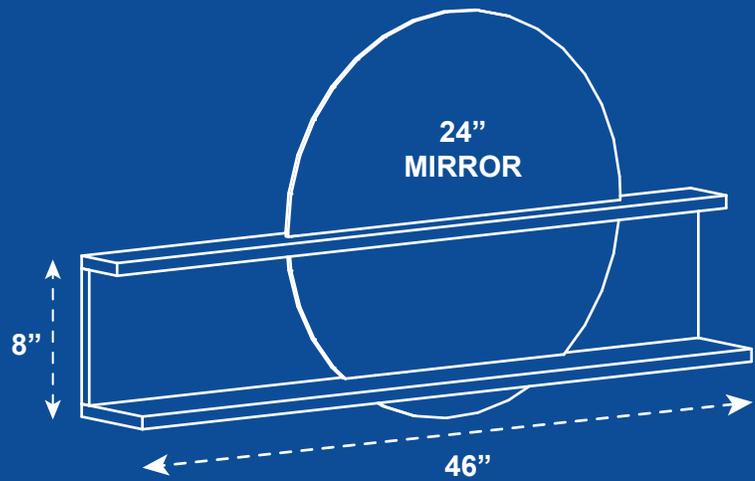

1. Cut three pieces of plywood. These are the sizes i used but this design idea can be adapted in all dimensions.

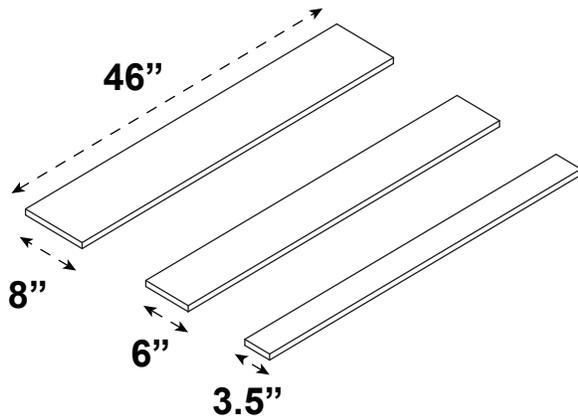

2. Place the shelf pieces over the mirror to determine the length of the slots before cutting these 3/8" wide slots with a jigsaw.

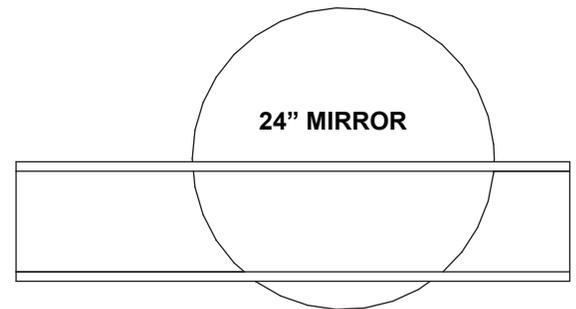

3. Assemble with pocket holes and screws. The shelf unit can be attached to the wall by screwing through the back panel in the area that the mirror will cover.

