


Charleston Crafted

SUNGLASSES HOLDER

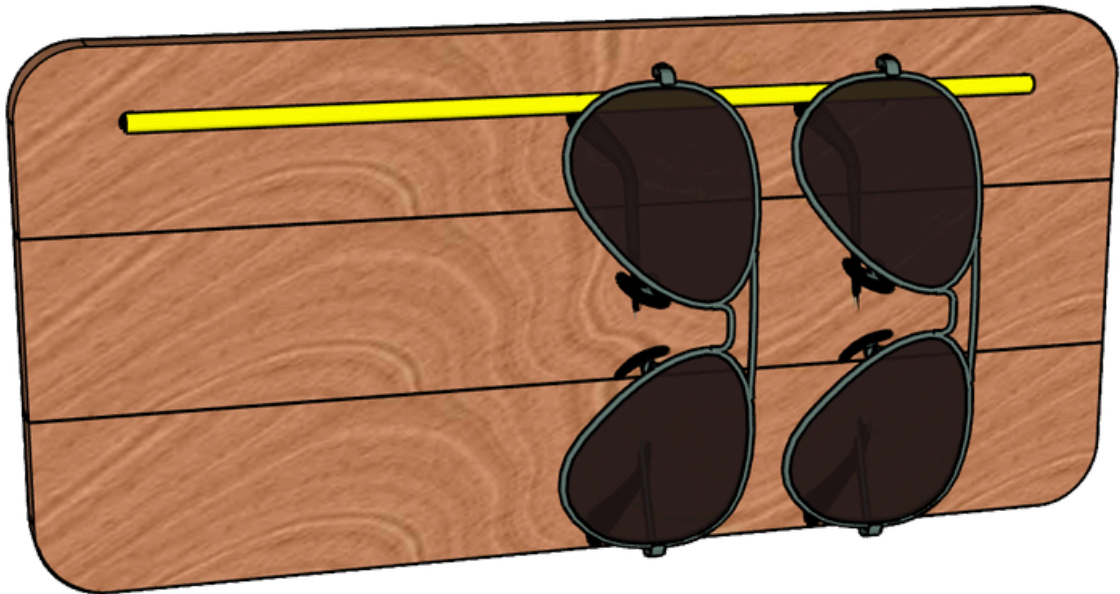

PLANS CREATED BY CHARLESTON CRAFTED

FOR MORE INFORMATION ON THIS PLAN VISIT:

WWW.CHARLESTONCRAFTED.COM

INTRODUCTION

Need a place to store all your cool sunglasses but don't want them to get scratched or lost? Build this modern sunglasses holder and hang it by the door for easy access!

The plans are easy to follow, but please contact Sean@CharlestonCrafted.com if you have any questions! If you'd like to see our version live in action, check out our blog post at www.charlestoncrafted.com


SUPPLY LIST

- (1) 3/4" x 2 1/2" x 48" board (common 1x3)
 - You can use any type of nice wood for this or cut down other boards to be this thickness and width
- Wood oil
- Wood glue
- 1 1/4" Kreg pocket hole screws
- Bungee cord

CUT LIST

- (3) Boards- 2 1/2" x 16" x 3/4"

EXPLODED VIEW

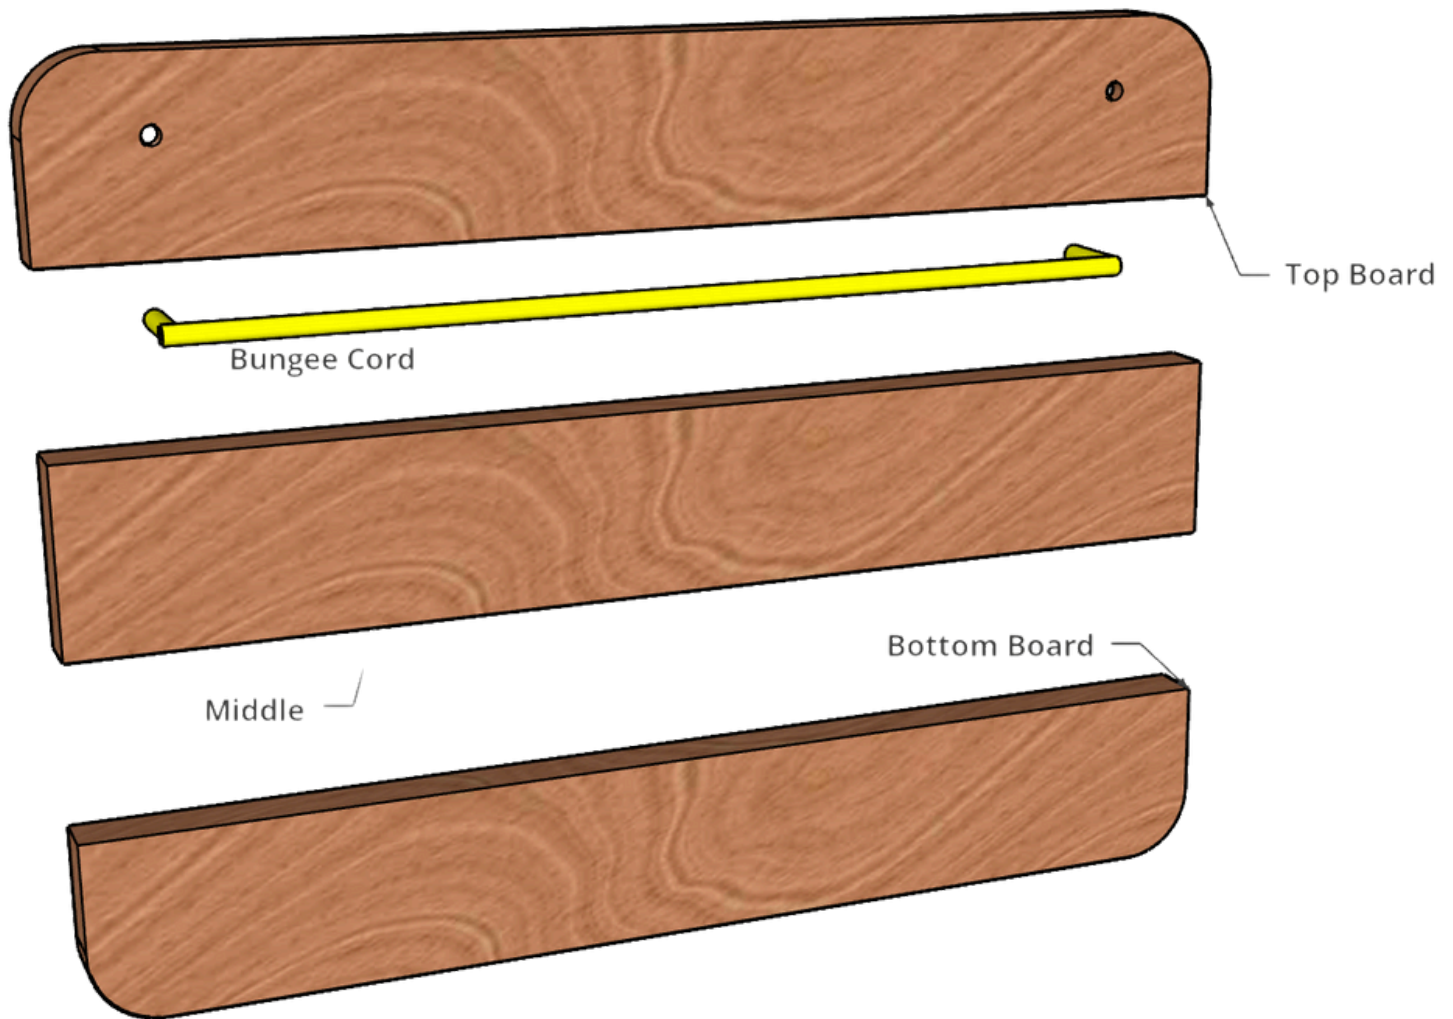


STEP ONE- DRILL POCKET HOLES

- On two Boards, drill three pocket holes along one long edge.
- Drill the holes in the middle and 2" in from each end.




STEP TWO- ATTACH BOARDS

- Using wood glue and pocket hole screws, attach one Board with pocket holes into the one that doesn't have holes.
- Repeat for the other Board into the other side of the middle Board.

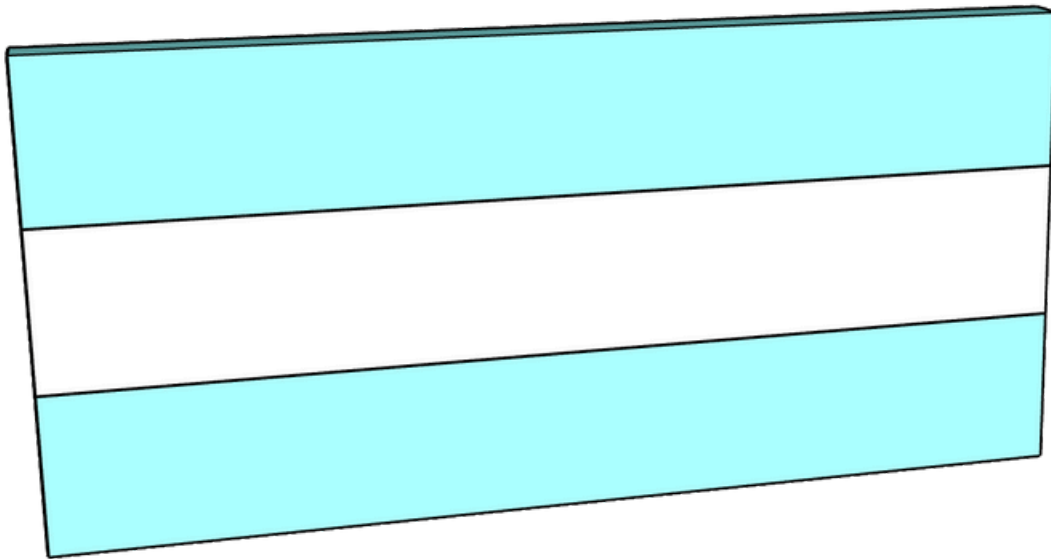



STEP THREE- ROUND CORNERS

- Using the Kreg Corner Routing Guide to route curved corners.
- You can use any size chamfer depending on the look you want. I used 1 1/2" for this build.

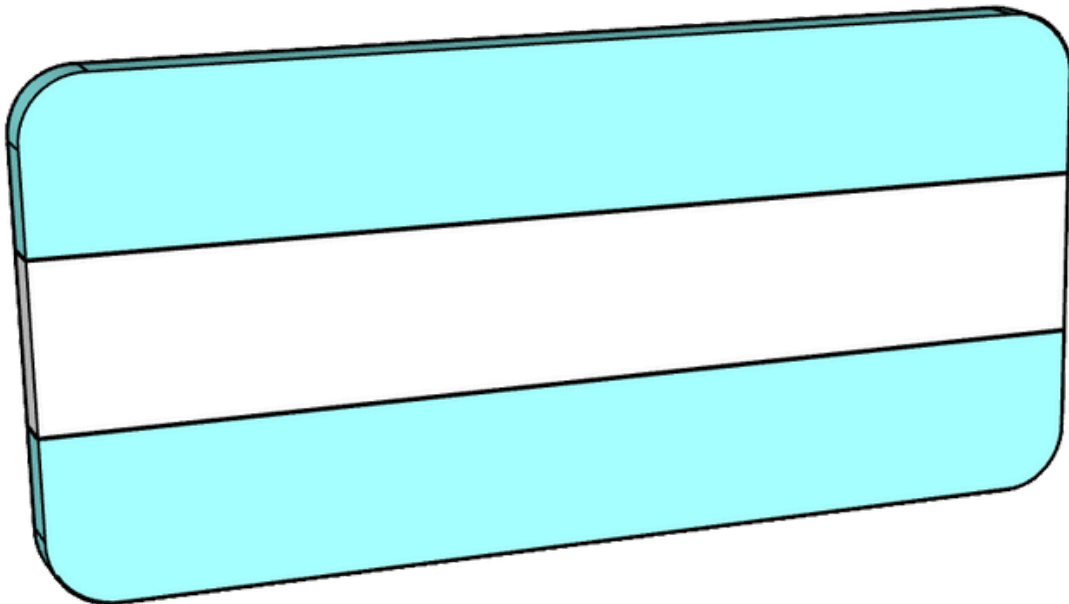


STEP FOUR- DRILL HOLES

- Mark a spot 1 1/2" in and 1 1/2" down from the top of the top Board on both the front and back of the piece.
- Using a 1" Forstner bit, drill a recessed hole on the back of the board about halfway through the wood in each marked position.
- Then, flip the board over and use a 1/4" drill bit and drill through the board in the marked positions.

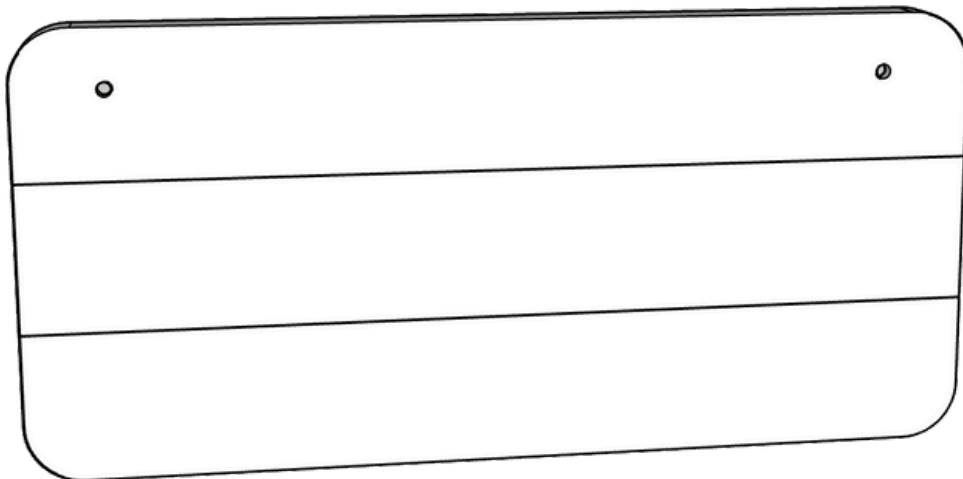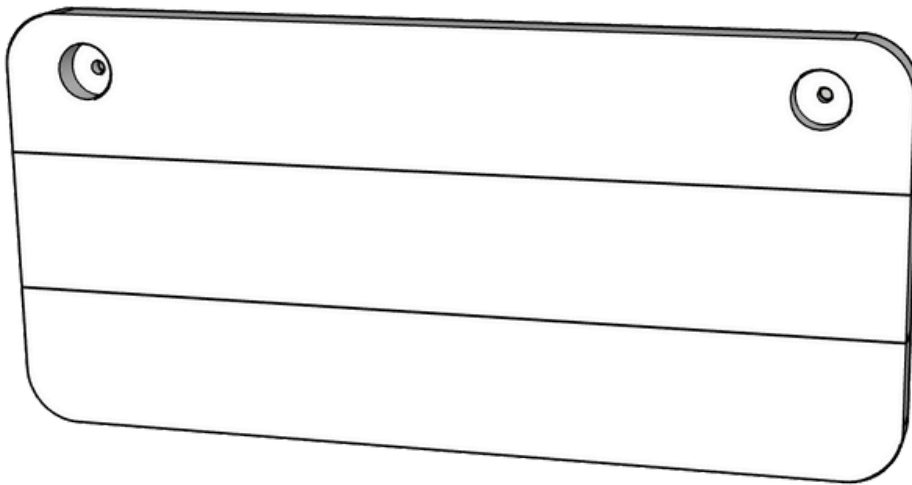


STEP FIVE- OIL

- Sand the piece down with a high grit sandpaper.
- Apply your favorite oil or stain to the wood and let dry.

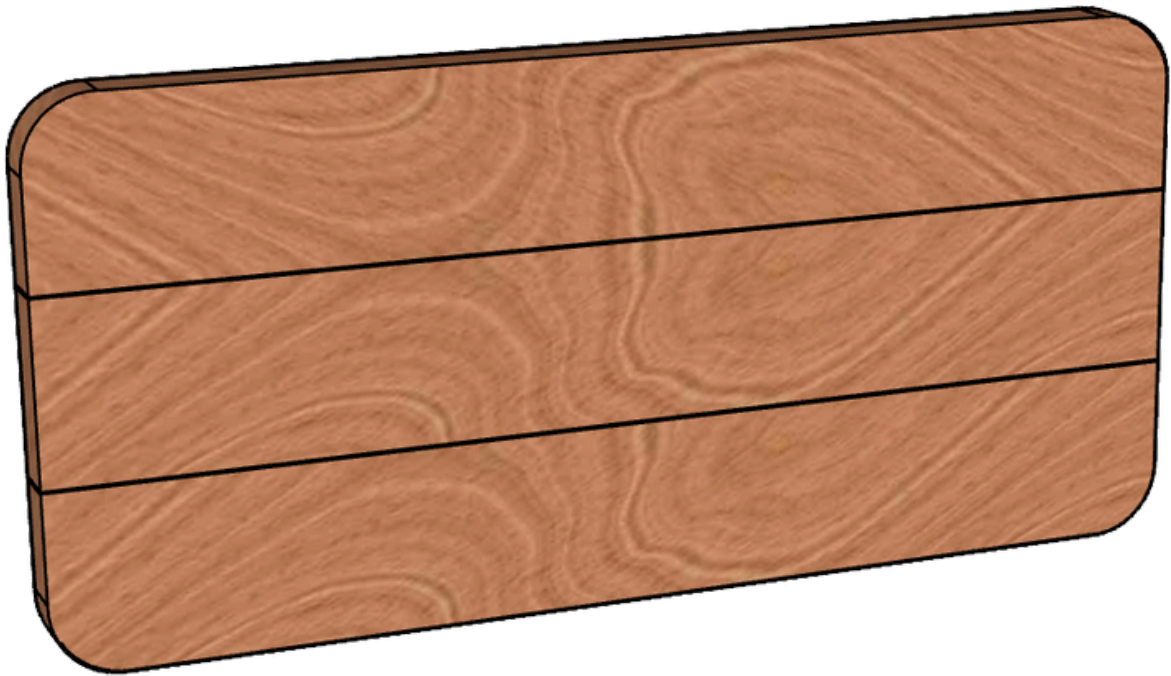


STEP SIX- ADD BUNGEE

- Insert the end of the bungee cord into the 1/4" hole on one side and tie it tight on the back so that the knot is in the recessed larger hole on the back.
- Pull the bungee across and into the other hole so it is tight.
- Tie off a second knot on the back so it fits into the other recessed hole.

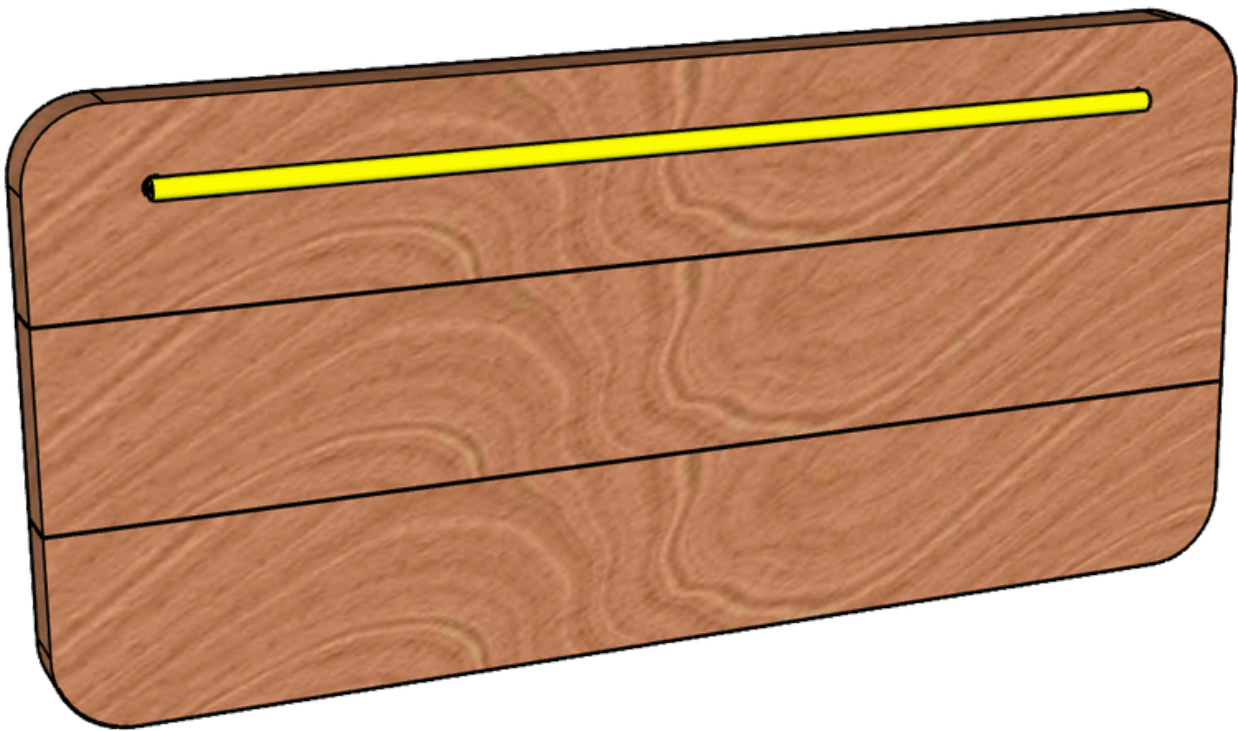

STEP SEVEN- HANG

- Add mounting hardware to the back of the sunglasses holder (I used keyhole hangers).
- Add nails or screws into the wall and hang the board up.
- Slide one arm of your sunglasses behind the bungee to hang them up.

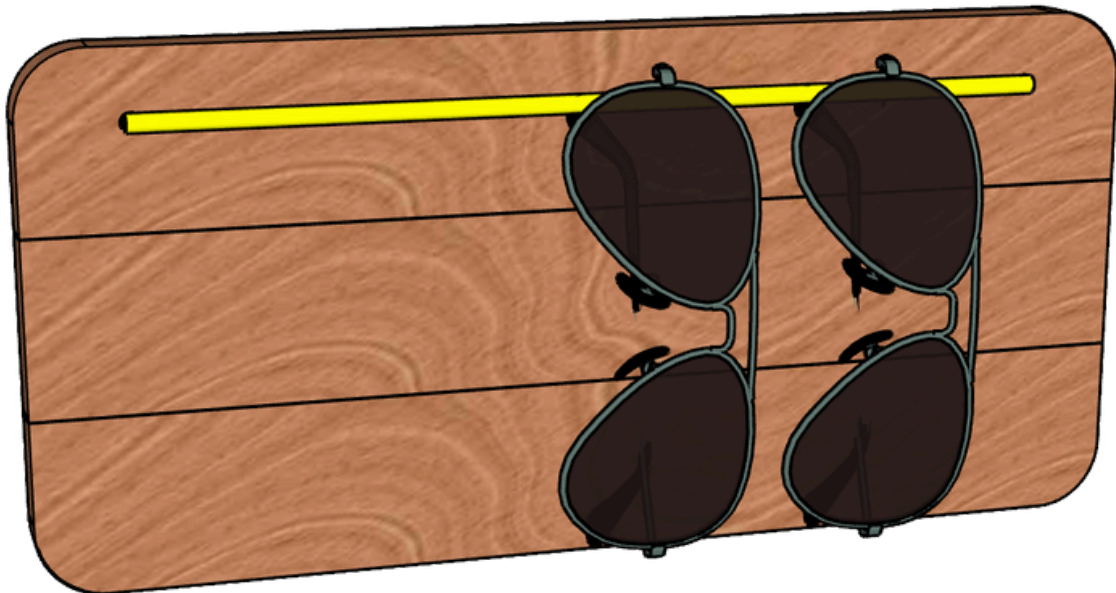

FINAL STEP- ENJOY!

- Enjoy your handiwork and tag @CharlestonCraftedBuilds on Instagram with a picture!

The logo for Charleston Crafted, featuring the words "Charleston" and "Crafted" in a cursive, rope-like font. The letters are thick and have a textured, rope-like appearance with visible stitching or braiding.

These plans are for personal use only and are meant to serve as a guide to build. Sean and Morgan McBride and The Charleston Crafted Blog LLC do not assume any responsibility or liability arising from the misuse of these plans or injuries that occur during the construction or use of your product.