


# Charleston Crafted

## MODERN TOWEL RACK

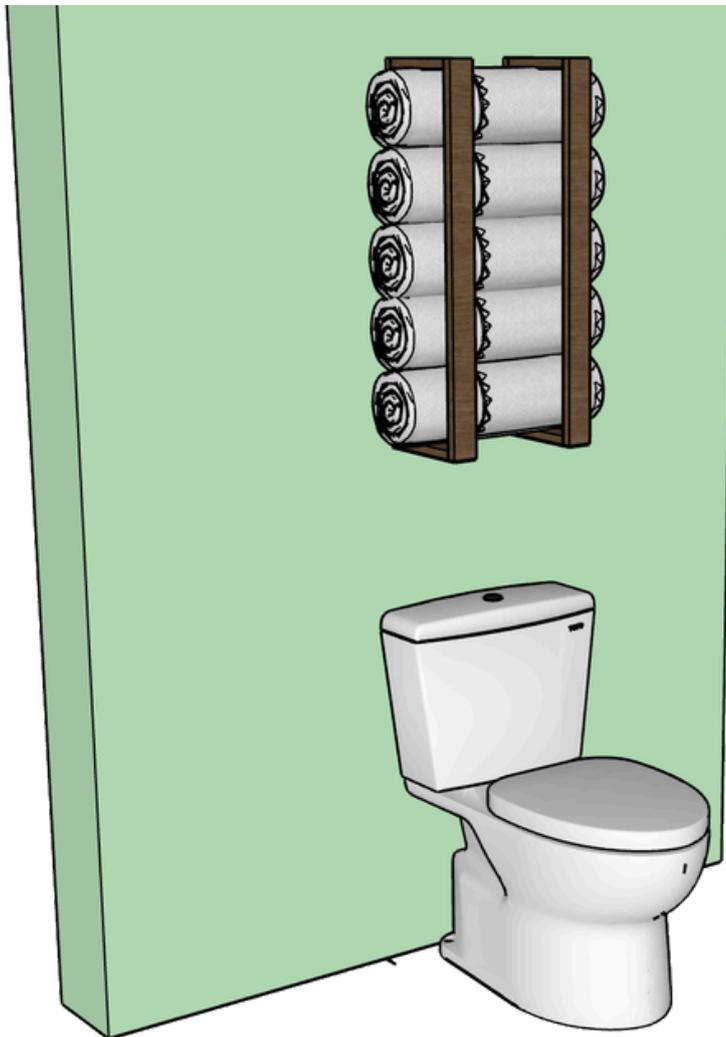

**PLANS CREATED BY CHARLESTON CRAFTED**

FOR MORE INFORMATION ON THIS PLAN VISIT:

[WWW.CHARLESTONCRAFTED.COM](http://WWW.CHARLESTONCRAFTED.COM)

## INTRODUCTION

This modern towel rack is a great solution for hanging rolled towels on the wall in the bathroom. It looks sleek and is very customizable!

The plans are easy to follow, but please contact [Sean@CharlestonCrafted.com](mailto:Sean@CharlestonCrafted.com) if you have any questions! If you'd like to see our version live in action, check out our blog post at [www.charlestoncrafted.com](http://www.charlestoncrafted.com)

## SUPPLY LIST


- (2) 3/4" x 3 1/2" x 8' boards (common 1x4s)
- Wood glue
- 3/8" Kreg dowels
- Stain or oil of choice
- Polyurethane
- Keyhole hangers

## CUT LIST

- (4) Front/Back Posts- 30" x 2" x 3/4"
- (4) Top/Bottom Spans- 7" x 2" x 3/4"

---


# EXPLODED VIEW

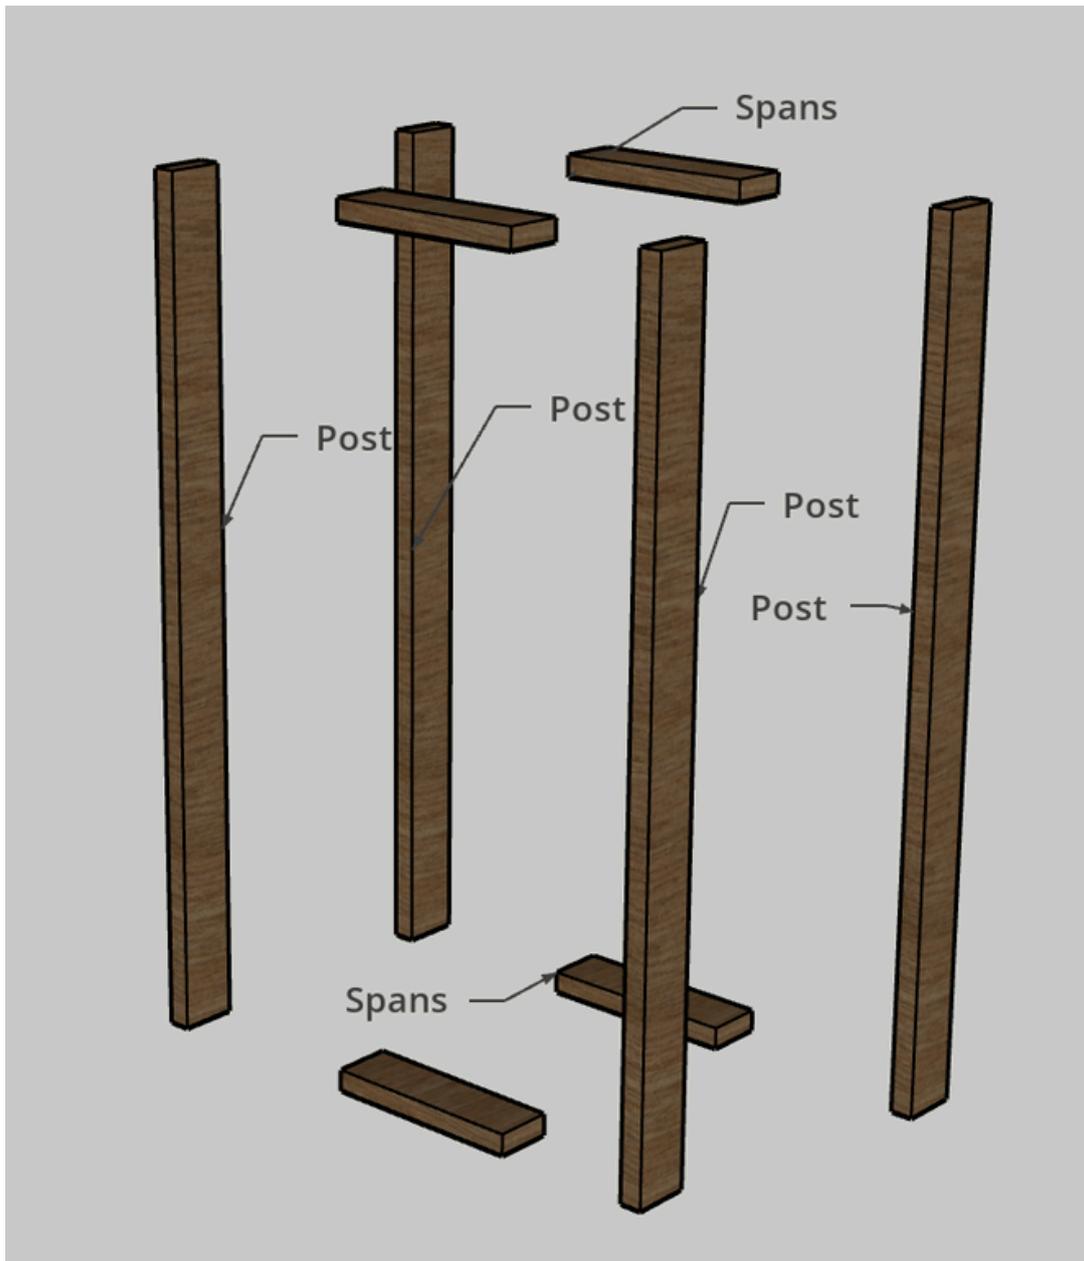

---

# STEP ONE- DRILL DOWEL HOLES


- Start by lining up your Spans and Posts in a rectangle pattern with the Spans between the Posts.
- Using a Kreg Dowel Jig, drill two 3/8" dowel holes in both ends of the Spans and corresponding edges of the Posts.

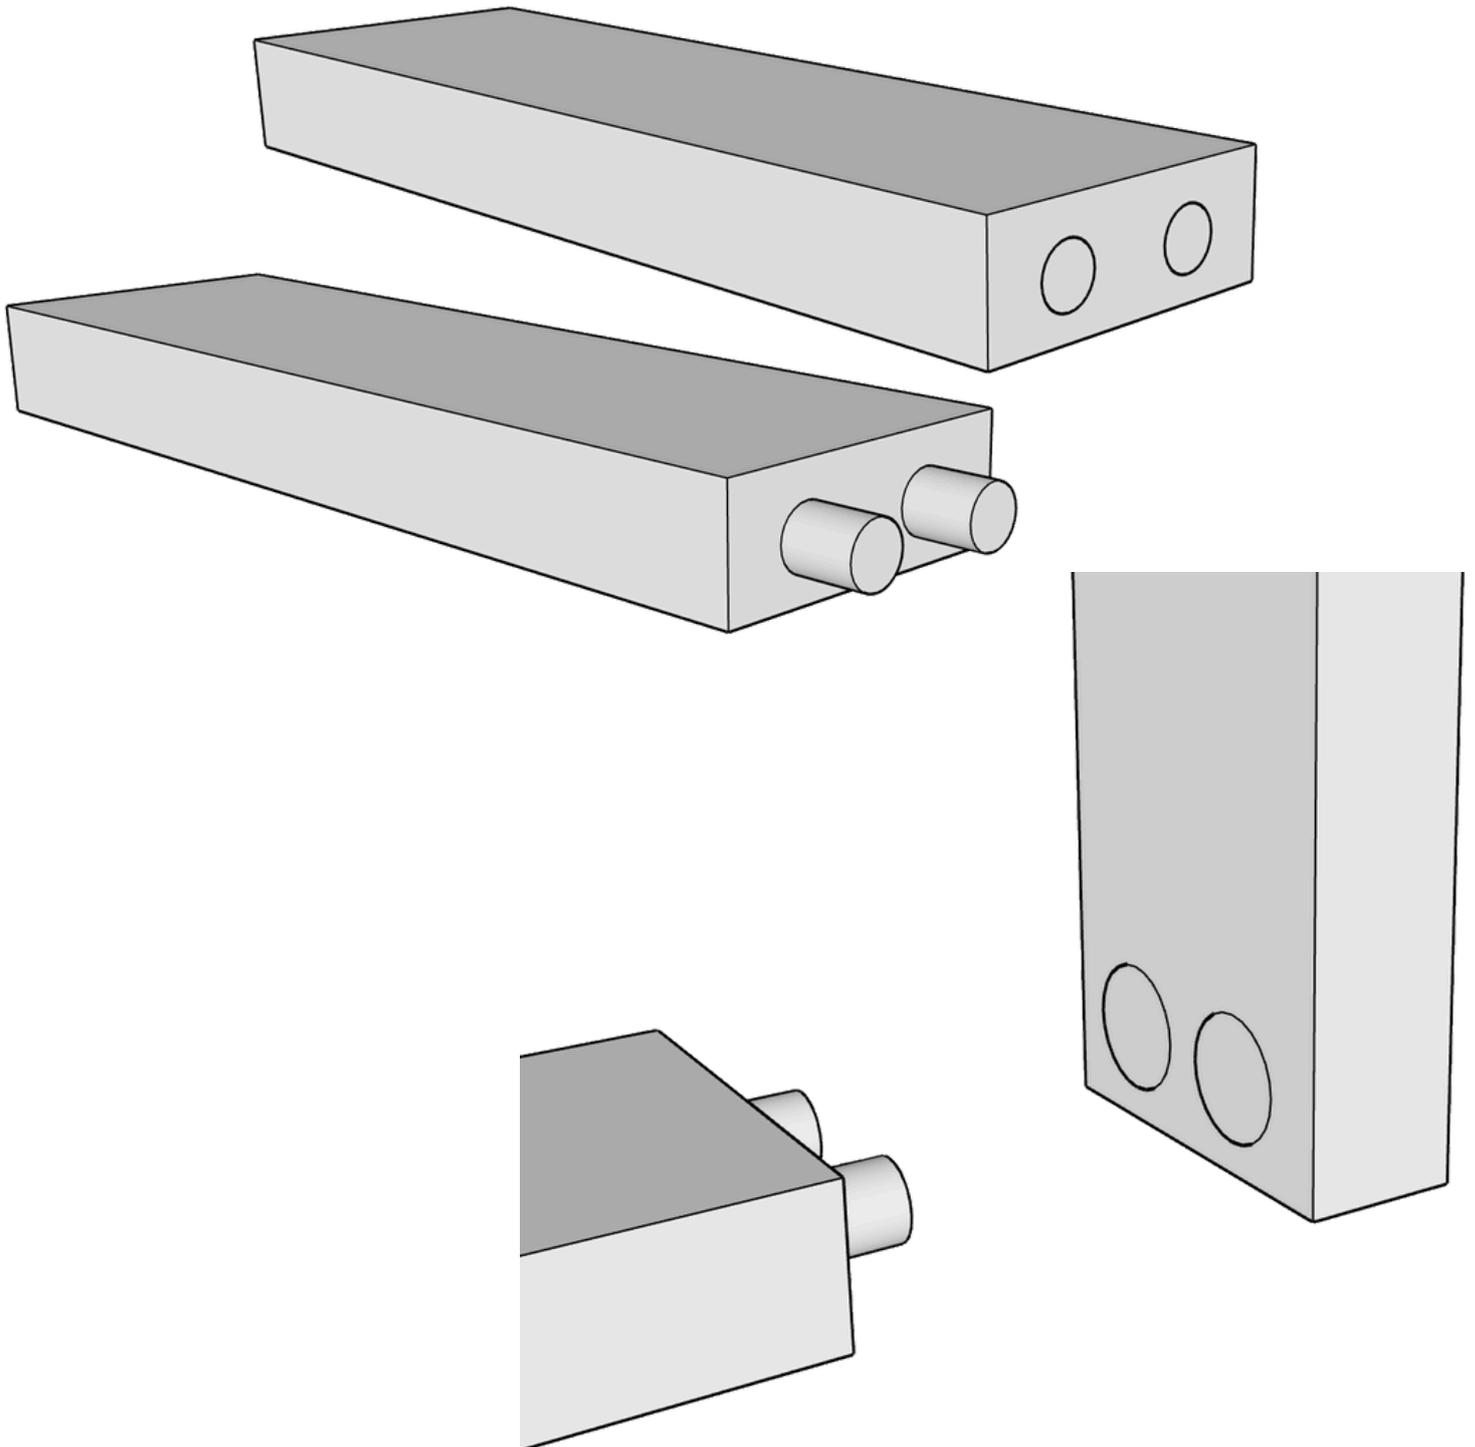

---

## STEP TWO- INSERT TOP AND BOTTOM


- Using wood glue, insert dowels into one end of two Spans.
- Insert wood glue into two holes on one Post.
- Use a mallet to tap the Span into the holes.
- Repeat for another Span on the other end of the Post.

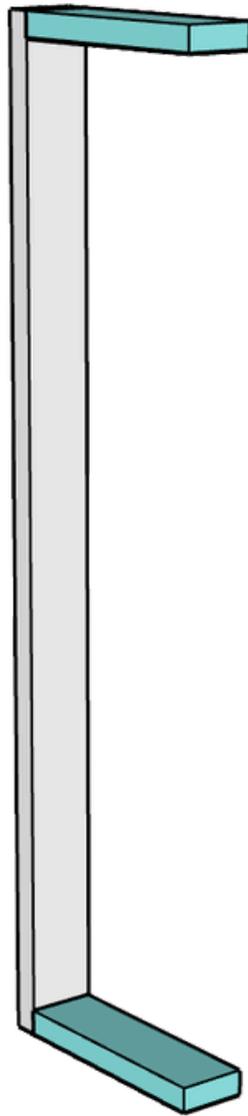

---

## STEP THREE- ATTACH FRONT


- Insert wood glue and dowels into the other ends of the two Spans.
- Insert wood glue into the holes on the remaining Post.
- Using a mallet, tap the Post into the Spans.
- Ensure everything is square using a speed square.

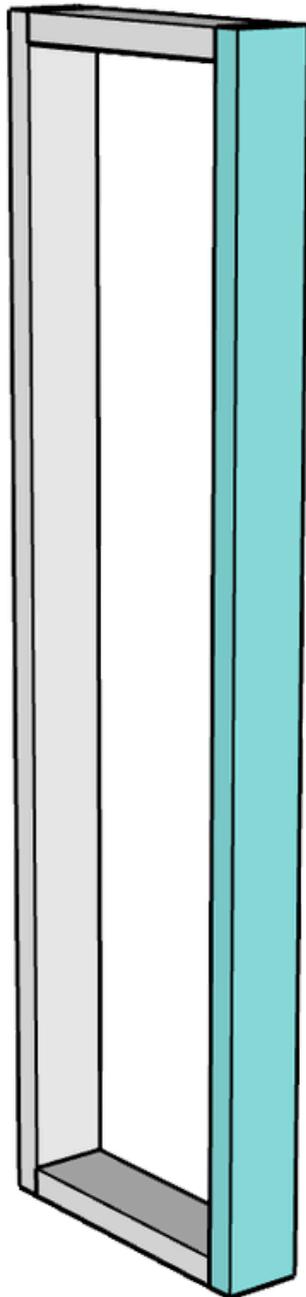

---

## STEP FOUR- REPEAT


- Repeat Steps Two and Three to make a second towel rack.
- Let the glue dry for 24 hours.

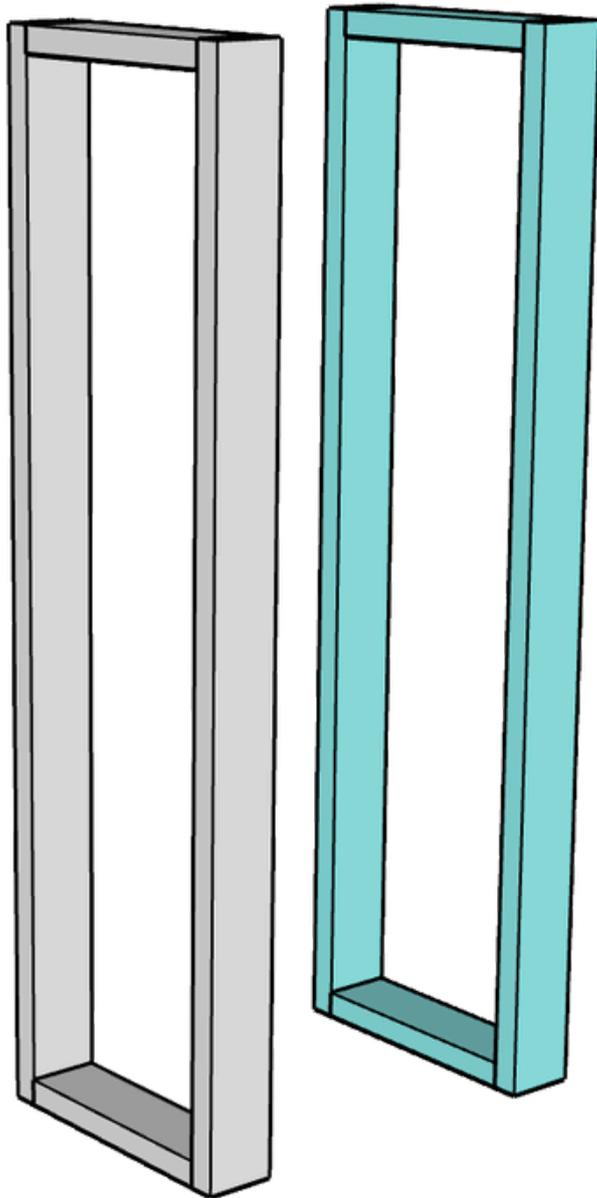

---

## STEP FIVE- OIL OR STAIN


- Apply a generous coating of oil or stain onto your racks to give it the color you want.
- Once dry, add polyurethane if desired to protect the wood in the bathroom.

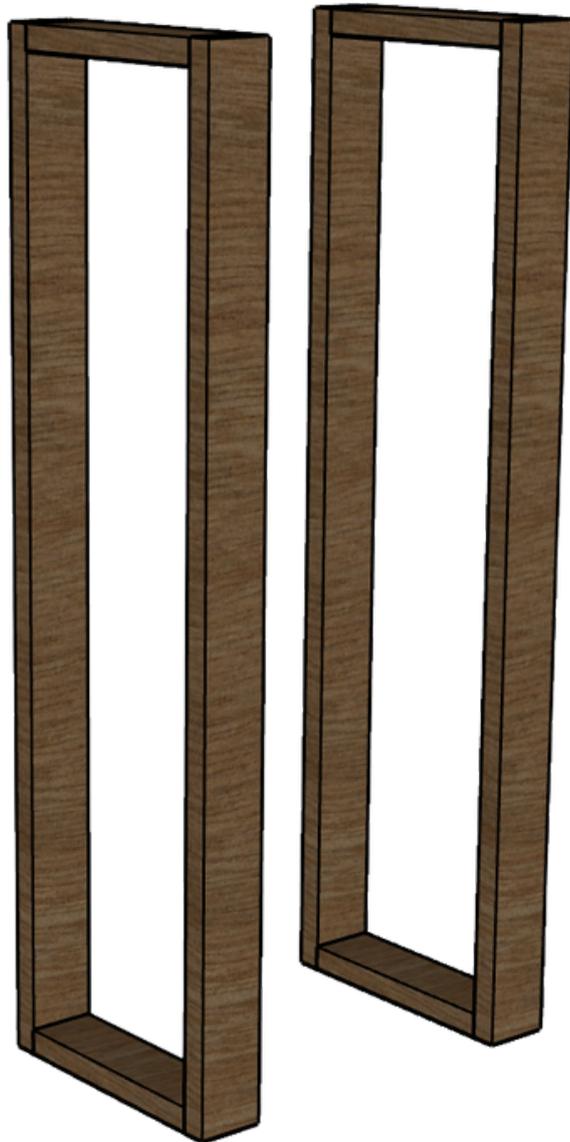

---

## STEP SIX- HANG

- Attach two keyhole hangers to the back of each rack 4" from the top and bottom.
- Measure and attach anchors and screws to the wall to correspond with the hangers, spacing out the two racks by 10".
- Hang the racks on the wall and push down to lock into place.
- Add towels to hang on the racks and stack upwards.

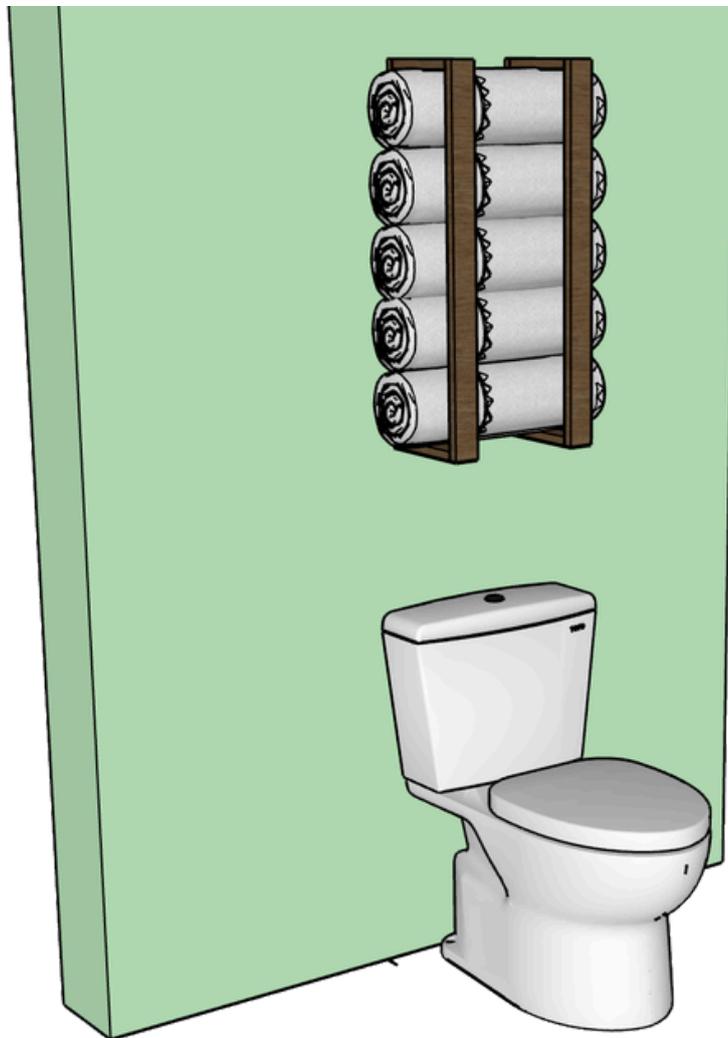

---

# FINAL STEP- ENJOY!

- Enjoy your handiwork and tag @CharlestonCraftedBuilds on Instagram with a picture!

Charleston  
Crafted

**These plans are for personal use only and are meant to serve as a guide to build. Sean and Morgan McBride and The Charleston Crafted Blog LLC do not assume any responsibility or liability arising from the misuse of these plans or injuries that occur during the construction or use of your product.**