


# Display Shelf

By **Kreg Tool**

Difficulty

Easy

Create an attractive display area on any wall with this small double shelf unit that holds photos and other favorite items. It's super easy to build, and can easily be customized by changing up the stain or finish that you use.

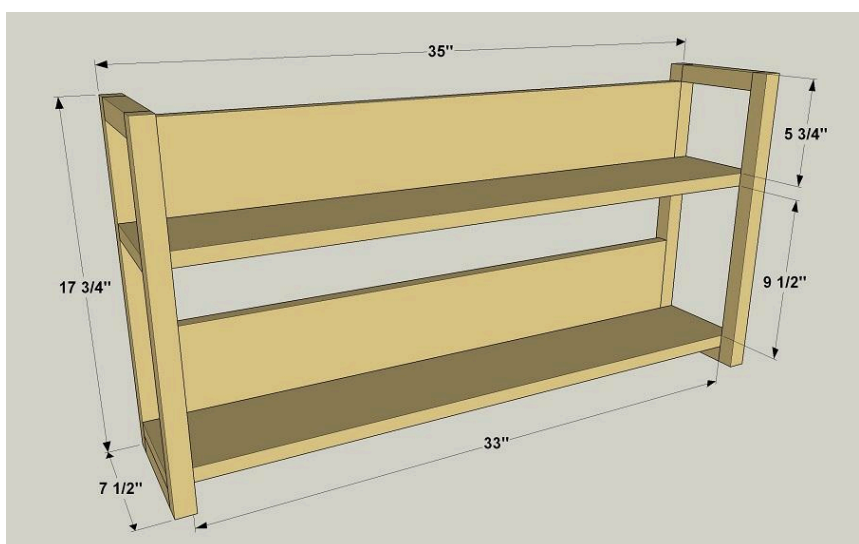



# Tools

## Kreg Tools

Kreg®  
Pocket-Hole Jig [Kreg® Pocket-Hole Jig 720](#)  
720

Portable  
Crosscut [Portable Crosscut](#)

Wood  
Project Clamp - [Wood Project Clamp - 6"](#)  
6

90°  
Pocket-Hole Driver [90° Pocket-Hole Driver](#)

Kreg®  
Pocket-Hole Jig [Kreg® Pocket-Hole Jig 720](#)  
720

## Other Tools

Miter Saw

Drill (cordless)

Brad Nailer

Sander

# Materials

## Wood Products


- 2** Board , 1x6 , 72"
- 3** Square Dowel , 1" X 1" (Actual Size) , 36"

## Hardware & Supplies

- 18** 1 1/4" Coarse-thread Pocket Hole Screws
- 16** 2" 18-gauge Brad Nails
- 1** 18" Mirror And Picture Hanger
- 1** Wood Glue

# Cut List & Parts

- 1 Lower Shelf , 3/4" X 5 1/2" X 35" Pine
- 1 Upper Shelf , 3/4" X 5 1/2" X 35" Pine
- 2 Shelf Back , 3/4" X 5 1/2" X 33" Pine
- 4 Support Stile , 1" X 1" X 17 3/4" Poplar Square Dowel
- 4 Support Rail , 1" X 1" X 5 1/2" Poplar Square Dowel

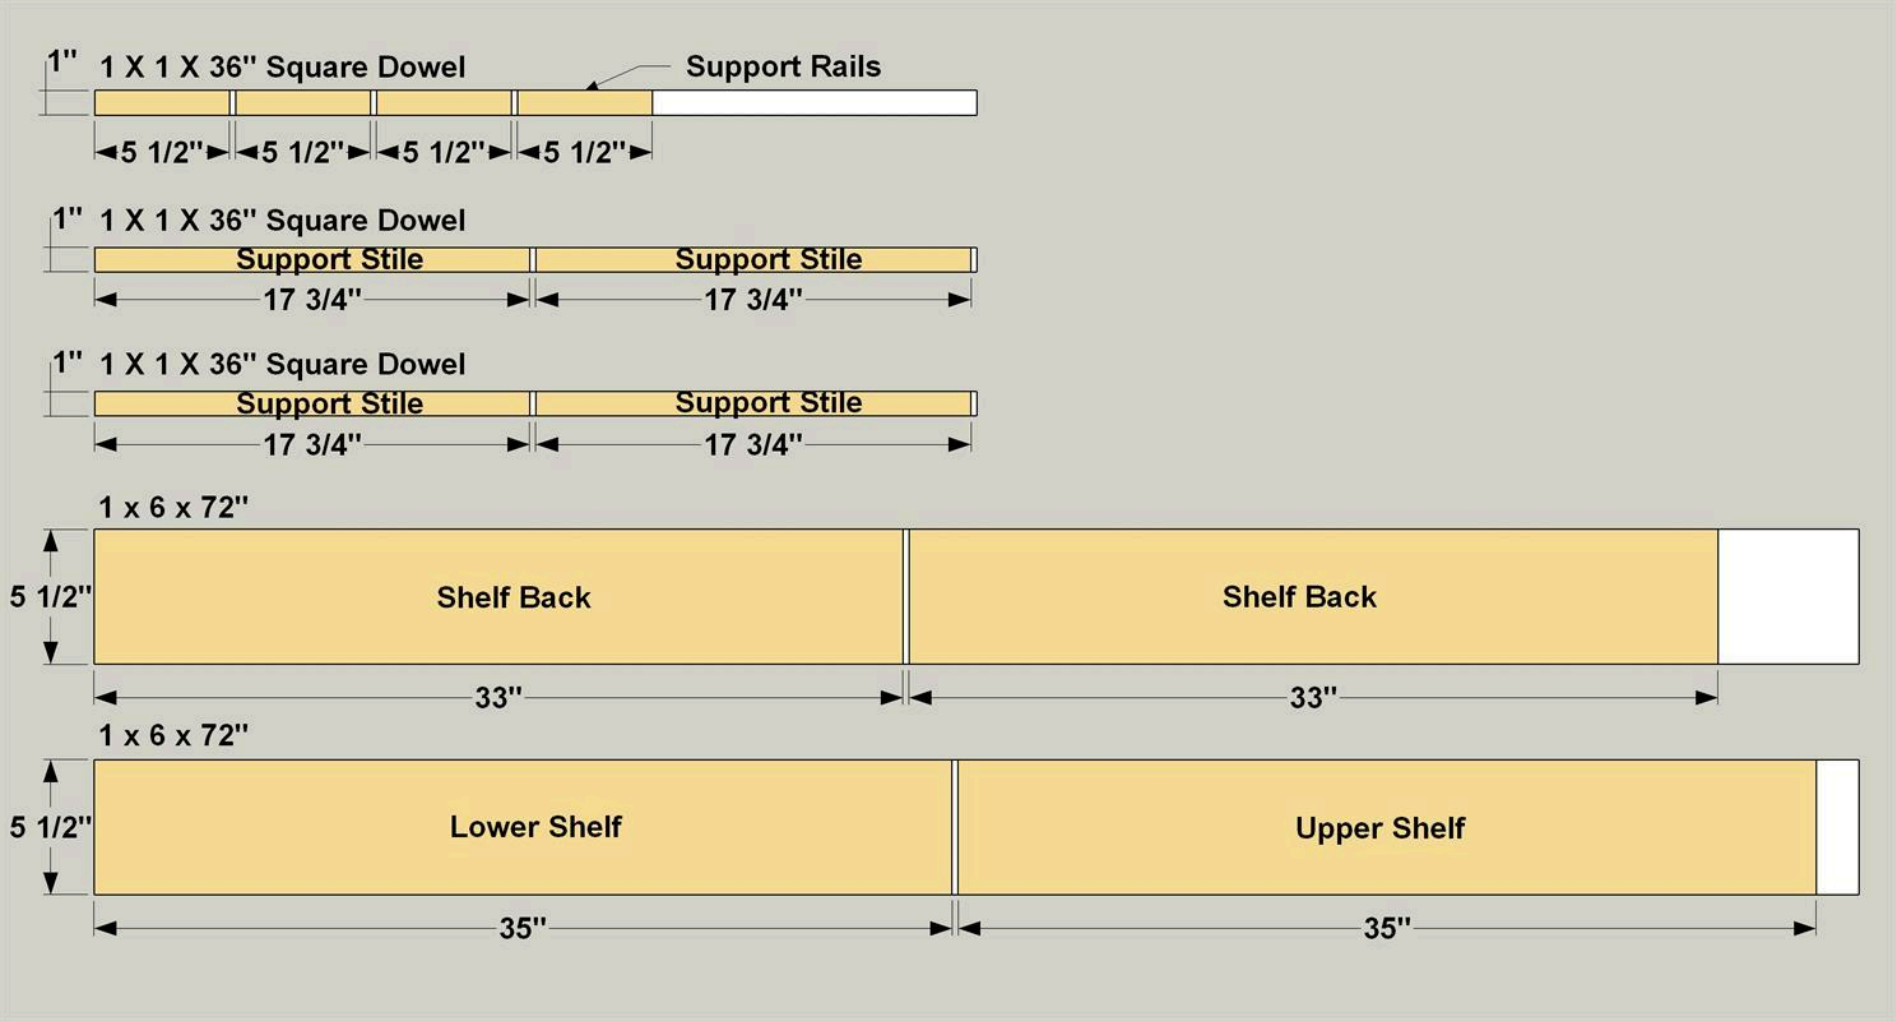



# Directions

**1****Make the Shelf Parts**


Cut one Lower Shelf, one Upper Shelf, and two Shelf Backs from 1x6 pine boards, as shown in the cutting diagram. Set your pocket hole jig for 3/4" thick material, and then drill pocket holes where shown. Note the Upper Shelf has two additional pocket holes that connect it to the front Support Stiles.



## 2

### Assemble the Shelves


Attach each Shelf to a Shelf Back, as shown, using 1 1/4" coarse-thread pocket hole screws. If you plan to stain or finish the shelves differently from the support frames, as we did, go ahead and apply the finish to the shelf assemblies now.

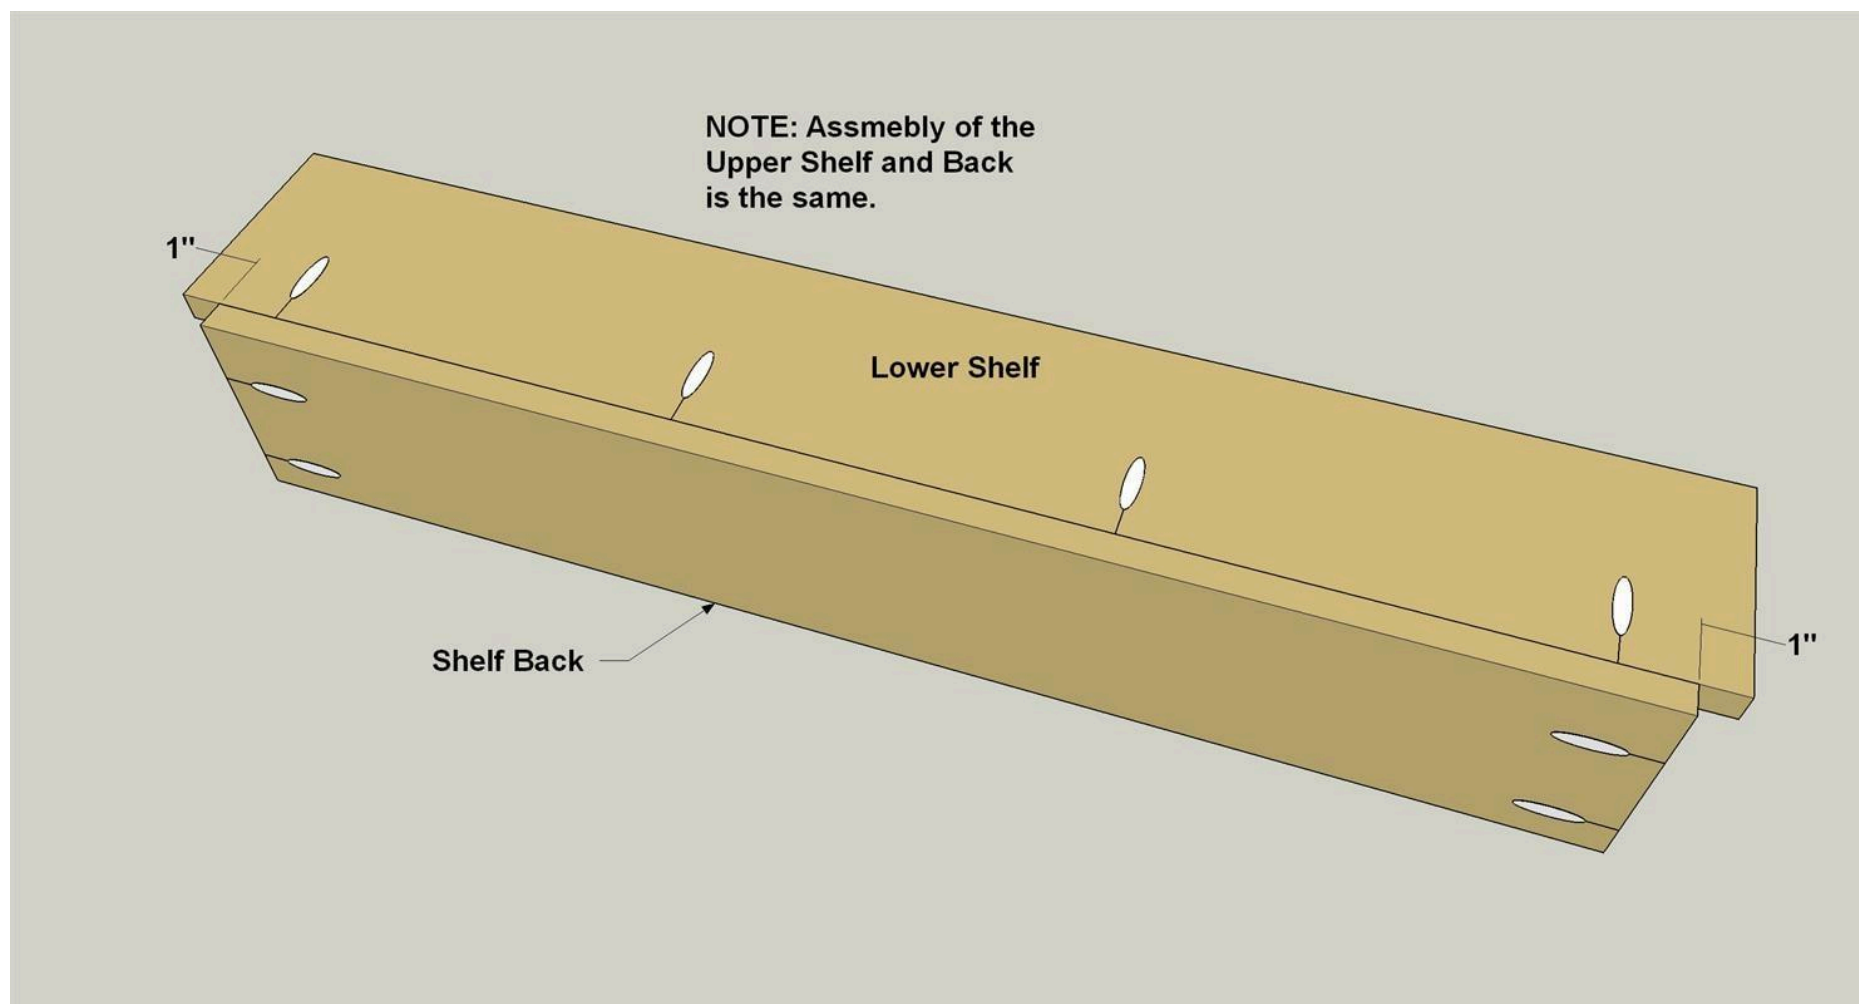

## 3

### Cut the Support Frame Parts


Cut four Support Stiles and four Support Rails from 1" square dowels, as shown in the cutting diagram.

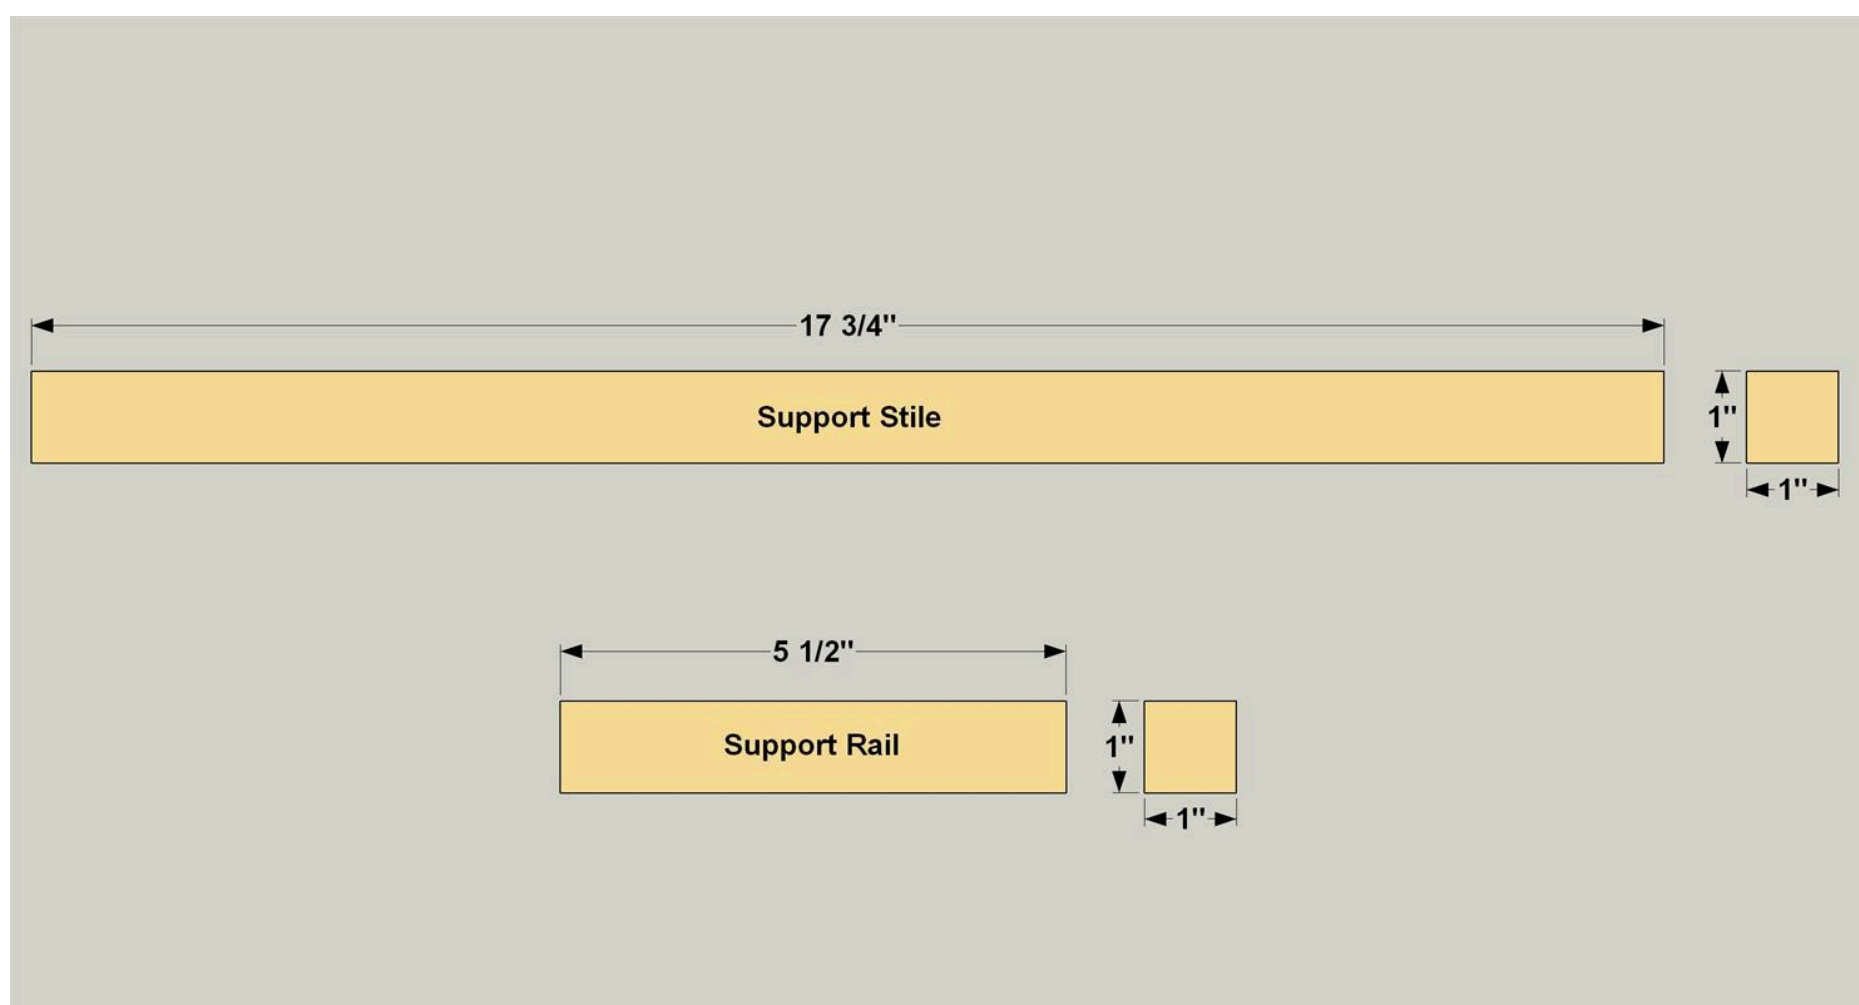

## 4


**Assemble the Support Frame**

Assemble the support frame using glue and 2" brad nails. The nails will help hold the pieces together while the glue sets. Adding the shelf assemblies later will also strengthen the frame assemblies. Be sure to check that the frame supports are square as you assemble them. If you have access to a brad nailer, that's the best way to nail the assemblies. If you're using a hammer and nails, predrill holes to prevent splitting the wood. After the glue dries, you'll want to finish the frame assemblies now if you're using a finish different from the shelves.

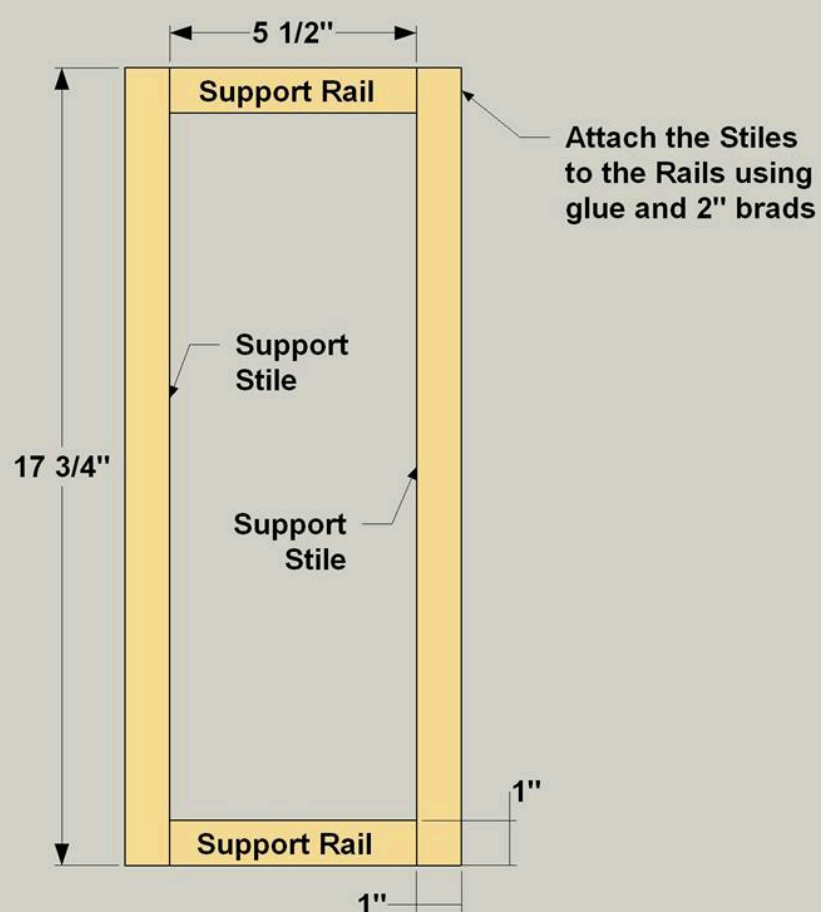


**5****Install the Lower Shelf**

Attach the lower shelf assembly to the support frames using 1 1/4" coarse-threaded pocket hole screws, as shown. Also dab a bit of glue onto each of the lower Support Rails before you position the lower shelf assembly. Make sure the front of the Shelf Back is flush with the front edge of the Support Stiles and the Shelf Assembly is resting on the bottom Support Rail. Clamp the Lower Shelf to each Support Rail, if needed. Note: The Shelf Backs sit inset 1/4" from the back of the Support Stiles. This allows for space for the hanging hardware that gets added later.

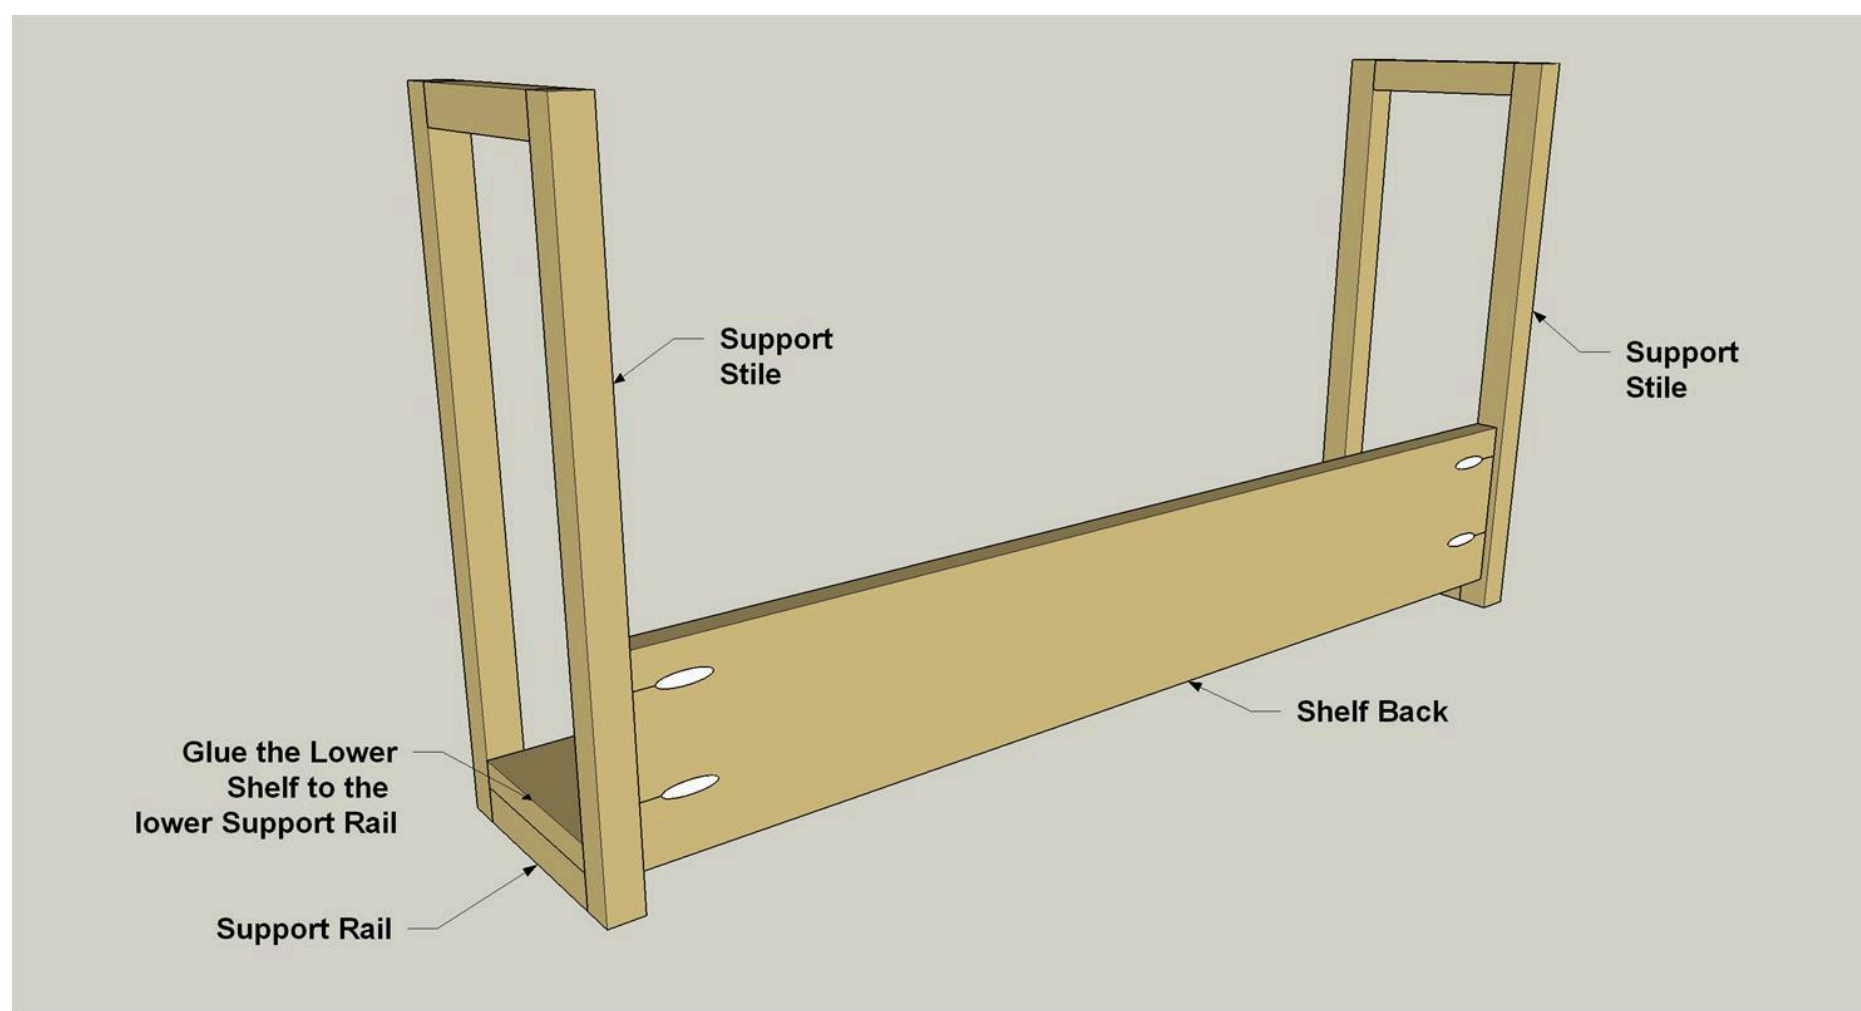

**6****Install the Upper Shelf**

Attach the upper shelf assembly to the support frame assembly using 1 1/4" coarse-threaded pocket screws. Make sure the front of the Shelf Back is flush with the front edge of the Support Stiles. A right-angle attachment, such as the Kreg 90° Pocket-Hole Driver, will be needed to attach the Upper Shelf to the front Support Stile.

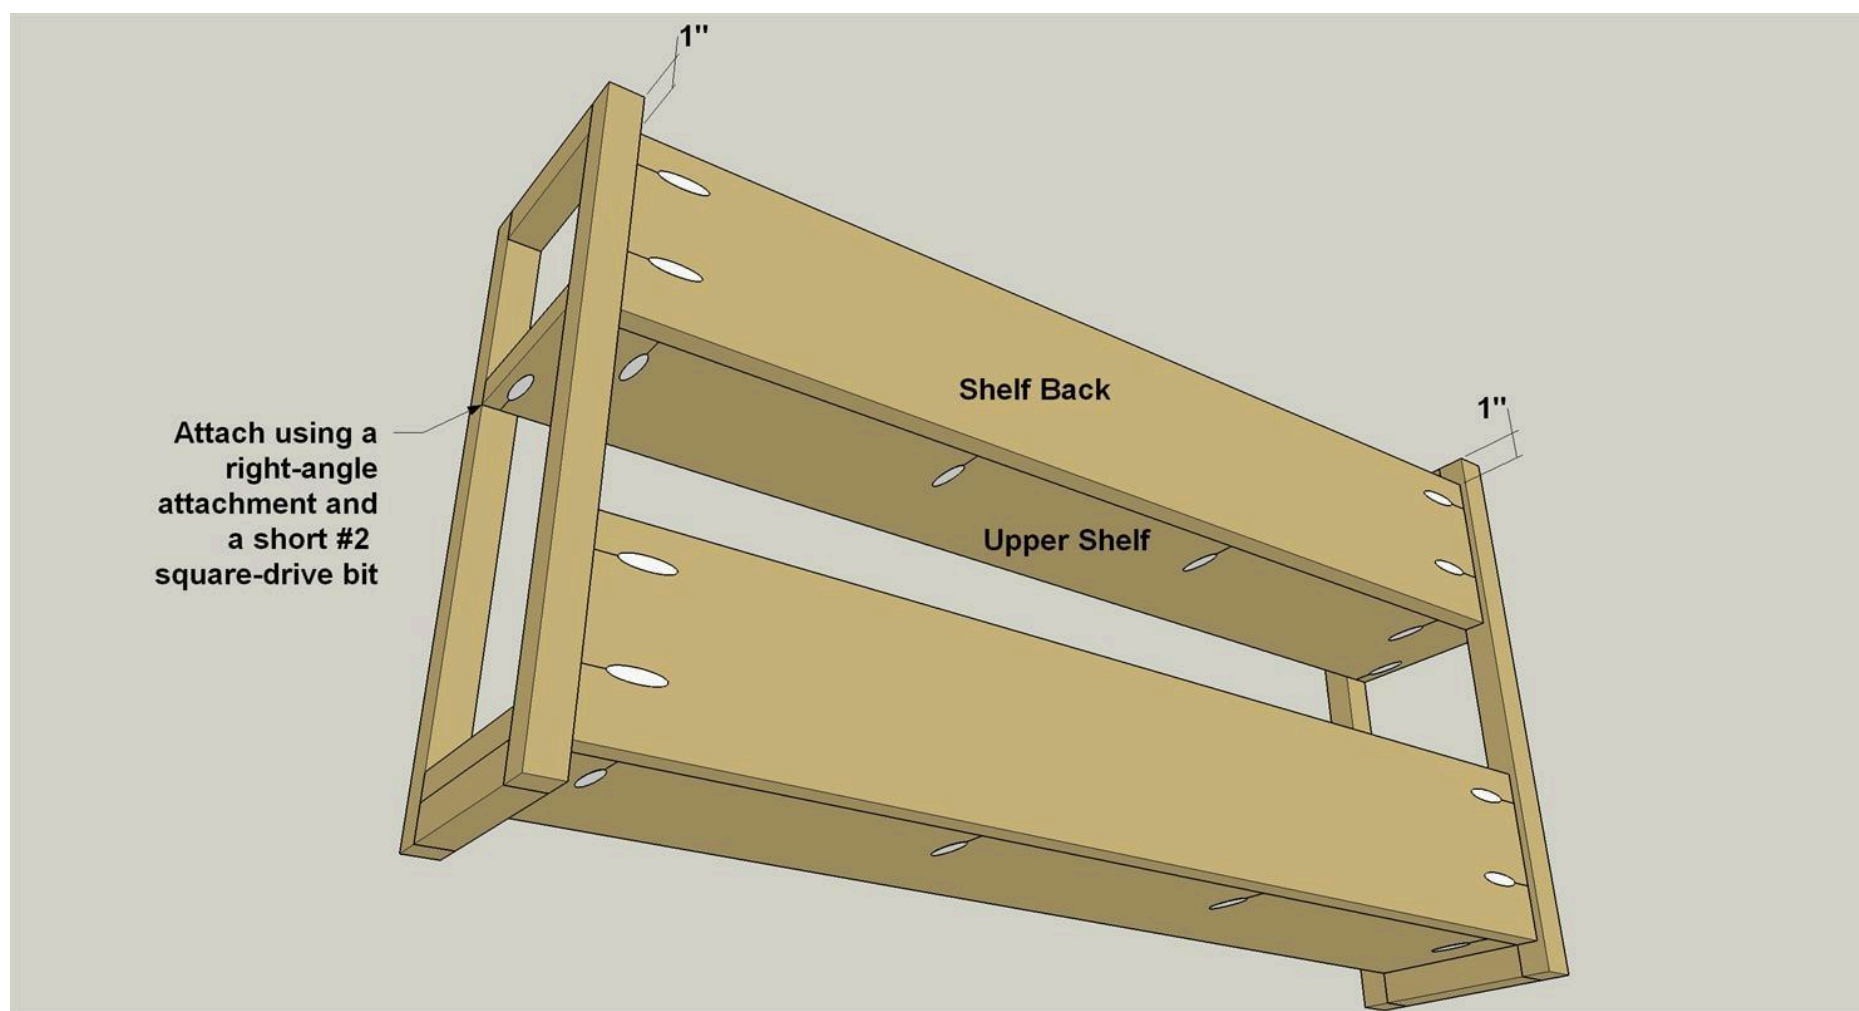**7****Add Hardware and Hang**

With assembly complete, you can hang it on the wall. We used a two-part "Hangman" cleat system. One half attaches to the wall, and the other half attaches to the upper Shelf Back.