
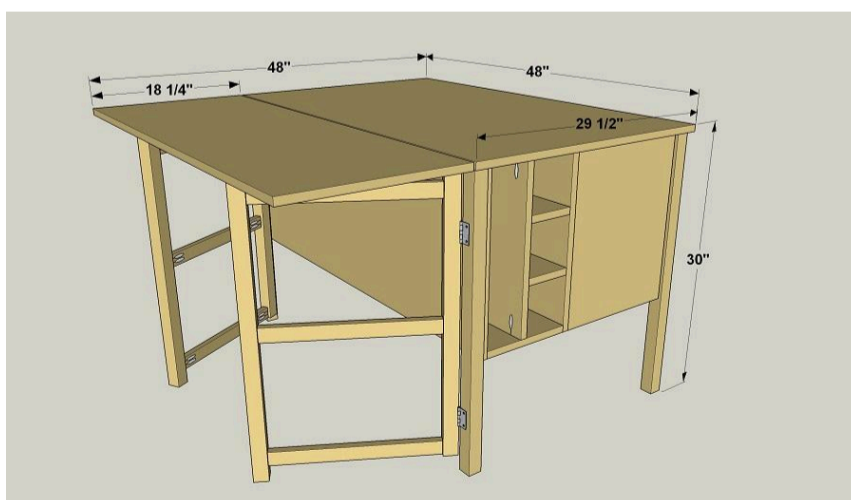
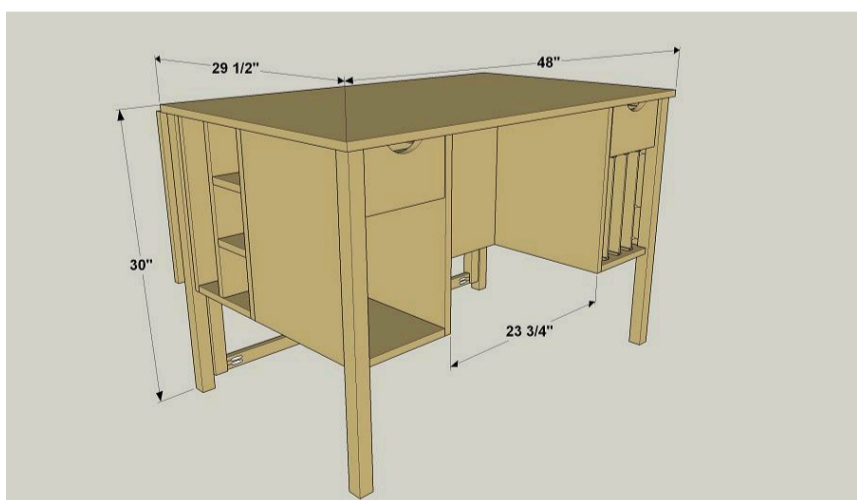


Expandable Craft Table

By **Kreg Tool**

Difficulty
Moderate

Whether you're working on craft projects, sewing, or pursuing another hobby, this craft table offers a large work surface that can be expanded when you need even more room. Plus this table has storage for all of your supplies. Build one for yourself, and you'll be set to get your craft on!

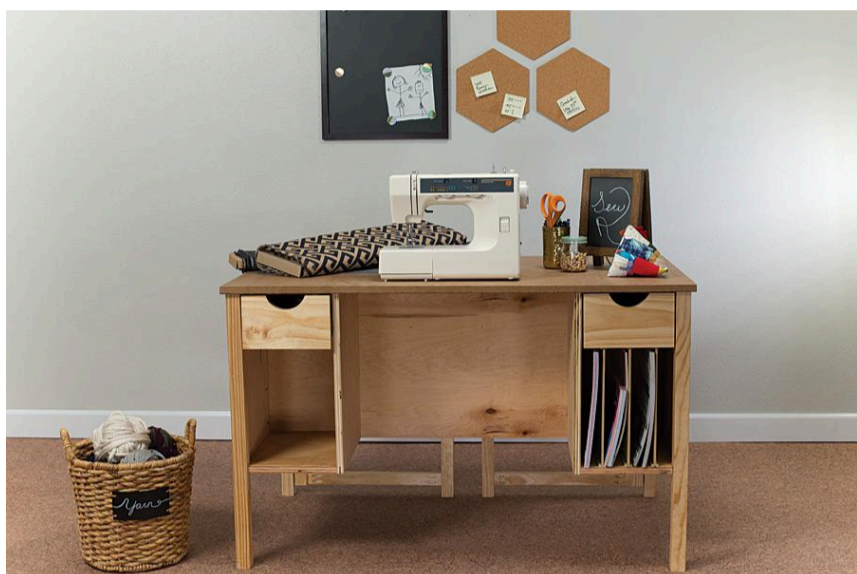

Tools

Kreg Tools

- Wood Project Clamp - 6
- [Wood Project Clamp - 6"](#)
- Kreg® Pocket-Hole Jig 720
- [Kreg® Pocket-Hole Jig 720](#)
- Mobile Project Center
- [Mobile Project Center](#)

Other Tools

- Circular Saw (corded)
- Jigsaw
- Miter Saw
- Square
- Tape Measure
- Drill (cordless)
- Nail Gun
- Sander

Materials

Wood Products


- 1MDF , 3/4" Thick , Half Sheet
- 1Plywood , 3/4" Thick , Full Sheet
- 1Plywood , 3/4" Thick , Half Sheet
- 1Plywood , 1/4" Thick , Quarter Sheet
- 6Square Dowel , 1/4" X 1/4" , 36"
- 1Craft Board , 3/8" X 3" (2 1/2" Actual Width) , 36"
- 1Board , 1x2 , 72"
- 1Board , 1x2 , 48"
- 2Board , 1/2" X 3" (2 1/2" Actual Width) , 48"
- 1Board , 1x6 , 24"
- 2Board , 2x2 , 96"
- 1Board , 2x2 , 72"



Hardware & Supplies



- 1401 1/4" Coarse-thread Pocket Hole Screws
- 723/4" 18-gauge Brad Nails
- 281 1/4" 18-gauge Brad Nails
- 201 1/2" 18-gauge Brad Nails
- 4#8 X 1 1/4" Flathead Wood Screws
- 2Pair 14" Ball-bearing Side-mount Drawer Glides
- 43" Door Hinges
- 21 1/2" X 12" Continuous Hinge
- 1Right-Angle Drill Attachment

Cut List & Parts

- 1 Long Cubby Divider , 3/4" Ply X 18" X 46 1/4"
- 2 Long Cubby Shelf , 3/4" Ply X 5" X 46 1/4"
- 1 Long Cubby Bottom , 3/4" Ply X 10" X 46 1/4"
- 1 Craft Center Back , 3/4" Ply X 18 3/4" X 46 1/4"
- 1 Long Cubby Back , 3/4" Ply X 18 3/4" X 46 1/4"
- 4 Leg , 1 1/2" X 1 1/2" X 29 1/4" Pine
- 2 Outside Panel , 3/4" Ply X 14 1/4" X 18 3/4"
- 2 Drawer Slide Filler , 3/8" X 2 1/2" X 14 1/4" Pine
- 1 Left Inside Panel , 3/4" Ply X 15 3/8" X 18 3/4"
- 1 Right Inside Panel , 3/4" Ply X 15 3/8" X 18 3/4"
- 1 Open Cubby Bottom , 3/4" Ply X 9 3/4" X 15 3/8"
- 1 Divider Cubby Bottom , 3/4" Ply X 9 3/4" X 15 3/8"
- 1 Divider Cubby Top , 3/4" Ply X 9 3/4" X 14 5/8"
- 12 Divider Guides , 1/4" X 1/4" X 14 5/8" Pine
- 1 Craft Center Top , 3/4" MDF X 29 1/2" X 48"
- 1 Craft Center Wing , 3/4" MDF X 18 1/4" X 48"
- 2 Hinge Leg , 1 1/2" X 1 1/2" X 27 3/4" Pine
- 2 Wing Leg , 1 1/2" X 1 1/2" X 29 1/8" Pine
- 6 Wing Stretcher , 3/4" X 1 1/2" X 17" Pine
- 2 Wing Stop Block , 3/4" X 1 1/2" X 1 1/2" Pine
- 3 Cubby Divider , 1/4" Ply X 12 1/4" X 15 3/8"
- 2 Drawer False Front , 3/4" X 5 1/2" X 9 1/8" Pine
- 4 Drawer Box Side , 1/2" X 2 1/2" X 14" Pine
- 2 Drawer Box Front , 1/2" X 2 1/2" X 8 3/8" Pine
- 2 Drawer Box Back , 1/2" X 2 1/2" X 8 3/8" Pine
- 2 Drawer Bottom , 1/4" Ply X 8 3/8" X 14"

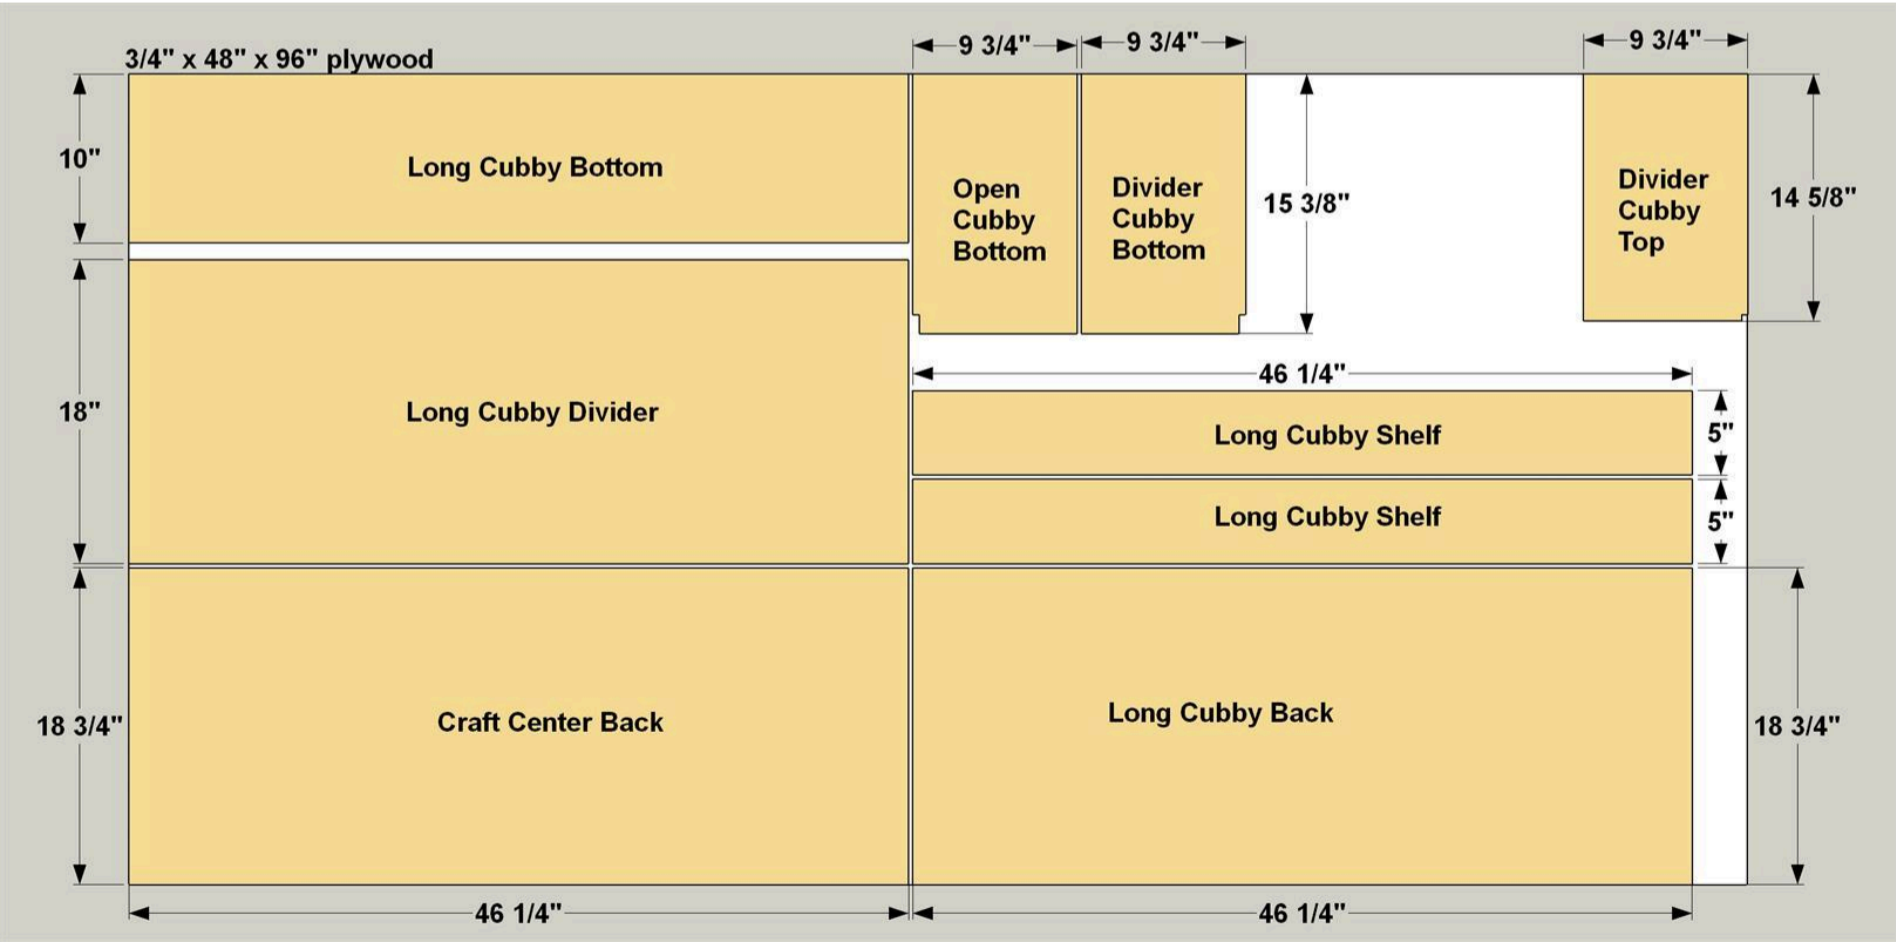

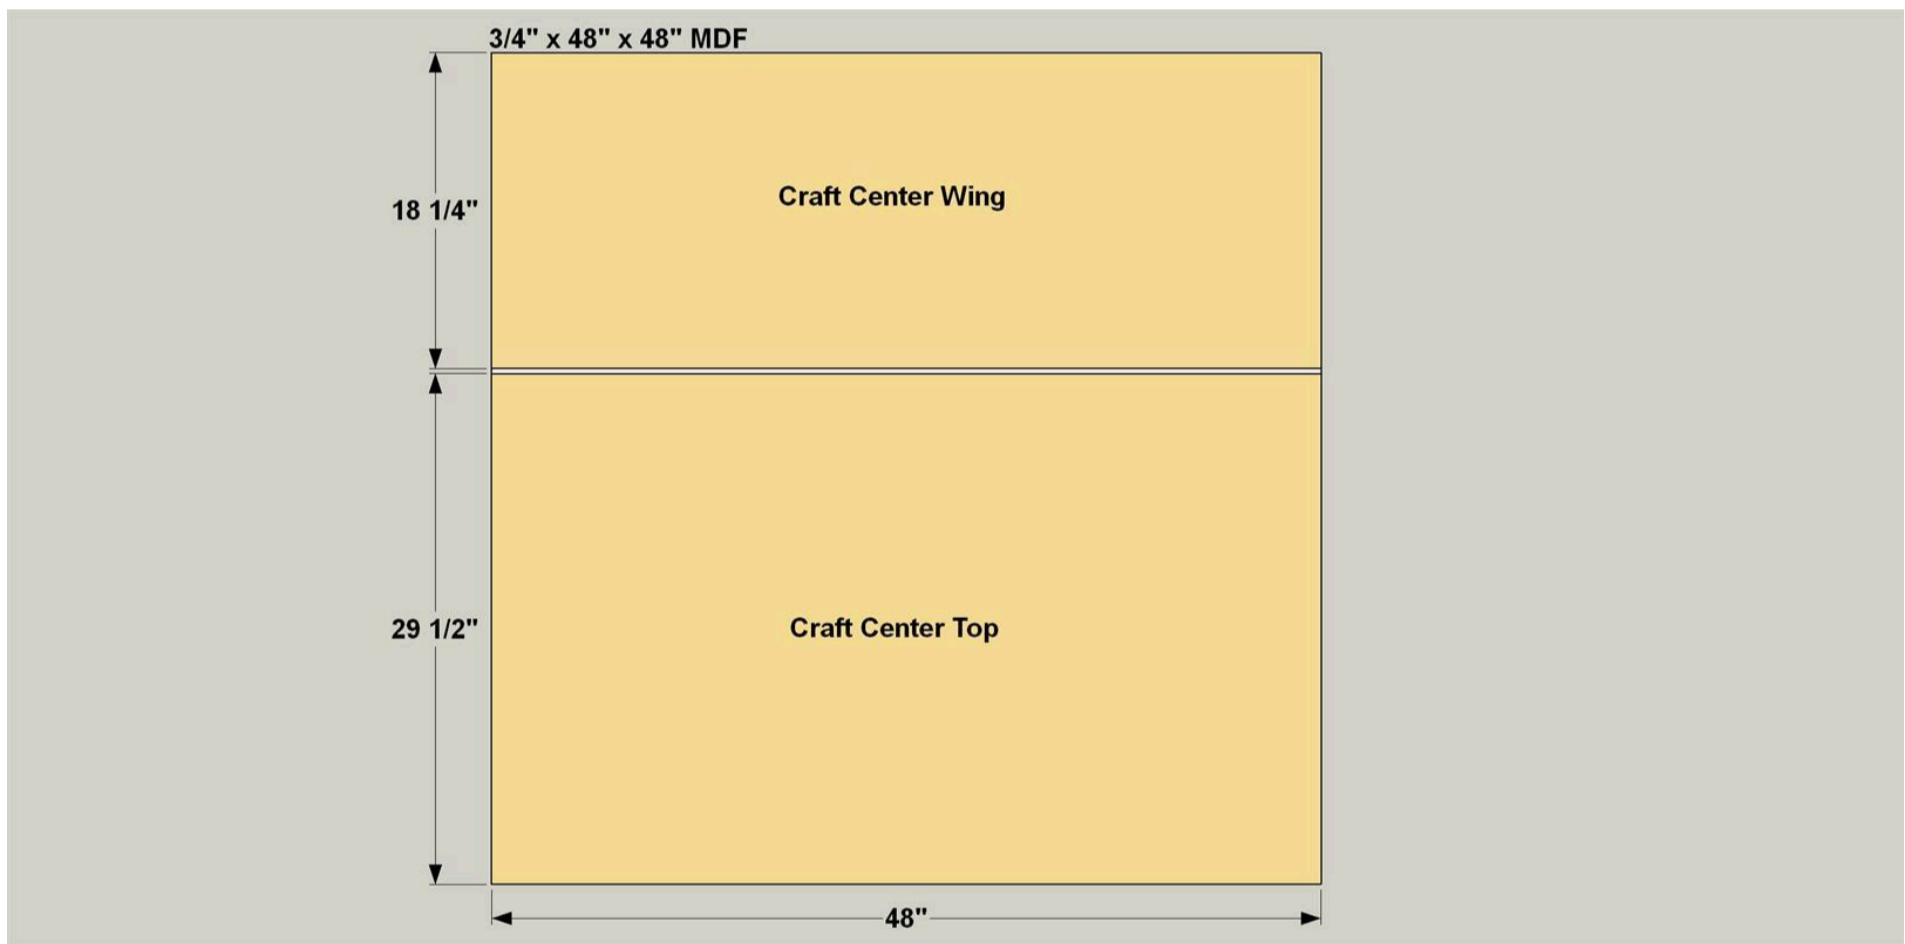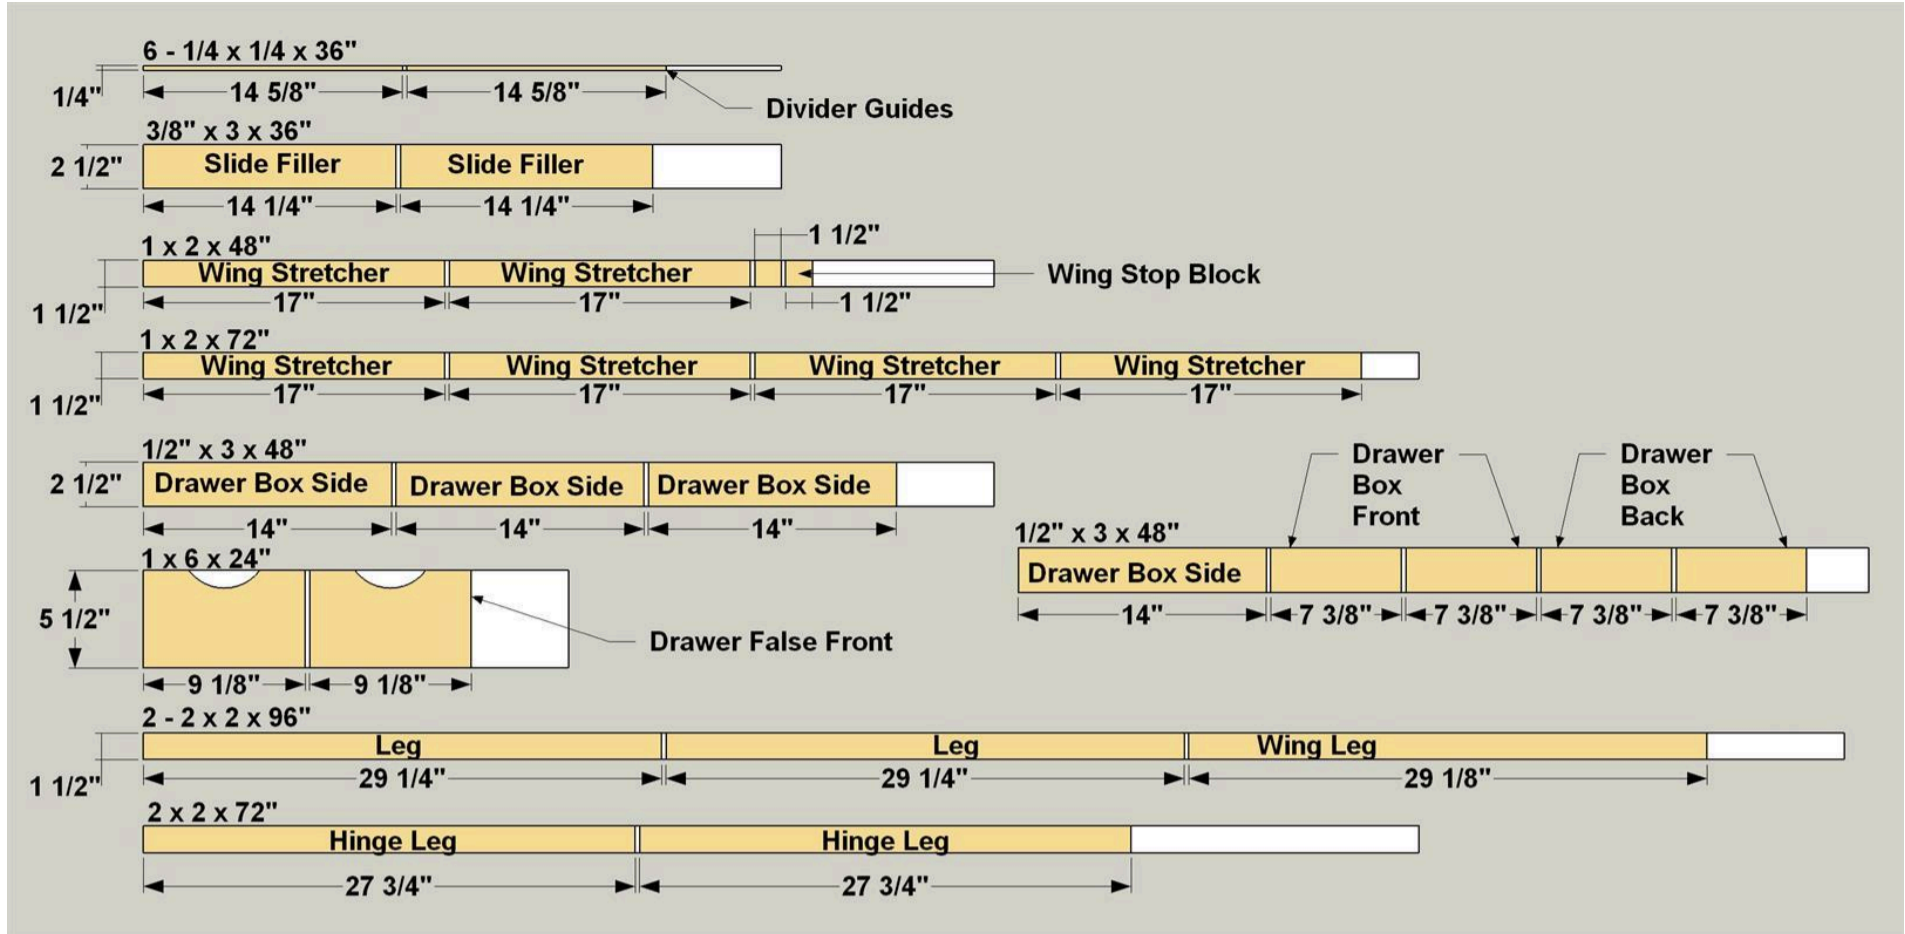

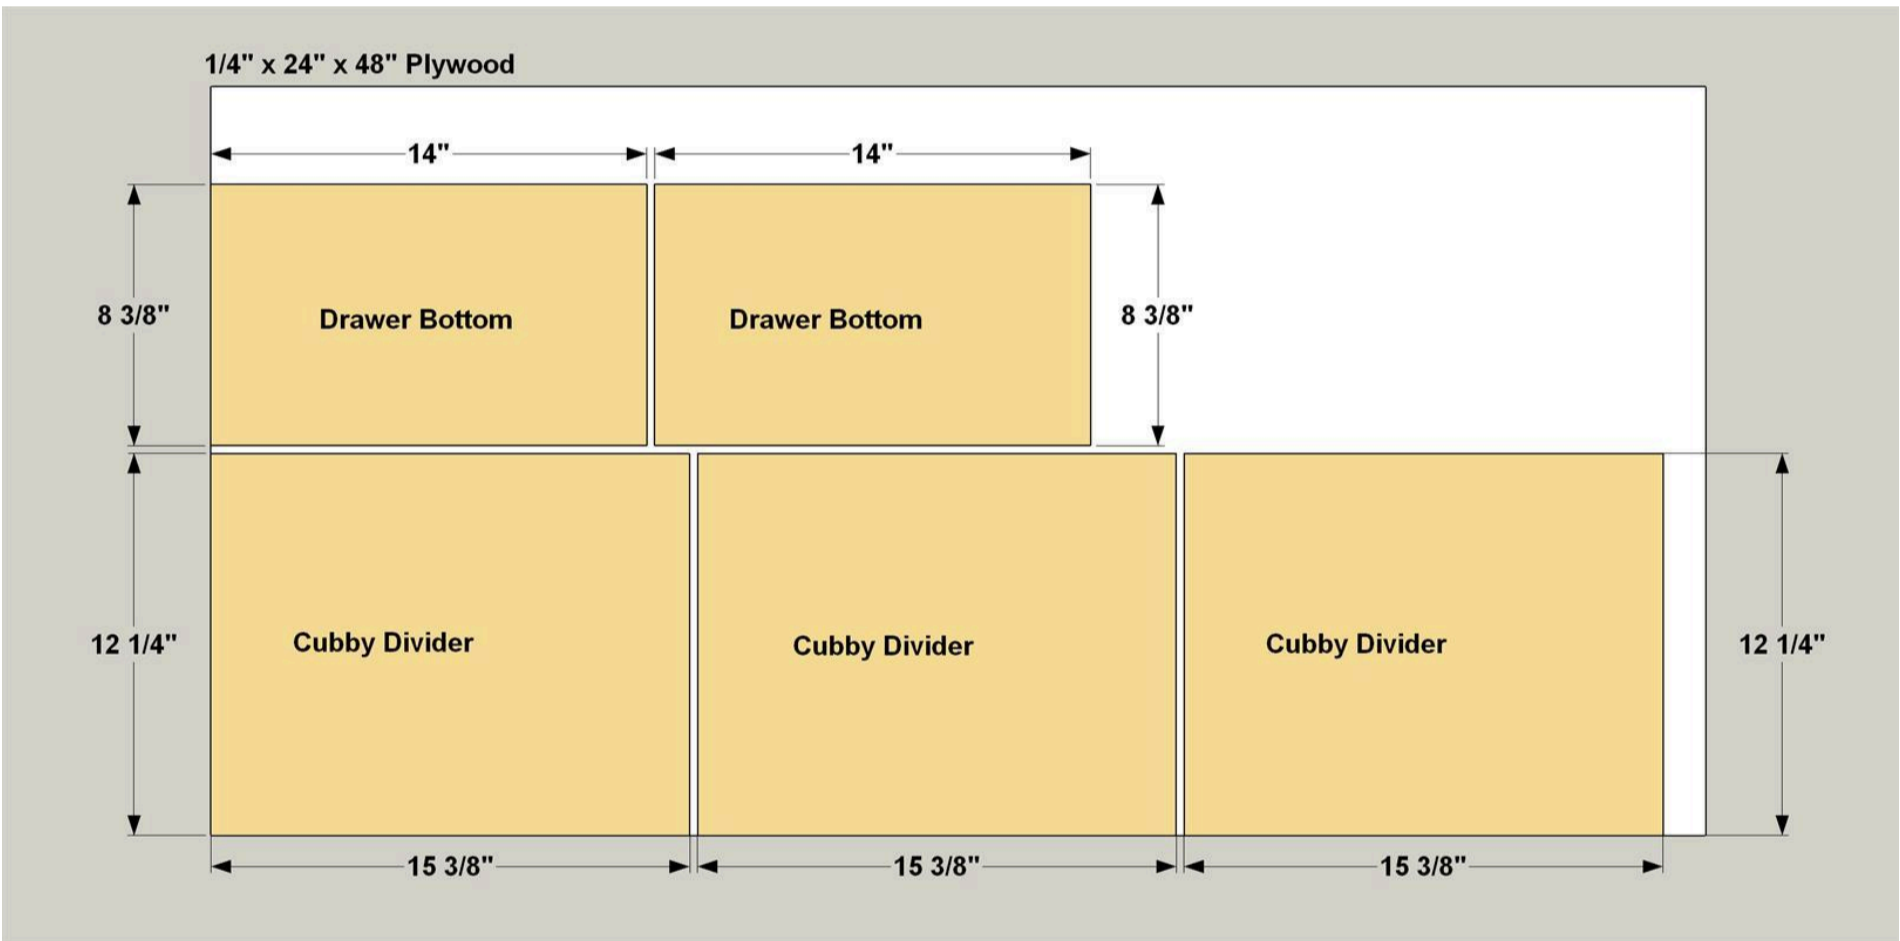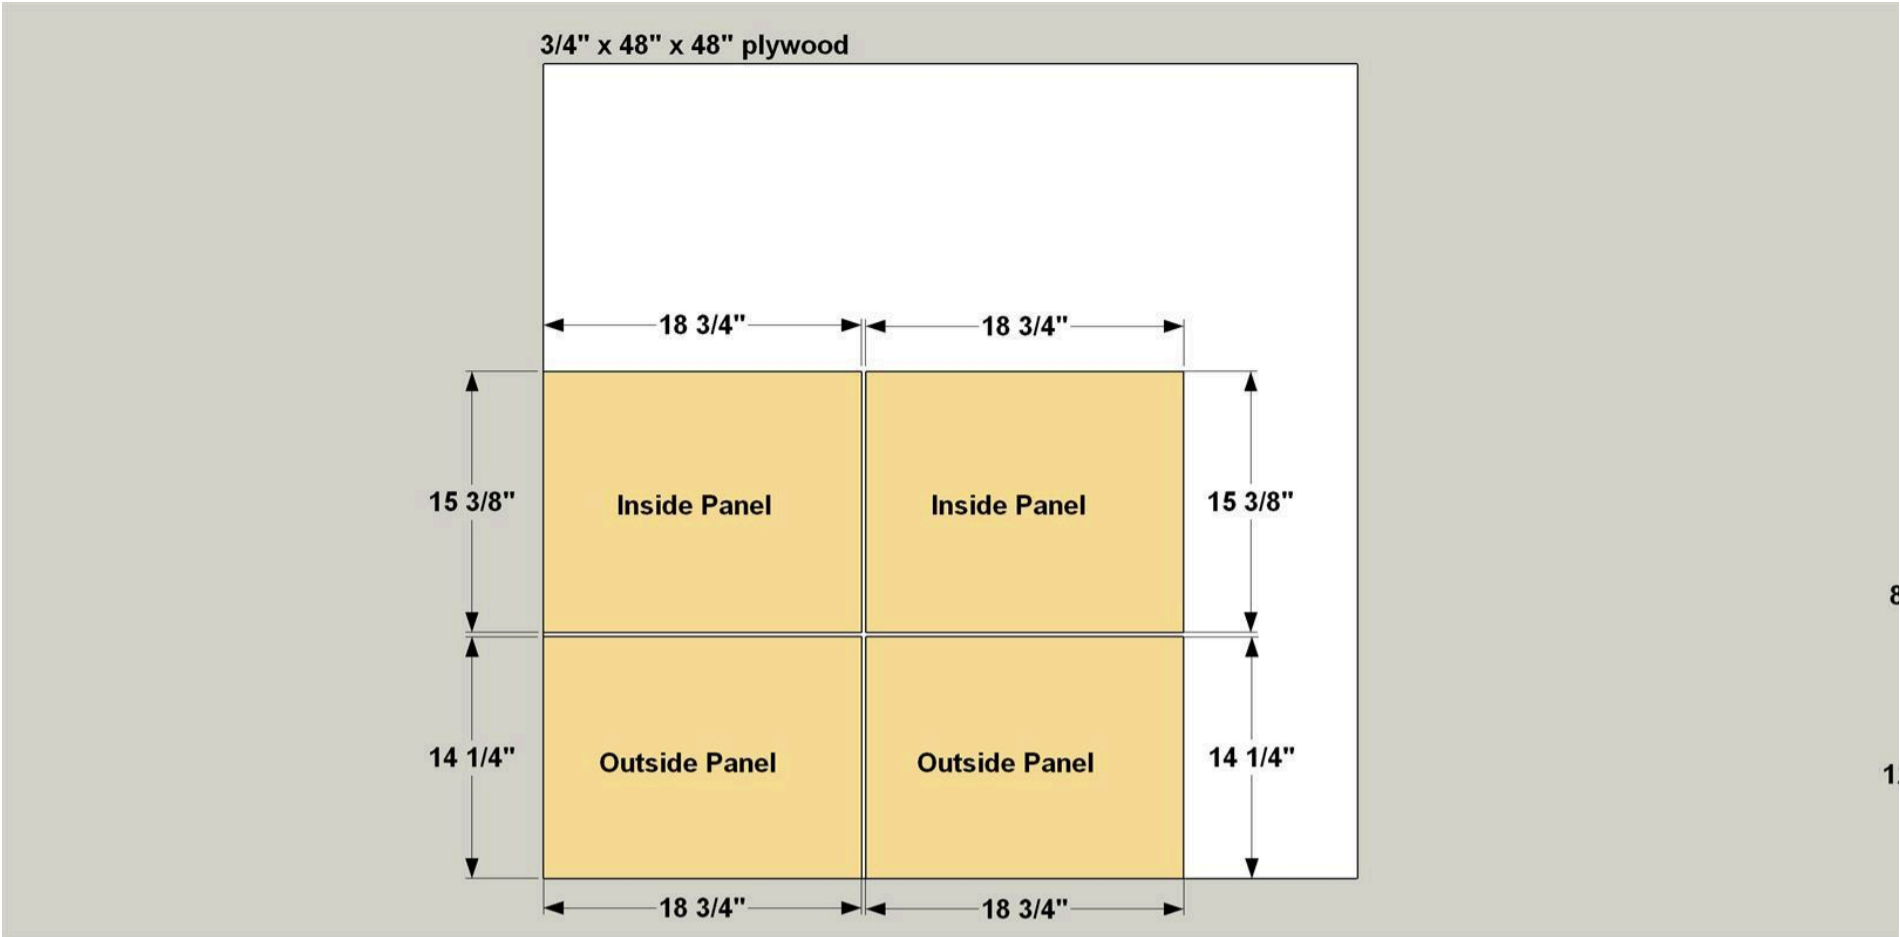

Directions

1**Start with Long Cubby Parts**


The Craft Table has a lot of parts, but it's not hard to manage if you break the project down into smaller assemblies, and then join them together. Before you start cutting up parts, read through these steps completely to familiarize yourself with the processes. The best place to start is with the parts that make up the long-cubby area that spans the back of the craft table. Cut one Long Cubby Divider and two Long Cubby Shelves from 3/4" plywood, as shown in the cutting diagram. Set your pocket-hole jig for 3/4" thick material, and then drill pocket holes in these pieces where shown.



2

Attach the Long Cubby Shelves


Lay the Long Cubby Divider with the pocket holes facing down. Attach the Long Cubby Shelves to the Divider where shown using 1 1/4" coarse-thread pocket hole screws.

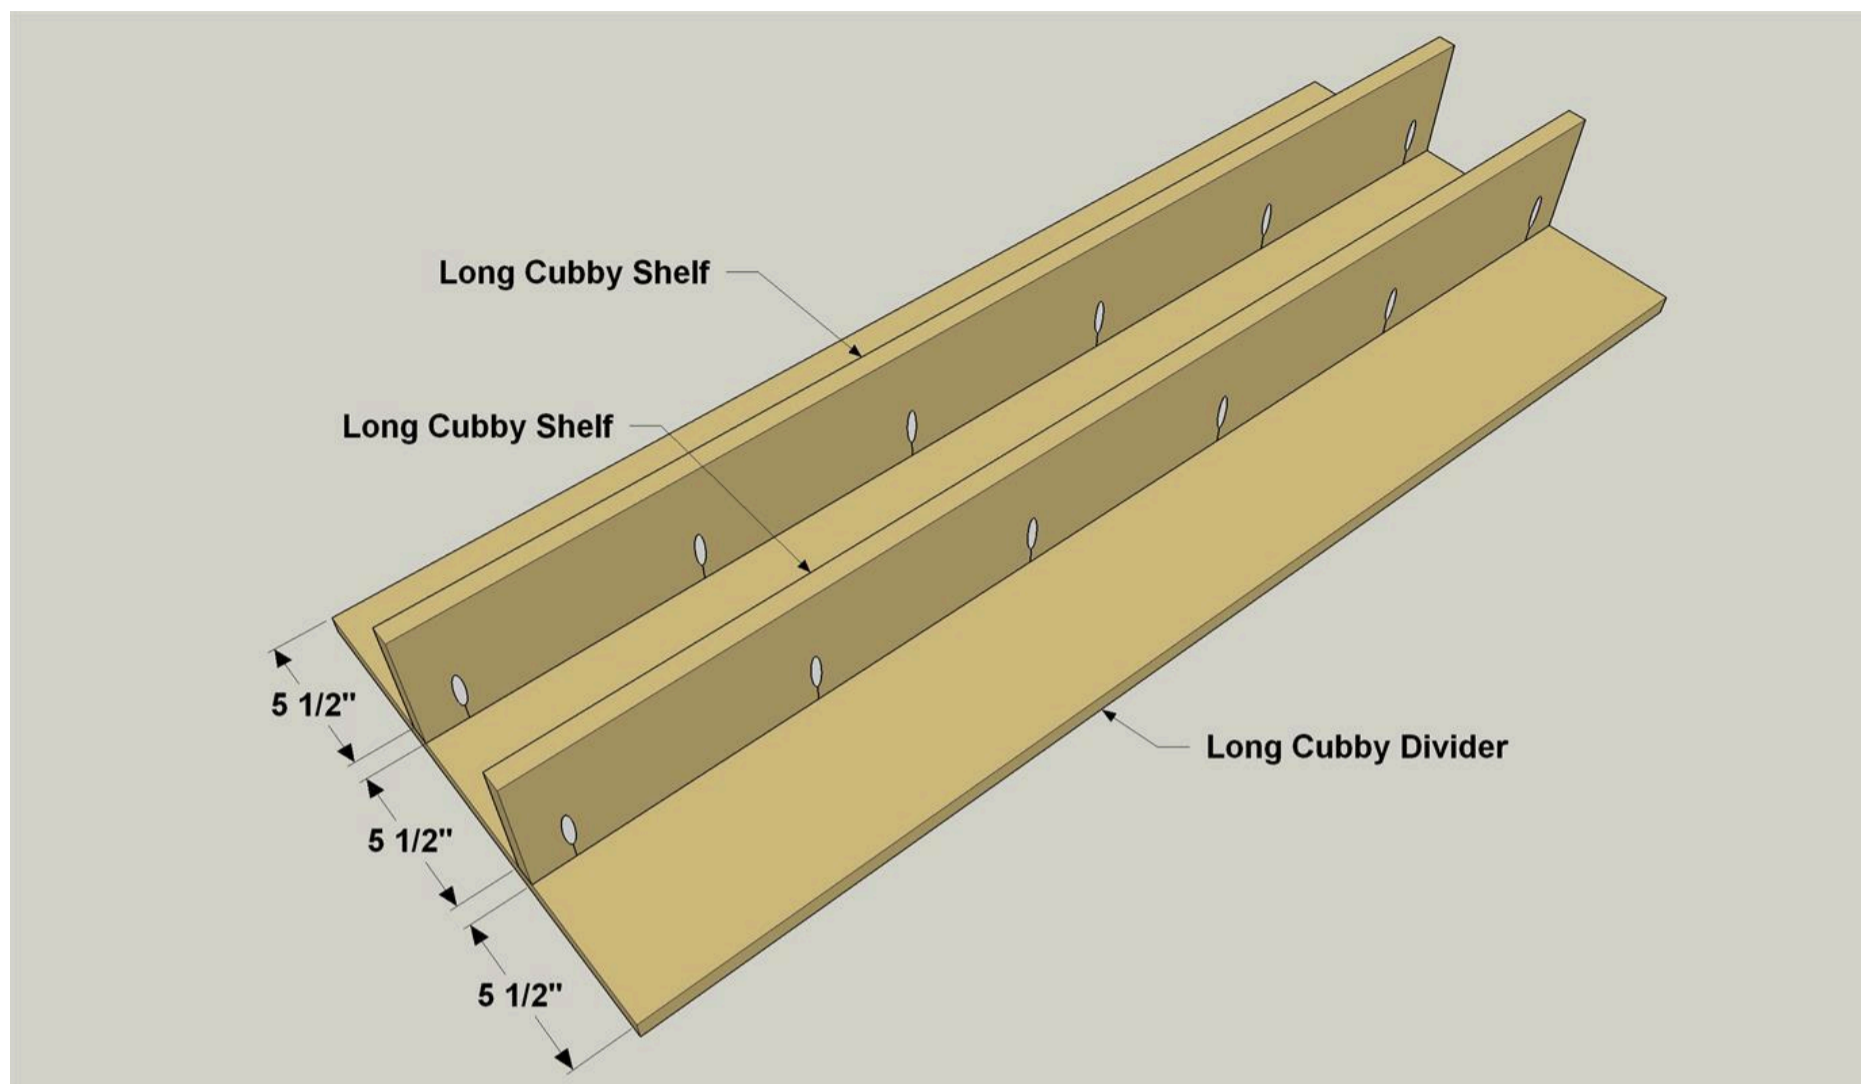

3

Make the Long Cubby Bottom


Cut the Long Cubby Bottom to size from 3/4" plywood. Then drill pocket holes where shown.

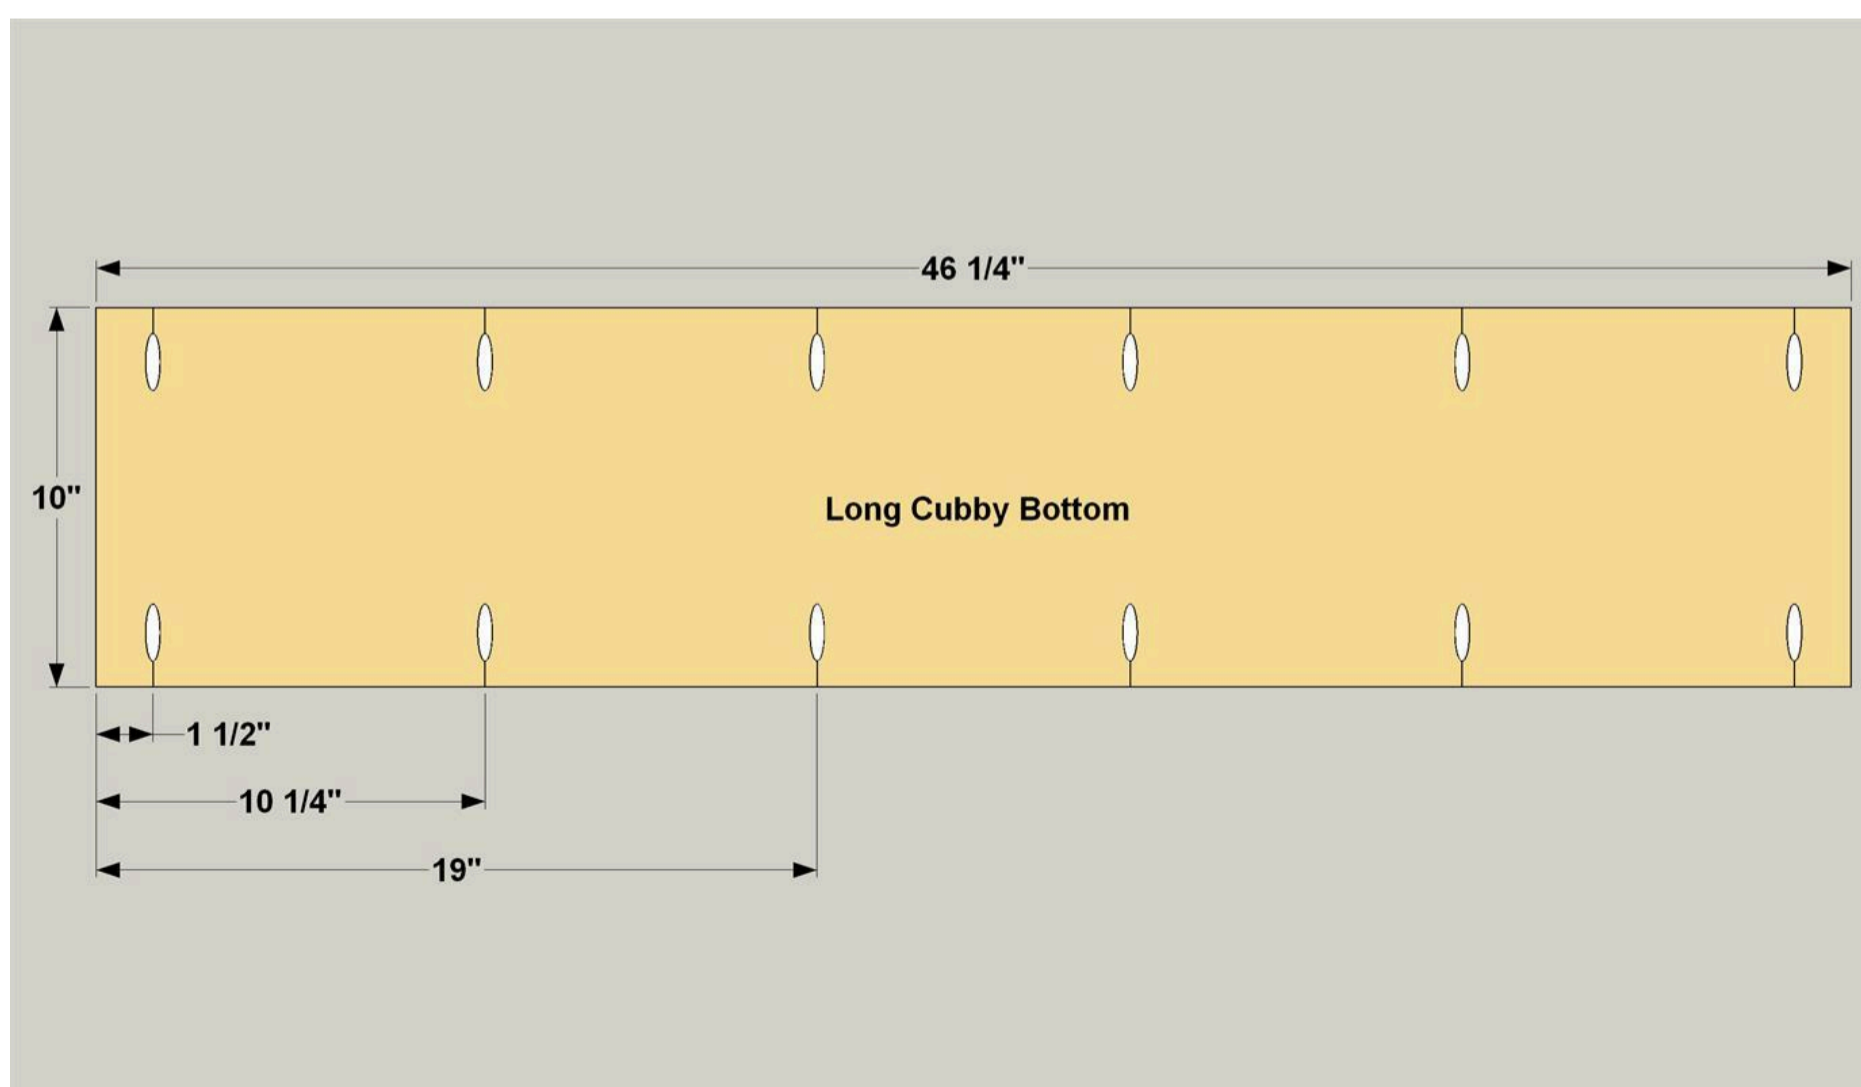

4

Attach the Long Cubby Bottom


Lay the Cubby Bottom with the pocket holes facing down. Now attach the Cubby Shelf Assembly to the Cubby Bottom where shown using 1 1/4" coarse-thread pocket hole screws.

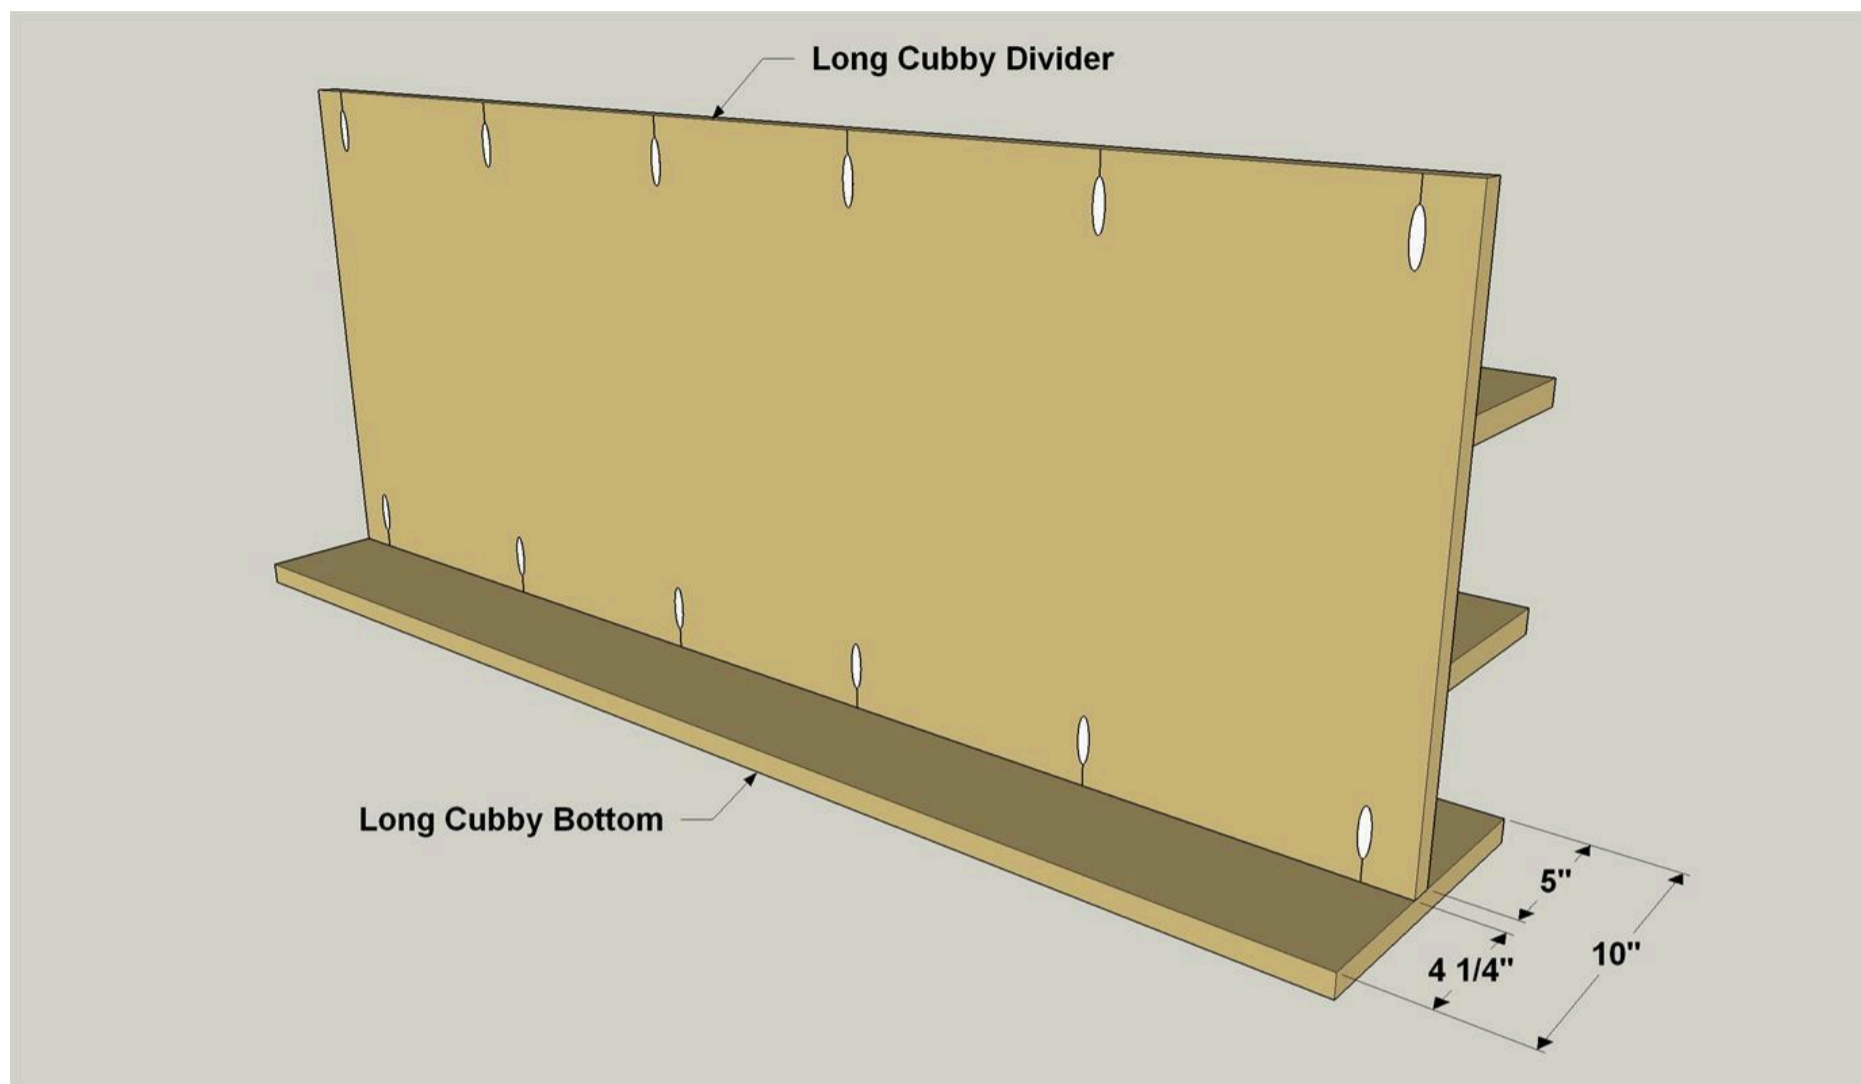

5

Make the Craft Center Back


Cut the Craft Center Back from 3/4" plywood, as shown in the cutting diagram, and then drill pocket holes where shown.

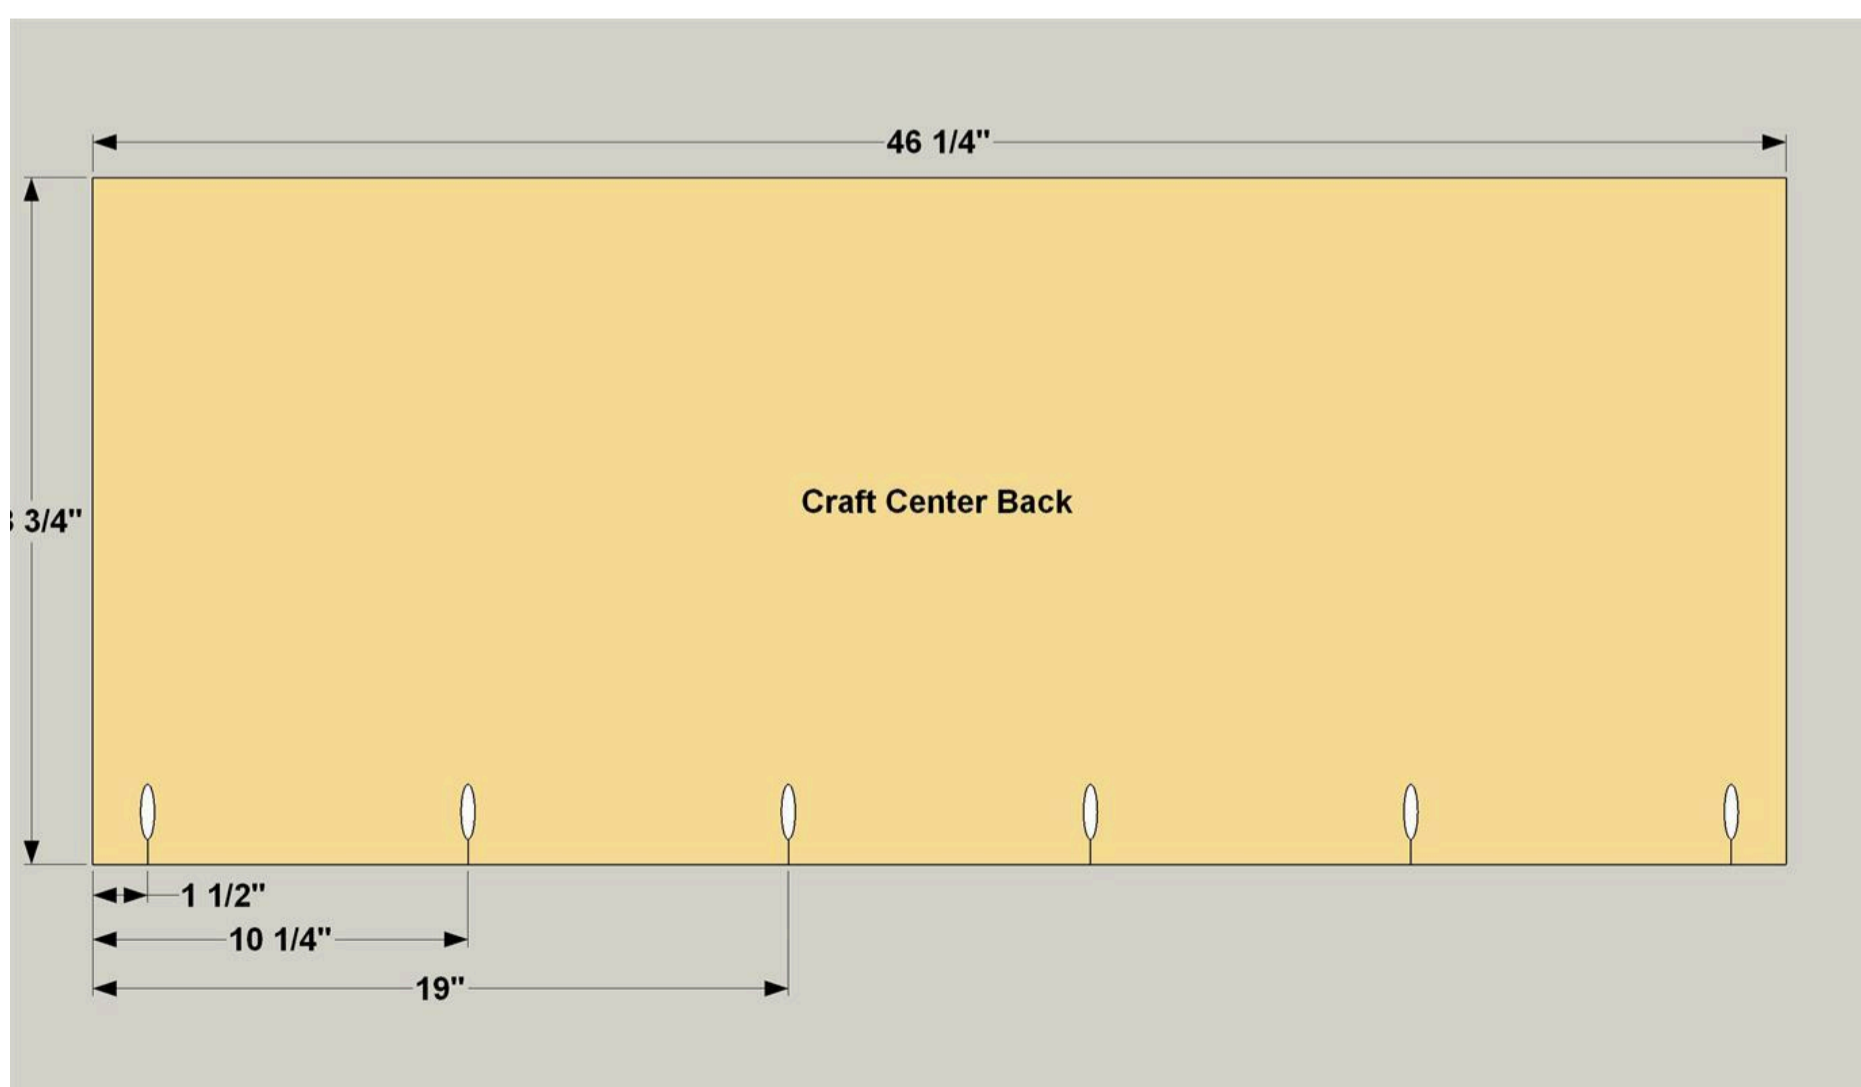

6

Attach the Craft Center Back

Set the long-cubby assembly on your work surface with the Long Cubby Bottom hanging over the surface edge. Spread glue on the exposed edges of the Long Cubby Shelves and the Long Cubby Bottom, and then lay the Craft Center Back on the assembly with its pocket holes facing away from the Cubby Bottom, as shown. Clamp the assembly together, and then secure the Craft Center Back to the Long Cubby Bottom using 1 1/4" coarse-thread pocket hole screws. Secure the Back to each Shelf using 6-10 1 1/2" brads.

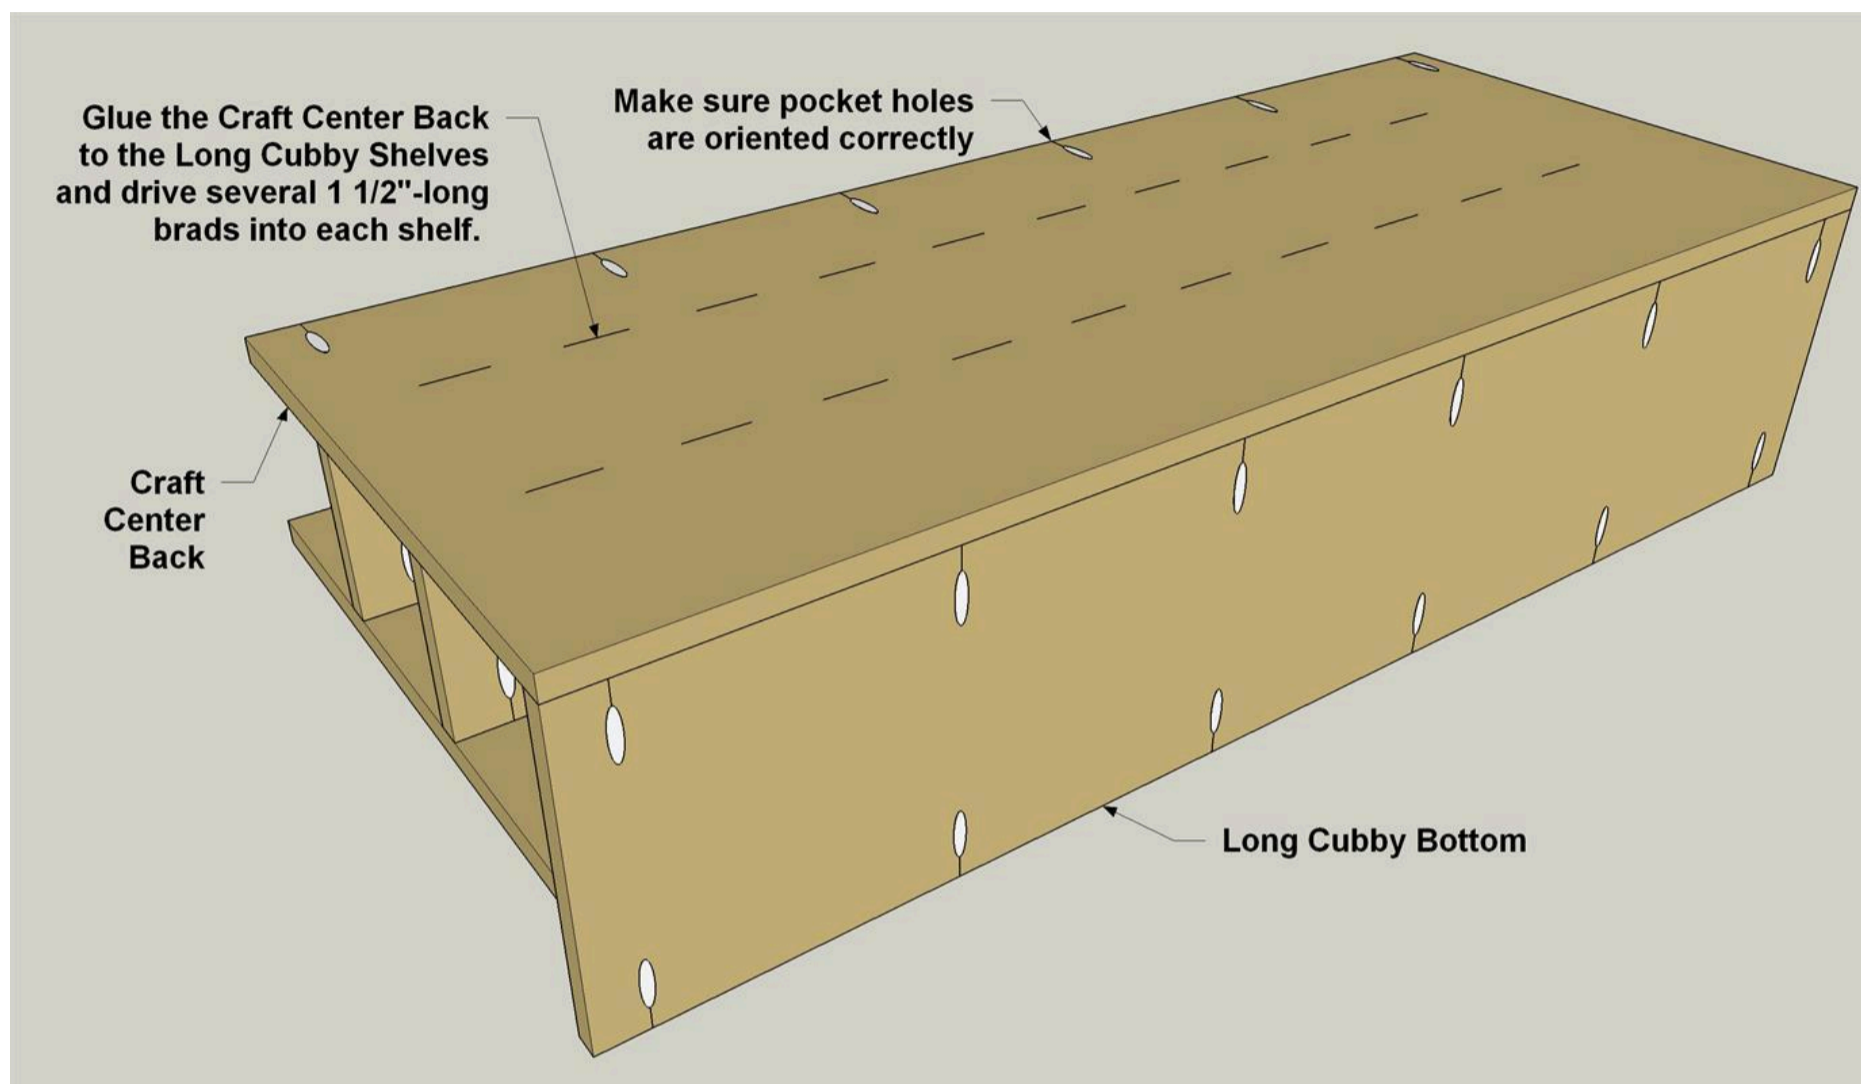

7


Cut Legs and a Cubby Back

Cut four Legs to length from 2x2 boards, as shown in the cutting diagram. Also cut one Long Cubby Back to size from 3/4" plywood, as shown.

8

Attach Legs to the Cubby Back


Position the Cubby Back on two of the Legs, as shown, so that the upper ends of the Legs are flush with the top of the Cubby Back, and the Legs are set $\frac{3}{8}$ " out from the Cubby Back. Glue and clamp the Legs in place, and then drill pilot holes for #8 x $1\frac{1}{2}$ " screws. Drive in the screws to secure the Cubby Back to the Legs.

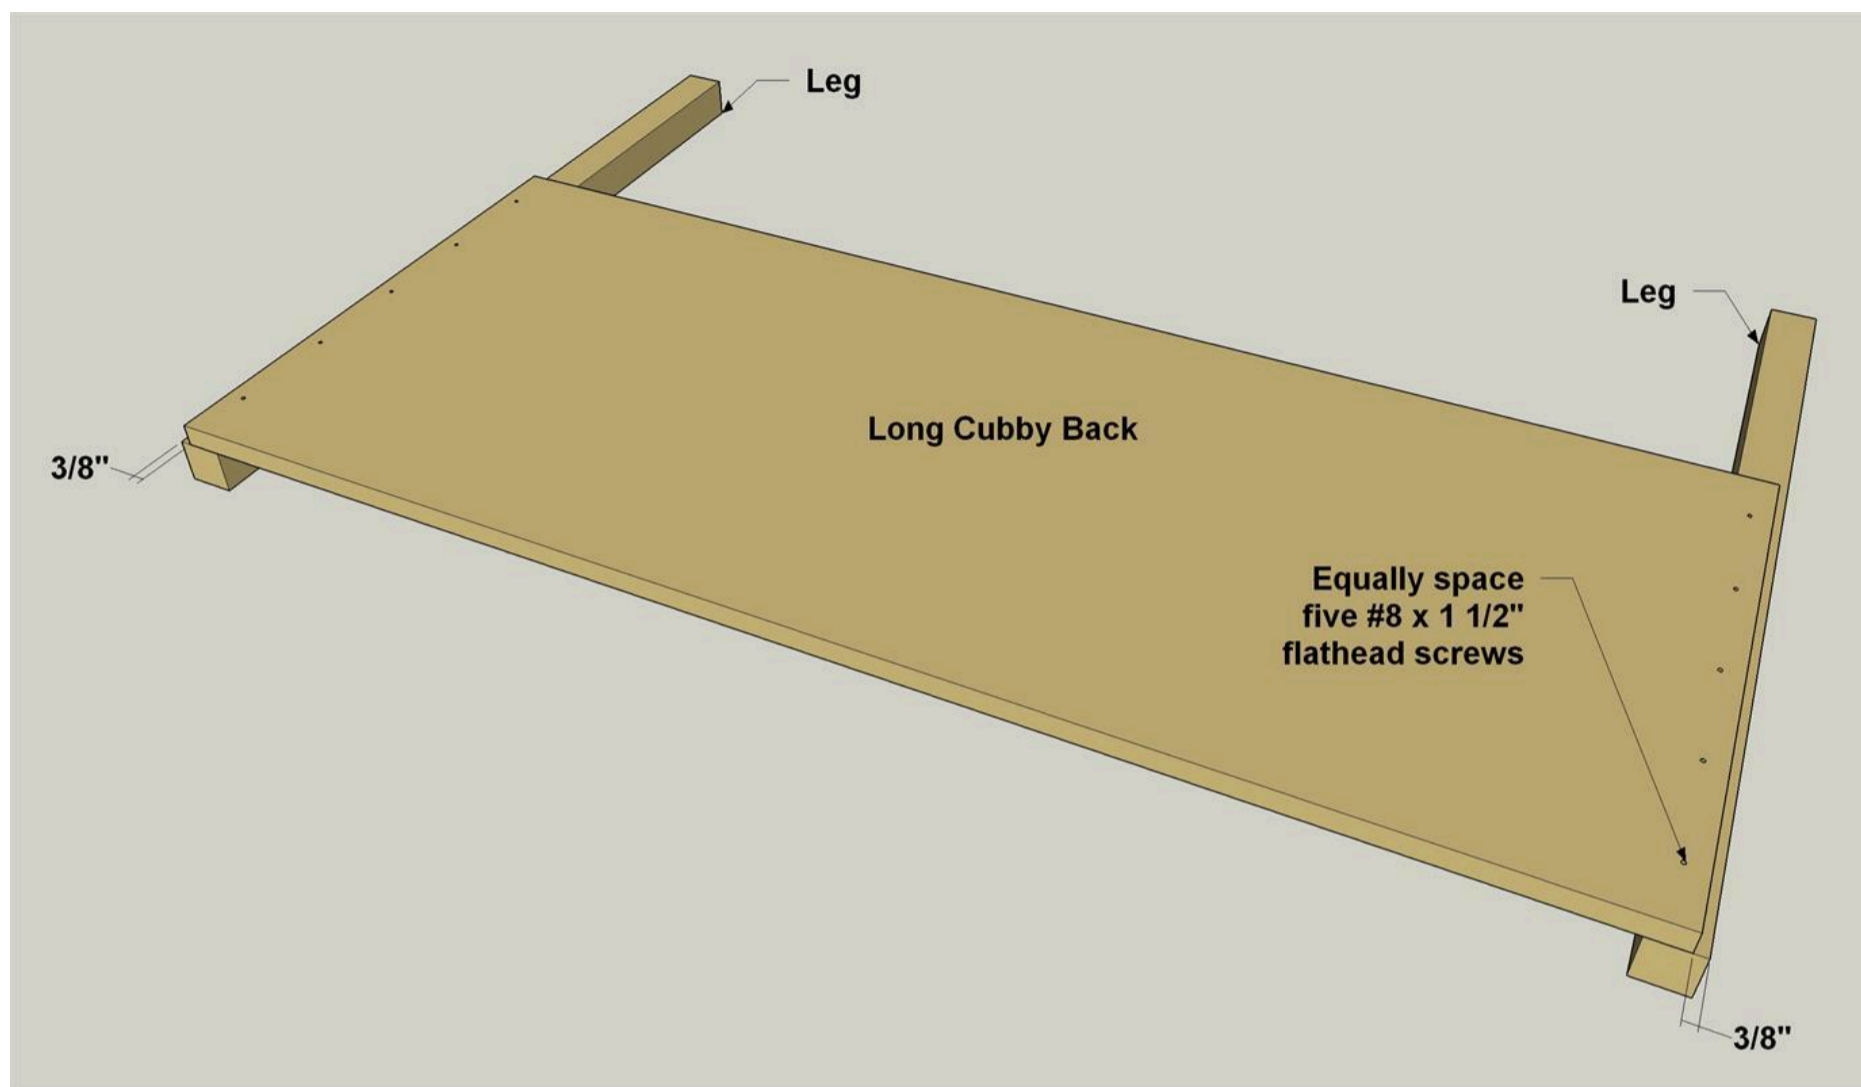

9

Make the Outside Panels

Cut two Outside Panels from $\frac{3}{4}$ " plywood. Then drill pocket holes where shown.

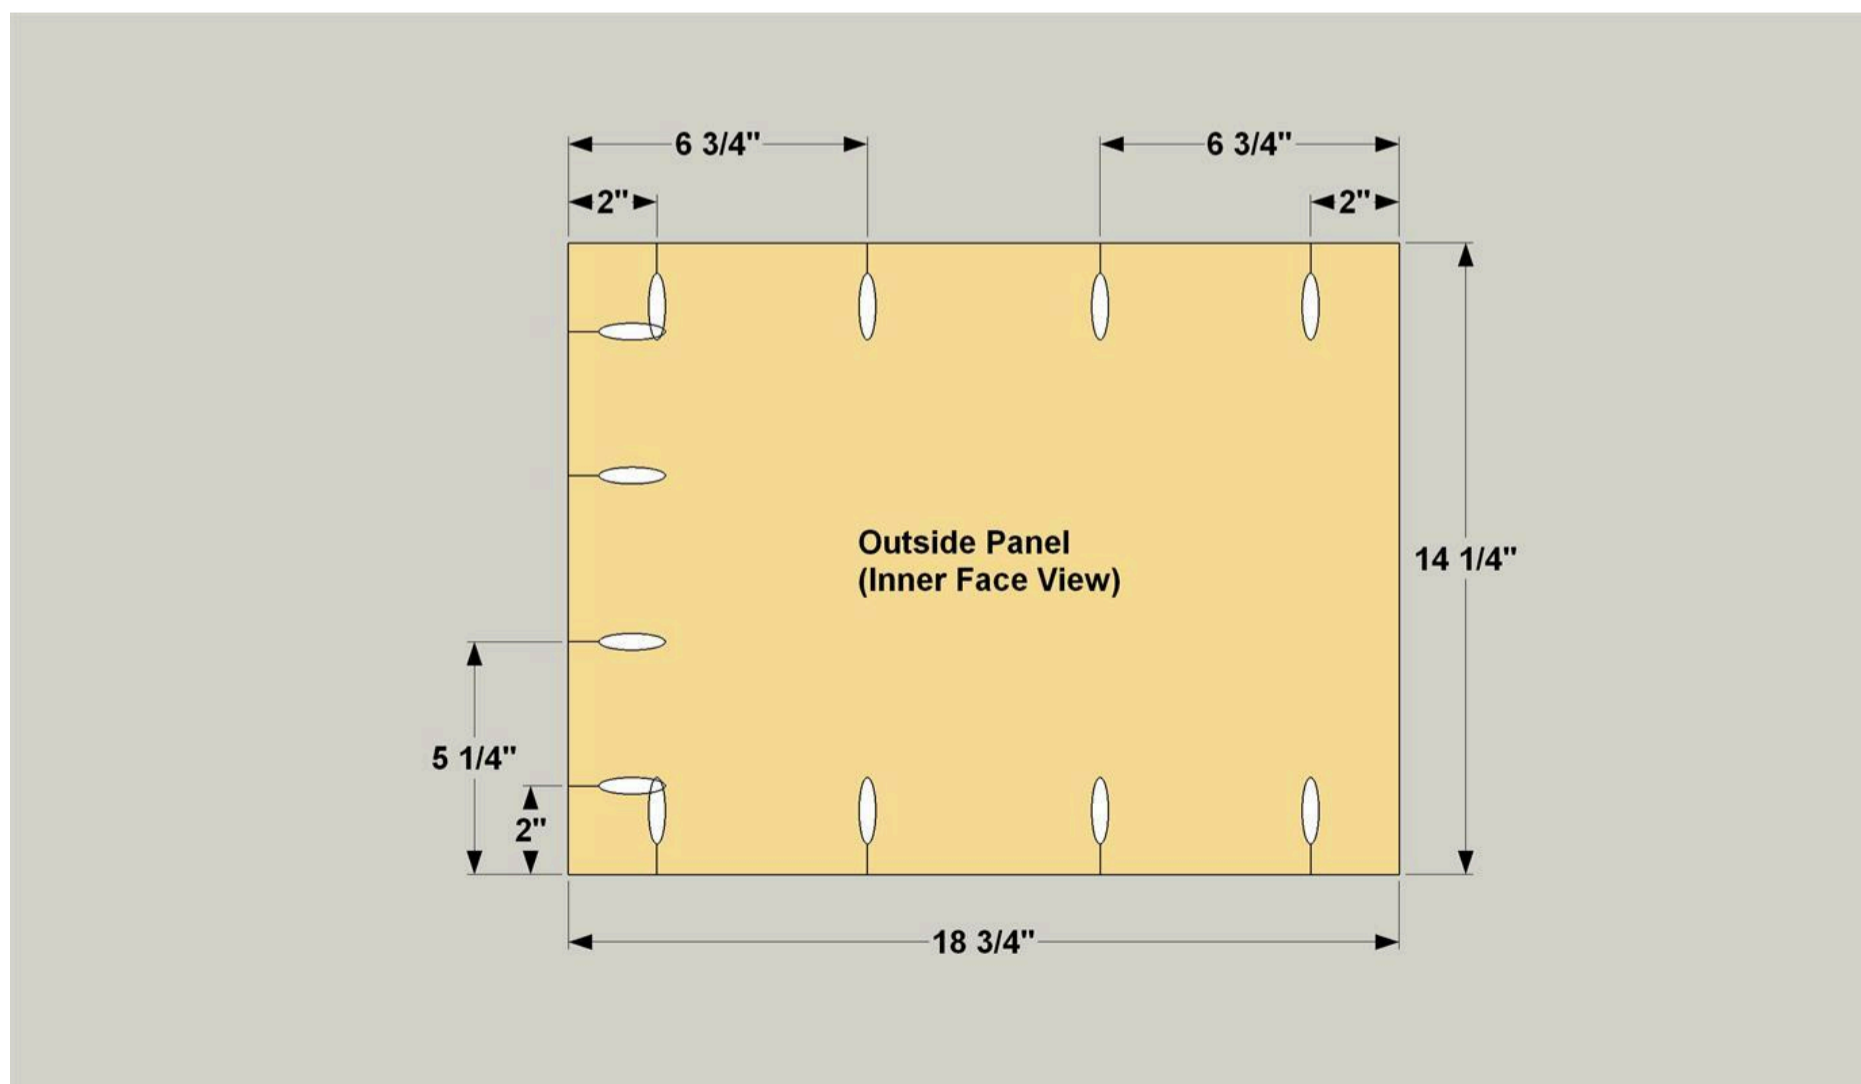

10


Make the Drawer Slide Fillers

Cut two Drawer Slide Fillers to length from a 3/8"-thick board, as shown in the cutting diagram. Home centers often sell these thin boards as "hobby boards" or "craft boards."

11

Make a Left Leg Assembly


Position one Outside Panel on a Leg, as shown, making sure the upper edge of the Outside Panel is flush with the upper end of the Leg, and that the Outside Panel is centered on the width of the Leg. Then attach the Outside Panel to the Leg using 1 1/4" coarse-thread pocket hole screws. After that, attach a Drawer Slide Filler using glue and 3/4" brad nails as shown.

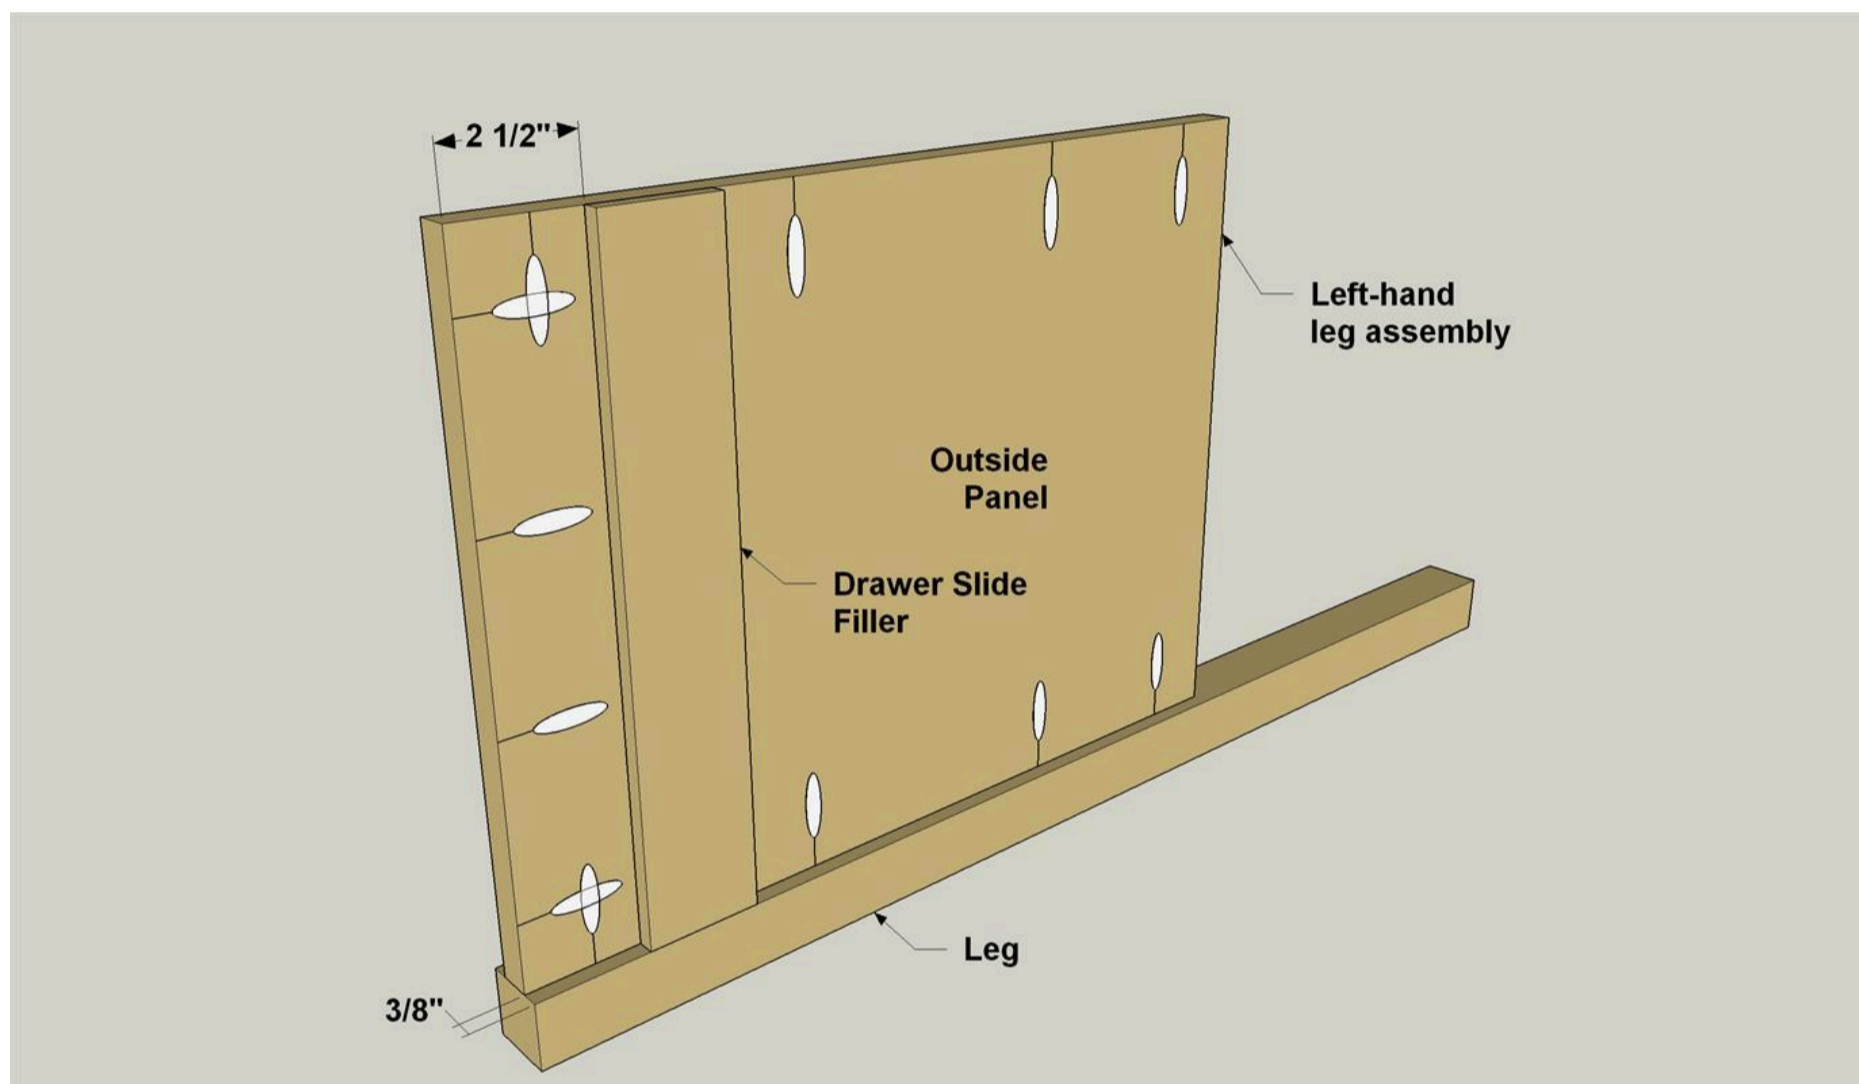

12

Make a Right Leg Assembly


Position the other Outside Panel on another Leg, as shown, making sure the upper edge of the Outside Panel is flush with the upper end of the Leg, and that the Outside Panel is centered on the width of the Leg. Then attach the Outside Panel to the Leg using 1 1/4" coarse-thread pocket hole screws. After that, attach a Drawer Slide Filler using glue and 3/4" brad nails as shown.

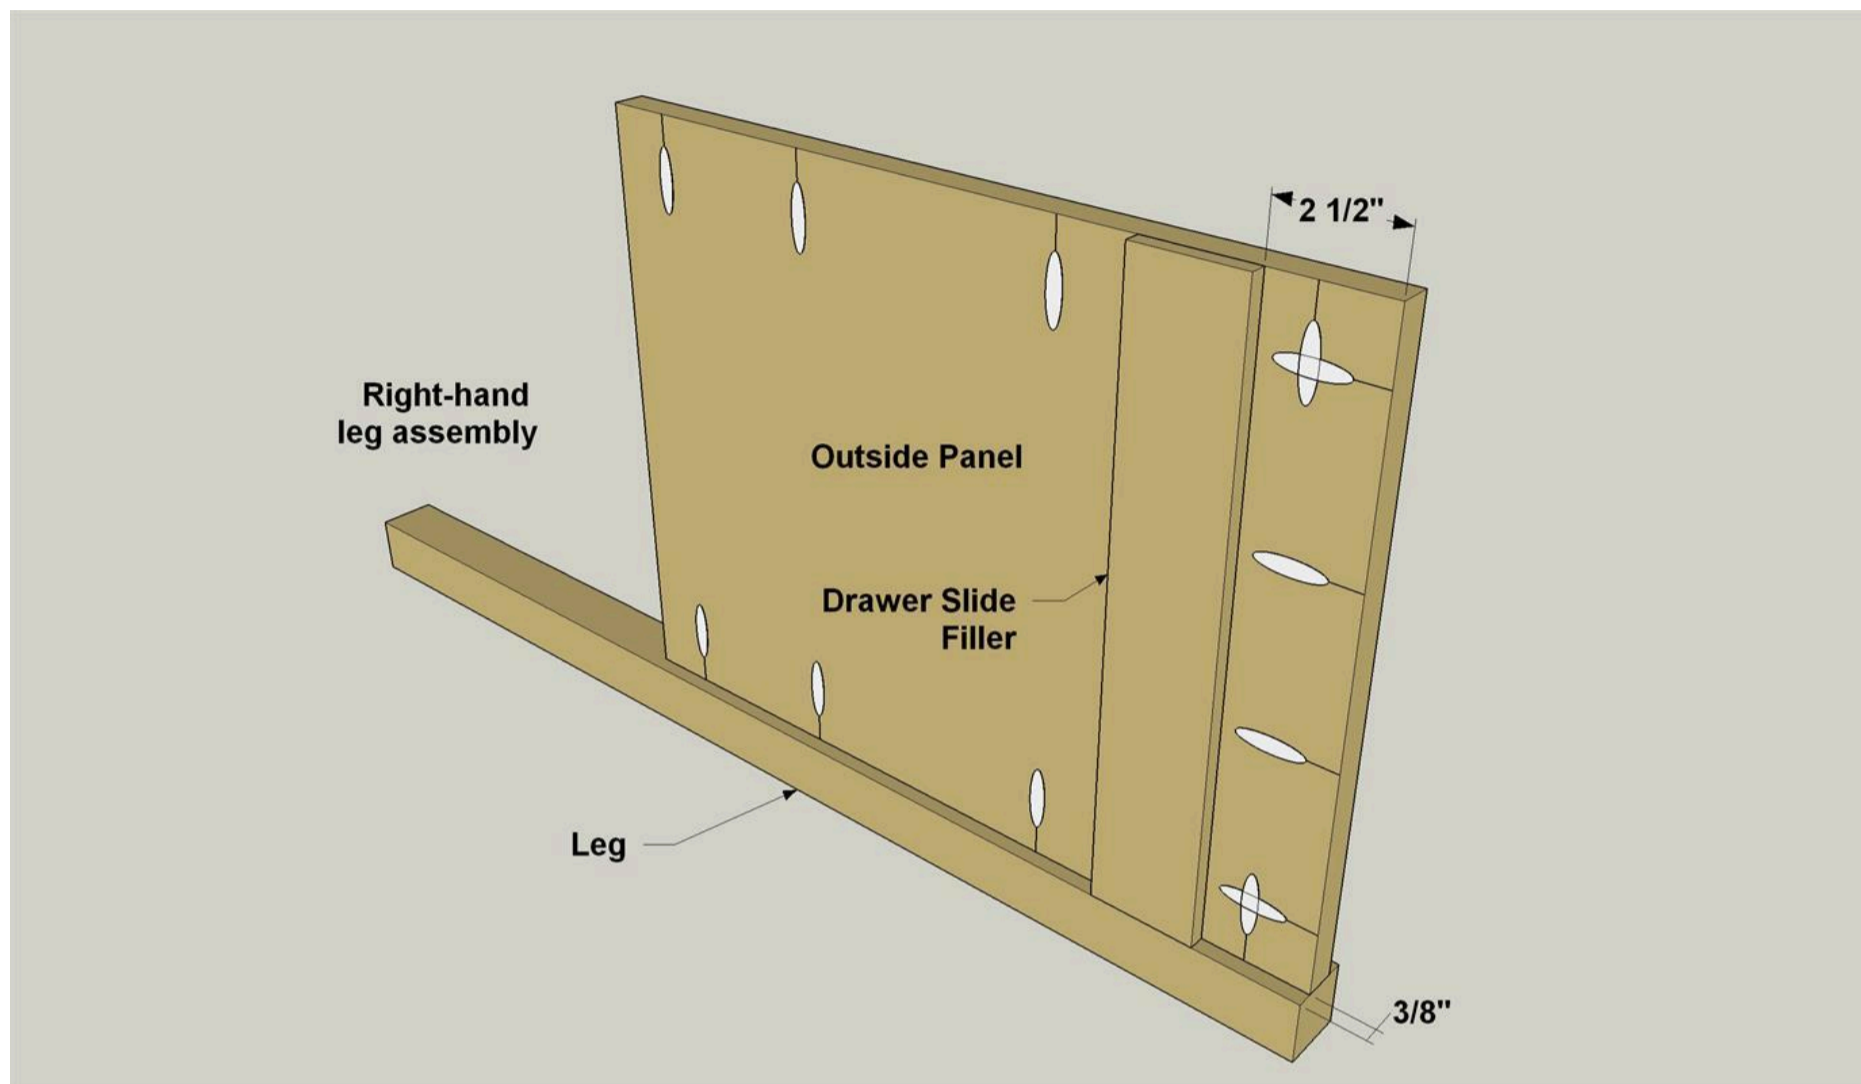

13

Create the Inside Panels


Cut one Left Inside Panel and one Right Inside Panel from 3/4" plywood, as shown in the cutting diagram. Next, drill pocket holes in these parts where shown.

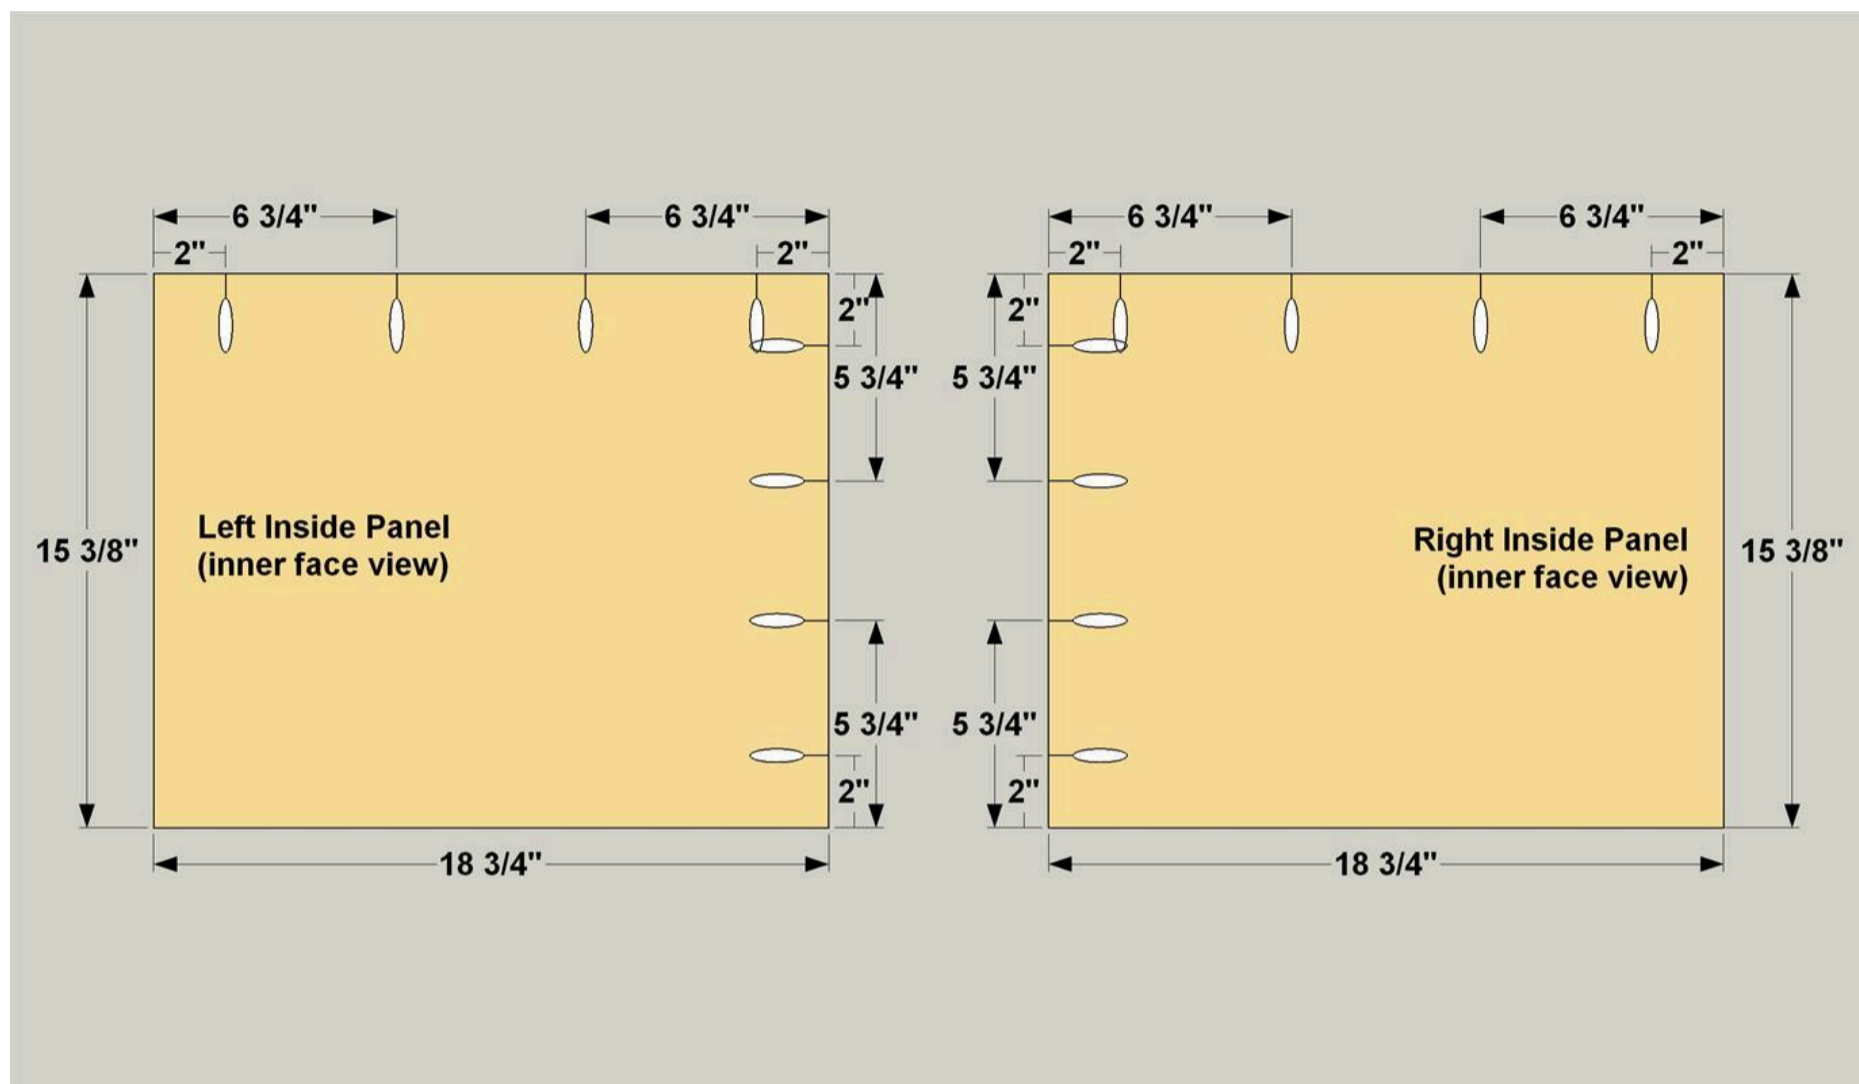

14

Make the Open Cubby Bottom

Cut one Open Cubby Bottom to size from 3/4" plywood, as shown in the cutting diagram. Using a jigsaw, notch out one corner of this panel, as shown. Then drill pocket holes where shown.

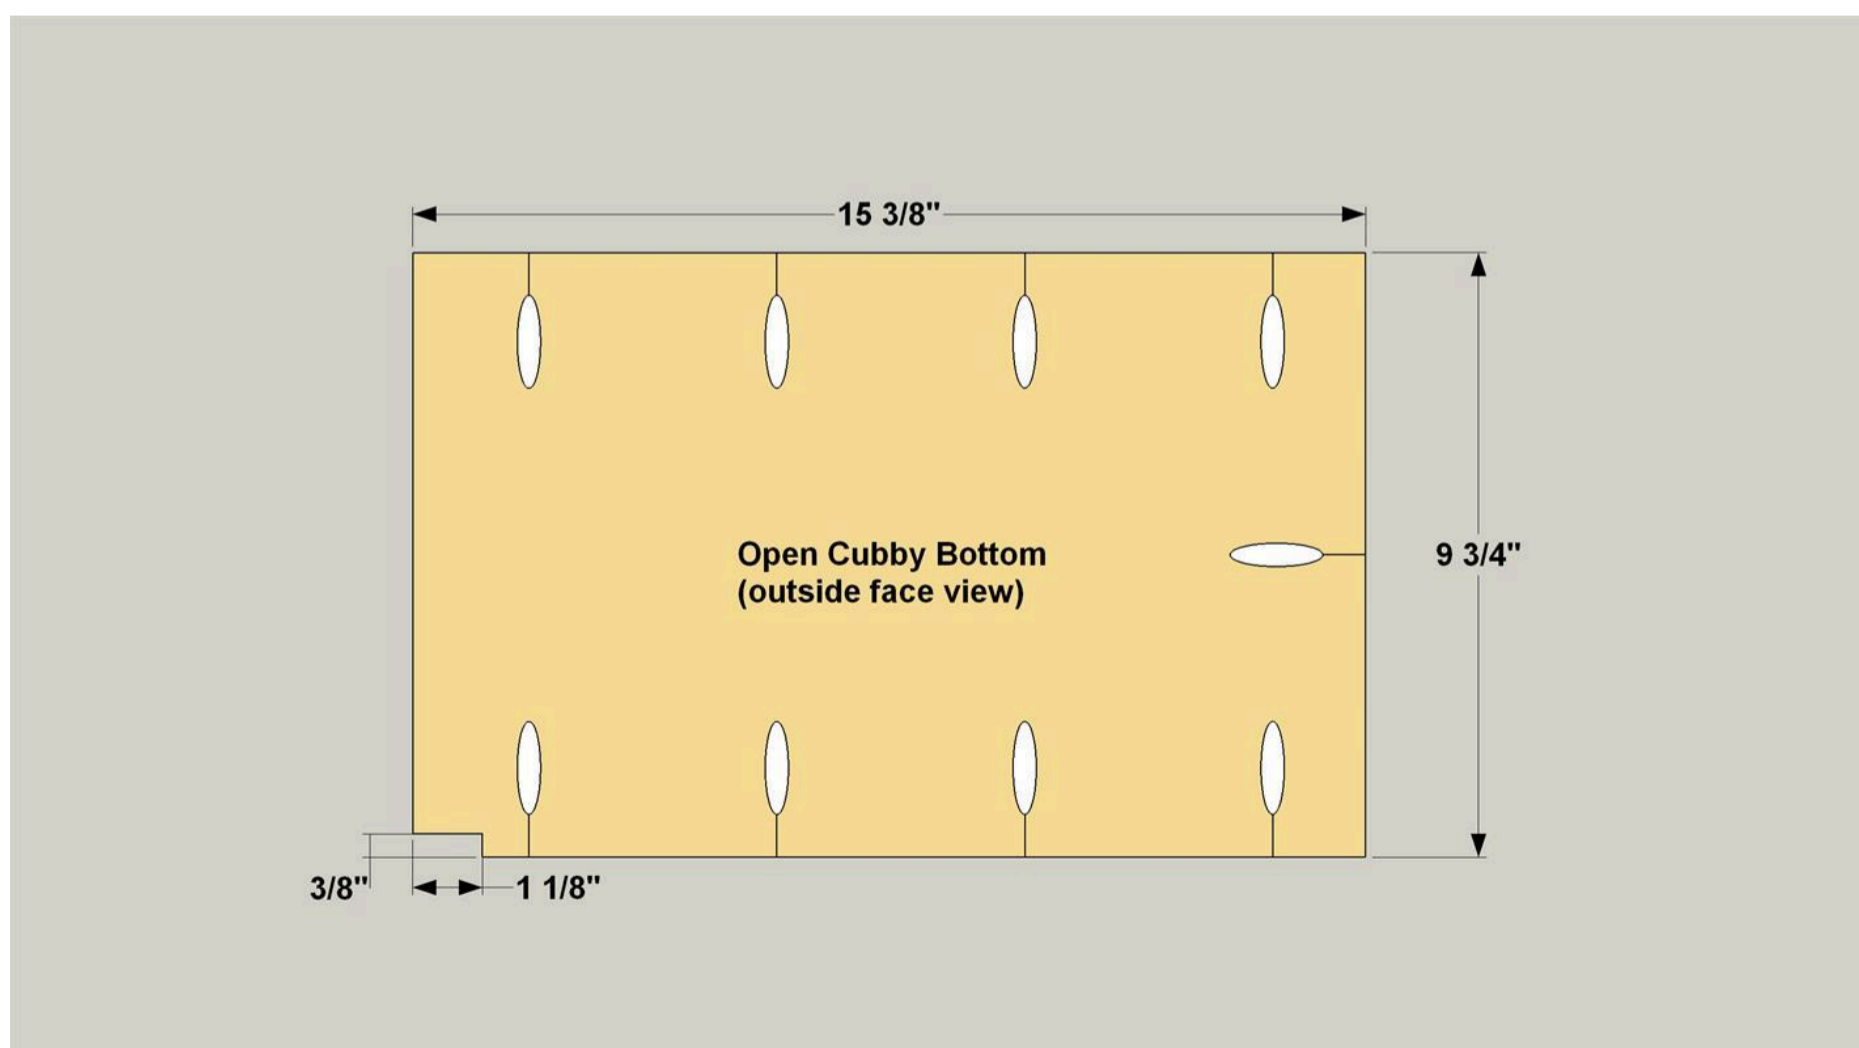


15

Assemble the Open Cubby

Attach the Open Cubby Bottom to the Left-hand leg assembly using 1 1/4" coarse-thread pocket hole screws as shown.


Position the Left Inside Panel on the assembly, as shown, so that the pocket holes are facing inward, and that the end of the Left Inside Panel that has pocket holes is facing toward the top of the assembly. Attach this panel using 1 1/4" coarse-thread pocket hole screws.

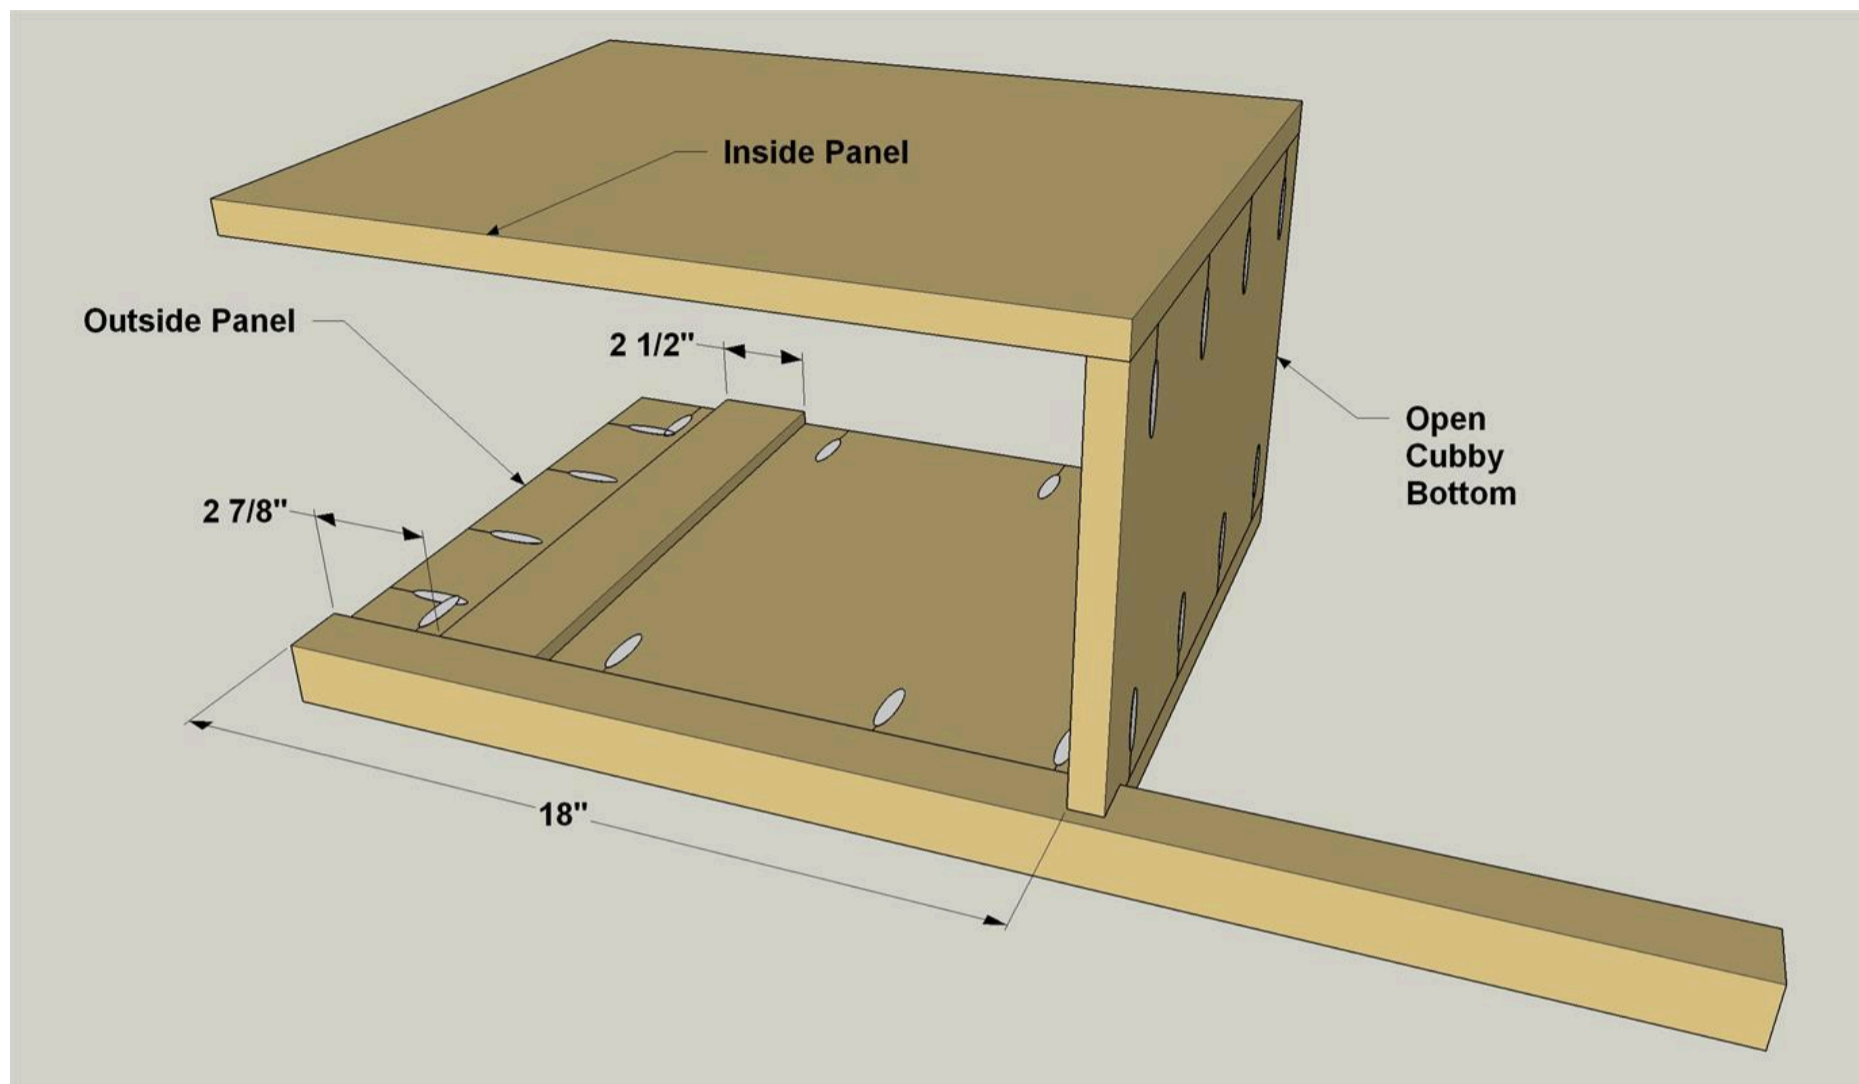

16

Make the Divider Cubby Parts


Cut one Divider Cubby Top and one Divider Cubby Bottom to size from 3/4" plywood, as shown in the cutting diagram. Using a jigsaw, notch out one corner on each of these pieces, as shown. Then drill pocket holes where shown. Cut the Divider Guides from 1/4" square dowels. Attach the Divider Guides where shown using glue and 3/4" brad nails.

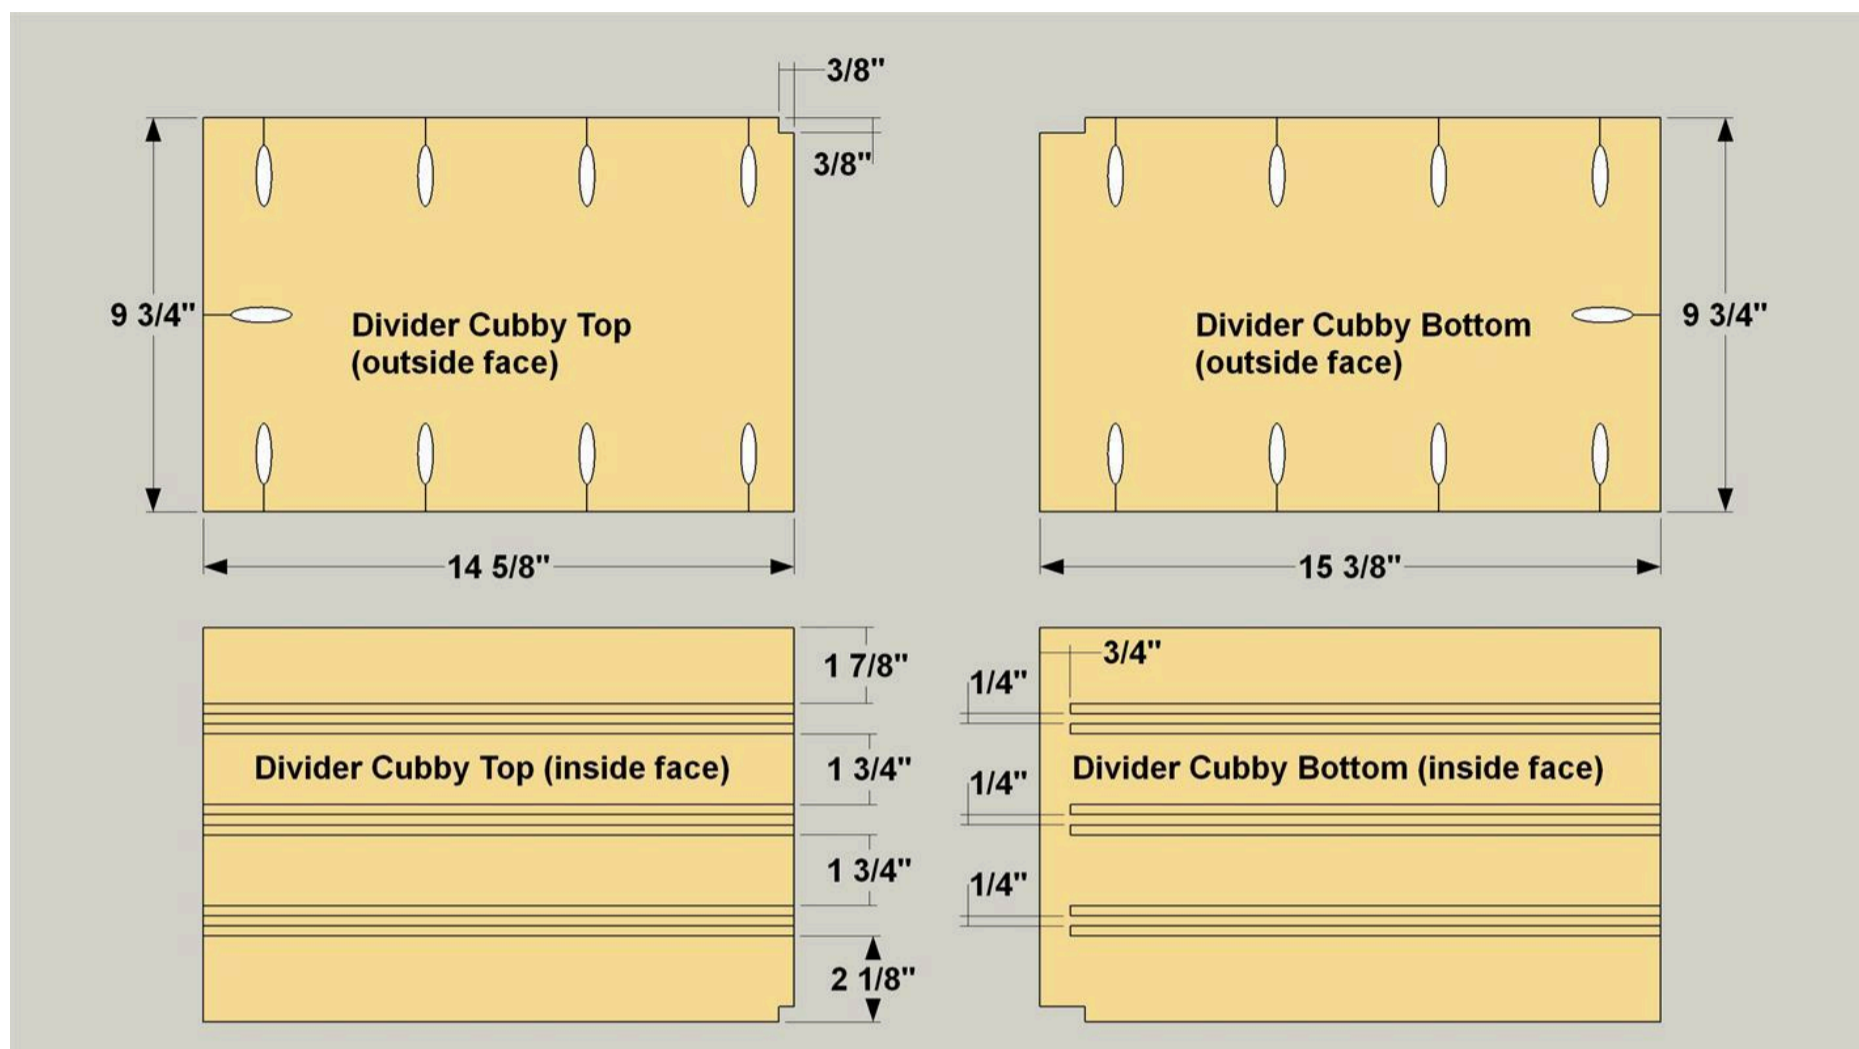

17

Assemble the Divider Cubby

Attach the Divider Cubby Top and Bottom to the right-hand leg assembly using 1 1/4" coarse-thread pocket hole screws. Orient the pocket holes as you did on the other cubby assembly. Note that the Divider Cubby Top sits against the Drawer Slide Filler on the Outside Panel.

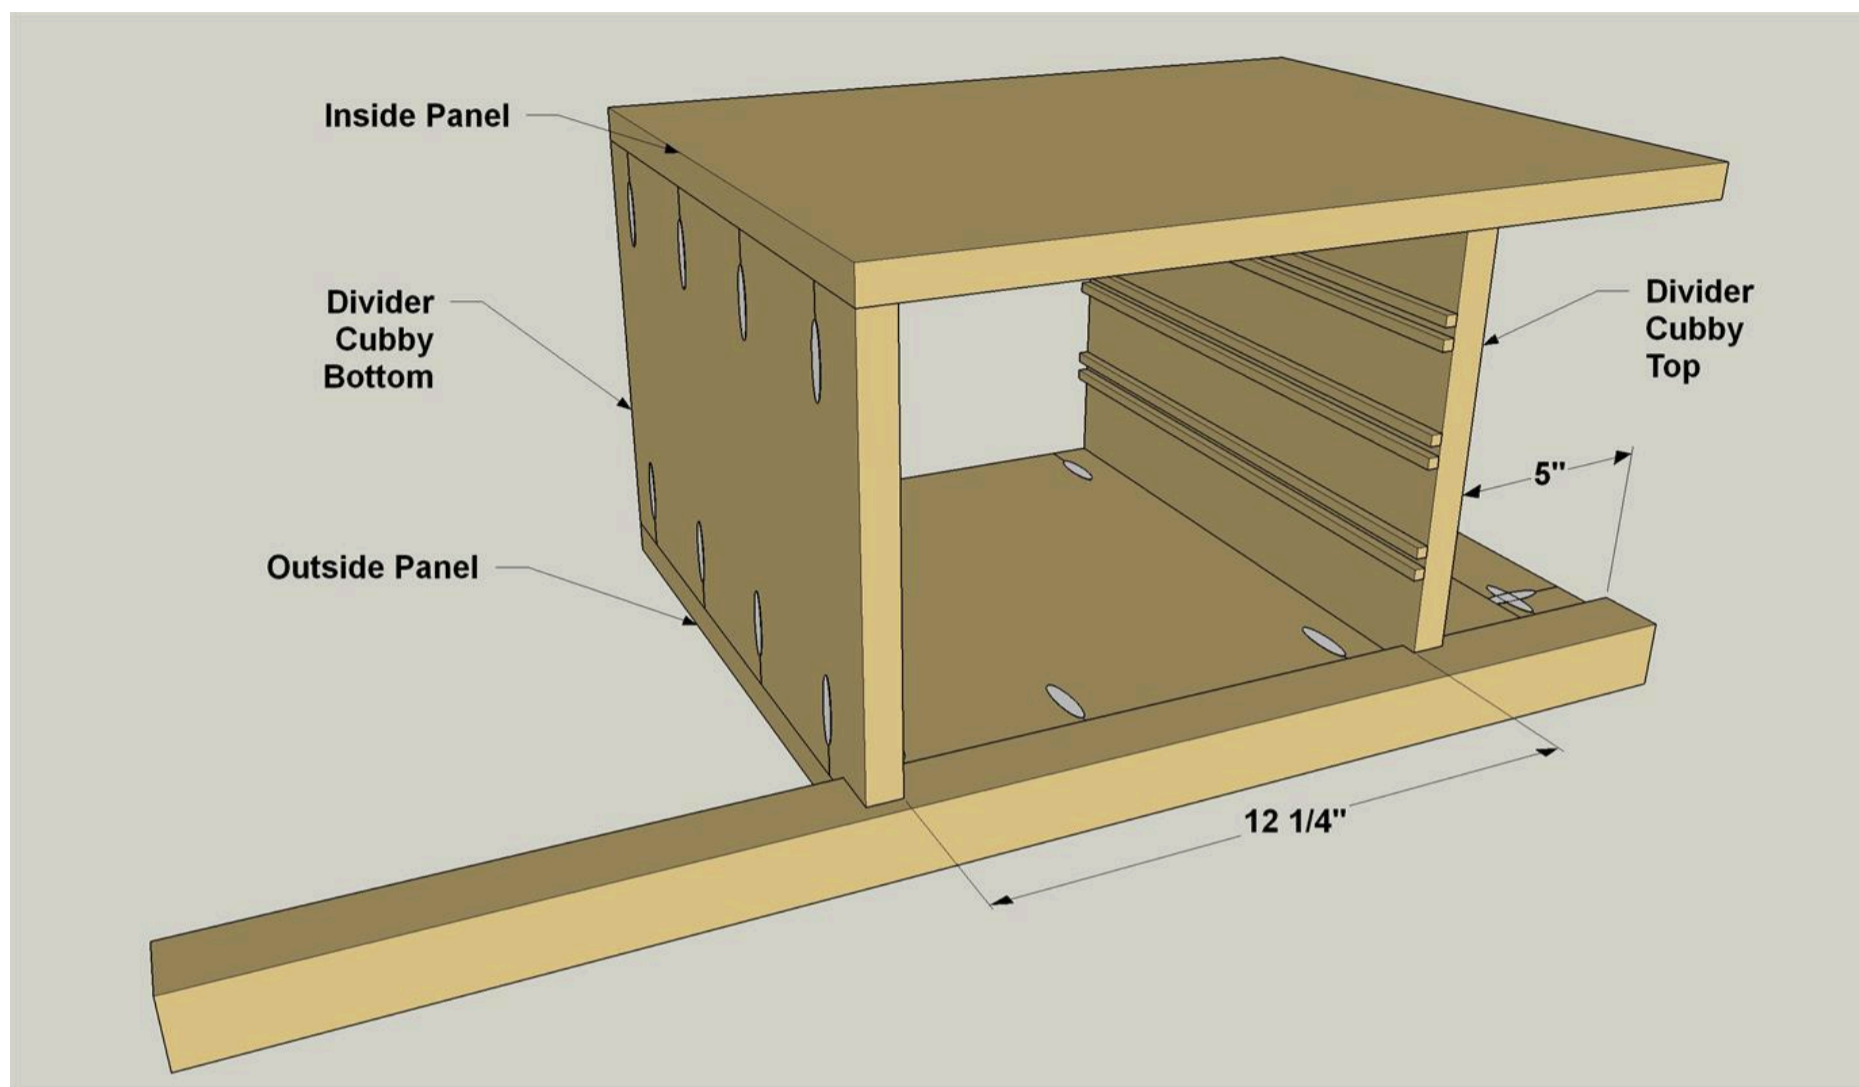

18


Cut the Top and Wing

Cut one Craft Center Top and one Craft Center Wing to size from 3/4" MDF, as shown in the cutting diagram.

19

Attach the Long Cubby Assembly


Lay the Craft Center Top face down on a flat surface. Set the Long Cubby assembly on the Desktop as shown. Attach the assembly to the Top using 1 1/4" coarse-thread pocket hole screws.

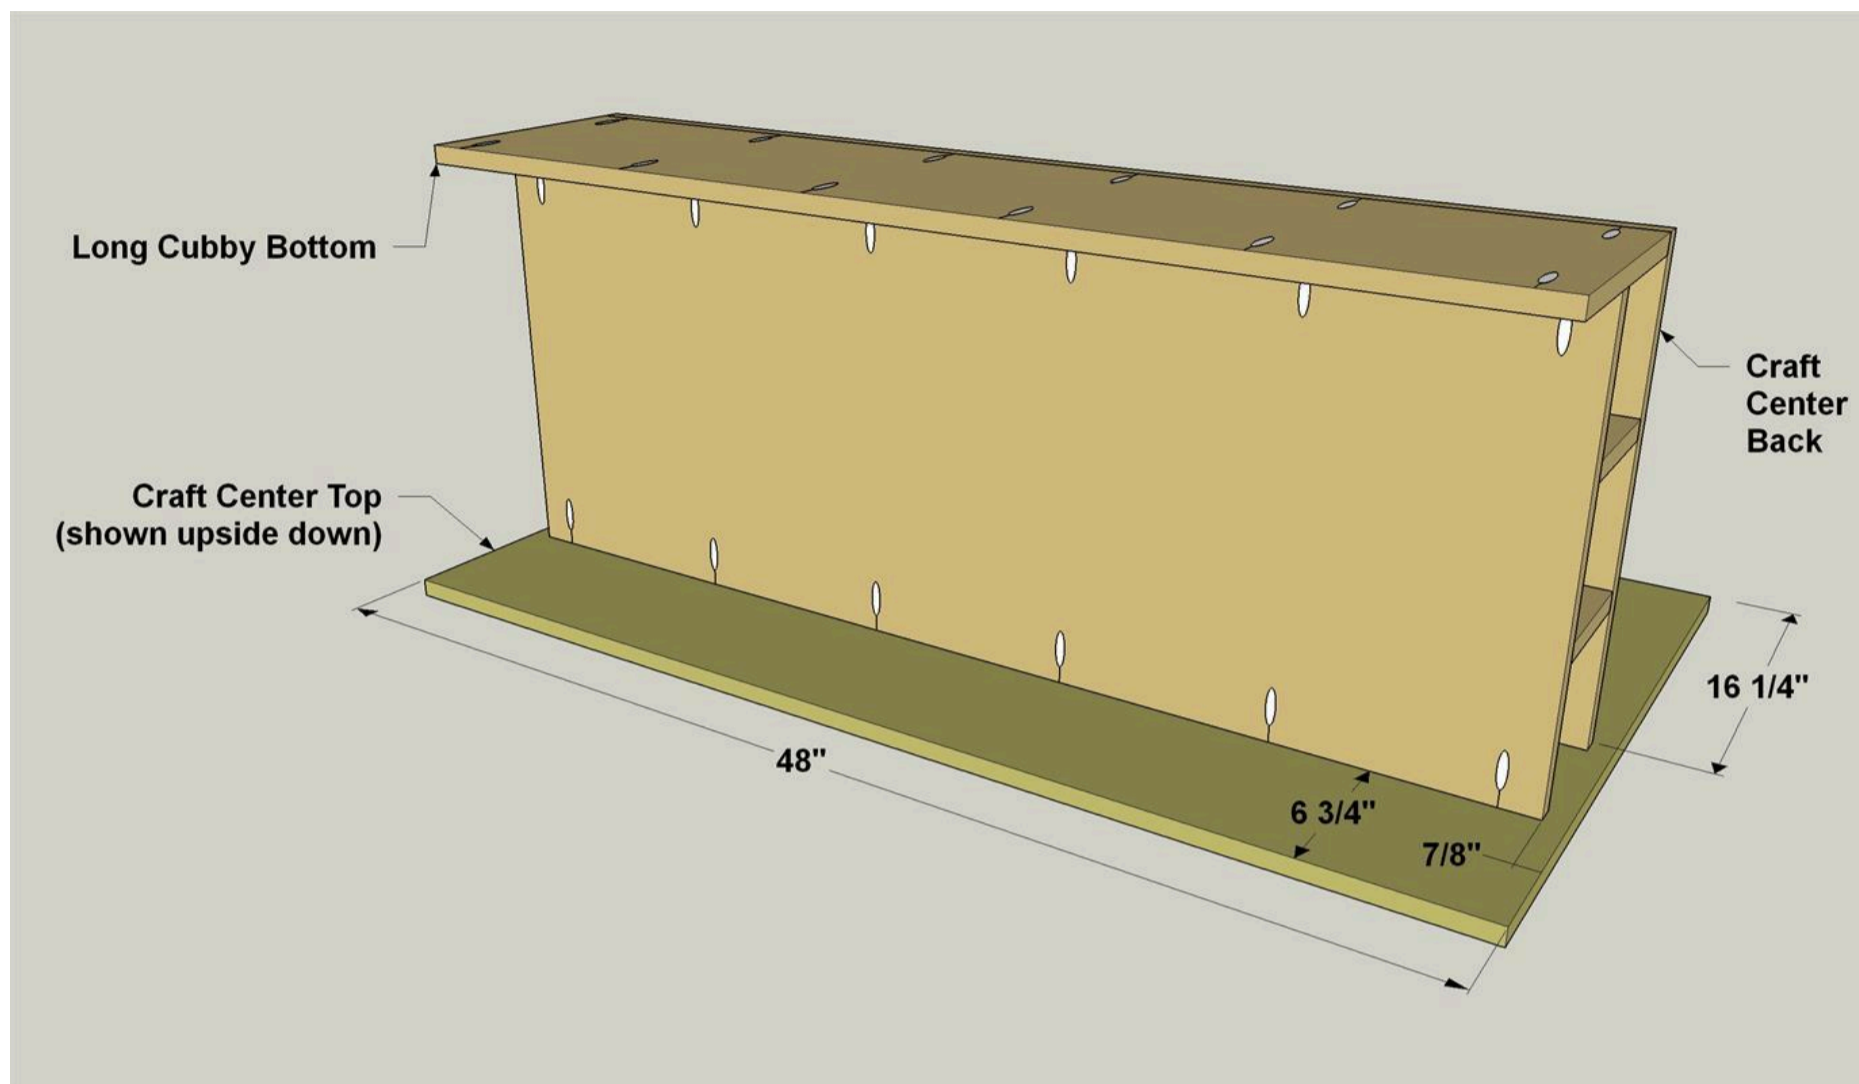

20

Attach the Back Leg Assembly


Attach the Back Leg assembly (that you assembled in Step 8) using 1 1/4" coarse-thread pocket screws as shown.

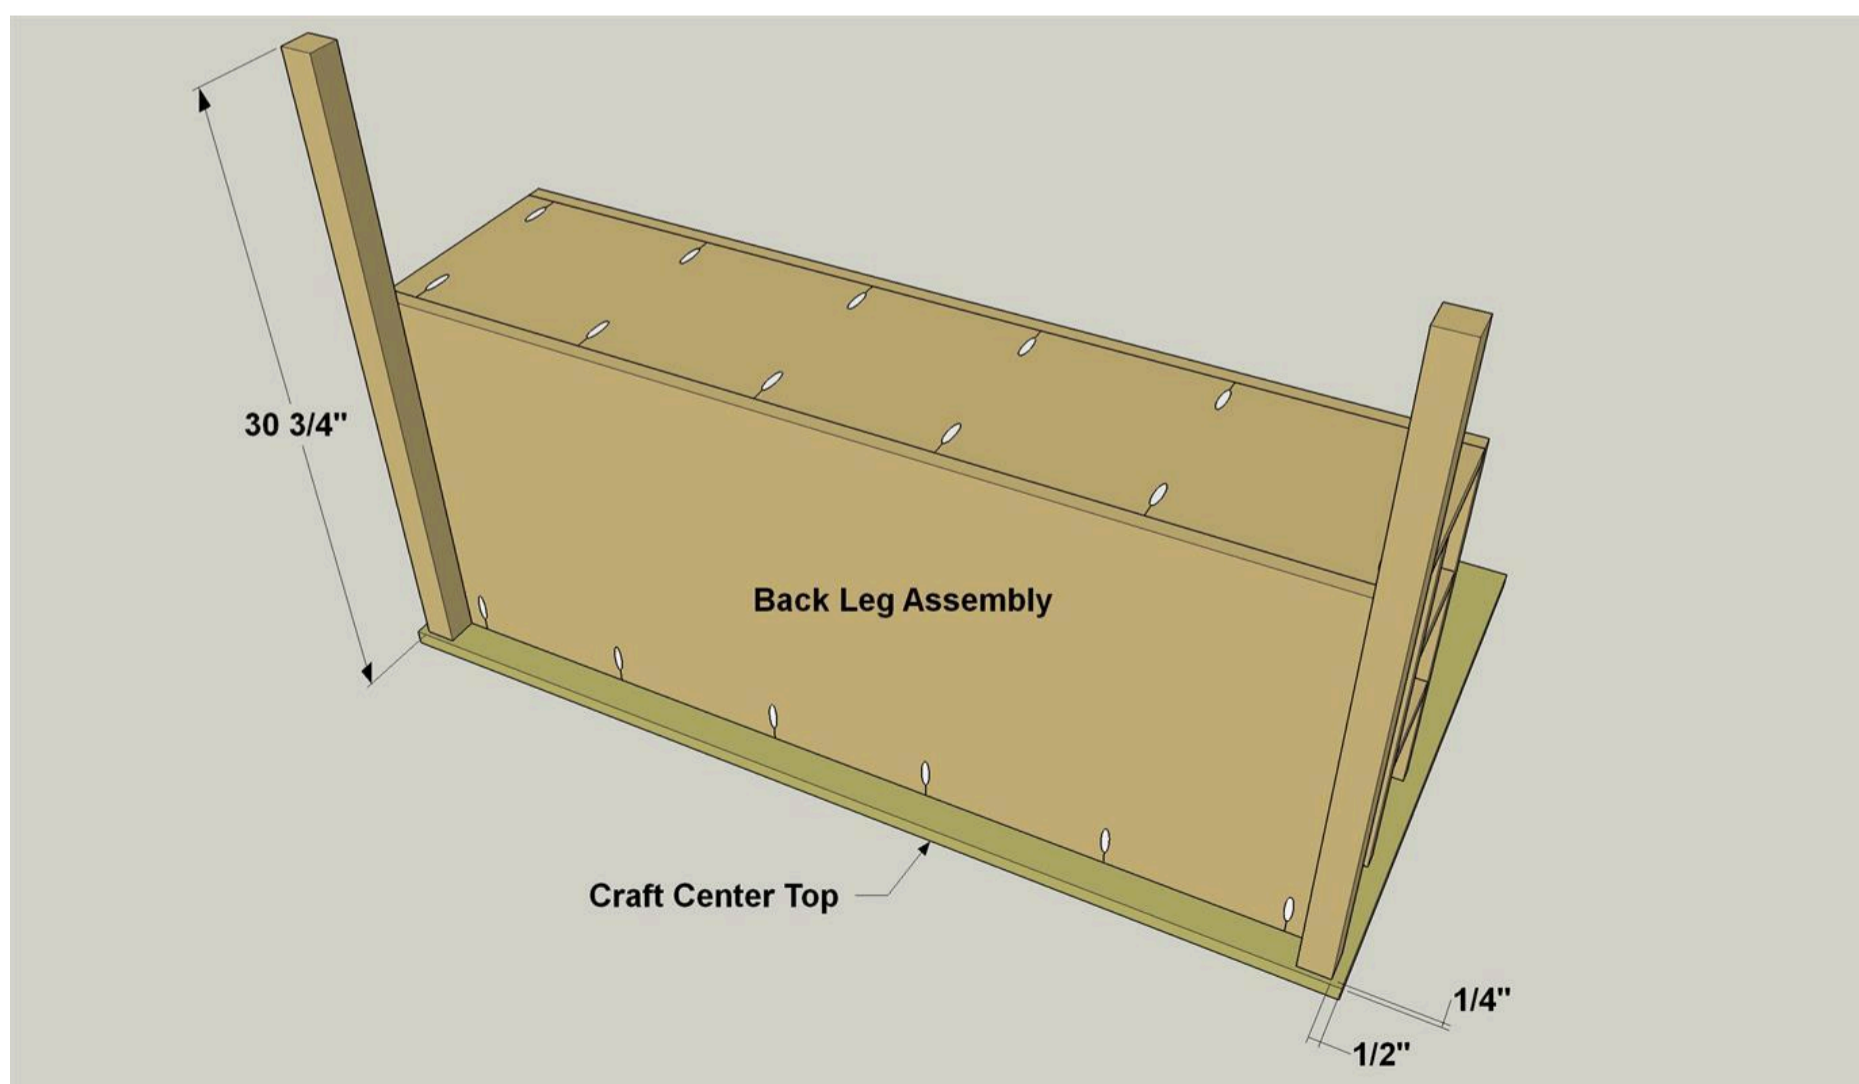

21

Attach Front Cubby Assemblies


Next, attach the Open Cubby assembly and the Divider Cubby assembly using 1 1/4" coarse-thread pocket hole screws, as shown. A small right-angle attachment for your drill, along with a short square-drive bit, will make it possible to drive screws in the tight spaces. Make sure that the Inside Panel on the Open Cubby assembly sits straight and parallel to the Leg.

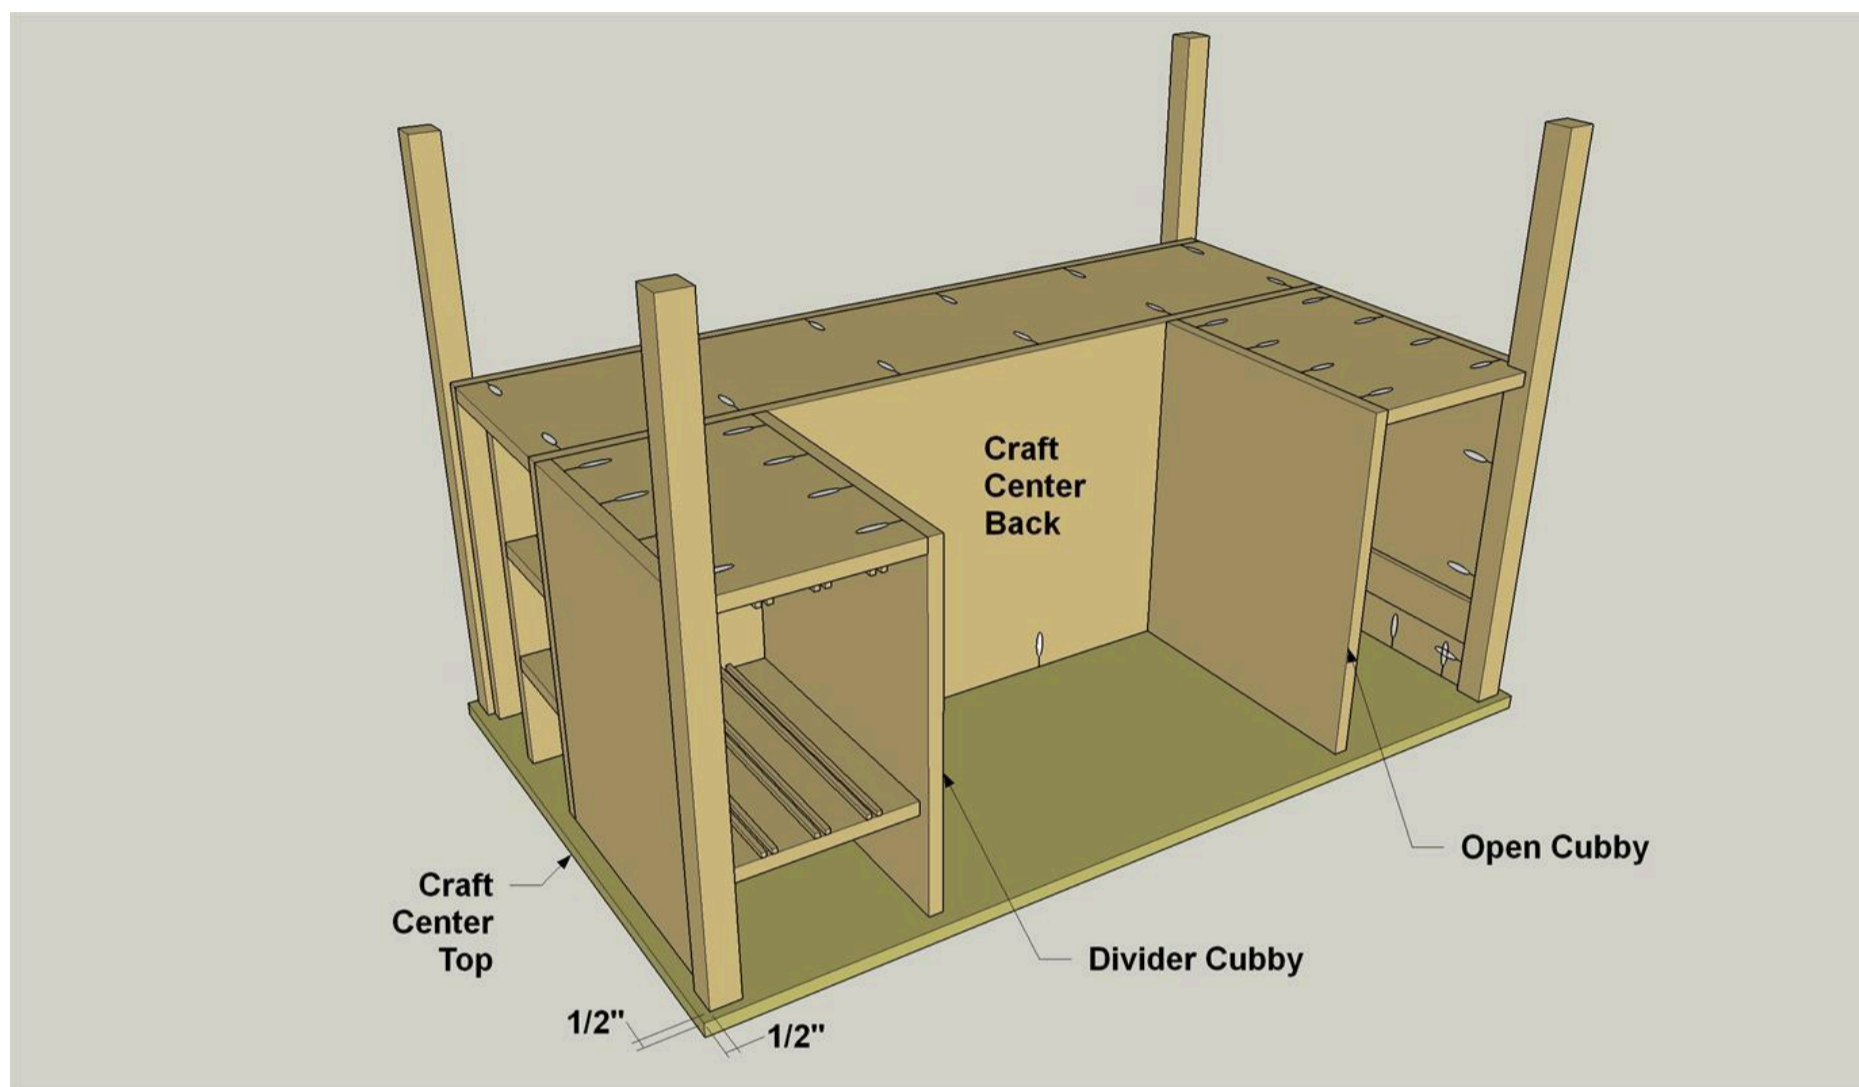

22

Make Wing Legs and Stretchers


Cut two Wing Legs and two Hinge Legs to length from 2x2 boards, as shown in the cutting diagram. Then cut six Wing Stretchers from 1x2 boards, as shown in the cutting diagram. Drill pocket holes in the ends of the Wing Stretchers, as shown.

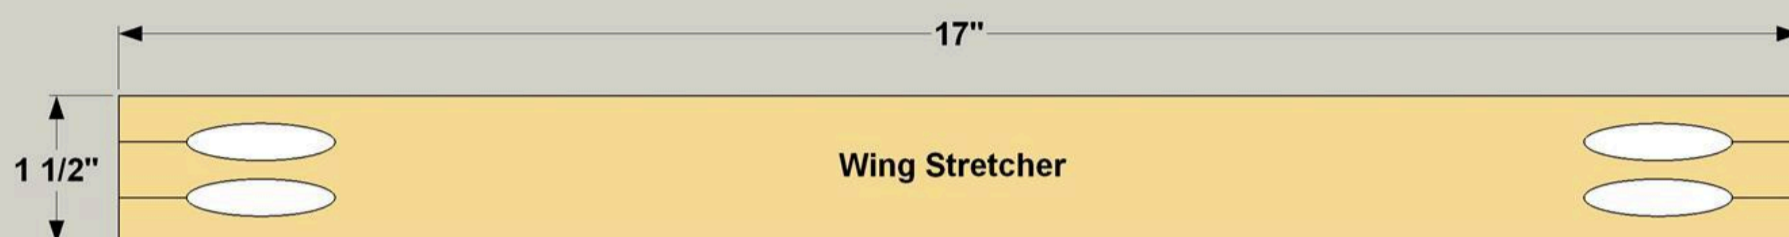

23

Assemble the Wing Supports


Position the Wing Stretchers on the Legs as shown, making sure that the stretchers are centered on the width of the Legs. Then attach the Stretchers using 1 1/4" coarse-thread pocket hole screws. Repeat with other Wing Assembly

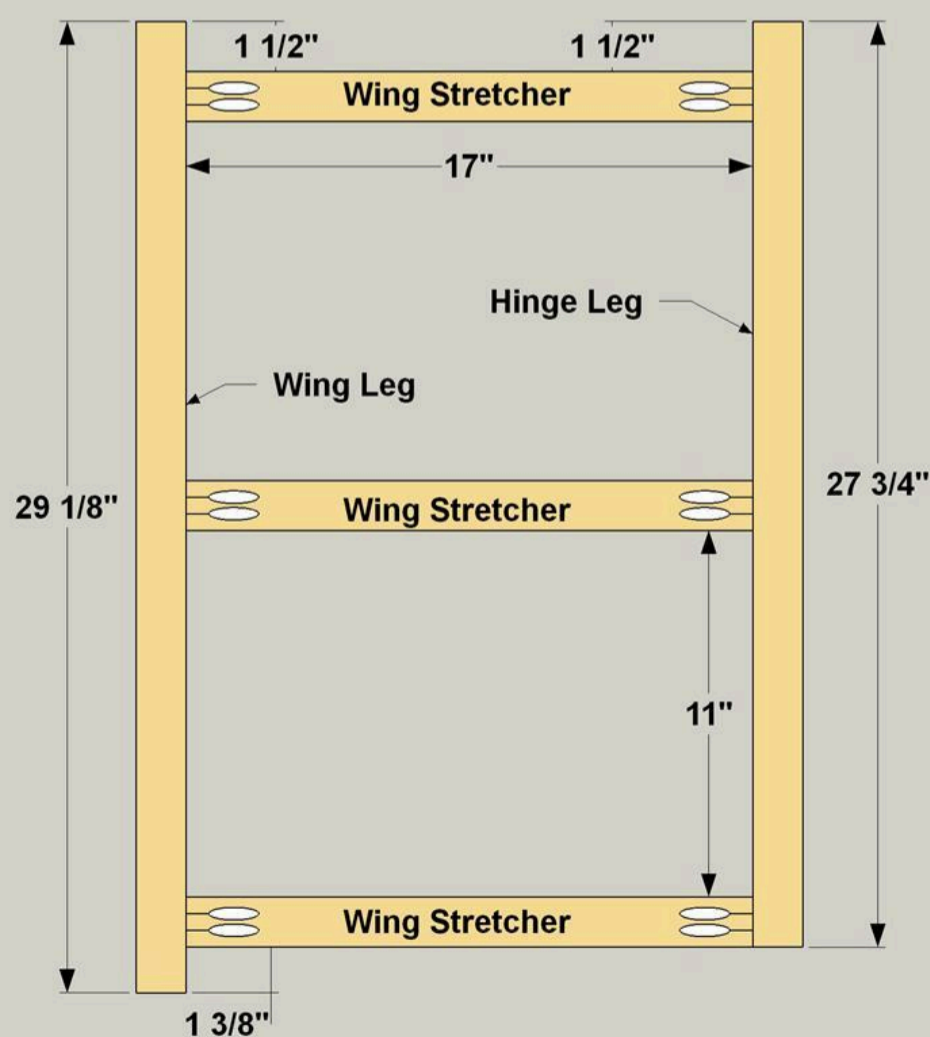

24

Attach the Wing Supports


Position the wing support assemblies you just made against the Long Cubby Back, and rest the legs on nickels. This creates a slight gap that will allow the supports to swing freely. Using two pairs of 3" hinges, attach the Hinge Legs to the Craft Center Legs, as shown.

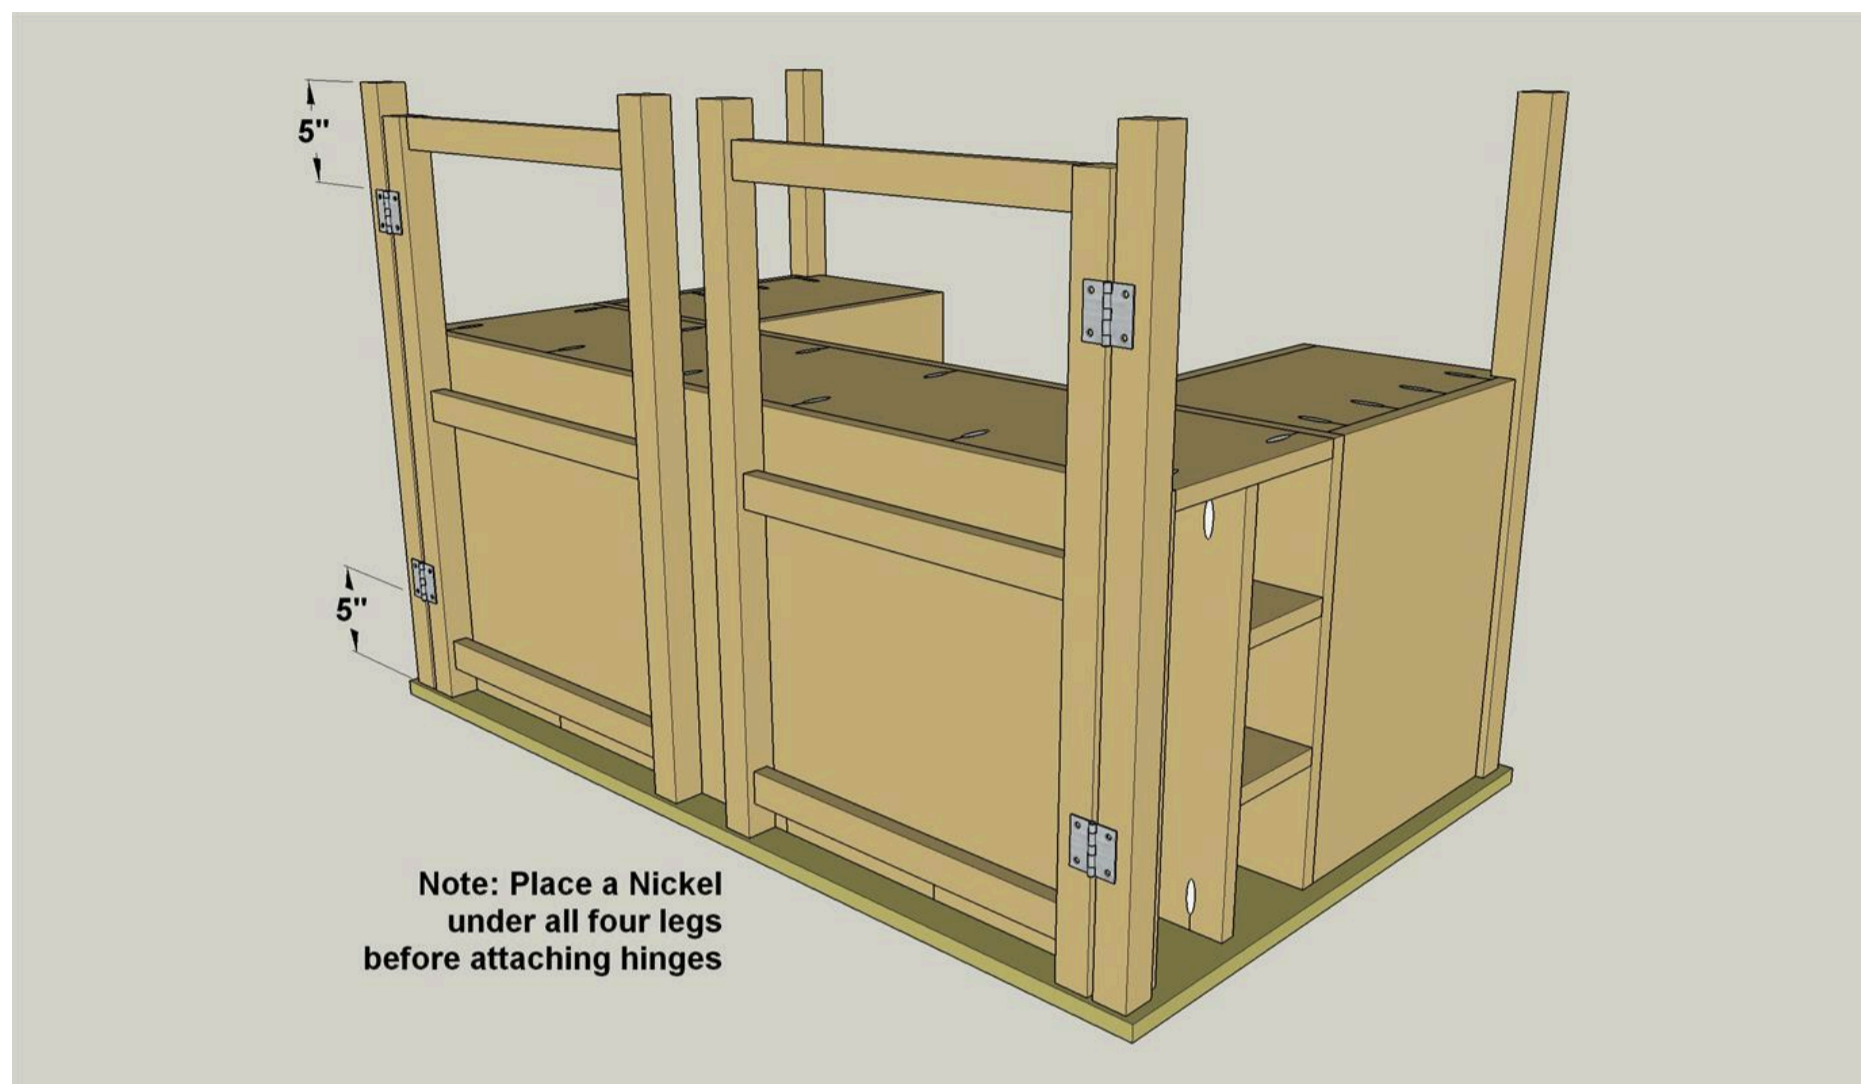

25

Attach the Wing

Position the Craft Center Wing, leaving a slight gap between it and the Craft Center Top—a couple of nickels work great here, once again. Attach the Craft Center Wing to the Craft Center Top using a pair of 1 1/2" x 12" continuous hinges. Now cut two Wing Blocks from a 1x2 board, as shown in the cutting diagram. Swing the wing supports open, as shown, and then position and attach the Wing Blocks using glue and 1 1/4" brads.

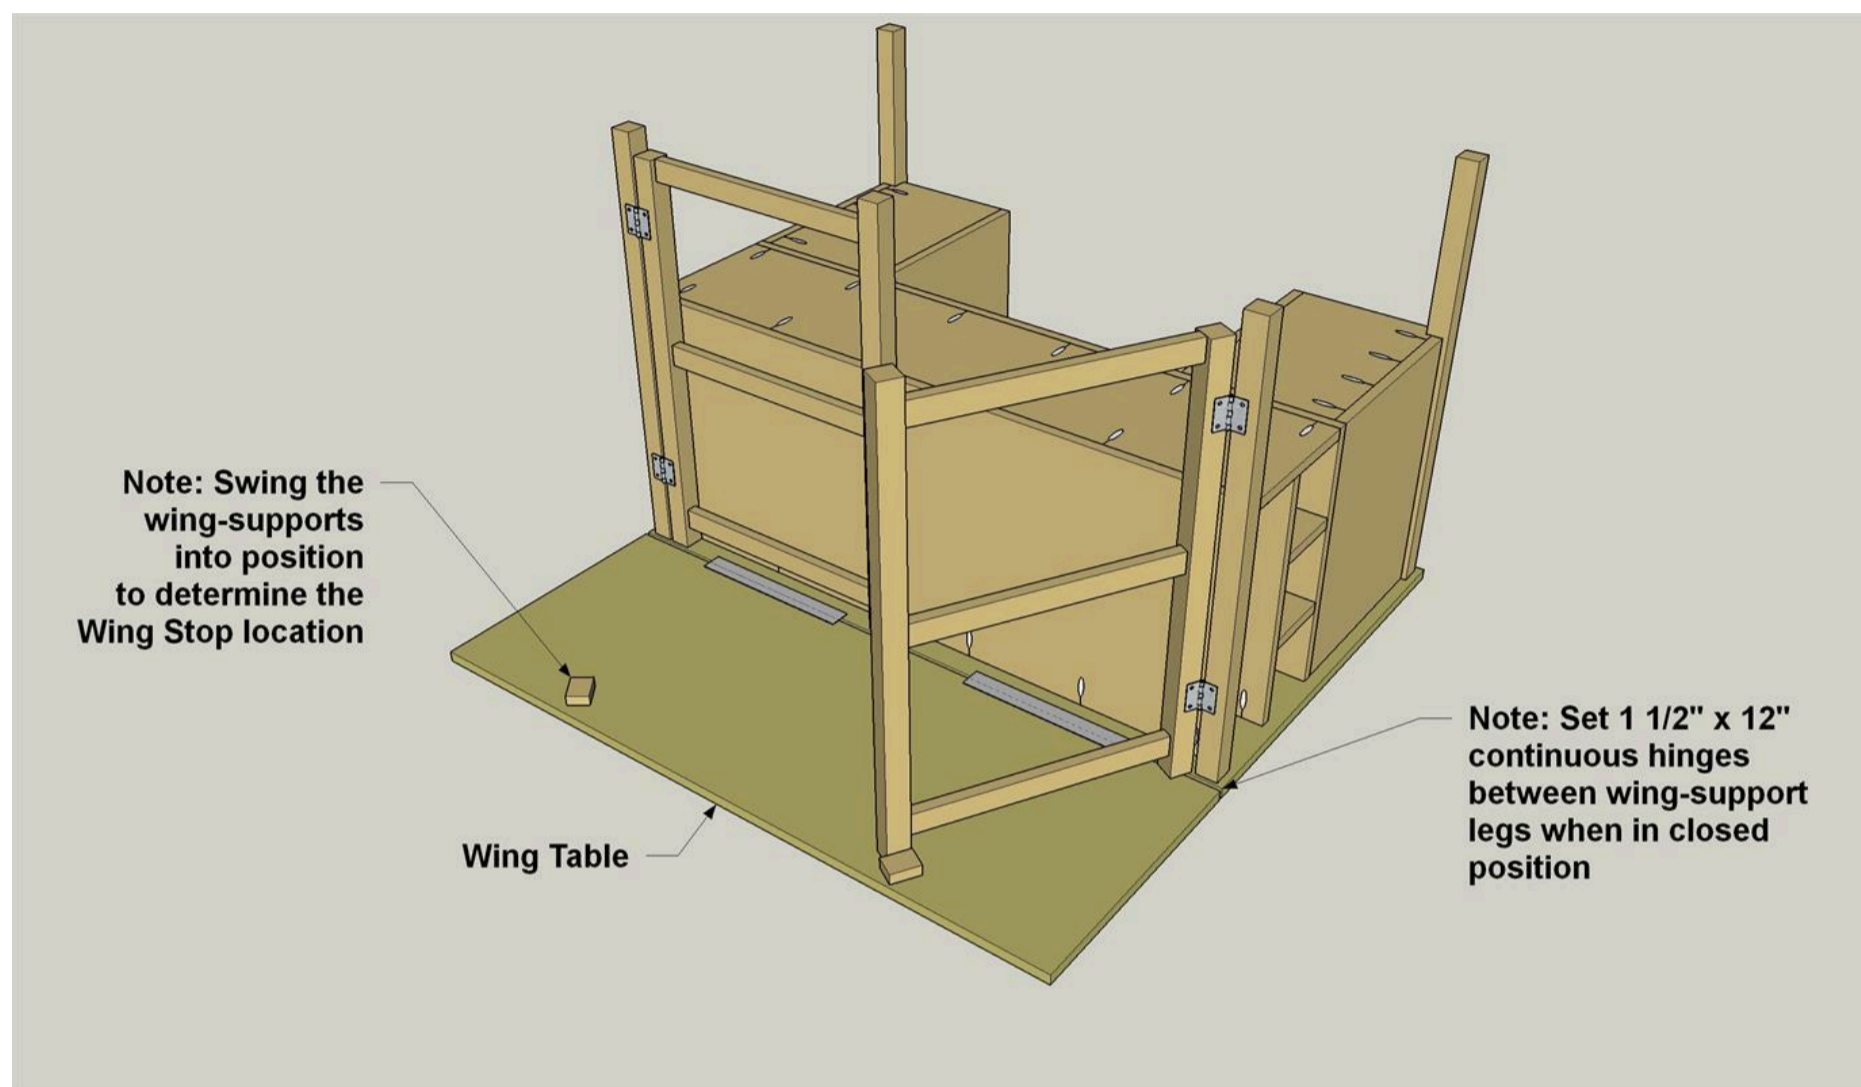

26


Make Cubby Dividers

Cut three Cubby Dividers from 1/4" plywood, as shown. Then test fit the Dividers by sliding them in place between the Divider Guides.

27

Make the Drawer Parts


Cut four Drawer Box Sides, two Drawer Box Fronts and two Drawer Box Backs to length from 1x4 boards, as shown in the cutting diagram. Cut two Drawer Bottoms from 1/4" plywood. Also cut two Drawer False Fronts from a 1x6 board. To cut the drawer handle, simply use something like a quart paint can to draw the shape, and then cut it out with a jigsaw.

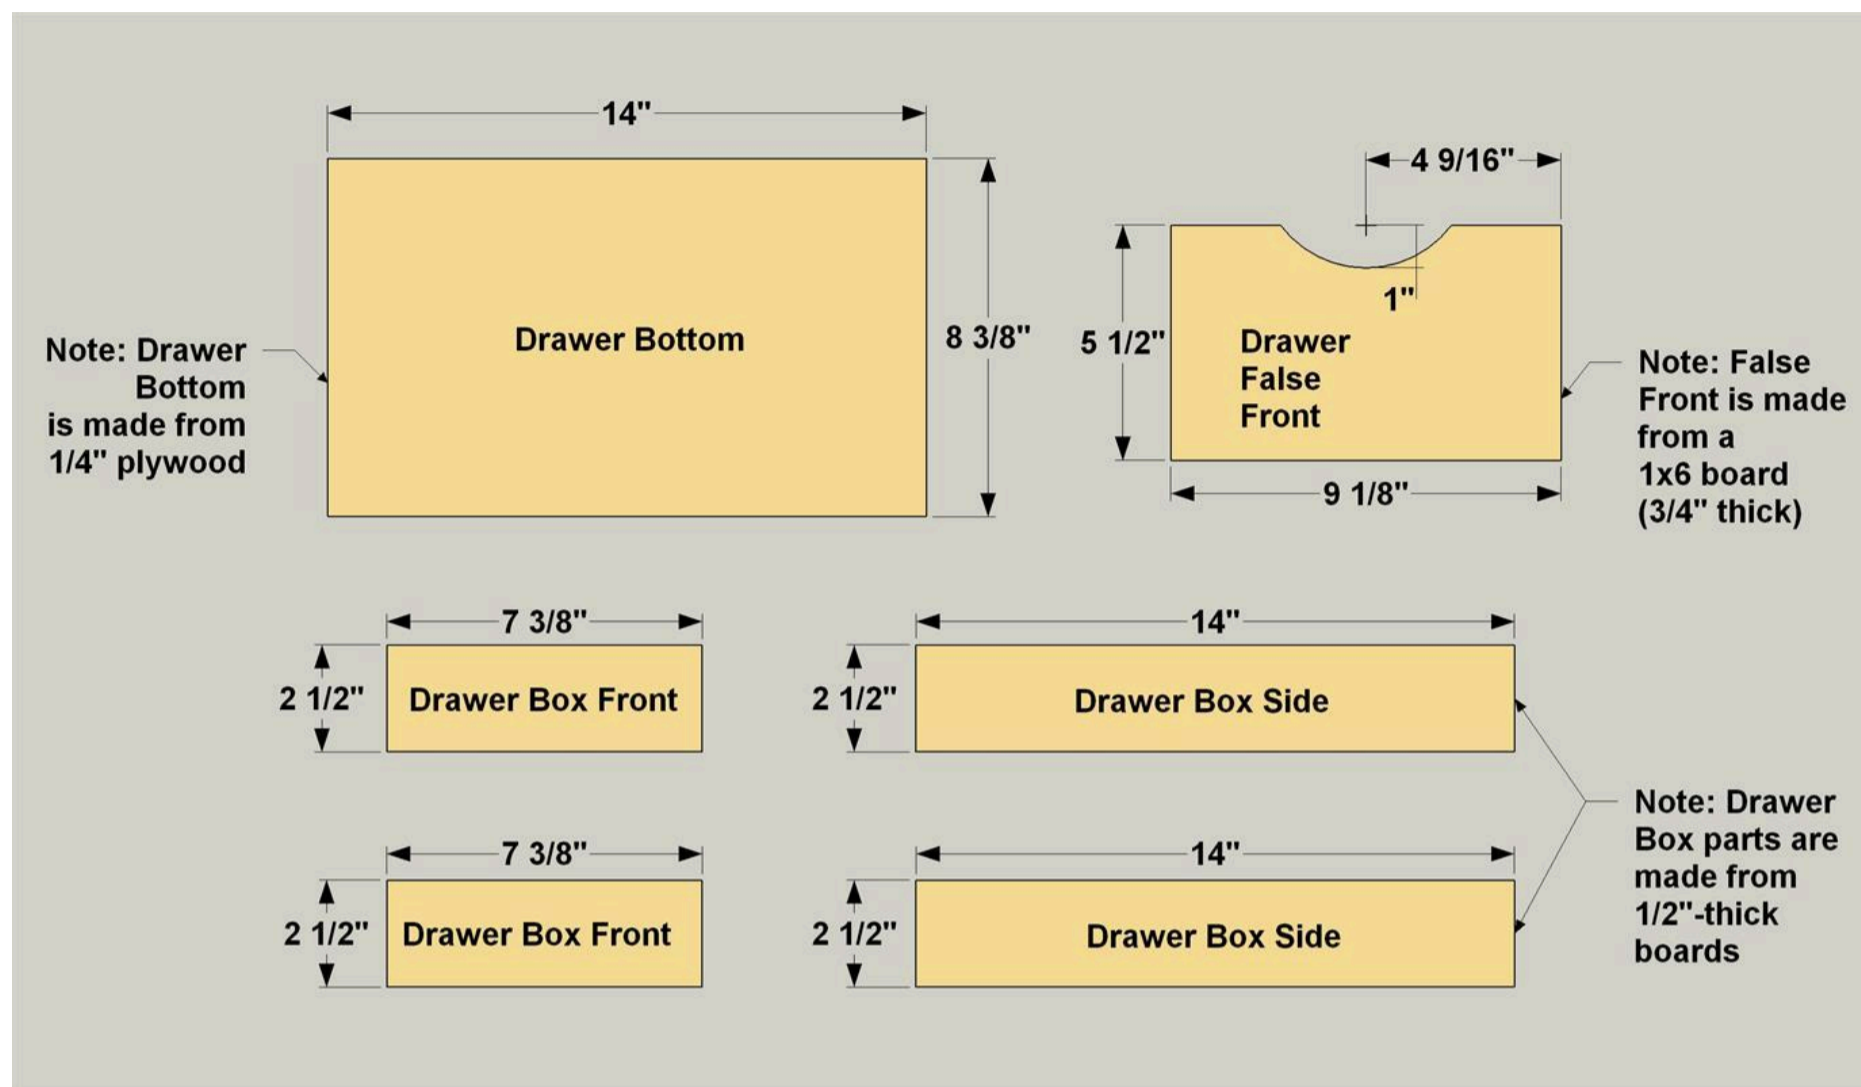

28

Assemble the Drawer Boxes


First attach the Drawer Box Front & Back to the Drawer Box Sides, as shown, using glue and 1 1/4" brad nails. Attach the Drawer Box Bottoms to the drawer boxes using glue and 3/4" brad nails.

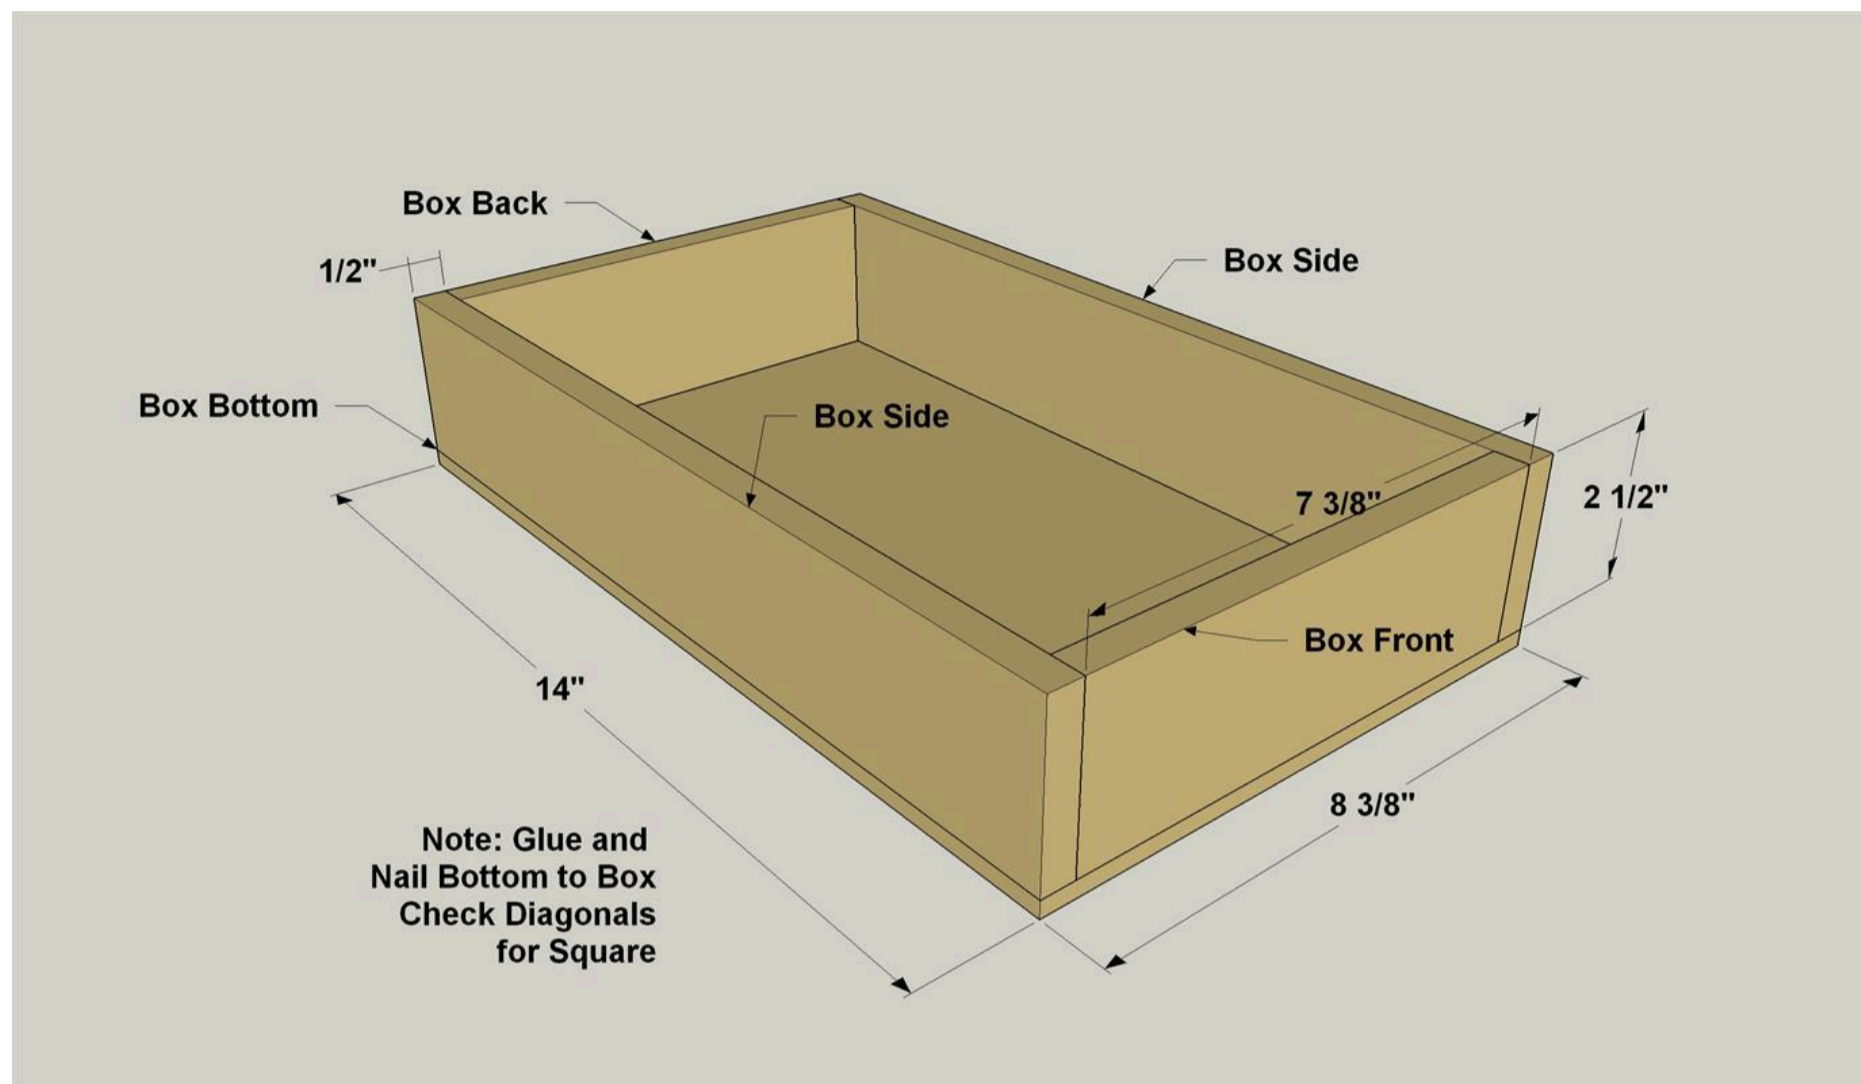

29

Attach the Drawer Fronts

Align the Drawer False Fronts with the drawer boxes, as shown, and then clamp them in place. Drill two pilot holes from inside the drawer box into the False Fronts making sure you don't pierce the Drawer Front. Attach with glue and 1 1/4" wood screws.

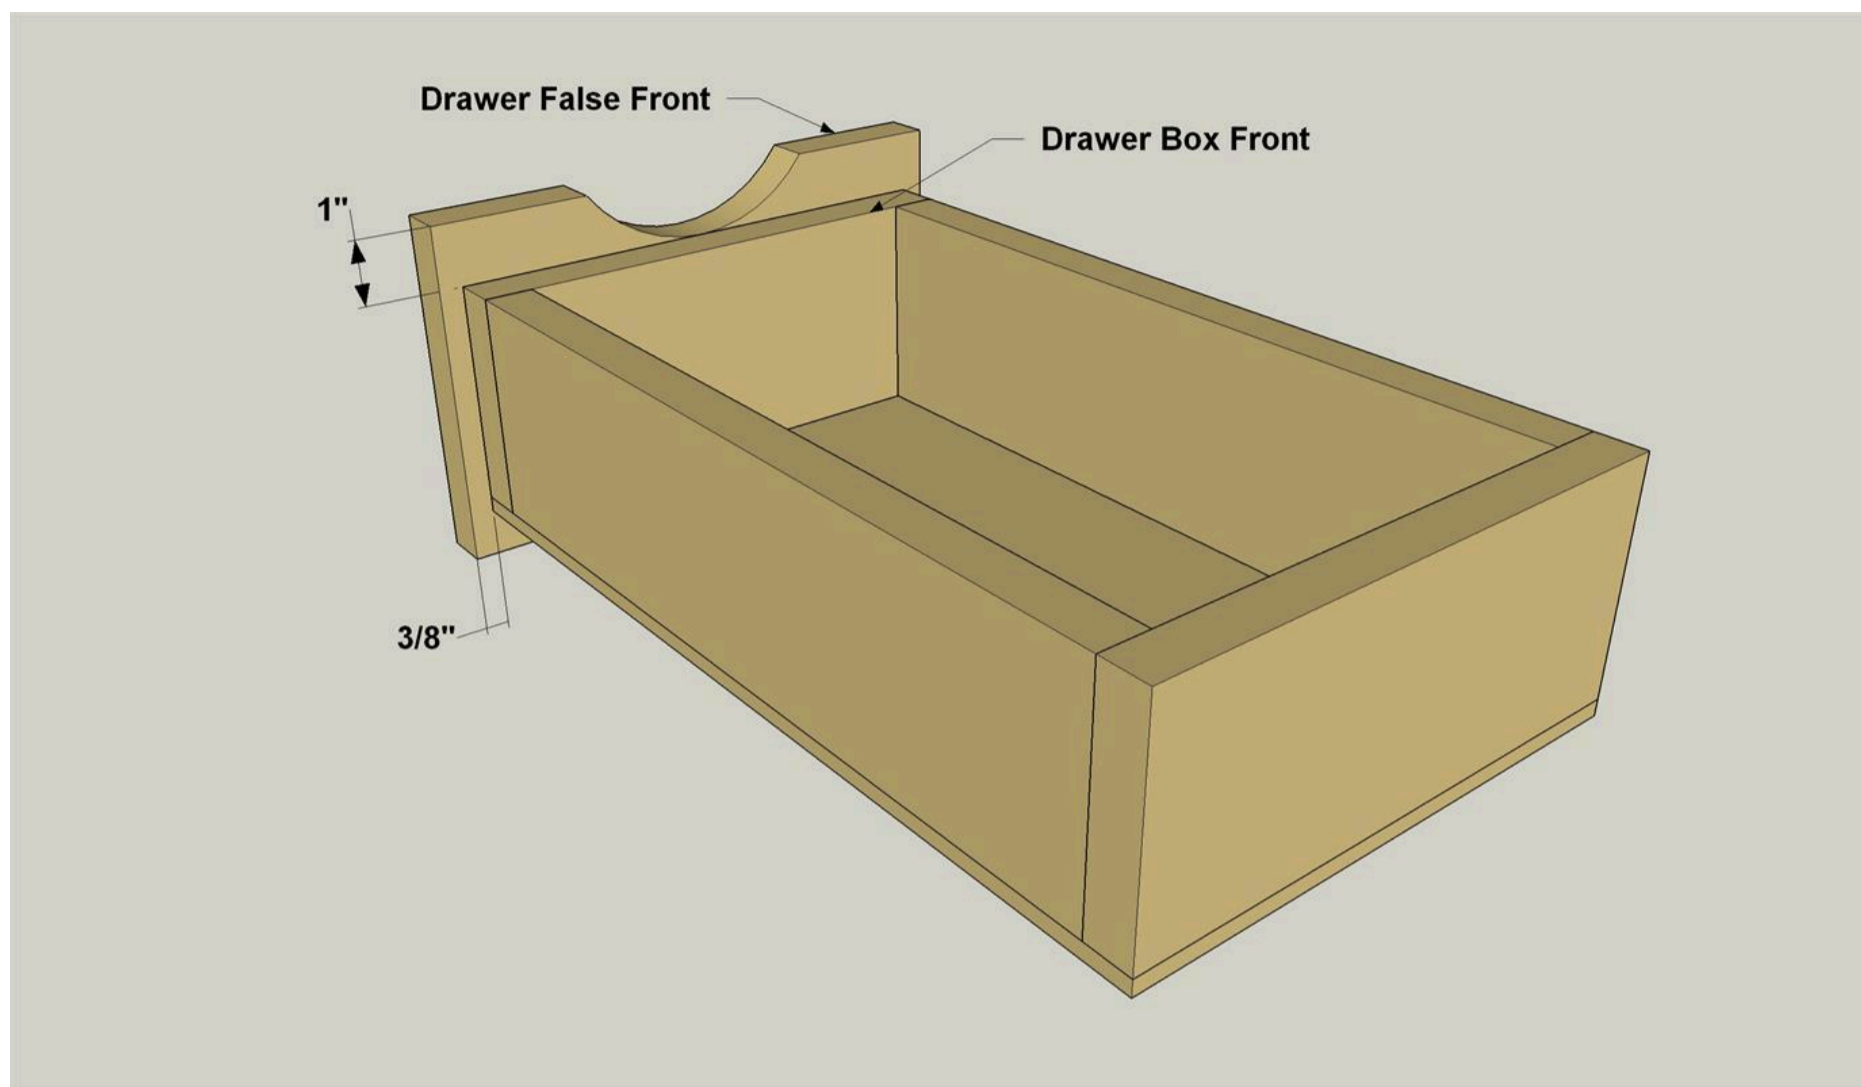

30

Add a Finish and Drawer Slides

With everything almost done, you can sand your craft table as needed—especially the exposed edges. Then apply the paint or stain of your choice. We decided to simple apply a clear oil finish, leaving the plywood edges exposed. Once the finish or paint dries, you can install a pair of 14" drawer slides on each drawer following the manufacturer's instructions. After that, you're ready to get your craft on!