


Pottery Barn Kids Inspired Modular Storage System

By **The Inspired Workshop**

Difficulty

Moderate

This simple solution to so many of your storage issues can be custom designed any way you like!! Pick the base you like, then pick the top cabinet(s) that fit your needs most! Stack them three high if you like or separate them around the room, make a wall of storage or just a small set!

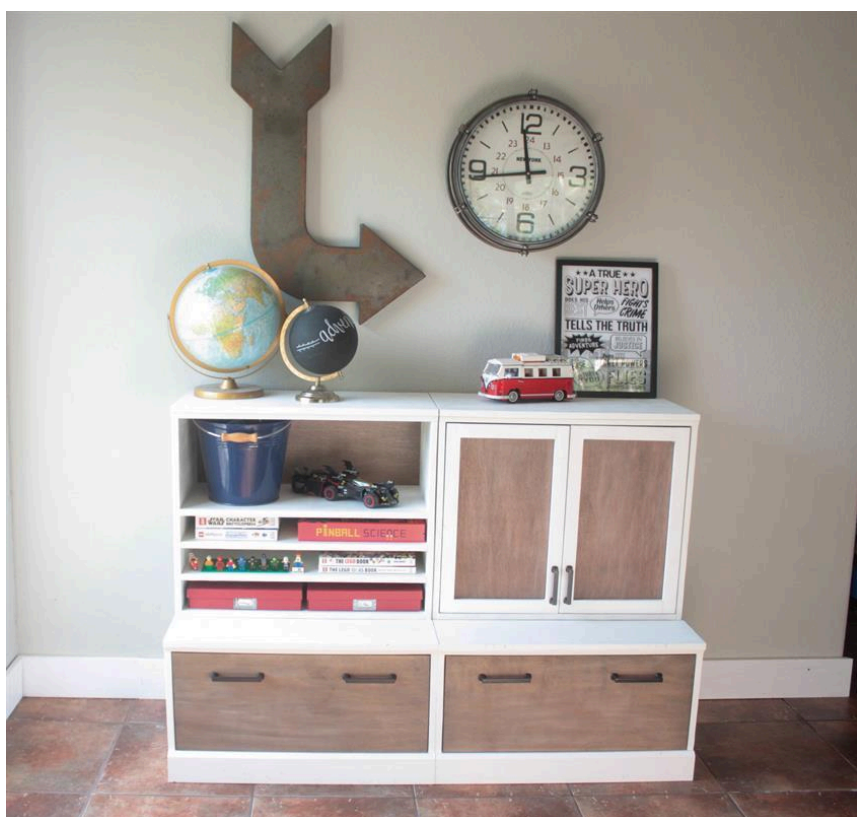

Tools

Kreg Tools

Accu-Cut™	Accu-Cut™
Rip-Cut™	Rip-Cut™
Wood Project Clamp - 6	Wood Project Clamp - 6"
Kreg® Pocket-Hole Jig 720	Kreg® Pocket-Hole Jig 720
Drawer Slide Jig	Drawer Slide Jig
Shelf Pin Jig with 1/4	Shelf Pin Jig with 1/4" Bit

Other Tools

Circular Saw (cordless)
Miter Saw
Tape Measure
Drill (cordless)
Nail Gun
Router
Sander

Materials

Wood Products

3	Plywood , 3/4" Thick , Full Sheet
1	Plywood , 1/2" Thick , Full Sheet
1	Plywood , 1/4" Thick , Full Sheet
1	Board , 1x4 , 120"
2	Small Molding , Around 3/8" , 96"
1	Board , 1x2 , 96"

Hardware & Supplies

1	Kreg 1 1/4" Pocket Hole Screws
1	Kreg 1" Pocket Hole Screws
2	Sets Of Utility Hinges
2	Sets Cabinet Hinges
2	Sets Of 18" Drawer Slides
3	Rolls Of Edge Banding

Cut List & Parts


- 4** Drawer Base Sides , 3/4" X 15 3/4" X 21"
- 2** Drawer Base Tops , 3/4" X 21 1/2" X 29 1/2"
- 2** Drawer Base Bottoms , 3/4" X 20 1/4" X 28"
- 4** Drawer Base Backs (Plywood Scraps From Ripping Other Boards) , 3/4" X ~5" X 28"
- 2** Drawer Base Front Rail , 3/4" X 3 1/2" X 28"
- 2** Drawer Base Bottom Molding , 3/4" X 3 1/2" X 29 1/2"
- 2** Drawer Base Top Molding , 3/8" X 3/4" X 29 1/2"
- 2** Art Cubby Sides , 3/4" X 14" X 23 3/4"
- 1** Art Cubby Top , 3/4" X 14 1/2" X 29 1/2"
- 4** Art Cubby Bottom And Shelves , 3/4" X 14" X 28"
- 2** Cabinet W/ Doors Sides , 3/4" X 14" X 23 3/4"
- 1** Cabinet W/ Doors Top , 3/4" X 14 1/2" X 29 1/2"
- 1** Cabinet W/ Doors Bottom , 3/4" X 14" X 28"
- 1** Cabinet W/ Doors Shelf , 3/4" X 13 1/4" X 28"
- 1** Cabinet W/ Doors Small Molding , 3/8" X 3/4" X 29 1/2"
- 1** Art Cubby Small Molding , 3/8" X 3/4" X 29 1/2"
- 1** Art Cubby Back Panel , 1/4" X 24" X 29"
- 1** Cabinet W/ Doors Back Panel , 1/4" X 24" X 29"
- 4** Cabinet W/ Doors Door Frame Top/Bottom , 3/4" X 1 1/2" X 10 13/16"
- 4** Cabinet W/ Doors Door Frame Sides , 3/4" X 1 1/2" X 22"
- 2** Cabinet W/ Doors Door Panel , 1/4" X 11 5/16" X 22 1/2"
- 2** Drawer Base Drawer Fronts , 3/4" X 11 1/4" X 27 3/4"
- 4** Drawer Base Drawer Boxes Front/Back , 1/2" X 10 1/2" X 26"
- 4** Drawer Base Drawer Box Sides , 1/2" X 10 1/2" X 19"
- 2** Drawer Base Drawer Desk Top , 1/2" X 19" X 27"
- 2** Drawer Base Drawer Bottoms , 1/2" X 18" X 26"

Directions


1**Step 1**

We will start off with the Drawer Bases! The cut list is for 2 drawer bases as in the cover photos, if you are only wanting to build one, you will need to adjust the cut list, if you are building both make sure and repeat each step twice!

Attach your sides to your top: pocket holes drilled at $\frac{3}{4}$ " (since our plywood is $\frac{3}{4}$ " thick) and using $1\frac{1}{4}$ " pocket hole screws with some wood glue will get the job done!

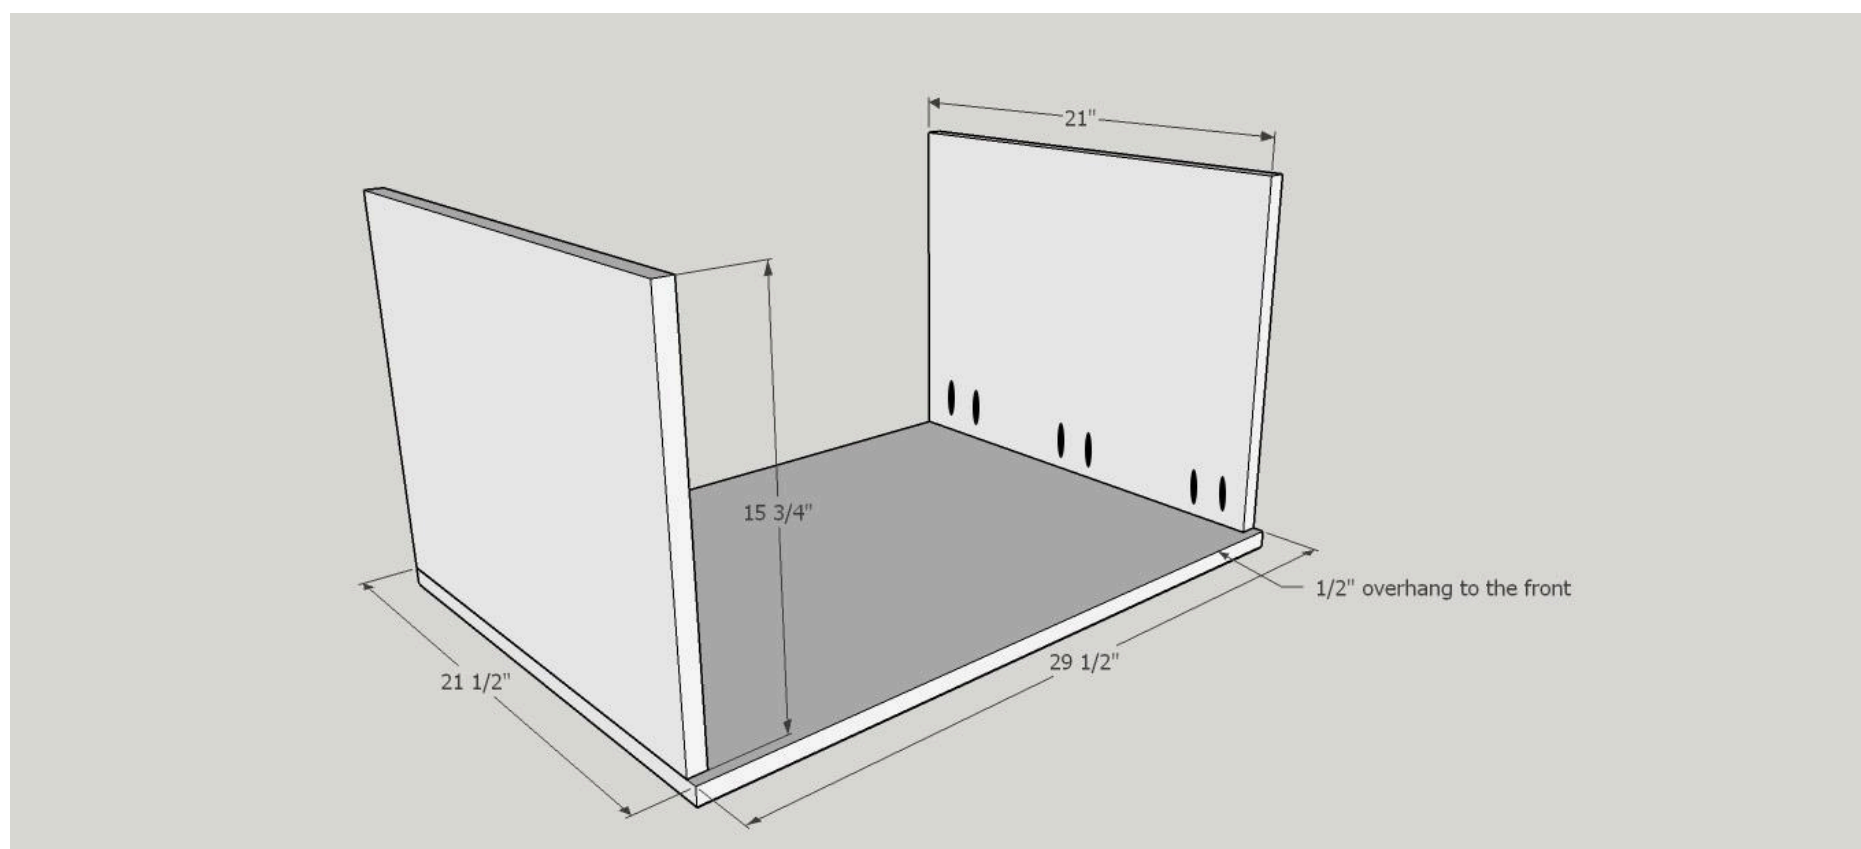
**2****Step 2**

Next add the bottom to the drawer base. It will be flush with the ends of the sides. Drill $\frac{3}{4}$ " pocket holes, and use $1\frac{1}{4}$ " screws with glue!

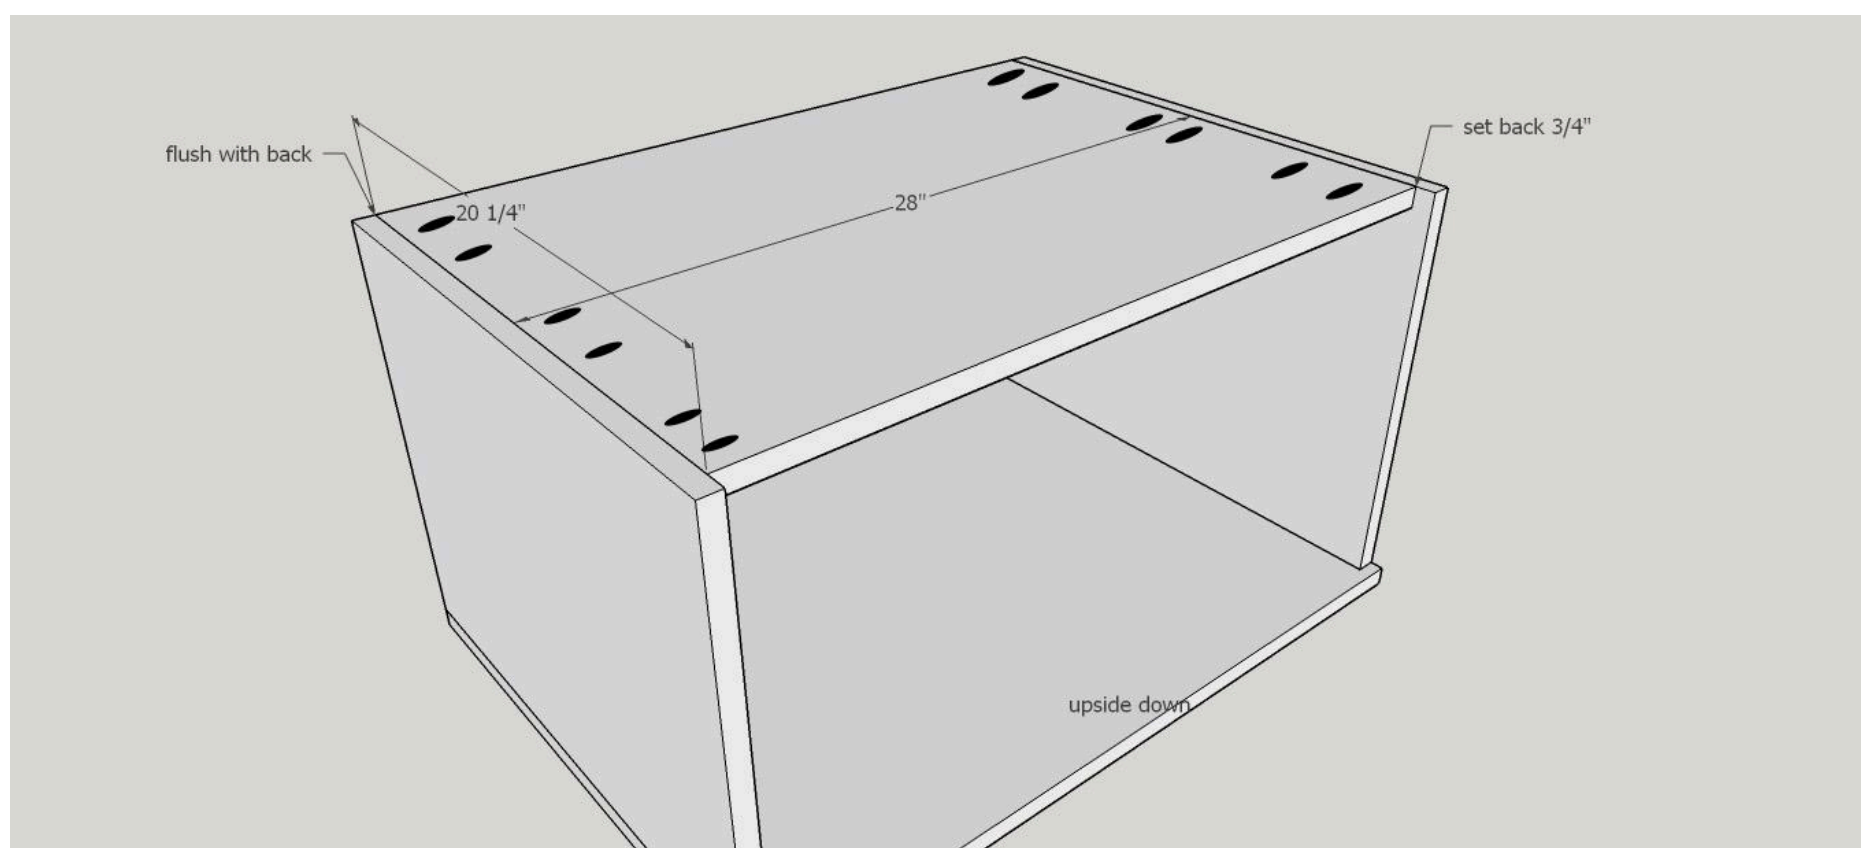


3**Step 3**

Next add the front brace rail, this will be covered up by the molding so you can place your pocket holes to the front! Drill 3/4" pocket holes and use 1 1/4" screws and glue to attach.

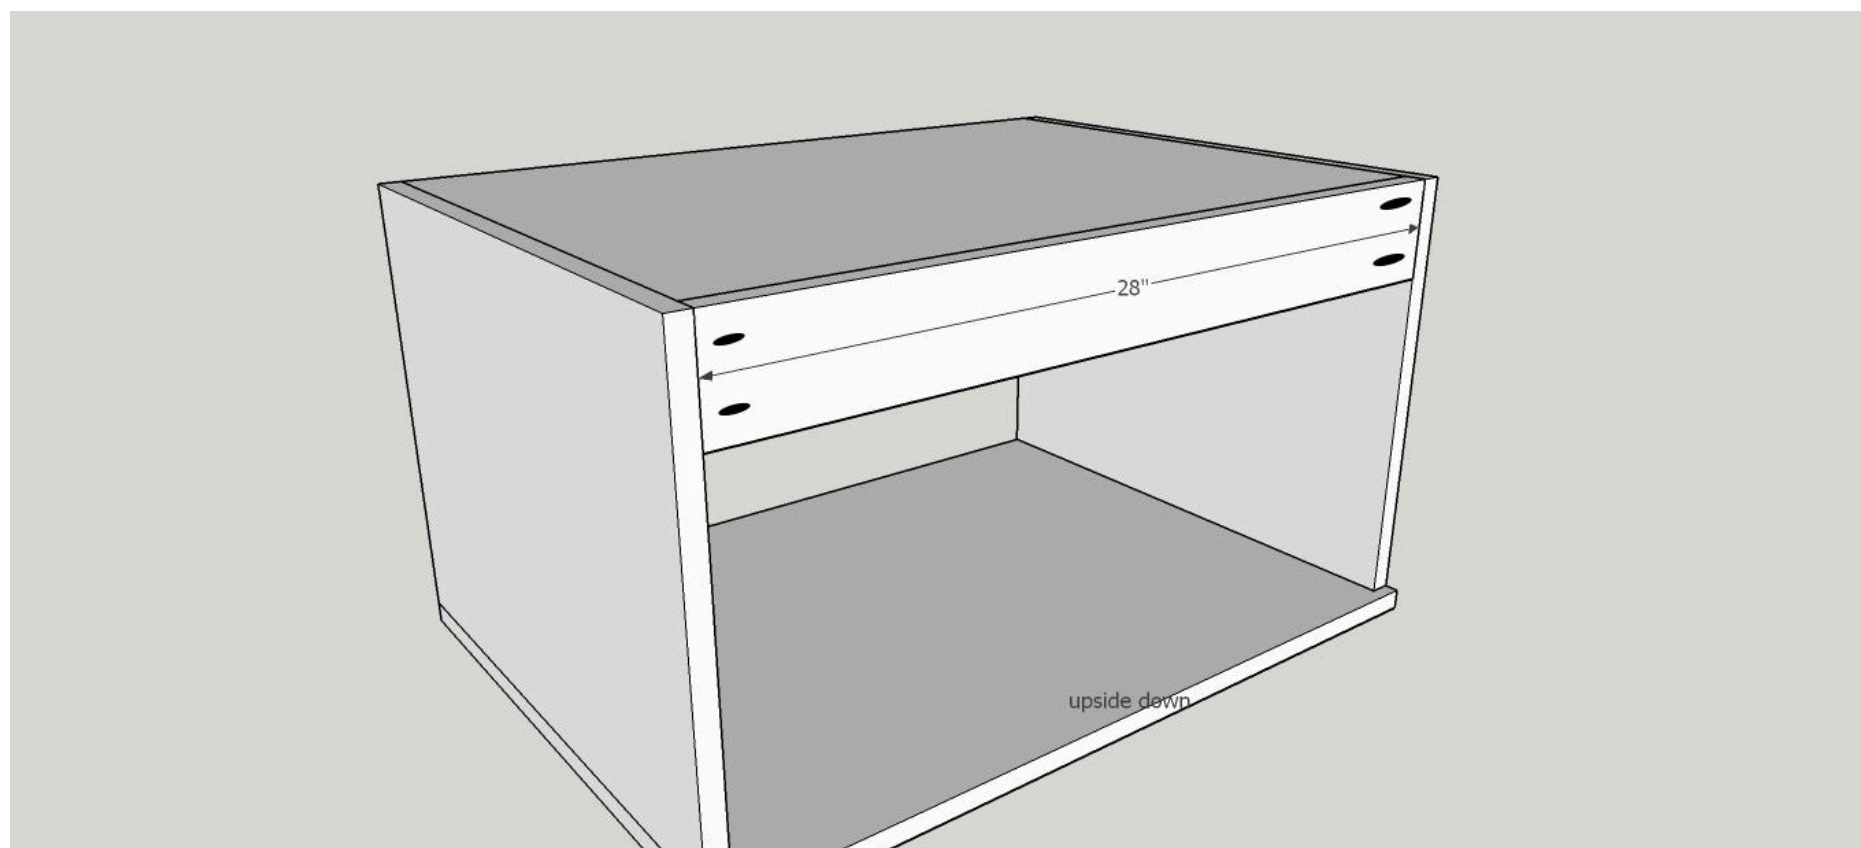
**4****Step 4**

Instead of wasting a solid piece of plywood for the back I used two strips that were left over after ripping down my other pieces, they were roughly 4" - 5" wide and I placed one at the top and one at the bottom and they were pocket holed into the top and bottom boards as well as the sides! Again, using 3/4" pocket holes, 1 1/4" screws and glue to attach!

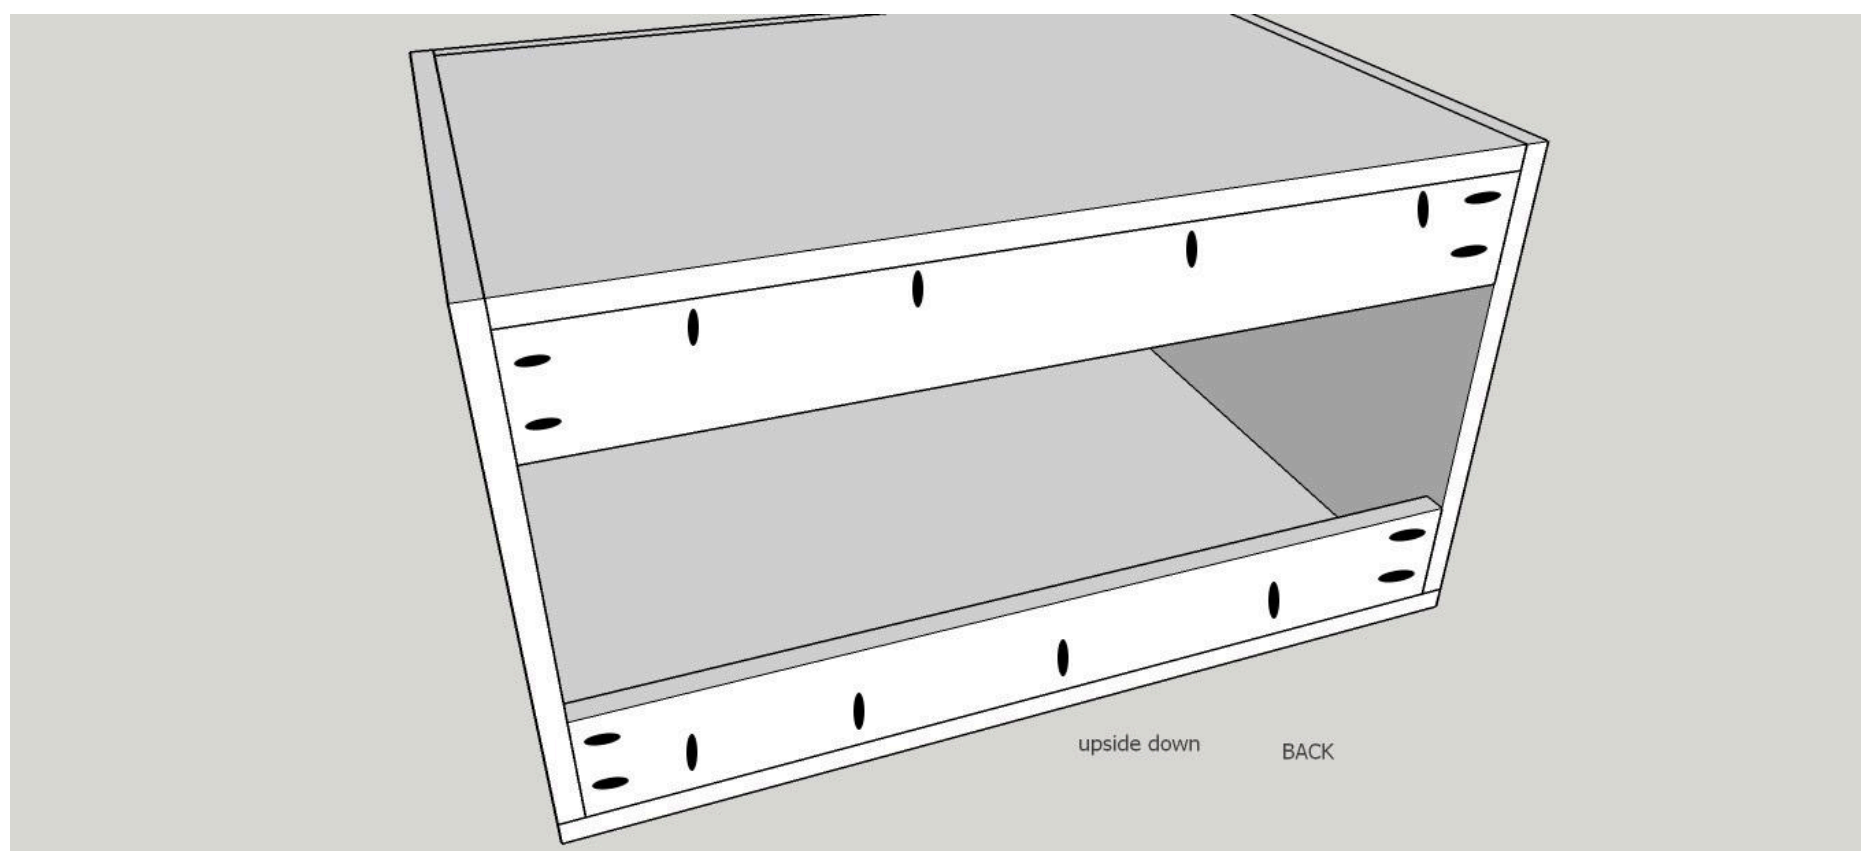


5**Step 5**

Add the bottom molding to the drawer base! I used a 1x4 that I just routed an angled edge onto instead of buying molding! I just glued and brad nailed it into place with 1 1/4" brad nails!

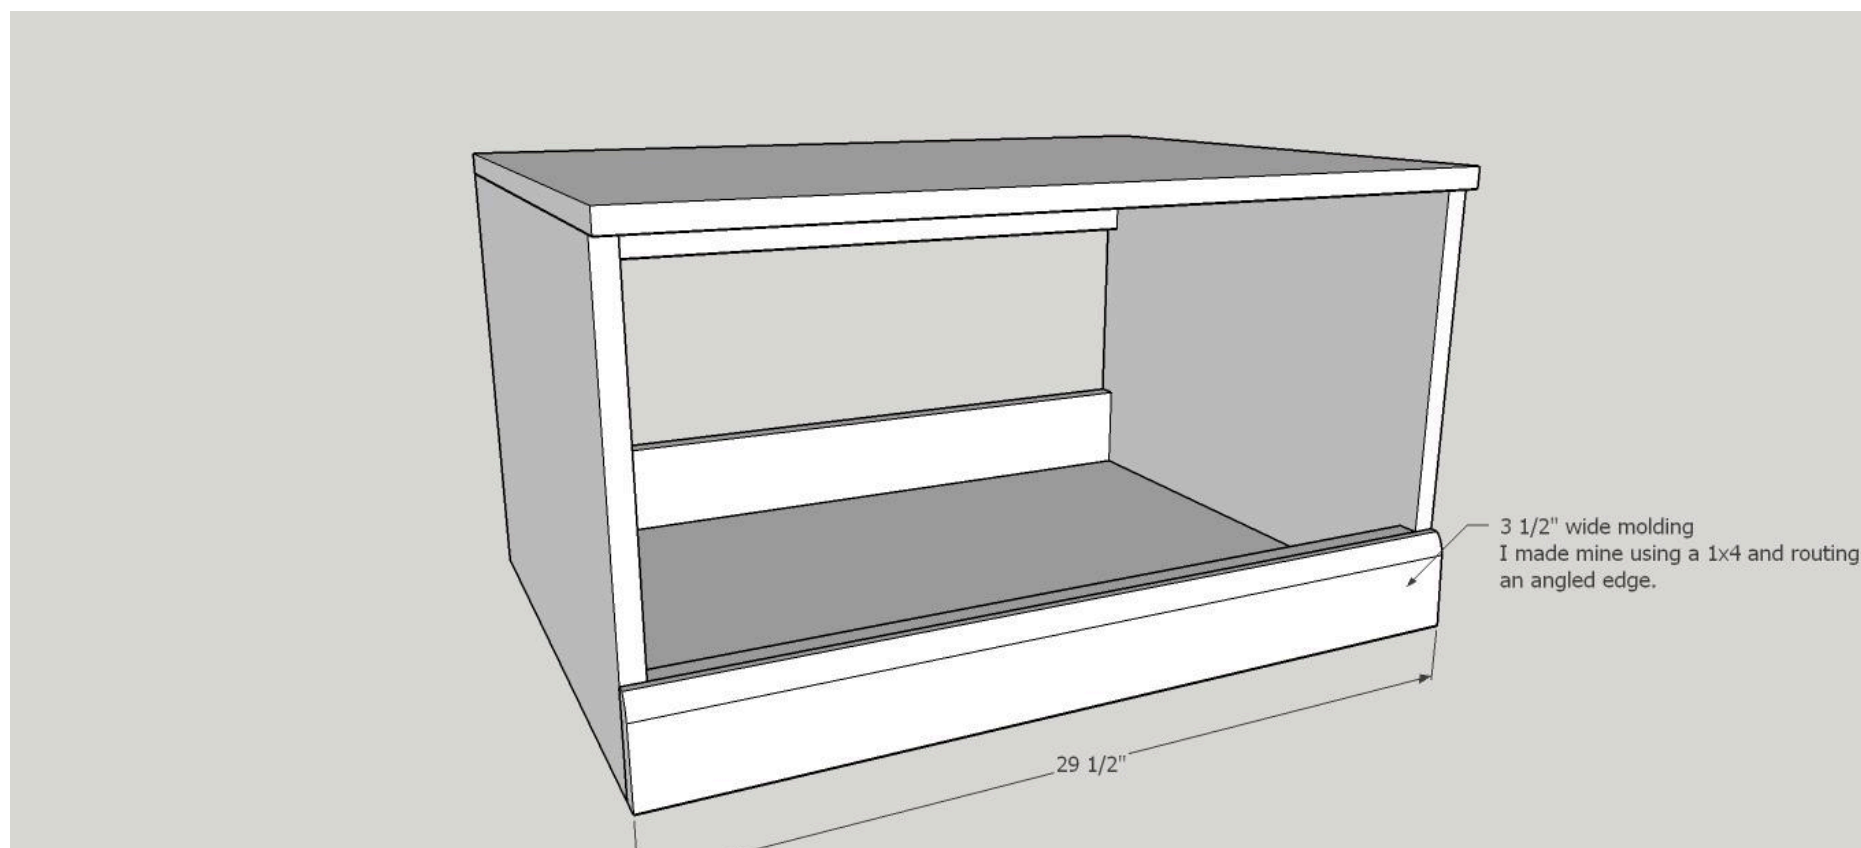**6****Step 6**


Next I added the small little molding at the top, just to give it a little character! I again used wood glue and 1 1/4" brad nails to attach!

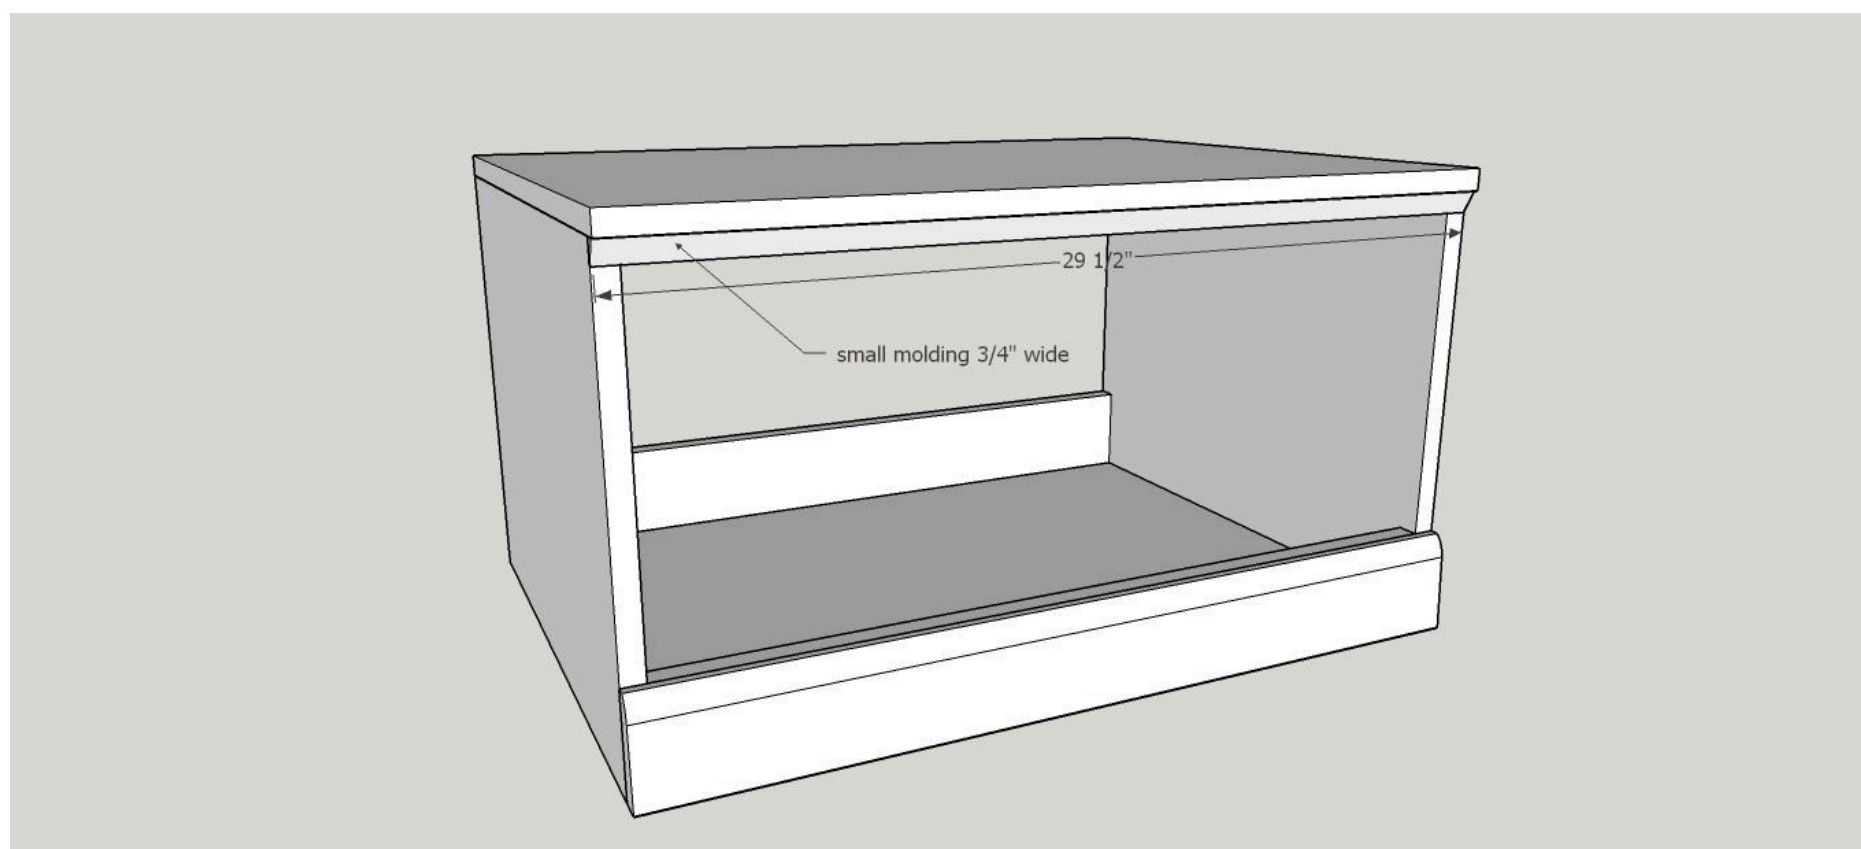

7

Step 7


The carcass for the drawer base is built, now we need the drawer! Using 1/2" plywood to lighten the load, we will now use pocket holes drilled at 1/2" and use 1" pocket hole screws and glue to attach!

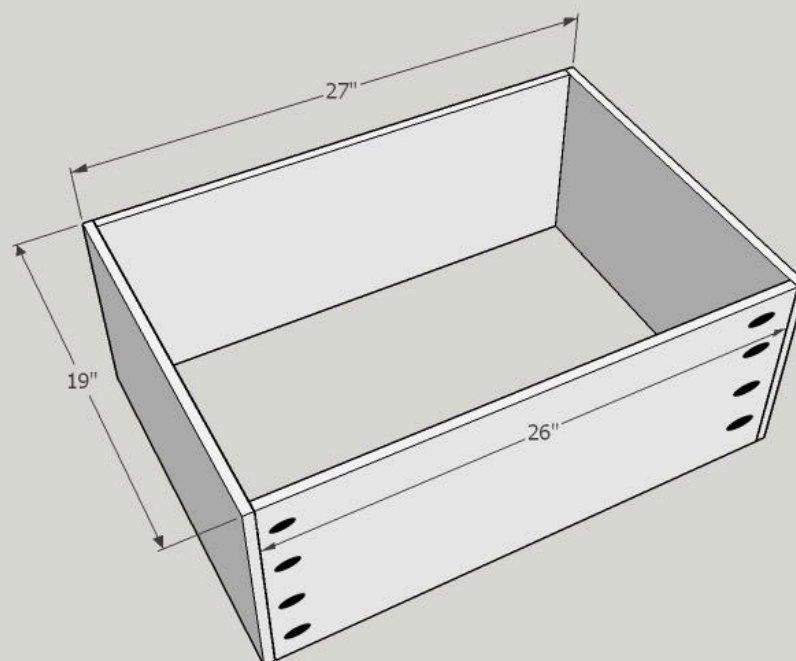

8

Step 8


I fit the drawer bottom inside the drawer box to help keep it sturdy! 1/2" pocket holes all around and 1" screws with glue to attach!

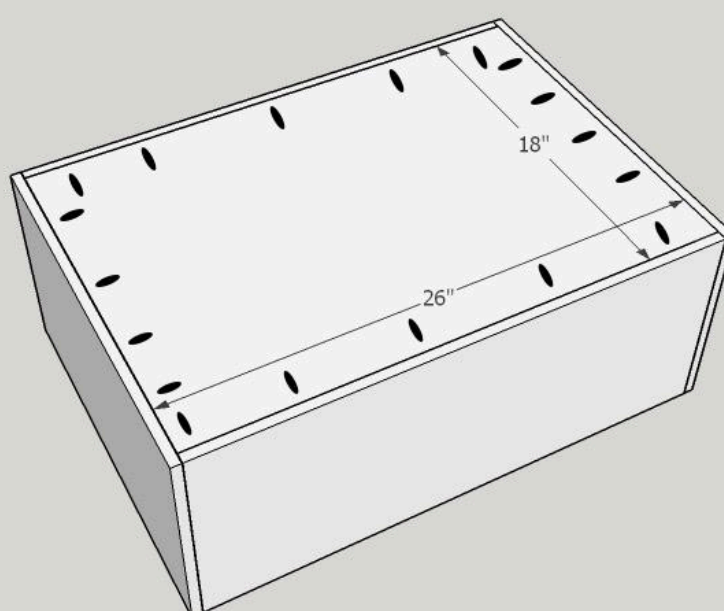

9

Step 9


My kids love to sit on the floor while doing their homework, so I added a lift-able lid to the drawer to create a desk surface for them to write on! I just attached it with 3" utility hinges on the back so we can still use the drawer for storage!

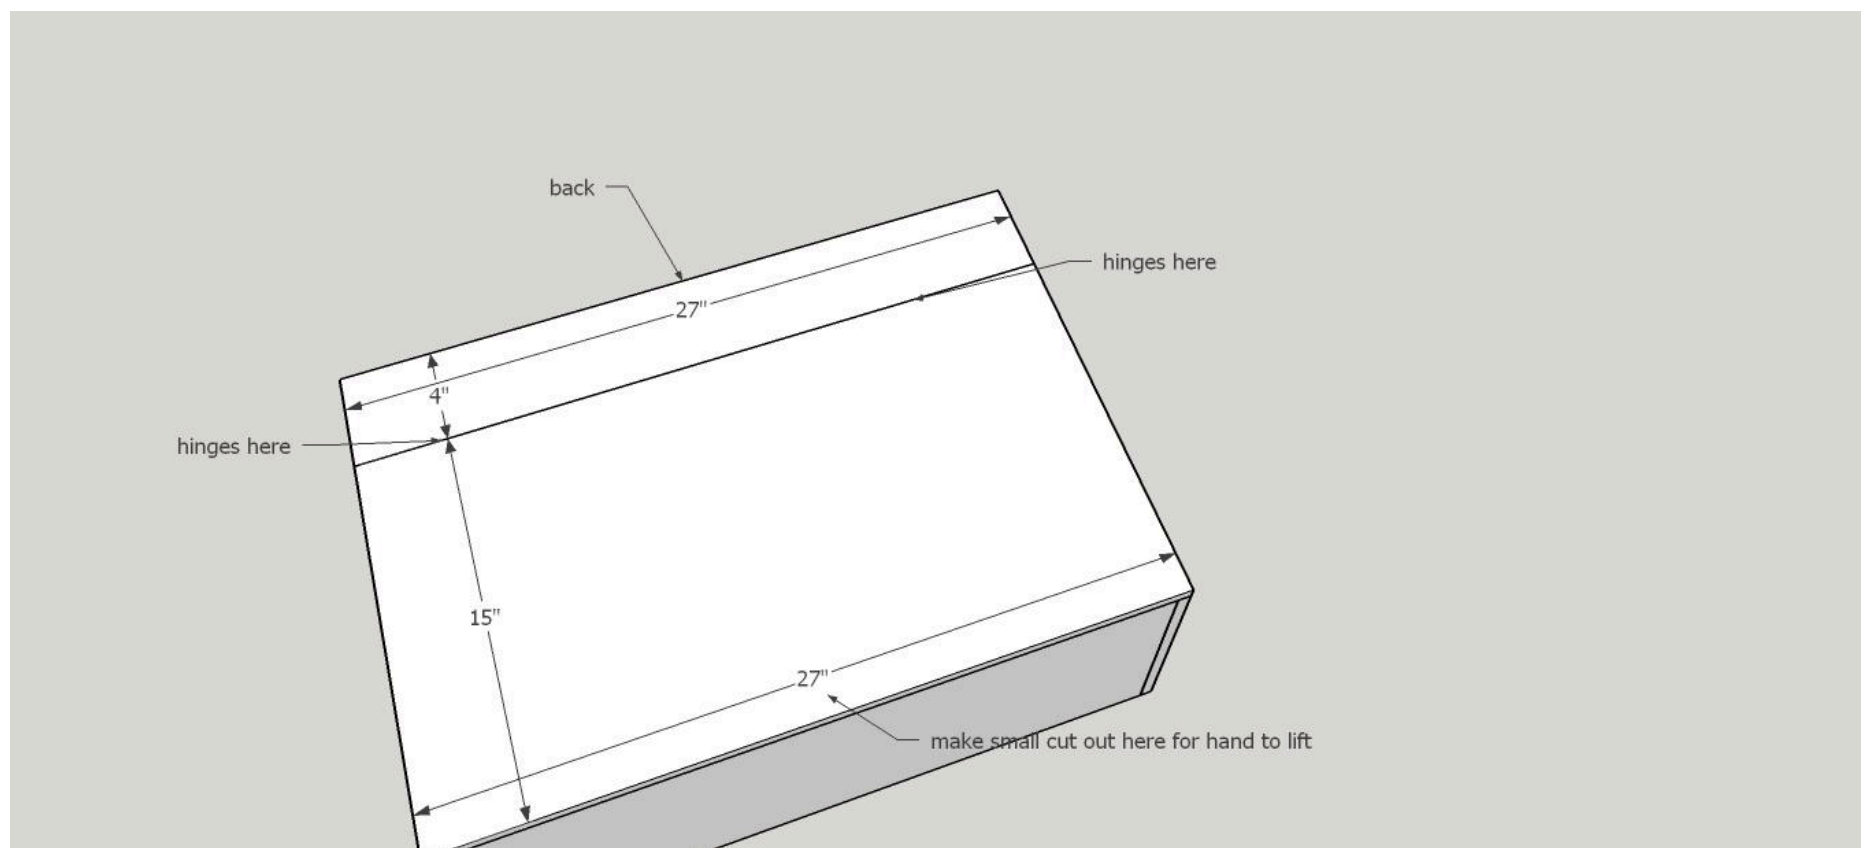

10

Step 10


You can do drawers so many ways, I like to add the drawer face after I have installed the drawer. Using 18" drawer slides I attached the drawer and then centered the drawer face and glued and brad nailed the drawer front! After adding your hardware of choice, the drawer base is complete!

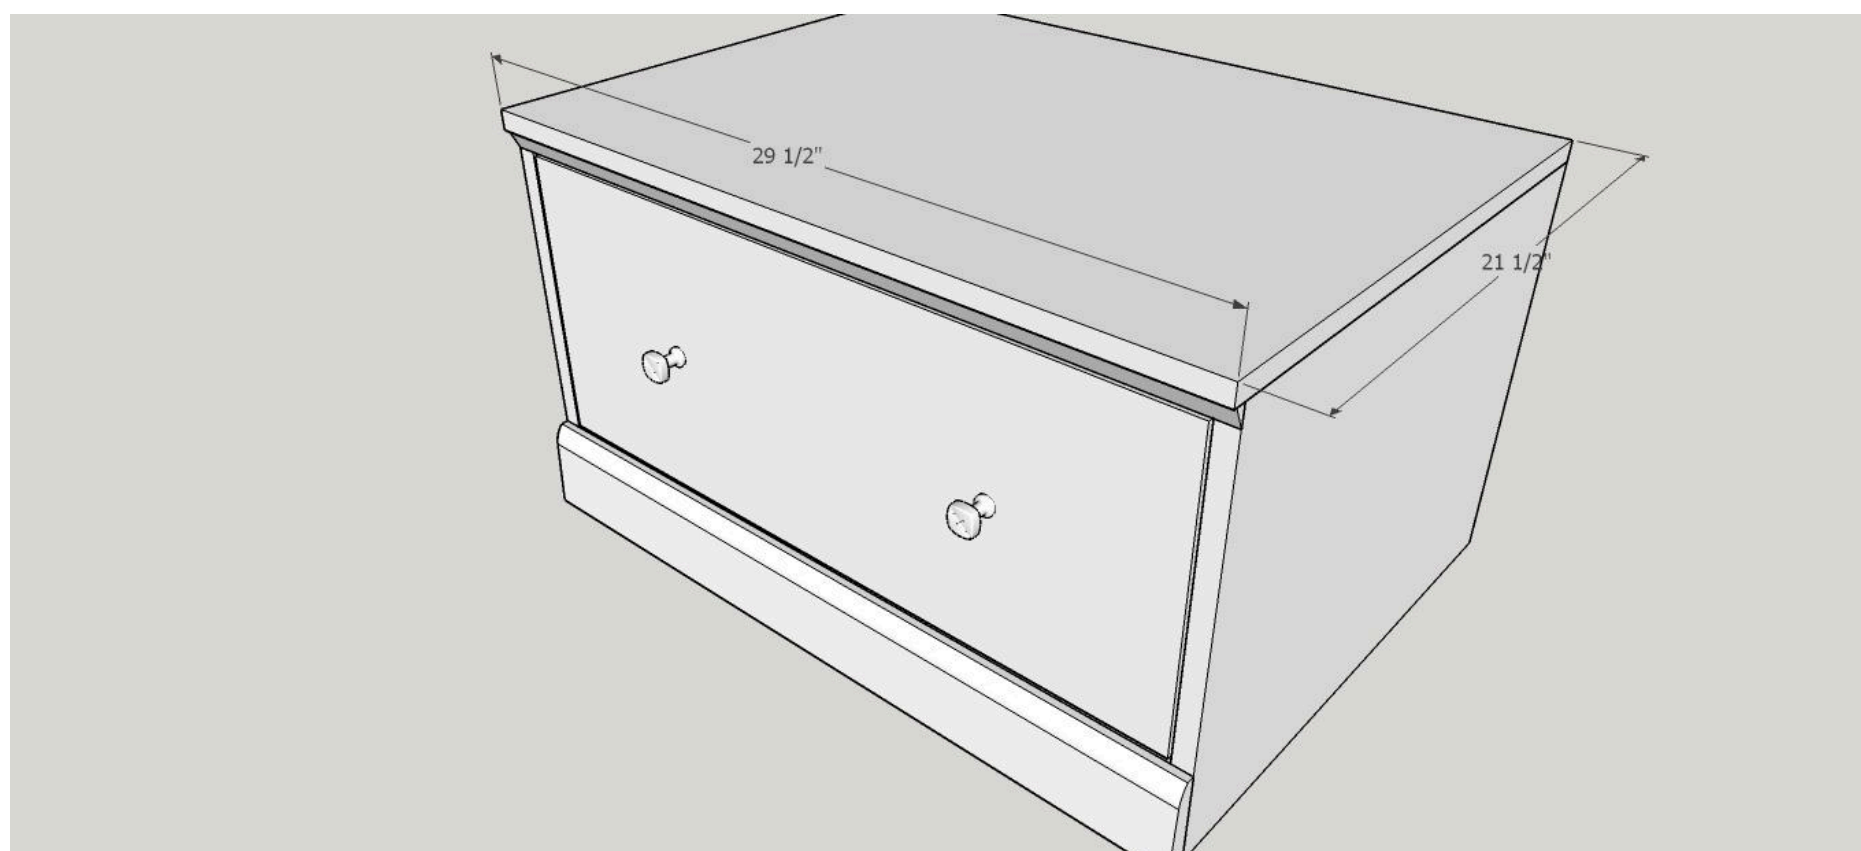


11
Step 11

Art Cubby:

Starting out the same way we did the drawer base, attach the sides to the top with 3/4" pocket holes and 1 1/4" screws!

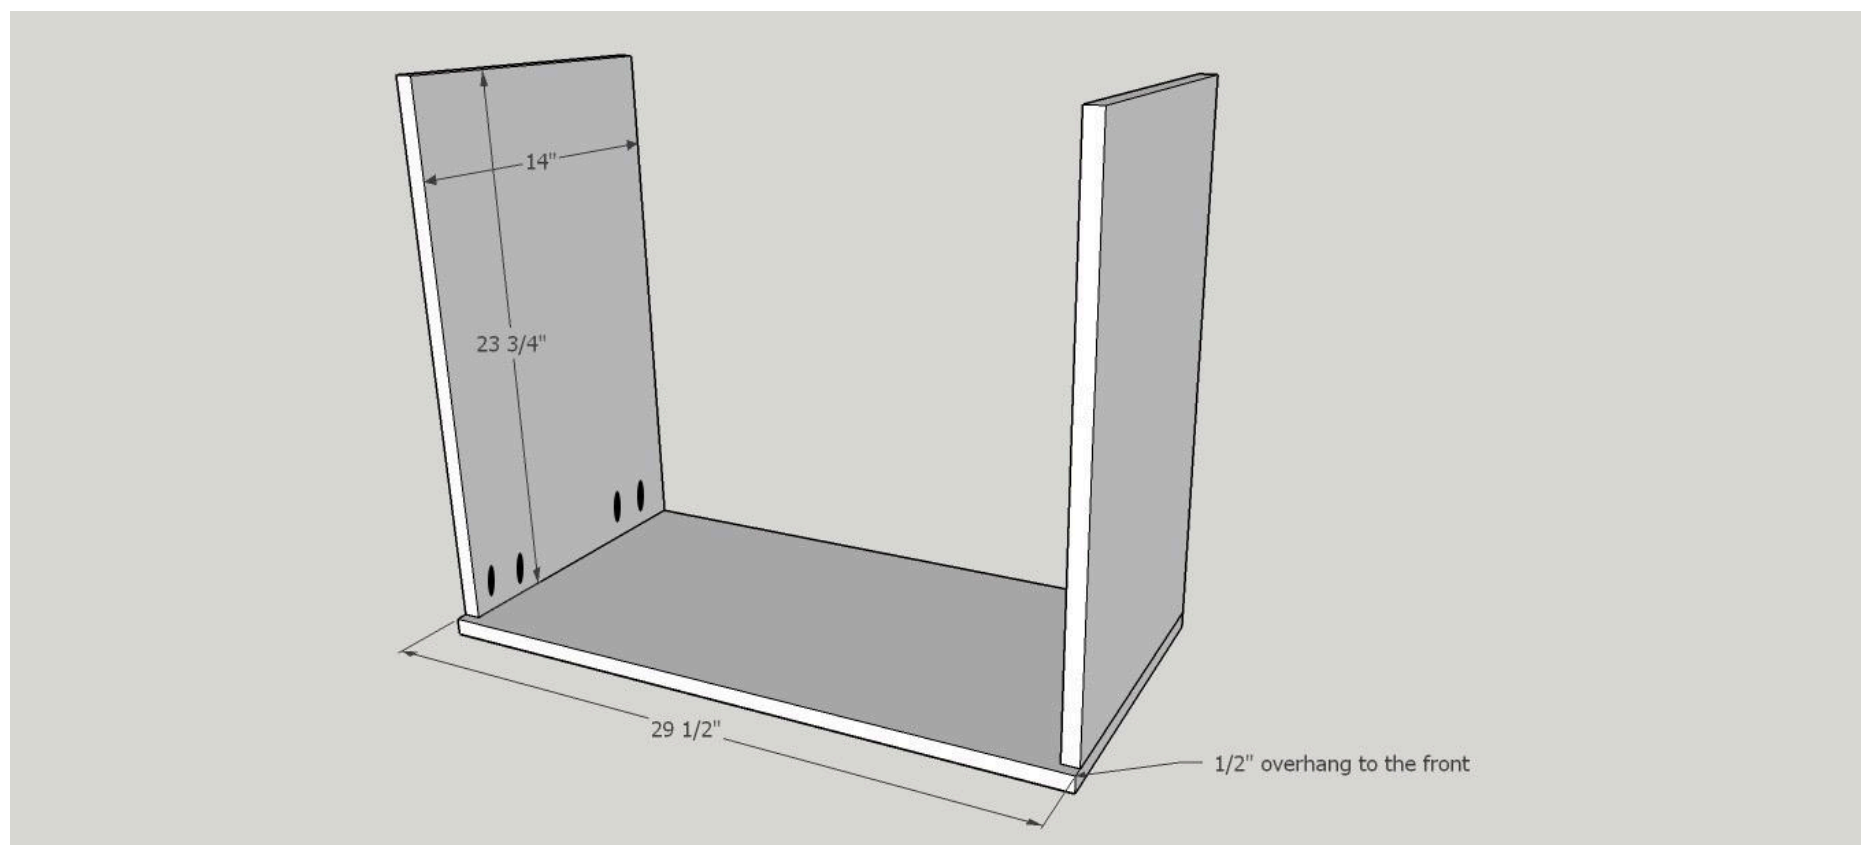
12
Step 12


Add the first shelf 11" from the top of the cubby. Using 3/4" pocket holes, 1 1/4" screws and wood glue.

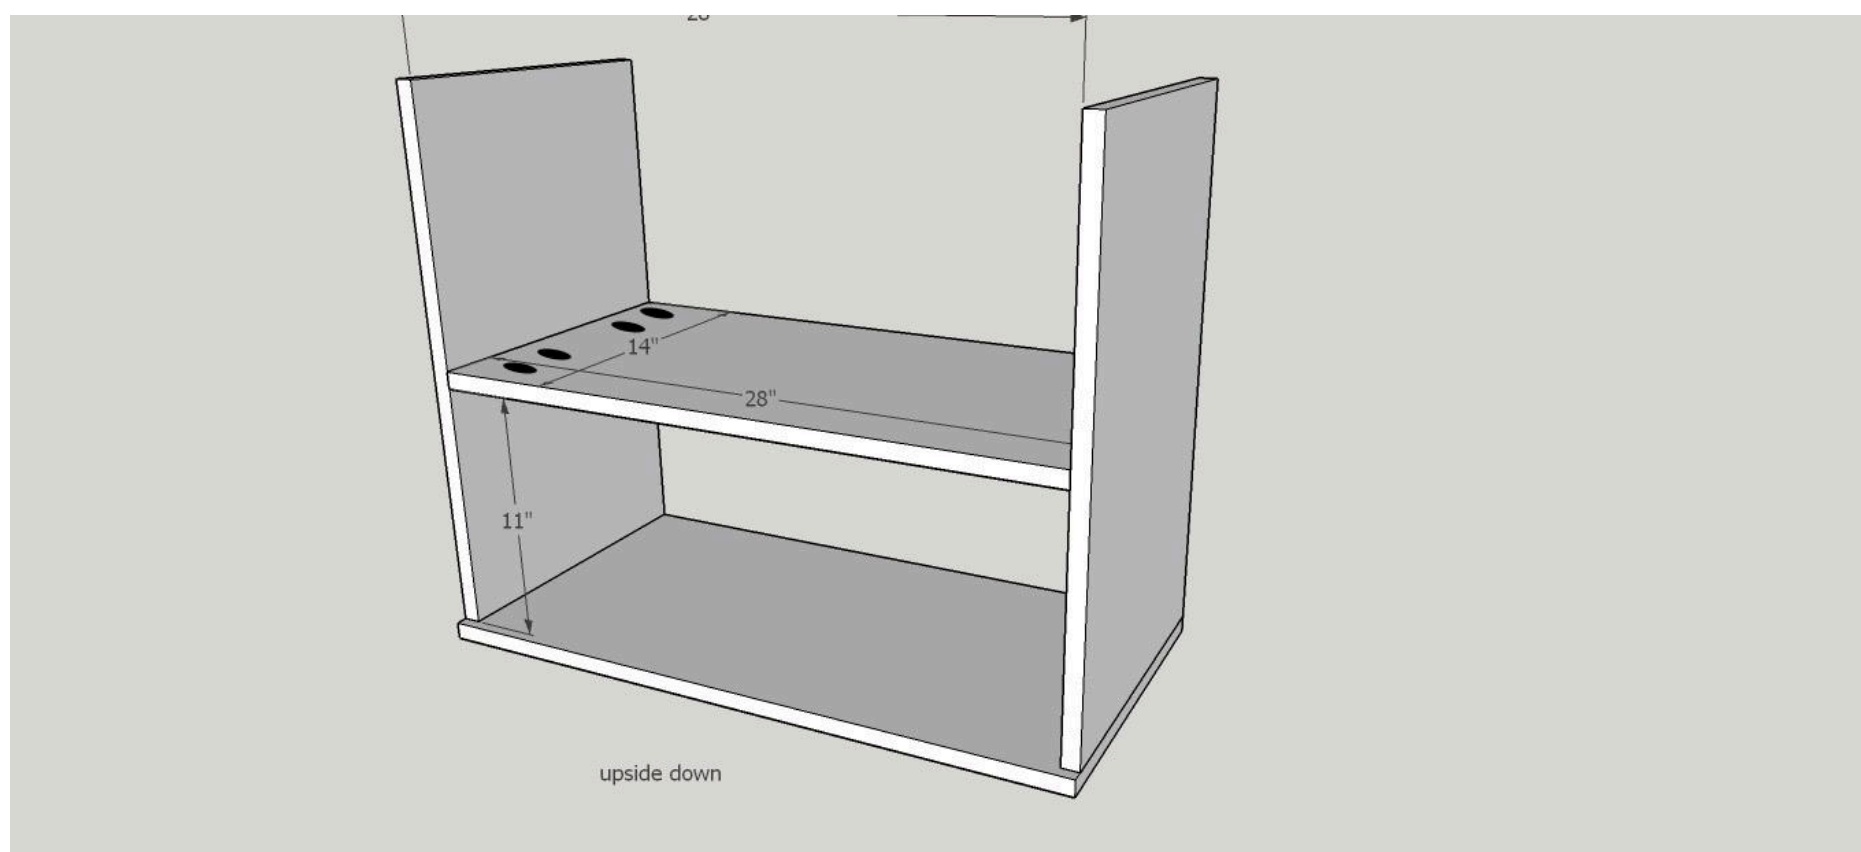

13

Step 13


On the art cubby I did go ahead and paint the other shelves at this point before I attached them. I was worried there would be no way to paint them once they were in, there is only $3\frac{1}{4}$ " between them!! Once they were painted I attached them with $\frac{3}{4}$ " pocket holes and $1\frac{1}{4}$ " screws! You could use a shelf pin jog here though and create removable shelves that could be any height you want...and I'm upset that I didn't do that now! Lol!! The bottom is flush the ends of the side boards.

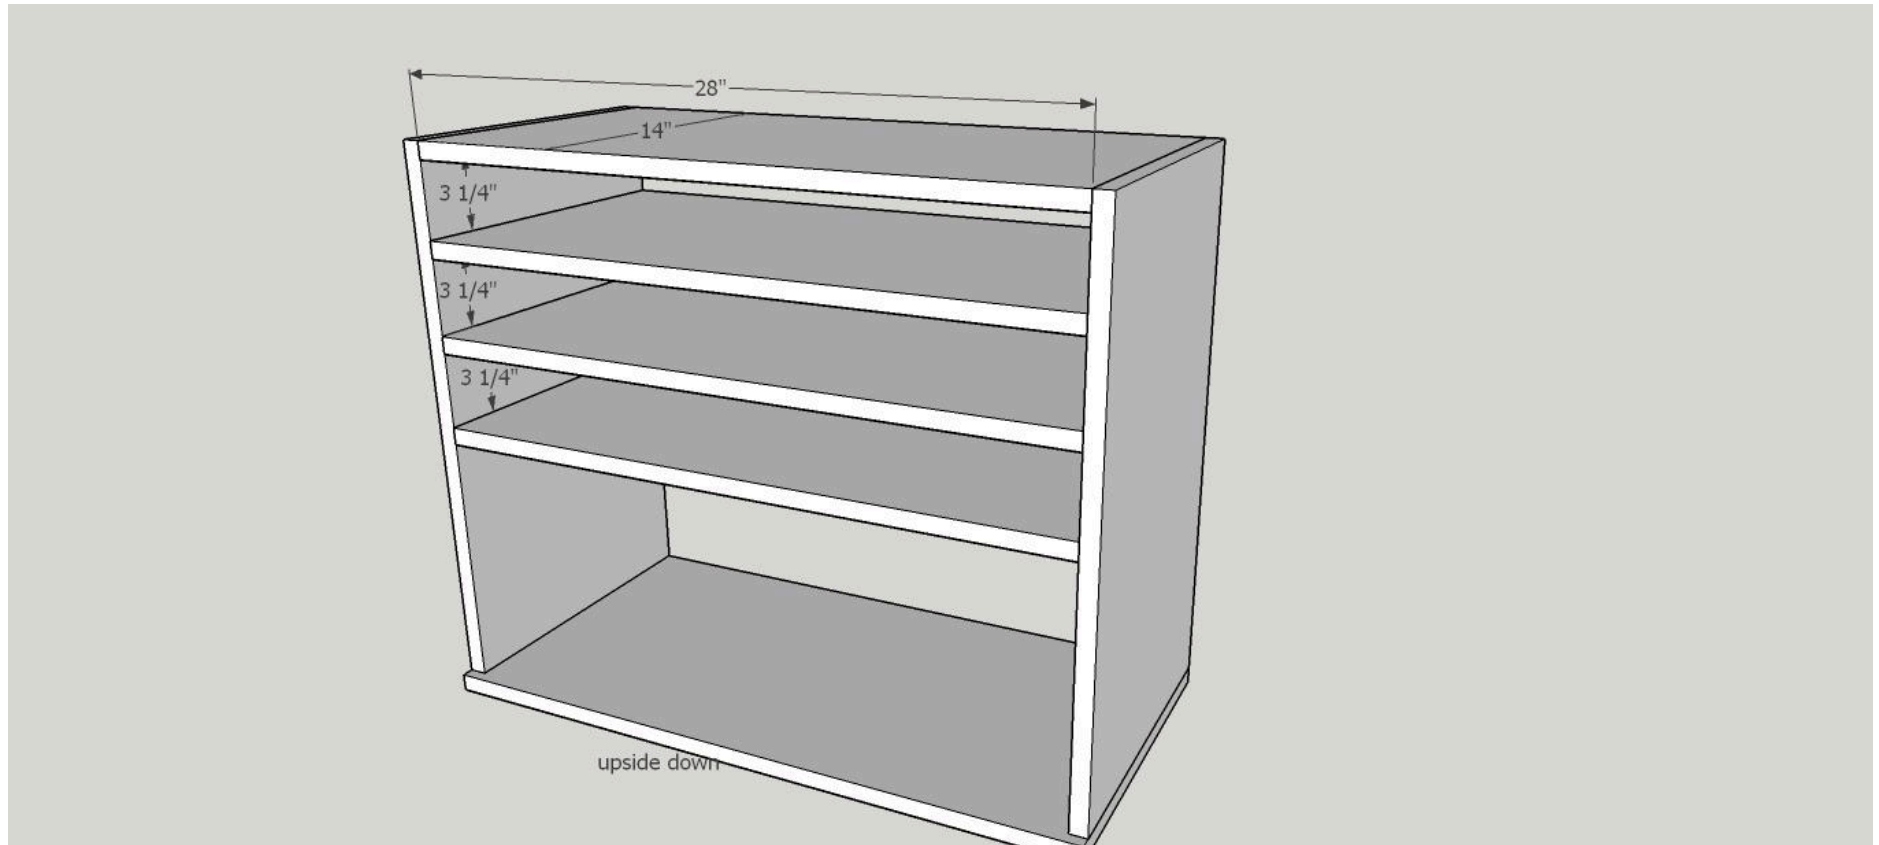

14

Step 14


Last add that little touch of charm with the small molding and the art cubby is almost ready to go!

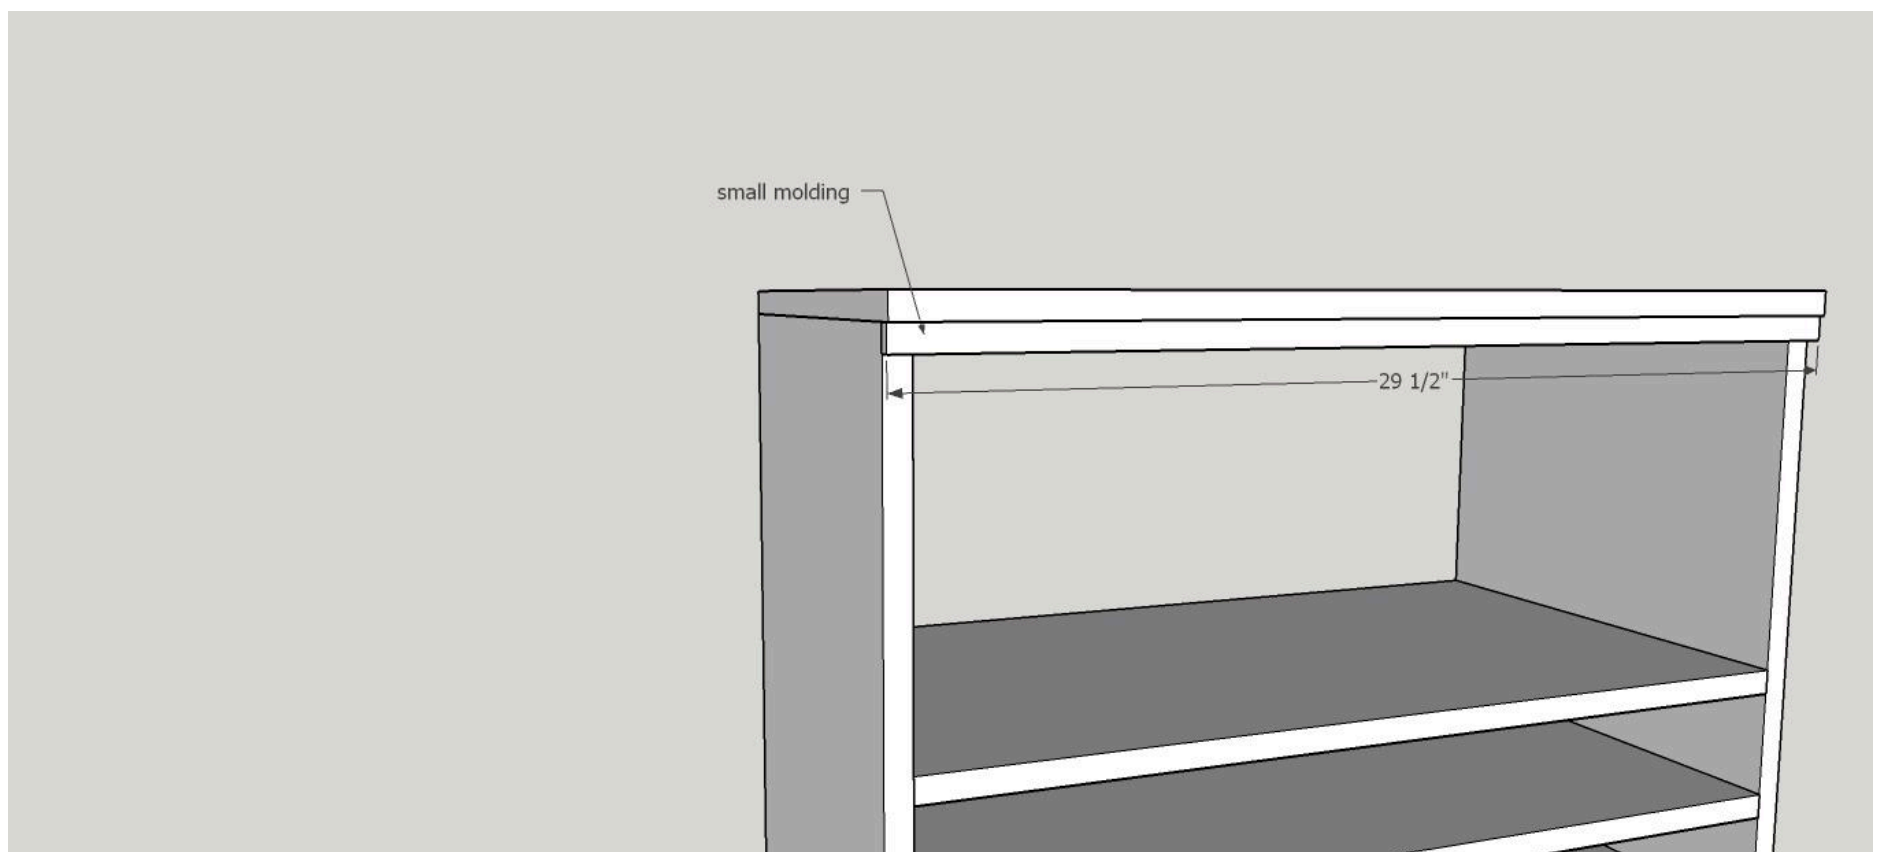

15

Step 15

Last add the 1/4" plywood to the back of the shelf! I just brad nailed mine with 1 1/4" brad nails.

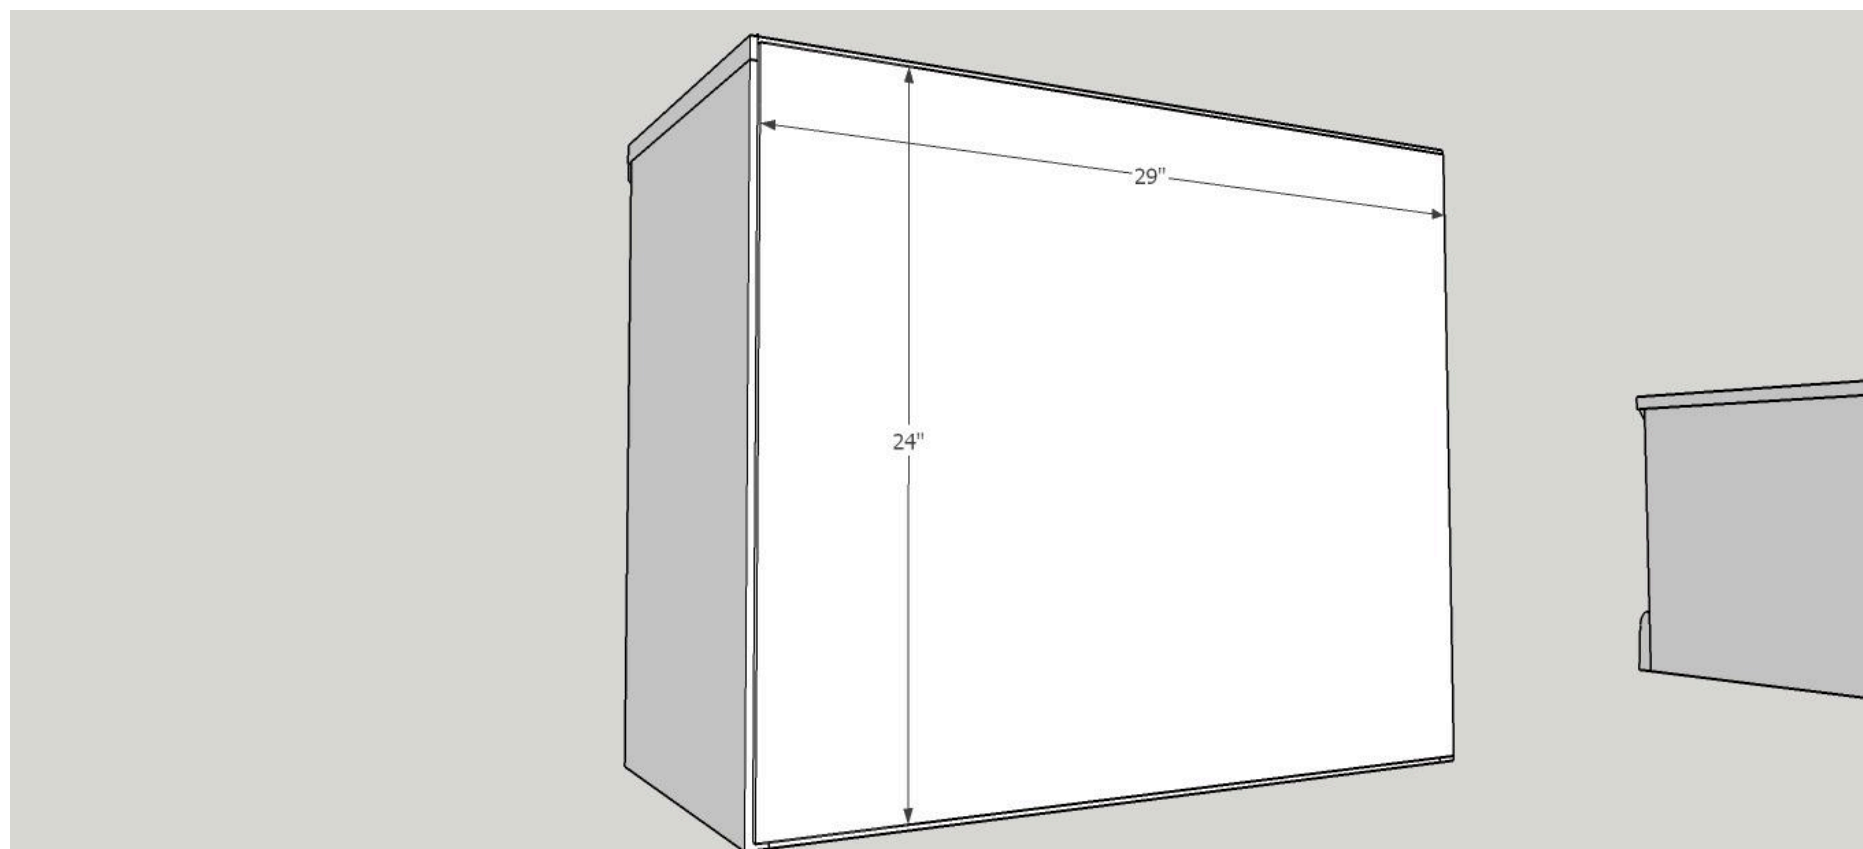


16

Step 16


Cabinet w/ Doors:

This one starts out the same as all the others! Using 3/4" pocket holes attach the sides to the top with 1 1/4" screws and glue!

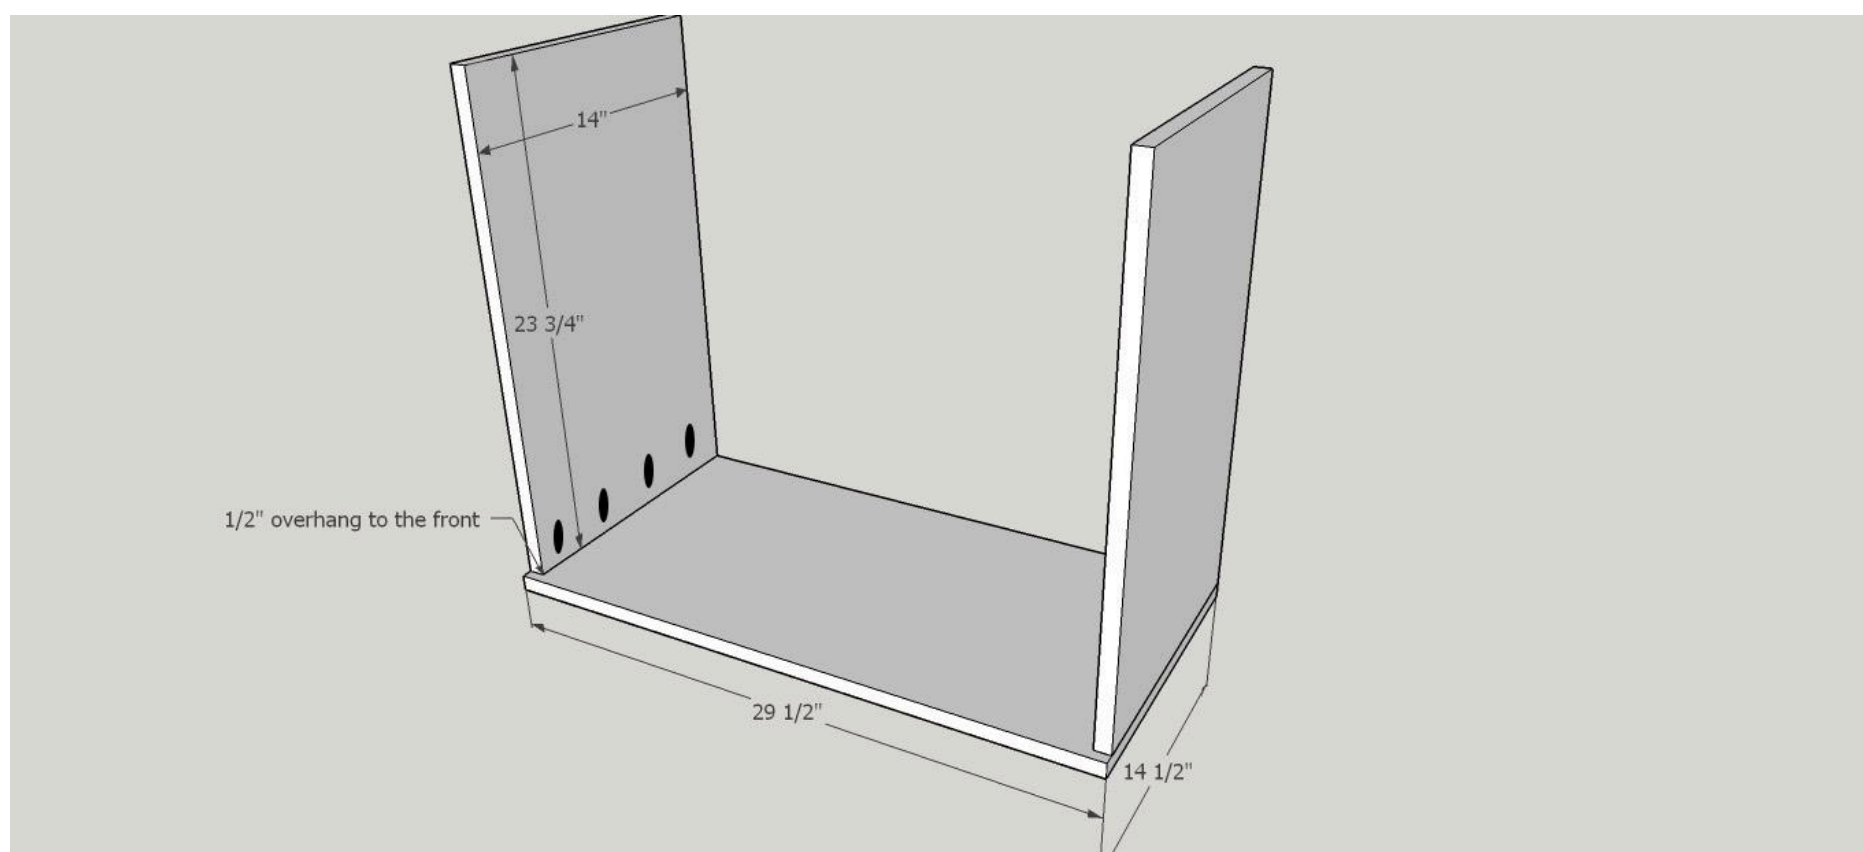


17**Step 17**

Add the shelf 11" from the top! 3/4" pocket holes, 1 1/4" screws with glue...unless you are smart and use the shelf pin jig and then you can have your shelf wherever you want it!!

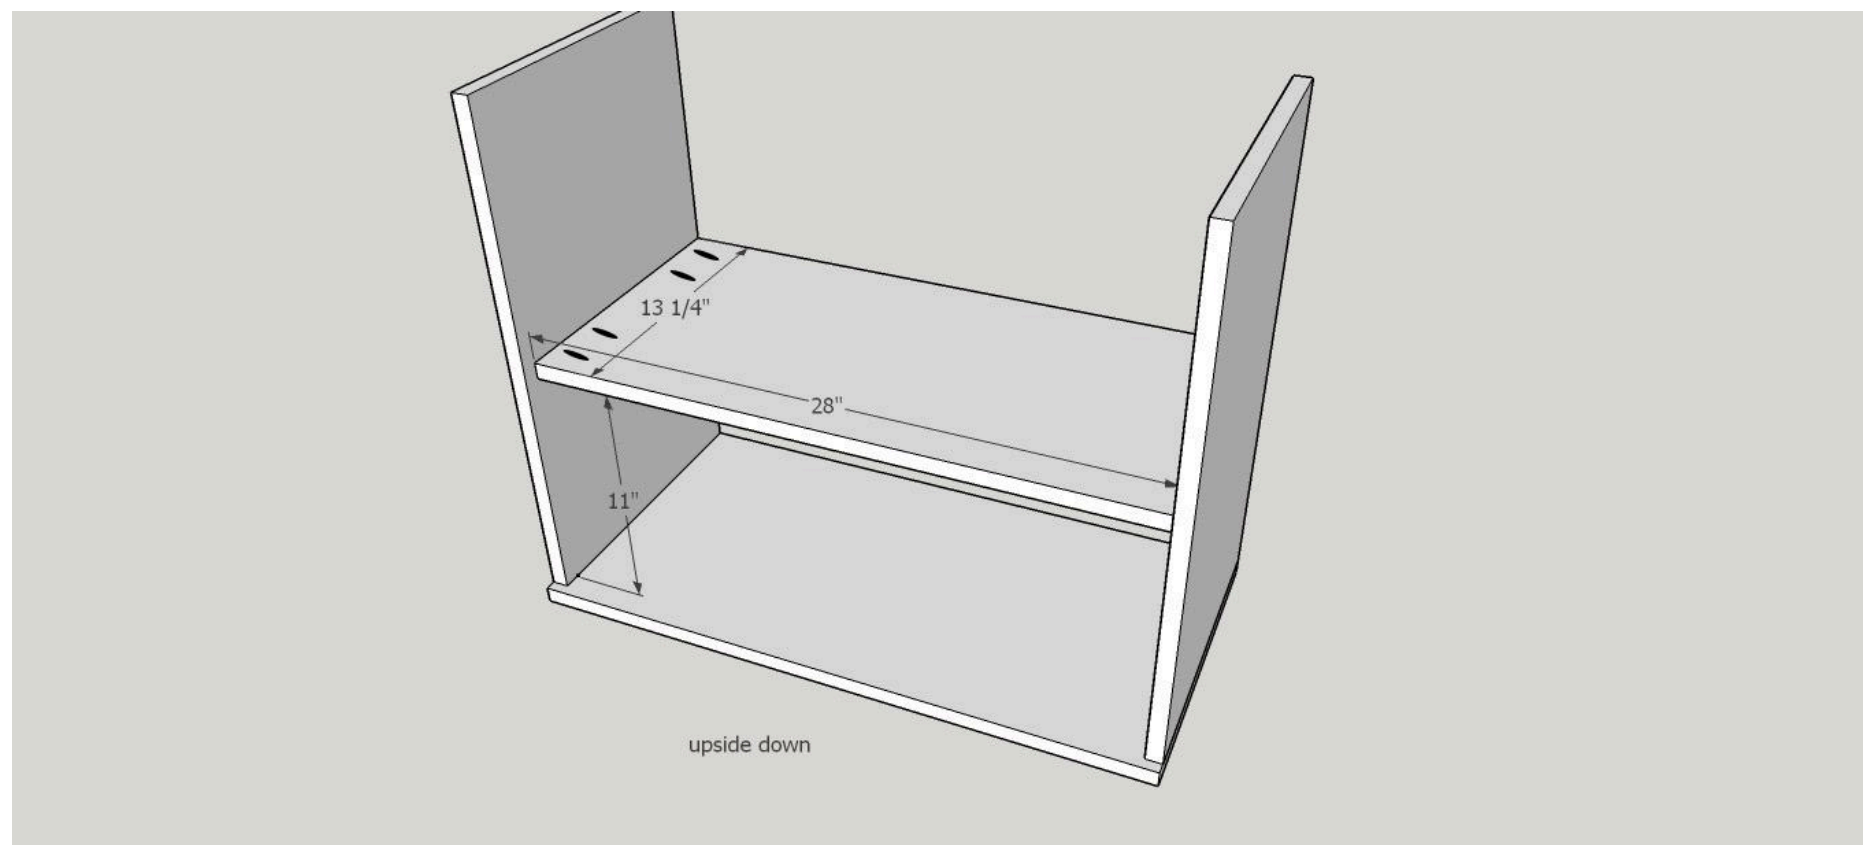
**18****Step 18**

Next attach the bottom with 3/4" pocket holes and 1 1/4" screws and glue. The bottom is flush with the bottom of the sides!

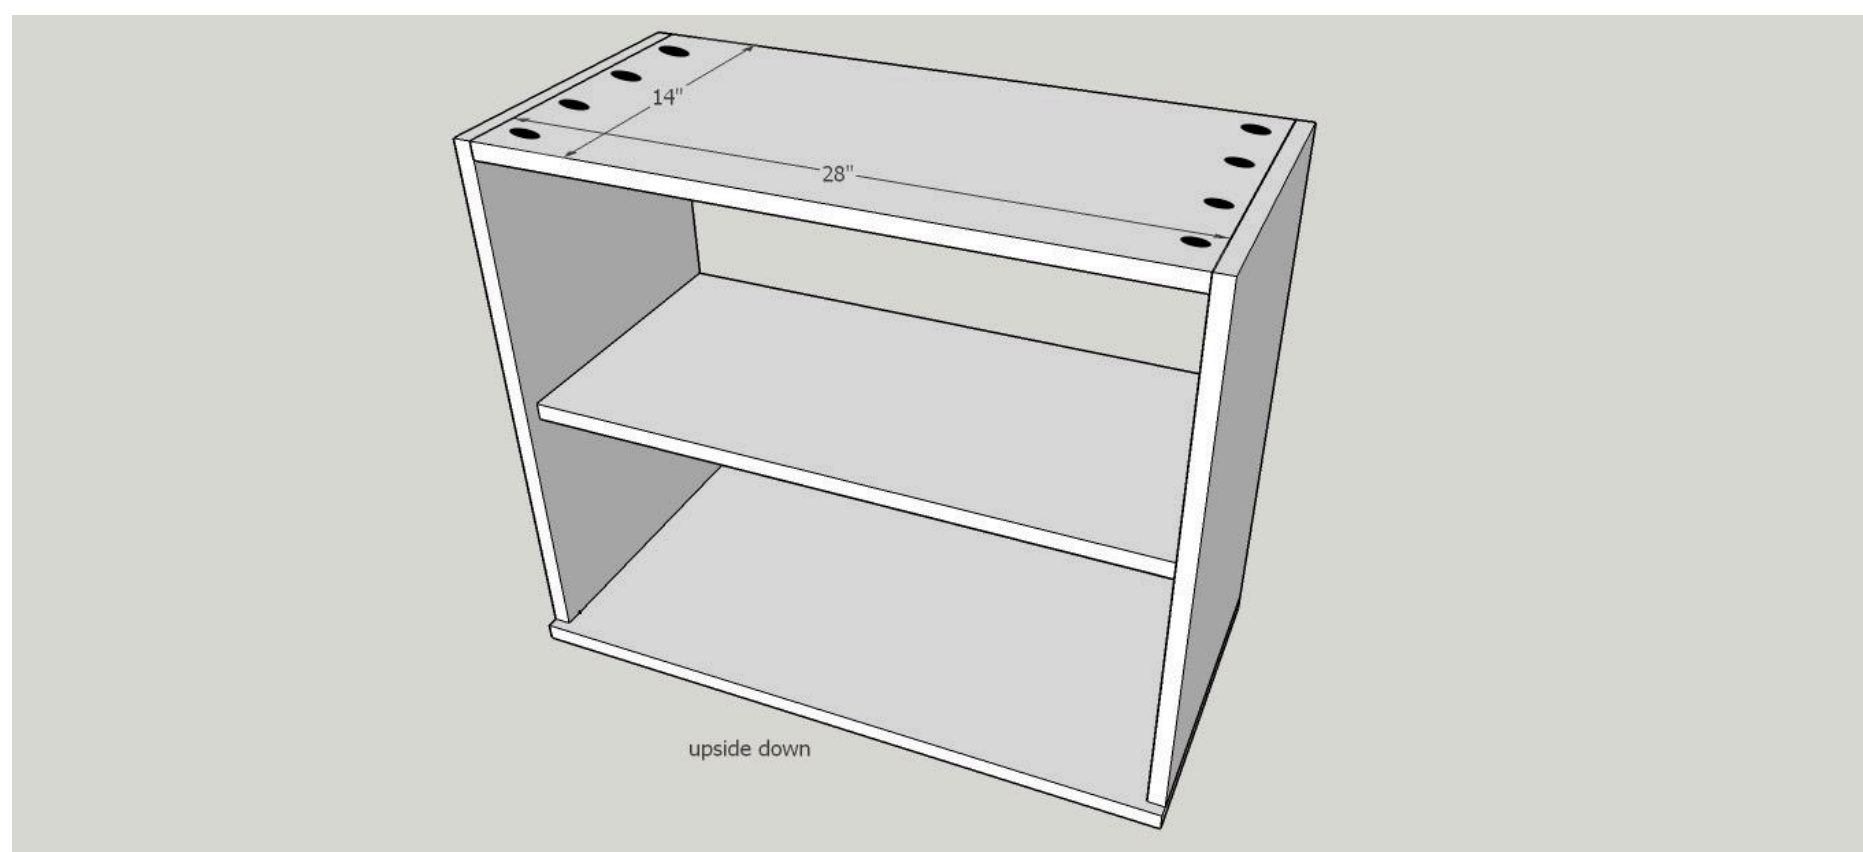


19**Step 19**

Next add that little character with the small molding, just brad nail it on there!

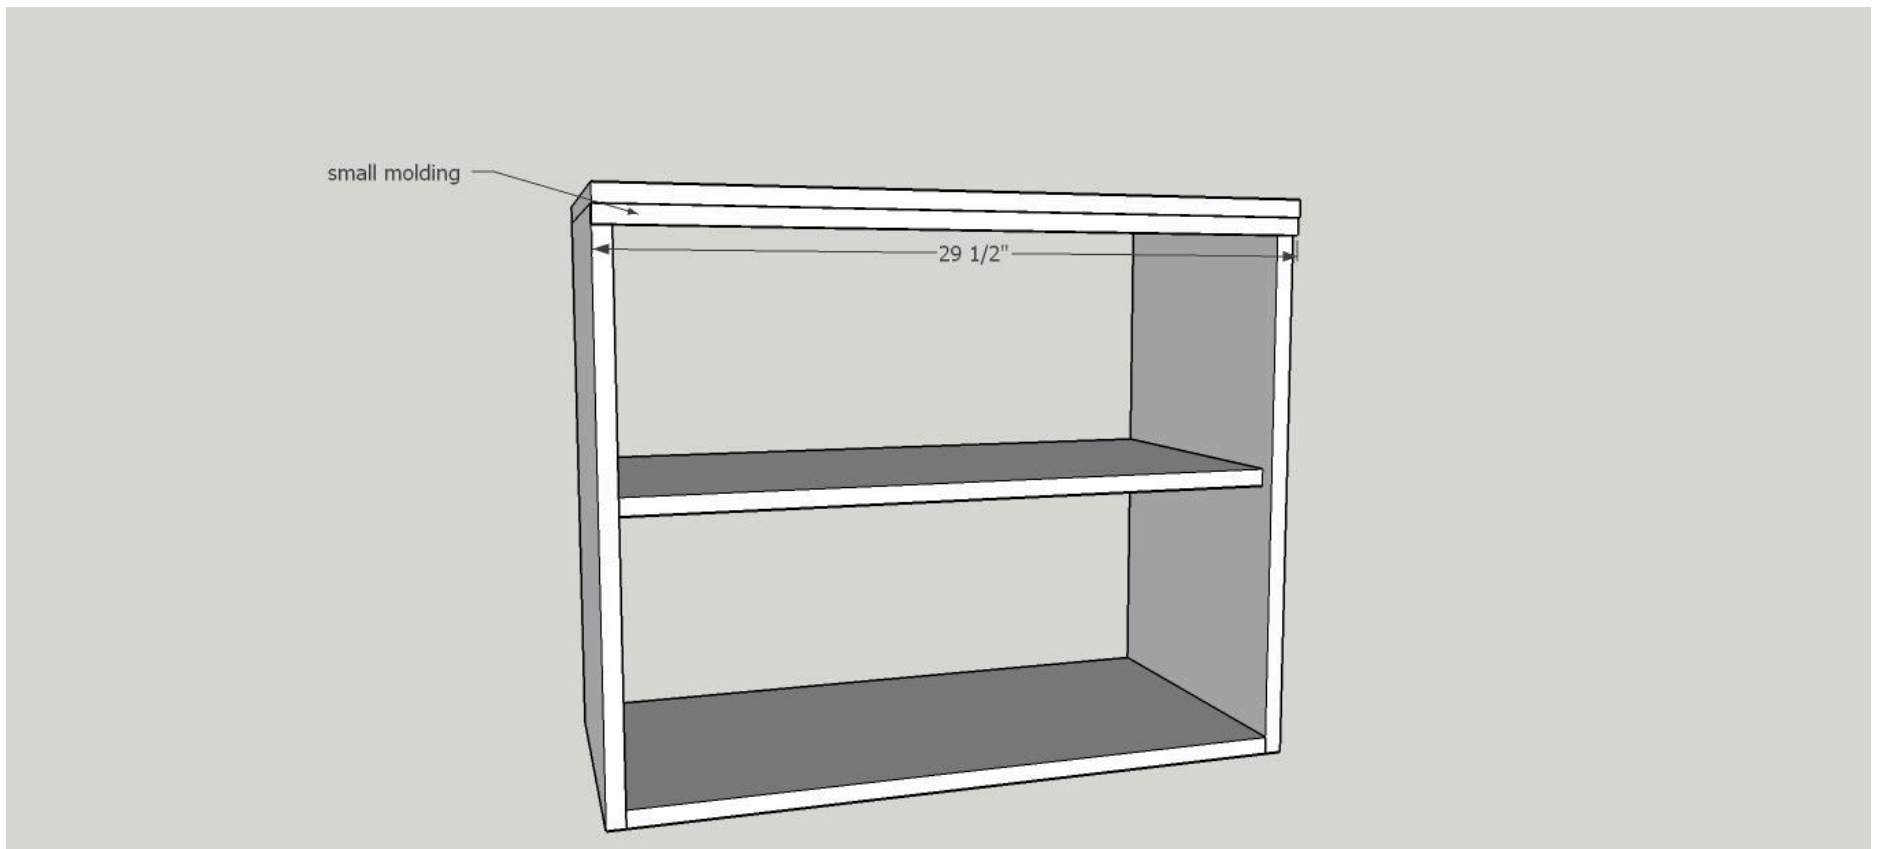
**20****Step 20**

Next comes the doors for the cabinet! Using 1x2s pocket holed together with $\frac{3}{4}"$ holes and $1 \frac{1}{4}"$ screws with glue.

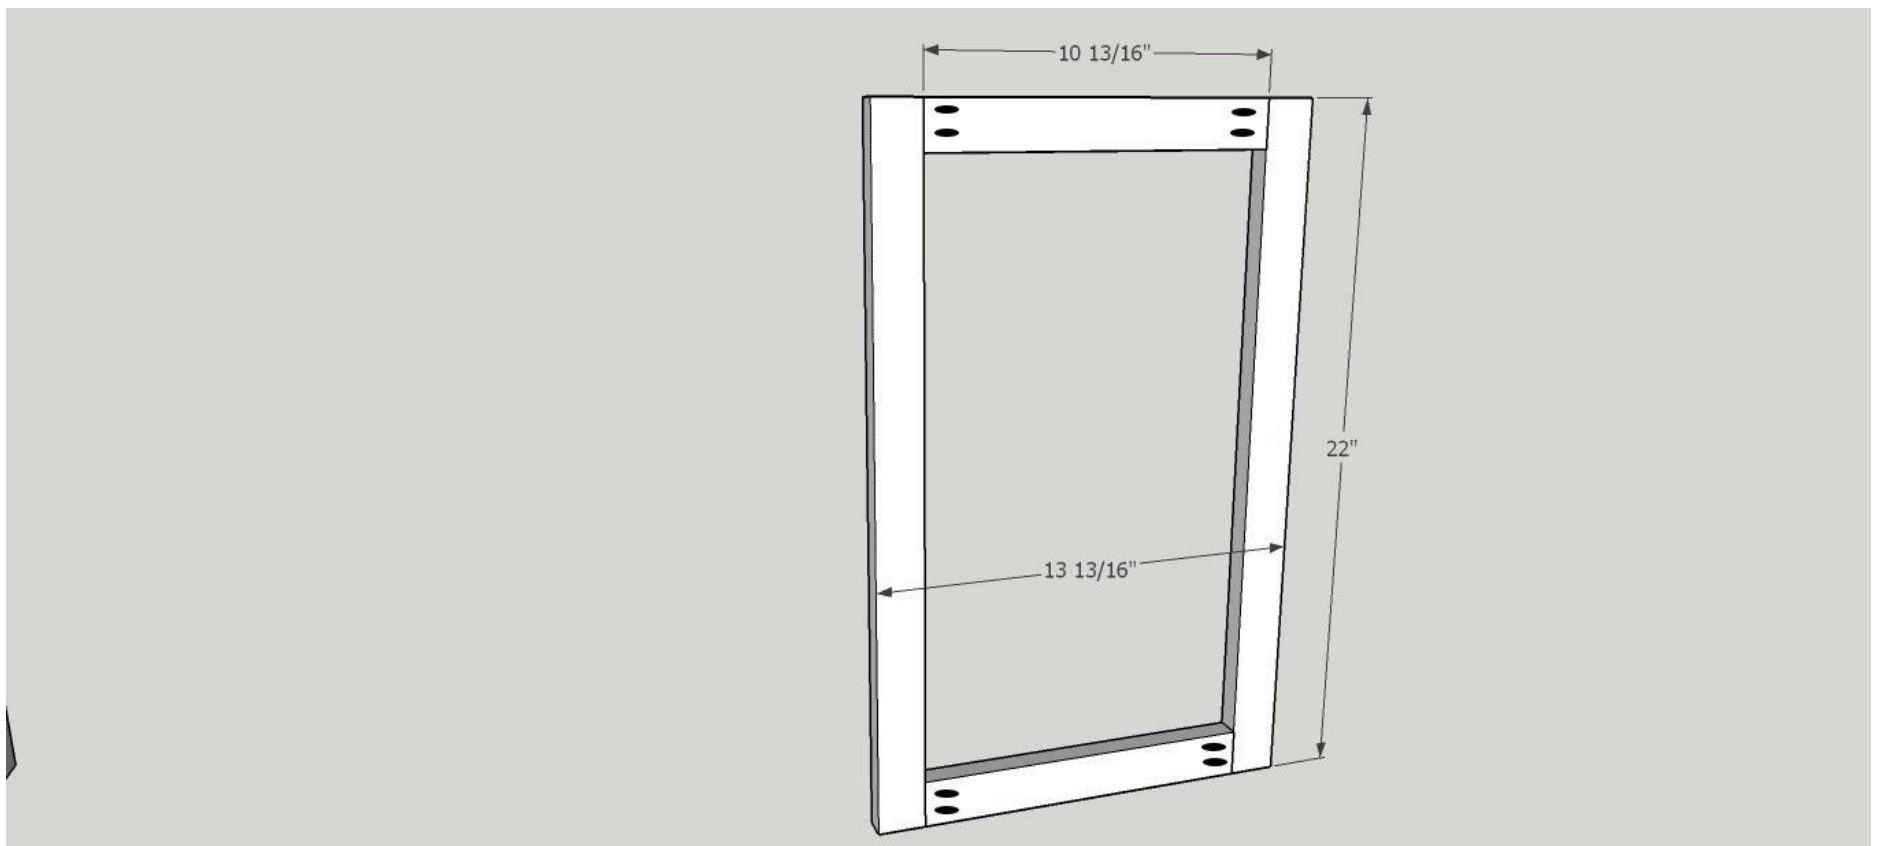


21**Step 21**

Now, you can do doors a number of ways just like drawers and everything else in woodworking, but I just routed a 1/4" wide and 1/4" deep slot along the inside of my 1x2s and brad nailed it to the door frame! Works for me! I used inset hinges to attach the doors to the cabinet.

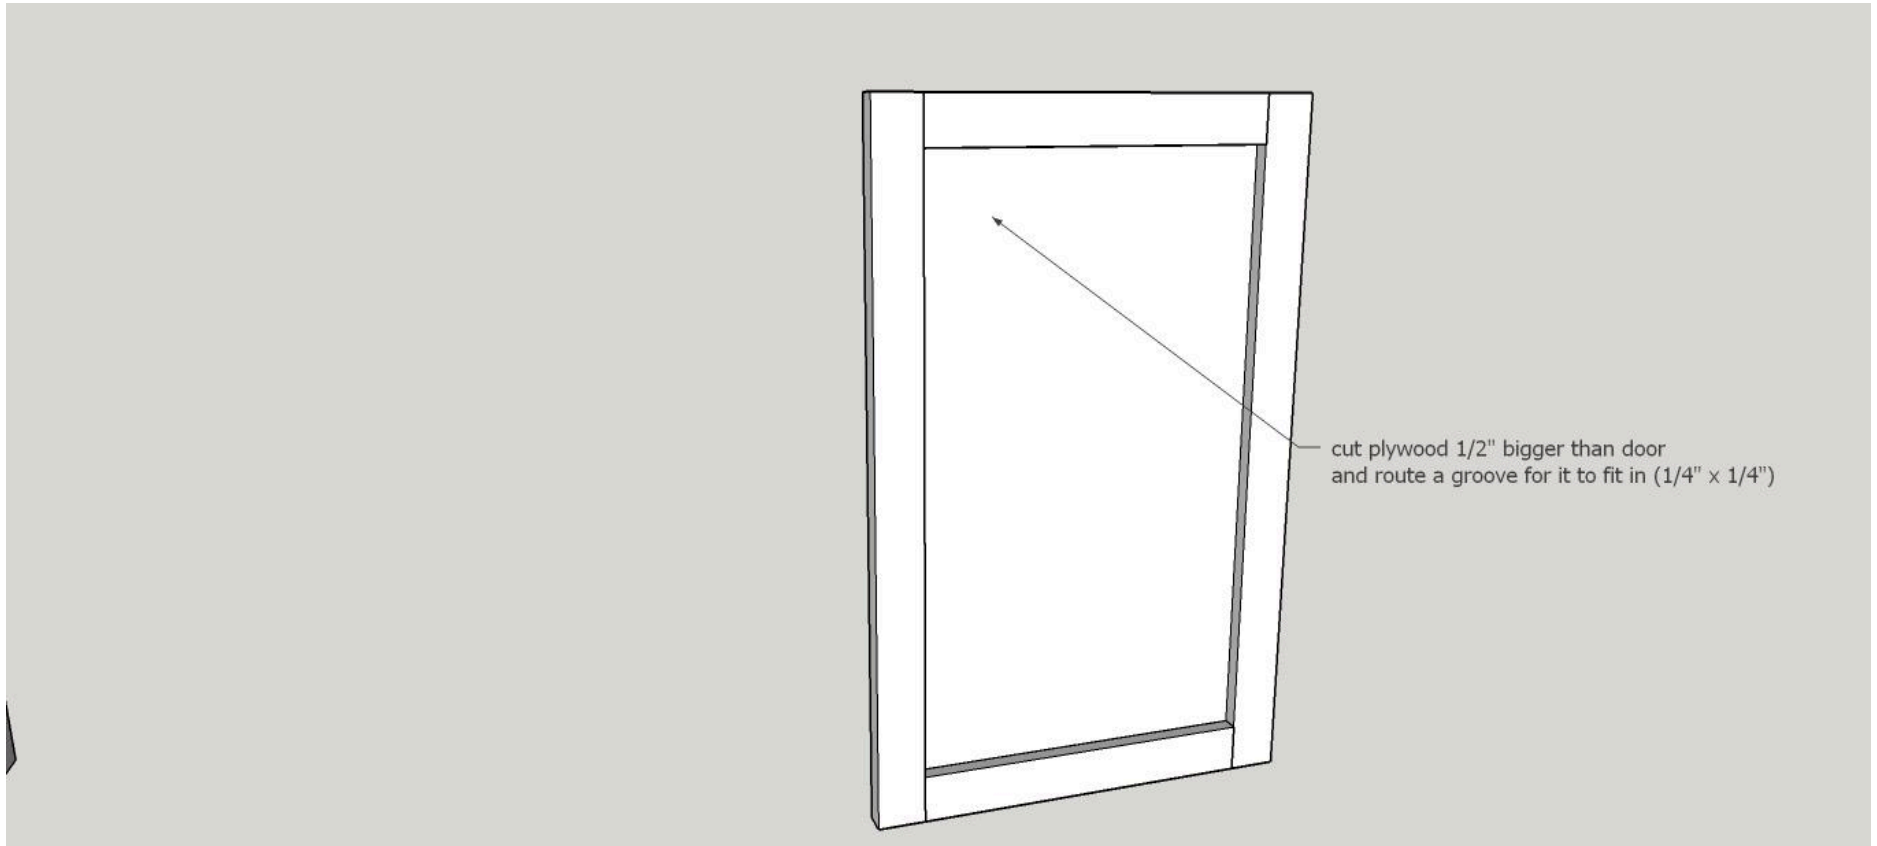**22****Step 22**

Brad nail the 1/4" plywood to the back of the cabinet with doors and you are done!!

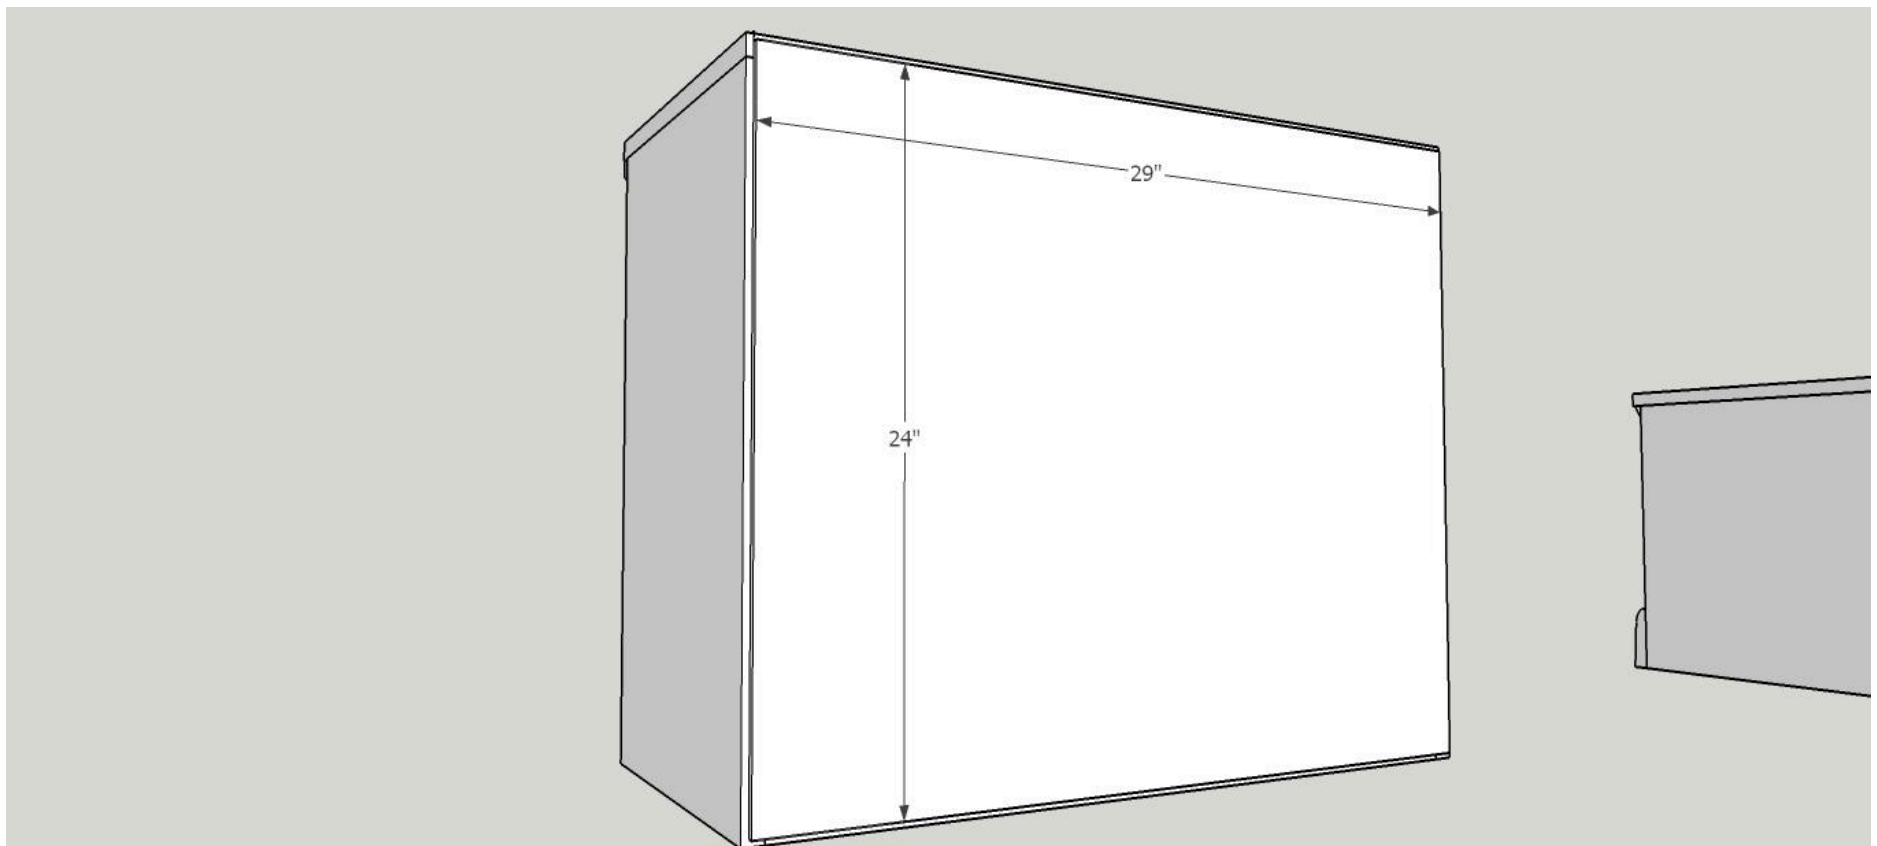

23**Step 23**

Play around and arrange them a multitude of ways to get the most storage and a look you love! Come check out builditcraftitloveit.com for other parts of the modular storage system not pictured here and for finish and other must have answers to questions you may have!

