

Laundry Pedestal

Difficulty

Moderate

Raise your washer and dryer up off the floor with this easy laundry pedestal. The space below the washer and dryer is turned into storage with a large drawer and 2 shelves for laundry baskets.



Tools

Kreg Tools

Kreg®
Pocket-Hole Jig 720PRO
[Kreg® Pocket-Hole Jig 720PRO](#)
Cabinet Hardware
[Cabinet Hardware Jig](#)
Jig

Zinc
Pocket-Hole Screws
[Zinc Pocket-Hole Screws](#)

Zinc
Pocket-Hole Screws
[Zinc Pocket-Hole Screws](#)

Zinc
Pocket-Hole Screws
[Zinc Pocket-Hole Screws](#)

Other Tools

Miter saw

Drill

Impact driver

Kreg face clamp

Kreg 90 degree clamp

Brad nail gun

Router

Materials

Wood Products

- 7 Boards , 8' X 2x4
- 3 Boards , 8' X 1x3
- 1 Plywood , 4x8 X ¾"
- 1 Plywood Or MDF , 4x4 X ¼"
- 1 Plywood , 2x4 X ½"

Hardware & Supplies

- 1 Box Of 2 ½" Pocket Hole Screws (See Tools List)
- 1 Box Of 1 ¼" Pocket Hole Screws (See Tools List)
- 1 Box Of 1" Pocket Hole Screws (See Tools List)
- 1 Box Of ⅝" Brad Nails
- 1 Box Of 1 ¼" Brad Nails
- 1 Wood Glue
- 1 Pair 22" Ball-bearing Drawer Slides

Cut List & Parts


- 4** Platform Front/Back , 1 1/2" X 3 1/2" X 60"
- 8** Platform Joists , 1 1/2" X 3 1/2" X 24"
- 12** Legs , 1 1/2" X 3 1/2" X 13"
- 2** Face Frame Top/Bottom: , 3/4" X 2 1/2" X 60"
- 4** Face Frame Sides , 3/4" X 2 1/2" X 12"
- 2** Drawer Front Stiles , 3/4" X 2 1/2" X 11 3/4"
- 2** Drawer Front Rails , 3/4" X 2 1/2" X 6 3/4"
- 4** Sides , 1/4" X 31" X 13"
- 1** Top , 3/4" X 31" X 60"
- 2** Shelf Bottoms , 3/4" X 31" X 20 1/2"
- 1** Drawer Front Panel , 1/4" X 7 1/4" X 7 1/4"
- 2** Drawer Box Front/Back , 1/2" X 10" X 10"
- 2** Drawer Box Sides , 1/2" X 10" X 24"
- 1** Drawer Box Bottom , 1/2" X 10" X 23"

Directions

1**Start assembling the 2x4 base**

Set your Kreg pocket hole jig for 1 ½" thick material. Drill 2 pocket holes in each end of the platform joist boards. Attach the joist boards between the platform front/back boards with 2 ½" pocket hole screws so that the outside board is flush with the ends of the boards and the inside boards are 14" in from the edge. Make sure to leave a 12" gap in the center for the drawer section.

Repeat to have 2 identical pieces.

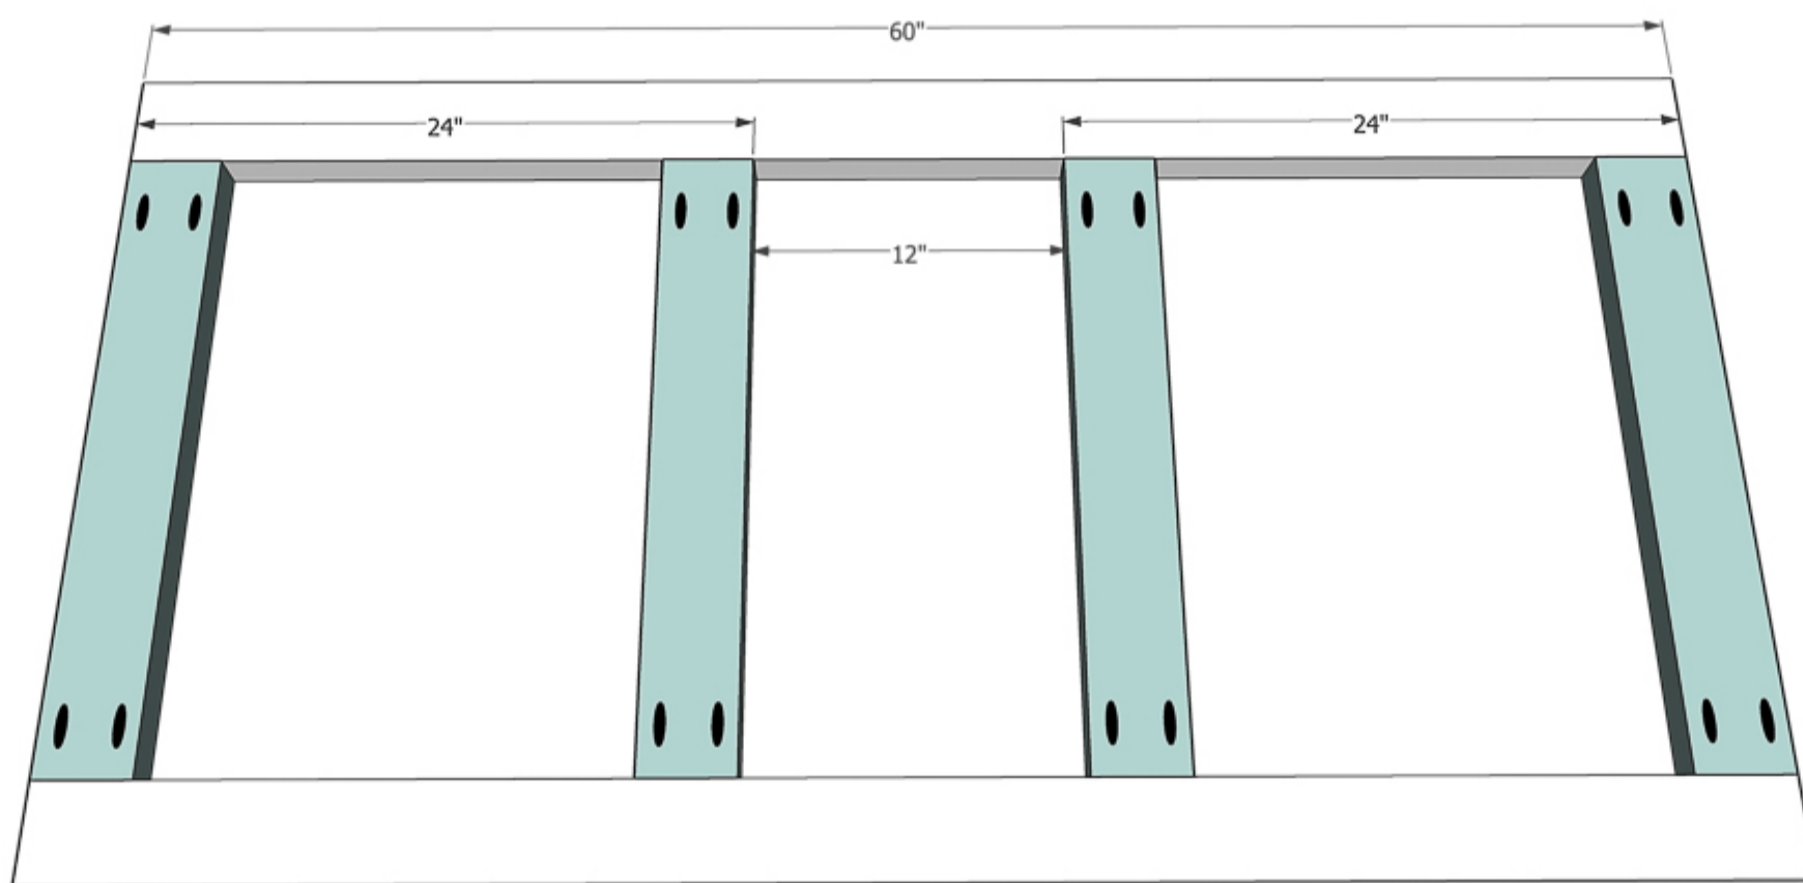


housefulofhandmade.com

2

Finish the 2x4 base


With the pocket hole jig still set to 1 ½" thick material, drill 2 pocket holes in each end of the leg pieces. Attach 3 of the legs to the far edge of one of the assembled base top/bottom pieces with 2 ½" pocket hole screws. Then attach 3 to the other end and finish with the other 6 along the 2 joists in the center. Make sure to leave a 12" space between them for the drawer box. Then attach the other assembled piece to the top with the screws on the other side of all the leg boards.

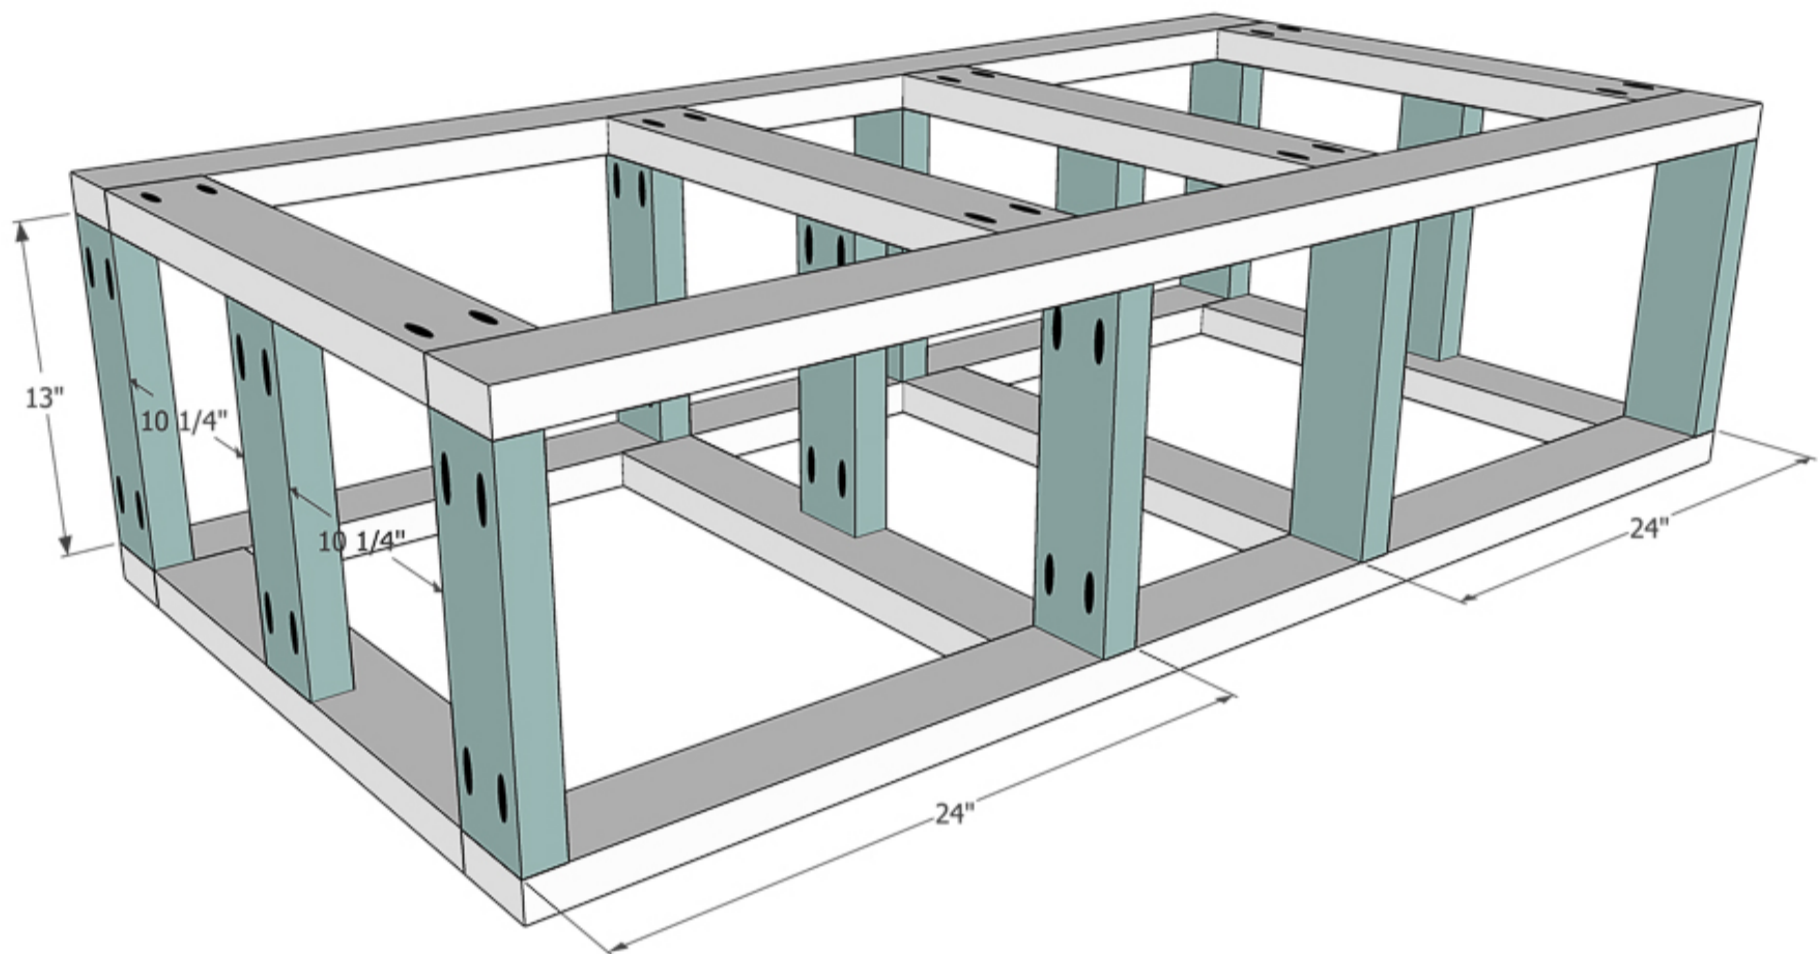

housefulofhandmade.com

3**Add the sides inside the shelves**

Attach the $\frac{1}{4}$ " material to the inside of the shelf areas. Use $\frac{5}{8}$ " brad nails and wood glue to attach it to the inside of the 2x4 legs.

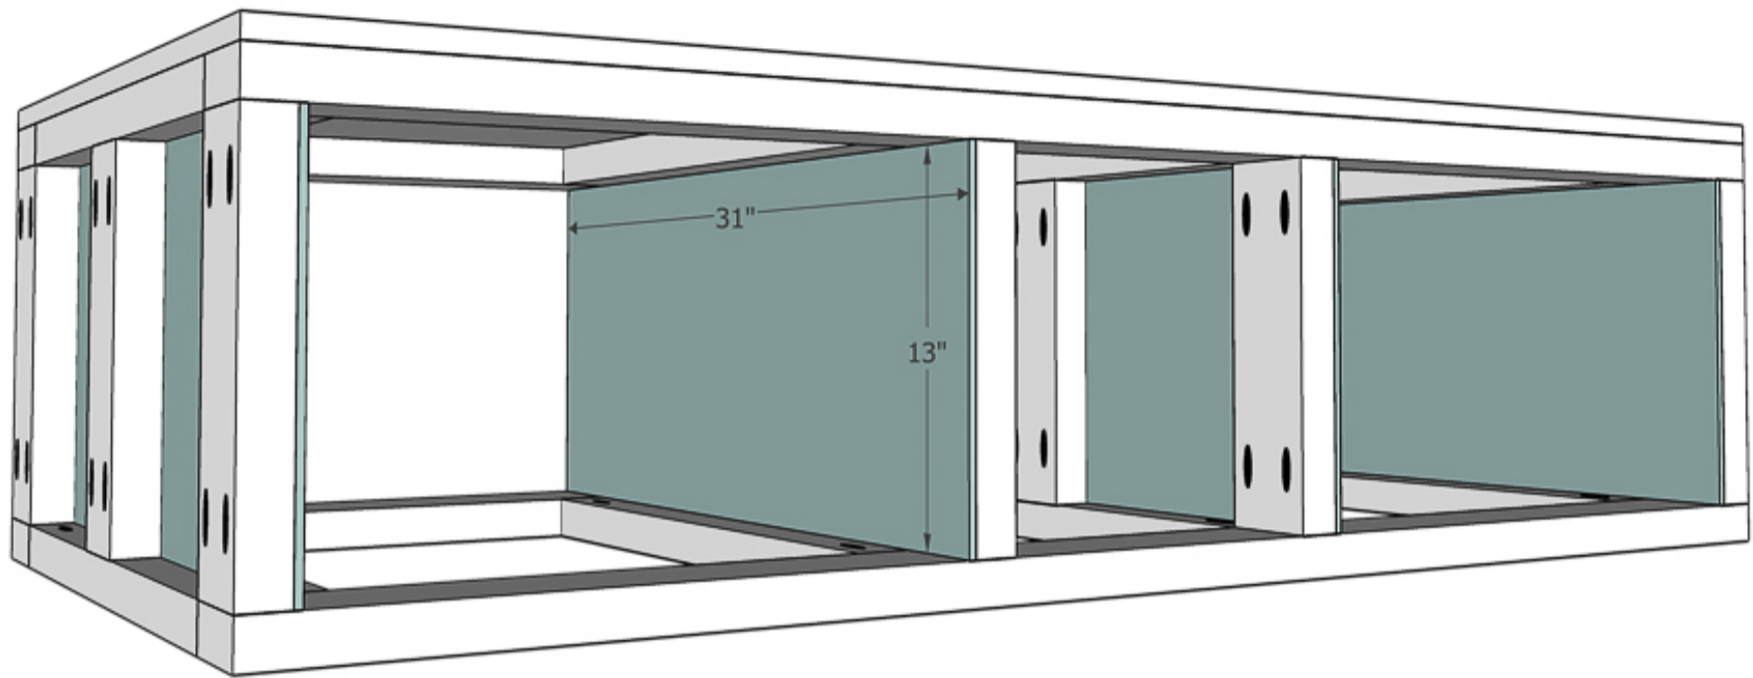


houseful of handmade.com

4

Build the face frame


Set your pocket hole jig for $\frac{3}{4}$ " thick material. Drill 2 pocket holes on each end of the face frame side pieces. Attach them between the face frame top/bottom pieces with $1\frac{1}{4}$ " pocket hole screws and wood glue. Attach the sides so they are flush with the edges of the top/bottom board and the 2 center piece leave a 12" gap in the center for the drawer box.

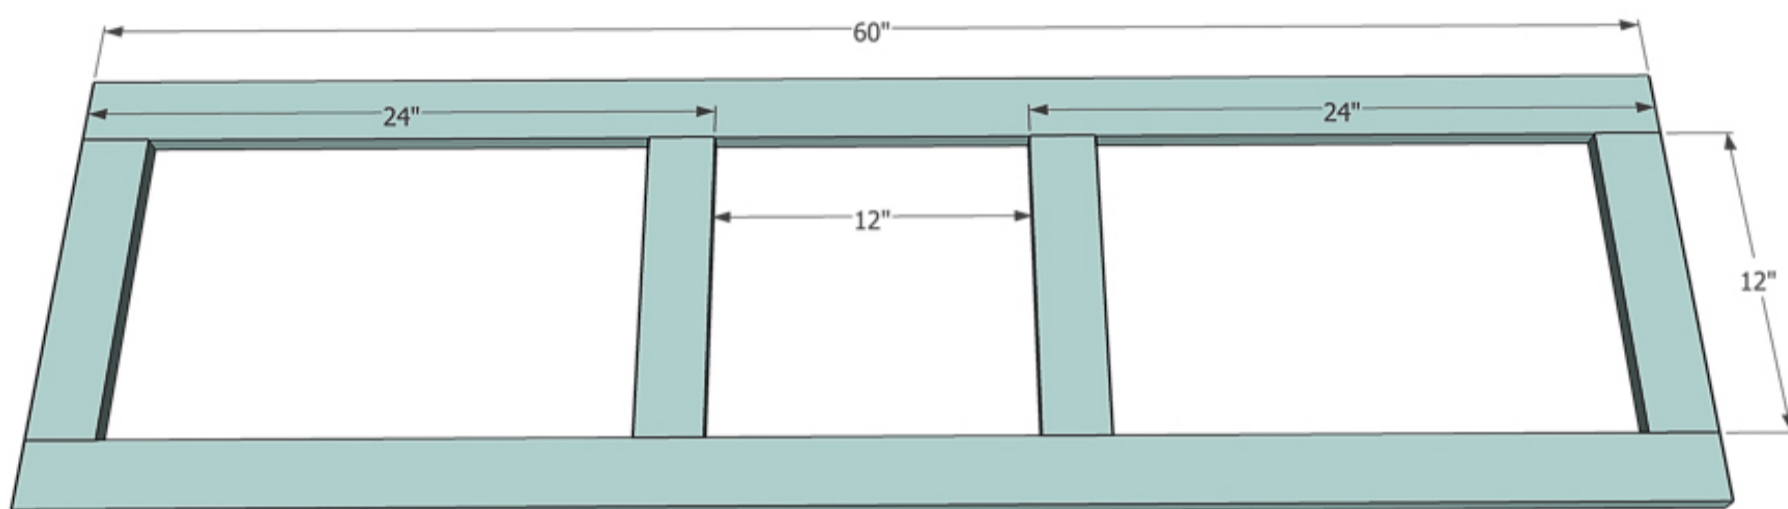

housefulofhandmade.com

5**Attach the face frame**


Drill pocket holes set for $\frac{3}{4}$ " material in the top front of the platform base and the shelf sections (I used the 300 series pocket hole jig for this). Attach the face frame with $1\frac{1}{4}$ " pocket hole screws so it is flush with the sides and bottom of the platform. It will stick up 1" from the top.

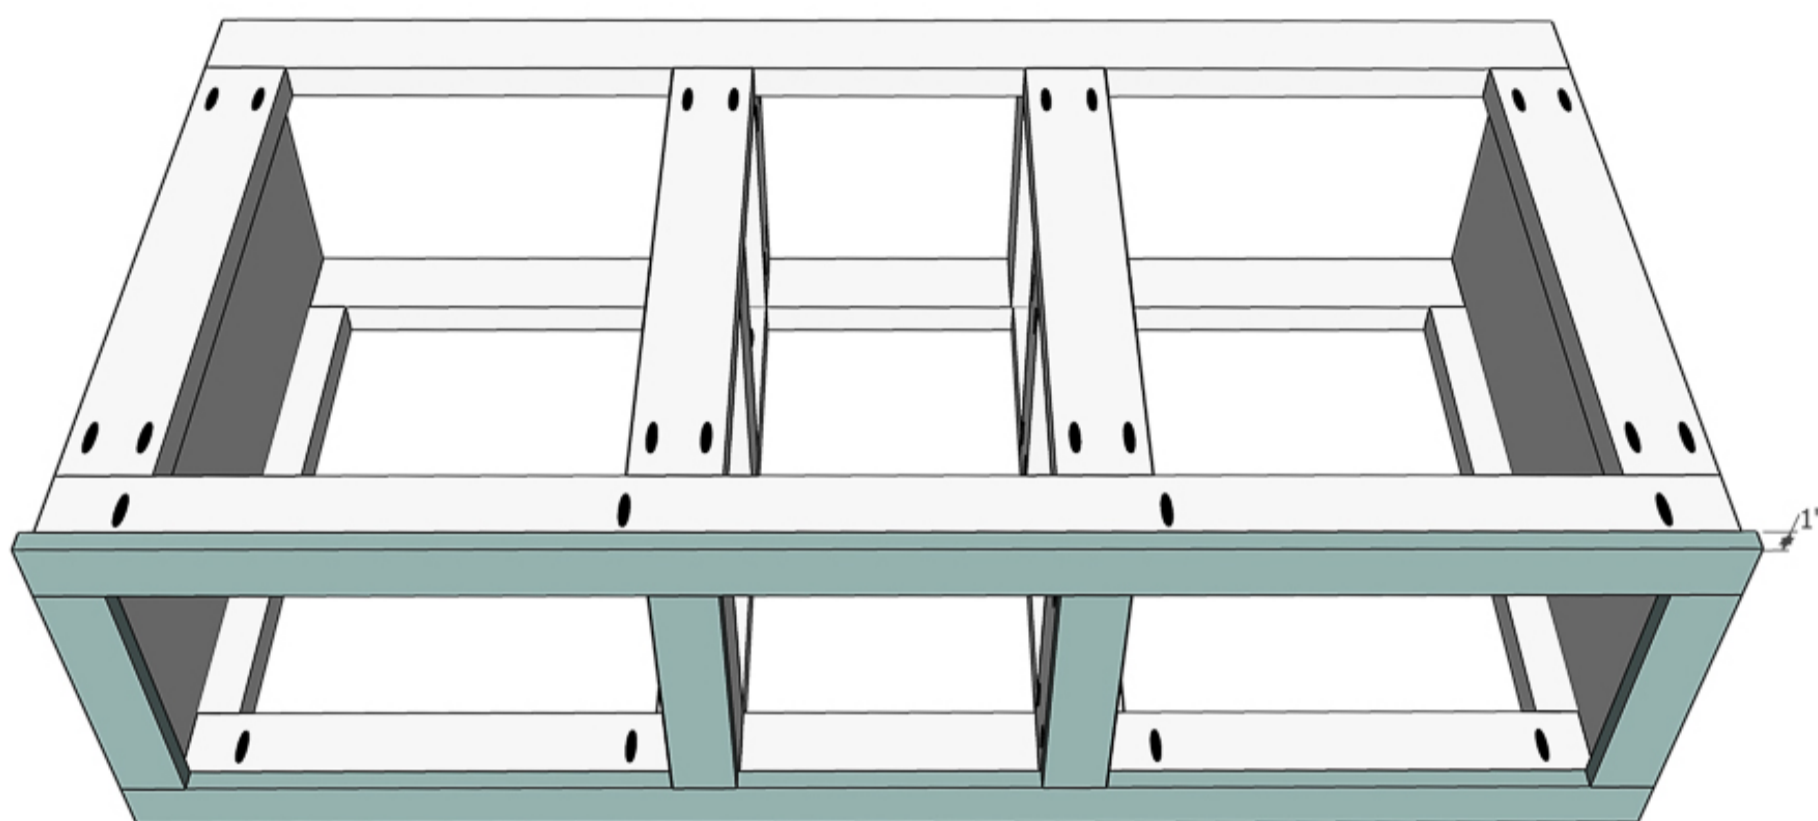

houseful of handmade.com

6**Attach the top and shelf bottoms**


Place the shelf bottoms on top of the bottom base in the shelf cubbies. Attach with wood glue and 1 ¼" brad nails. Repeat for the plywood top on the very top of the pedestal.

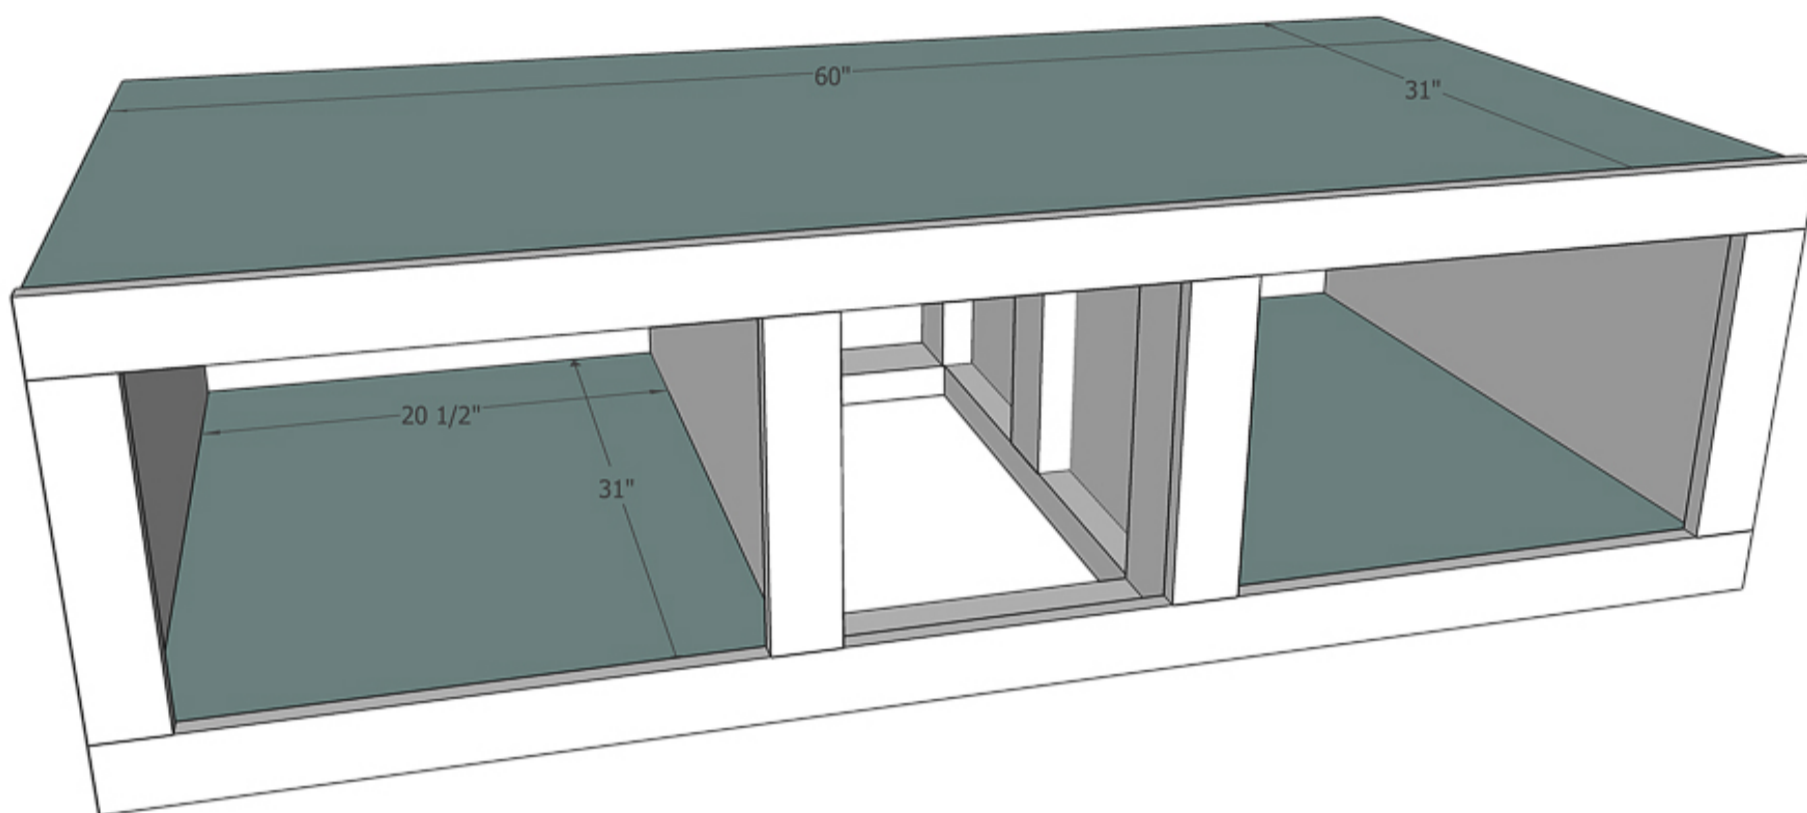

houseful of handmade.com

7**Start assembling the drawer box**


This drawer box is a thicker bottom to help hold heavier things (like extra laundry soap). Drill pocket holes set for ½" thick material in the sides of drawer box front/back pieces and all edges of the drawer box bottom piece. Attach the front/back pieces to the bottom pieces with 1" pocket hole screws and wood glue using the pocket holes on the bottom piece.

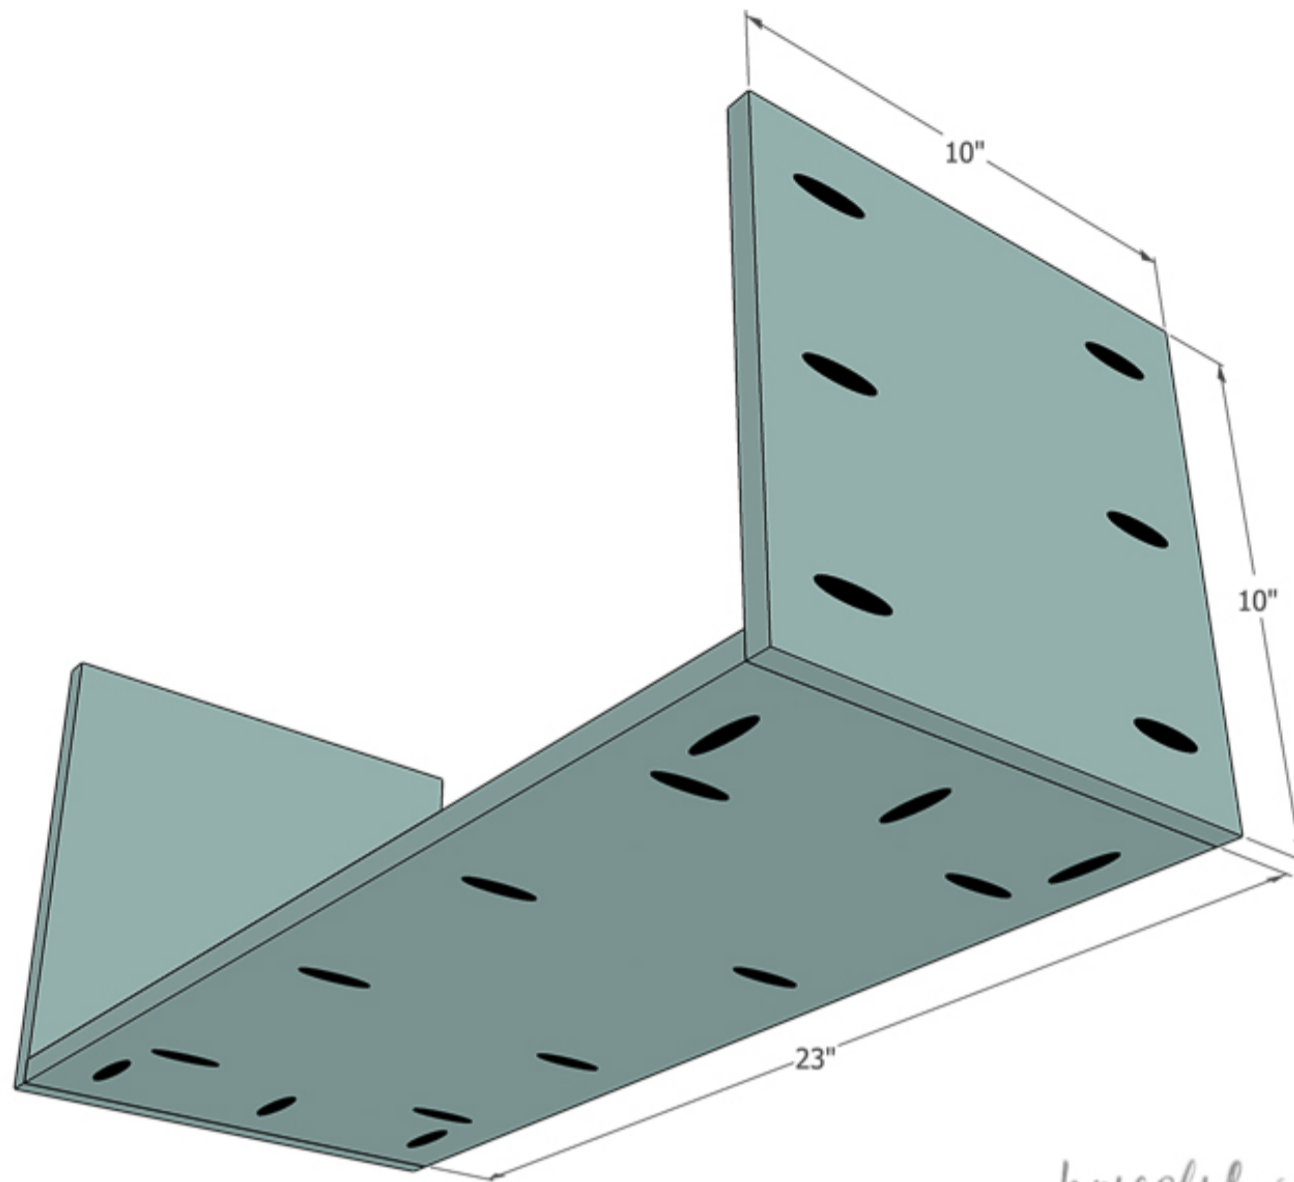

houseful of handmade.com

8**Finish the drawer box**

Then attach the drawer box sides to the bottom and front back with wood glue and 1" pocket hole screws.

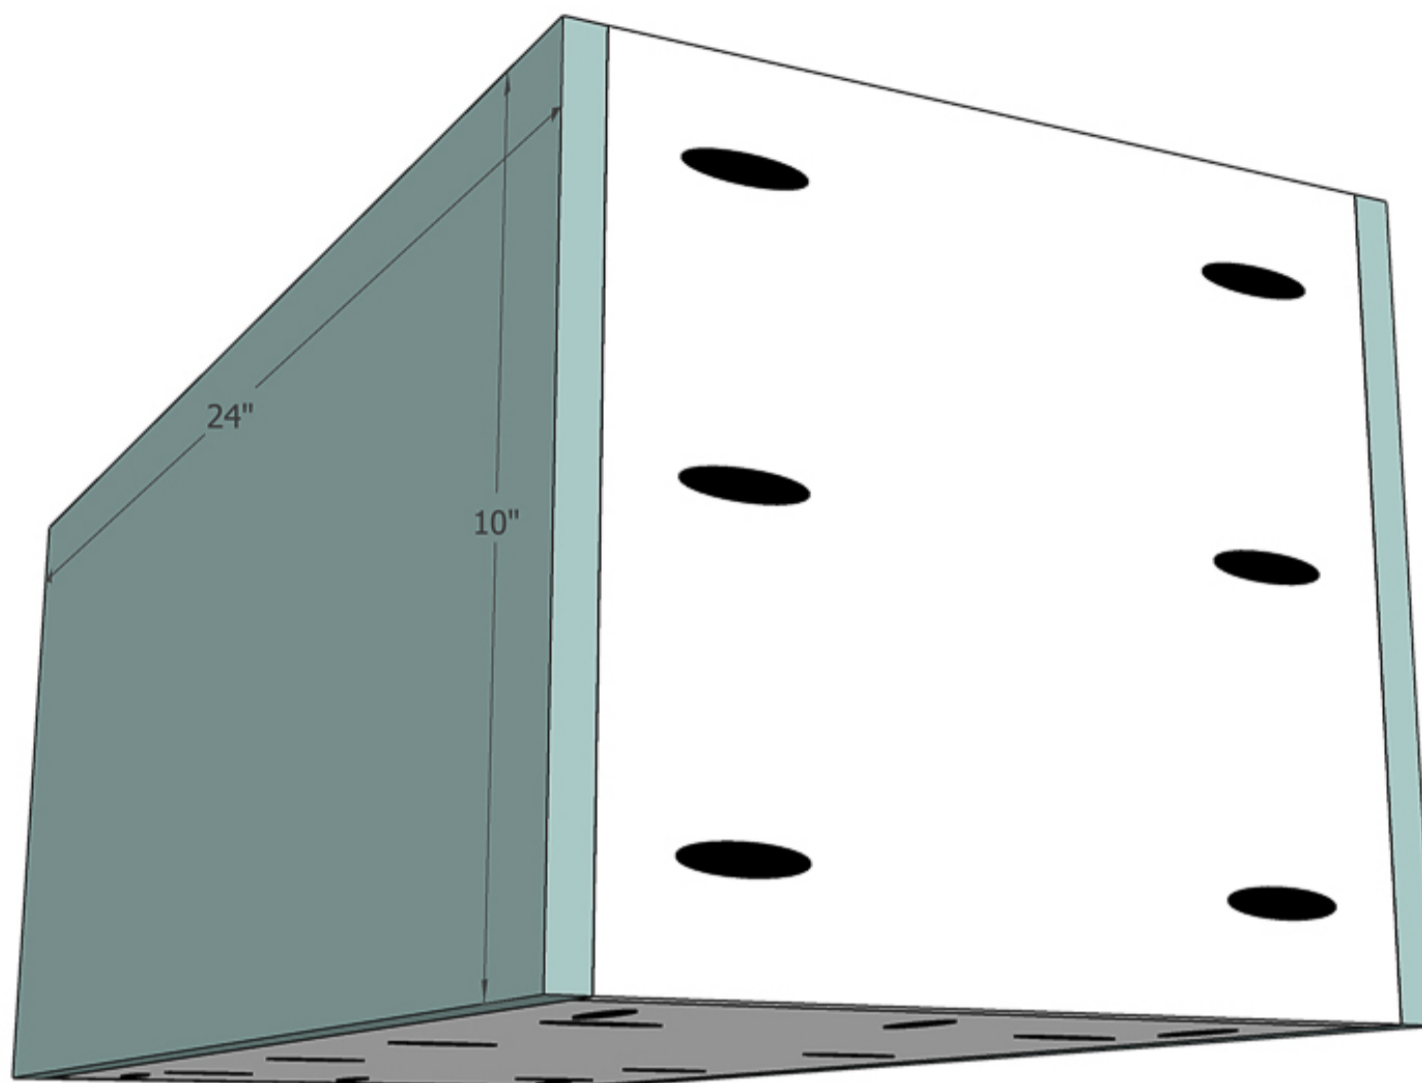


houseful of handmade.com

9

Start assembling the drawer front


On the drawer front rails, router a $\frac{1}{4}$ " deep by $\frac{1}{4}$ " wide groove in the center of one side. On the drawer front stiles, measure 2" from each end and draw a line. Router a $\frac{1}{4}$ " x $\frac{1}{4}$ " groove in one side of the board between these lines.

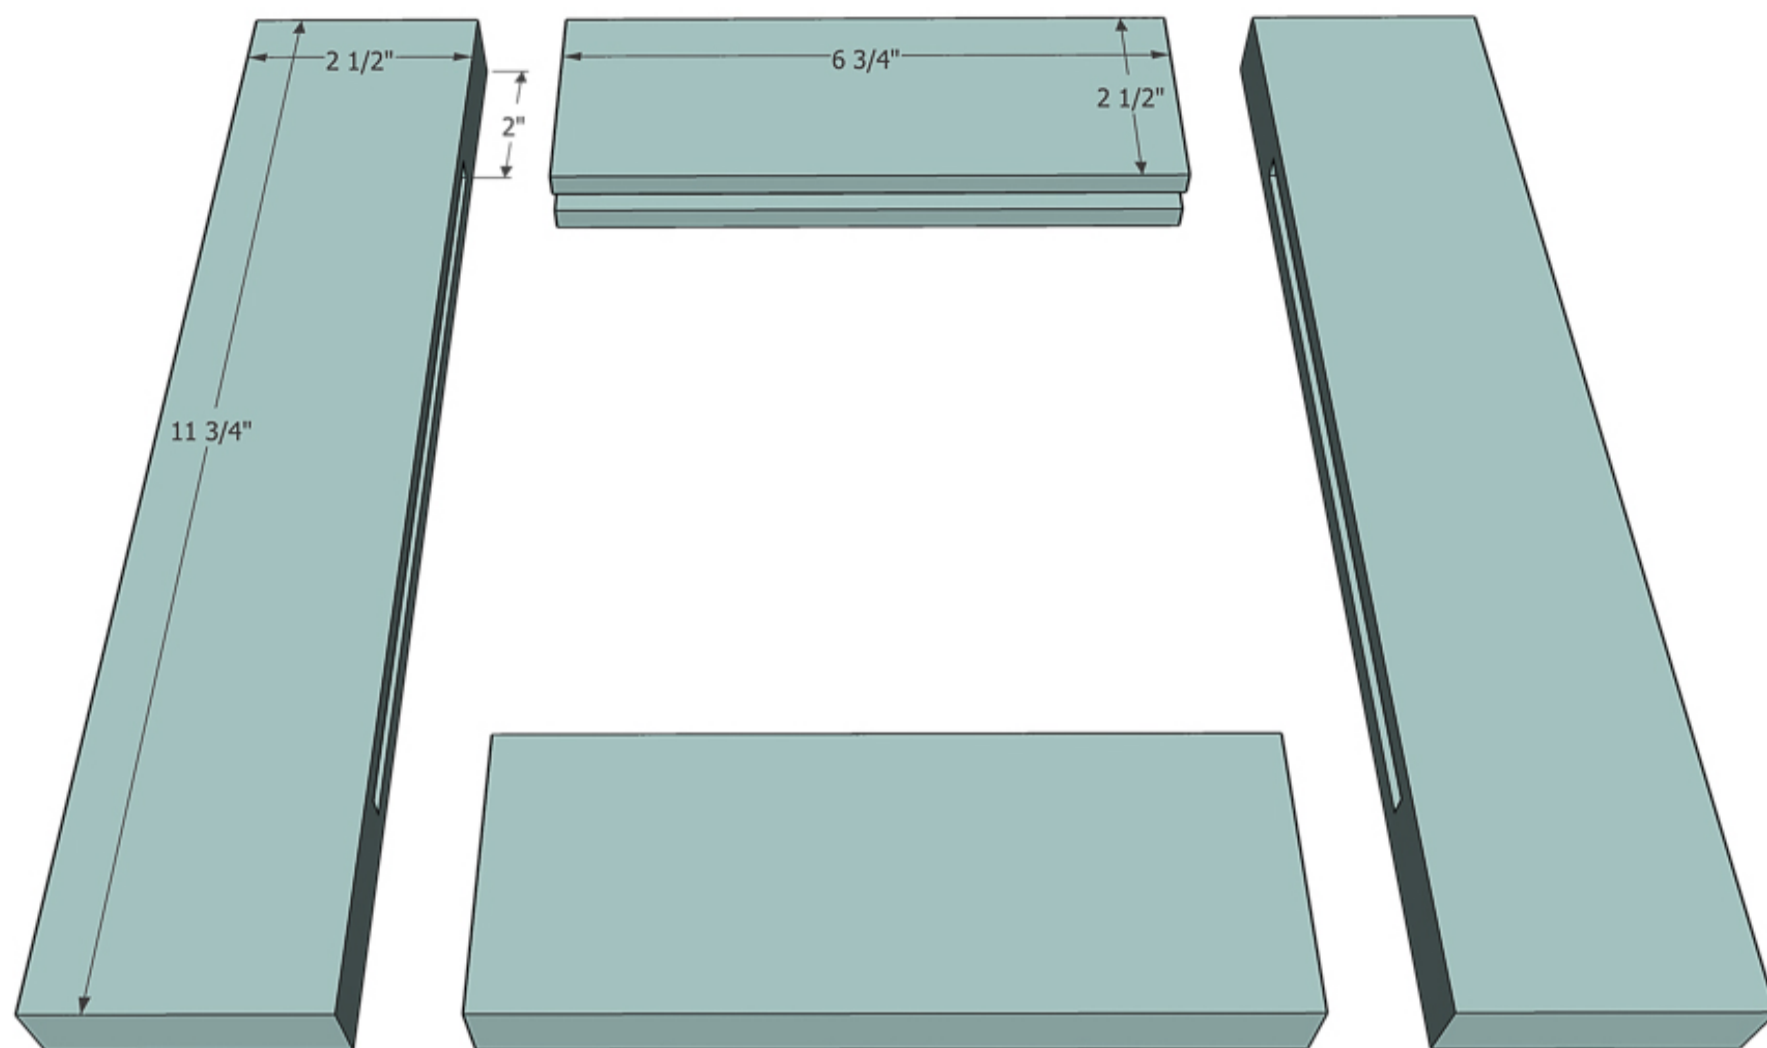*houseful of handmade.com*

10


Finish the drawer front

Set your pocket hole jig for $\frac{3}{4}$ " thick material. Drill 2 pocket holes in the back side of the drawer front rail pieces. Place the drawer front panel inside the grooves. And secure the rails to the stiles with $1\frac{1}{4}$ " pocket hole screws and wood glue. For more details or for instruction on how to build a drawer front without a router, visit the link in the extras on DIY cabinet doors.

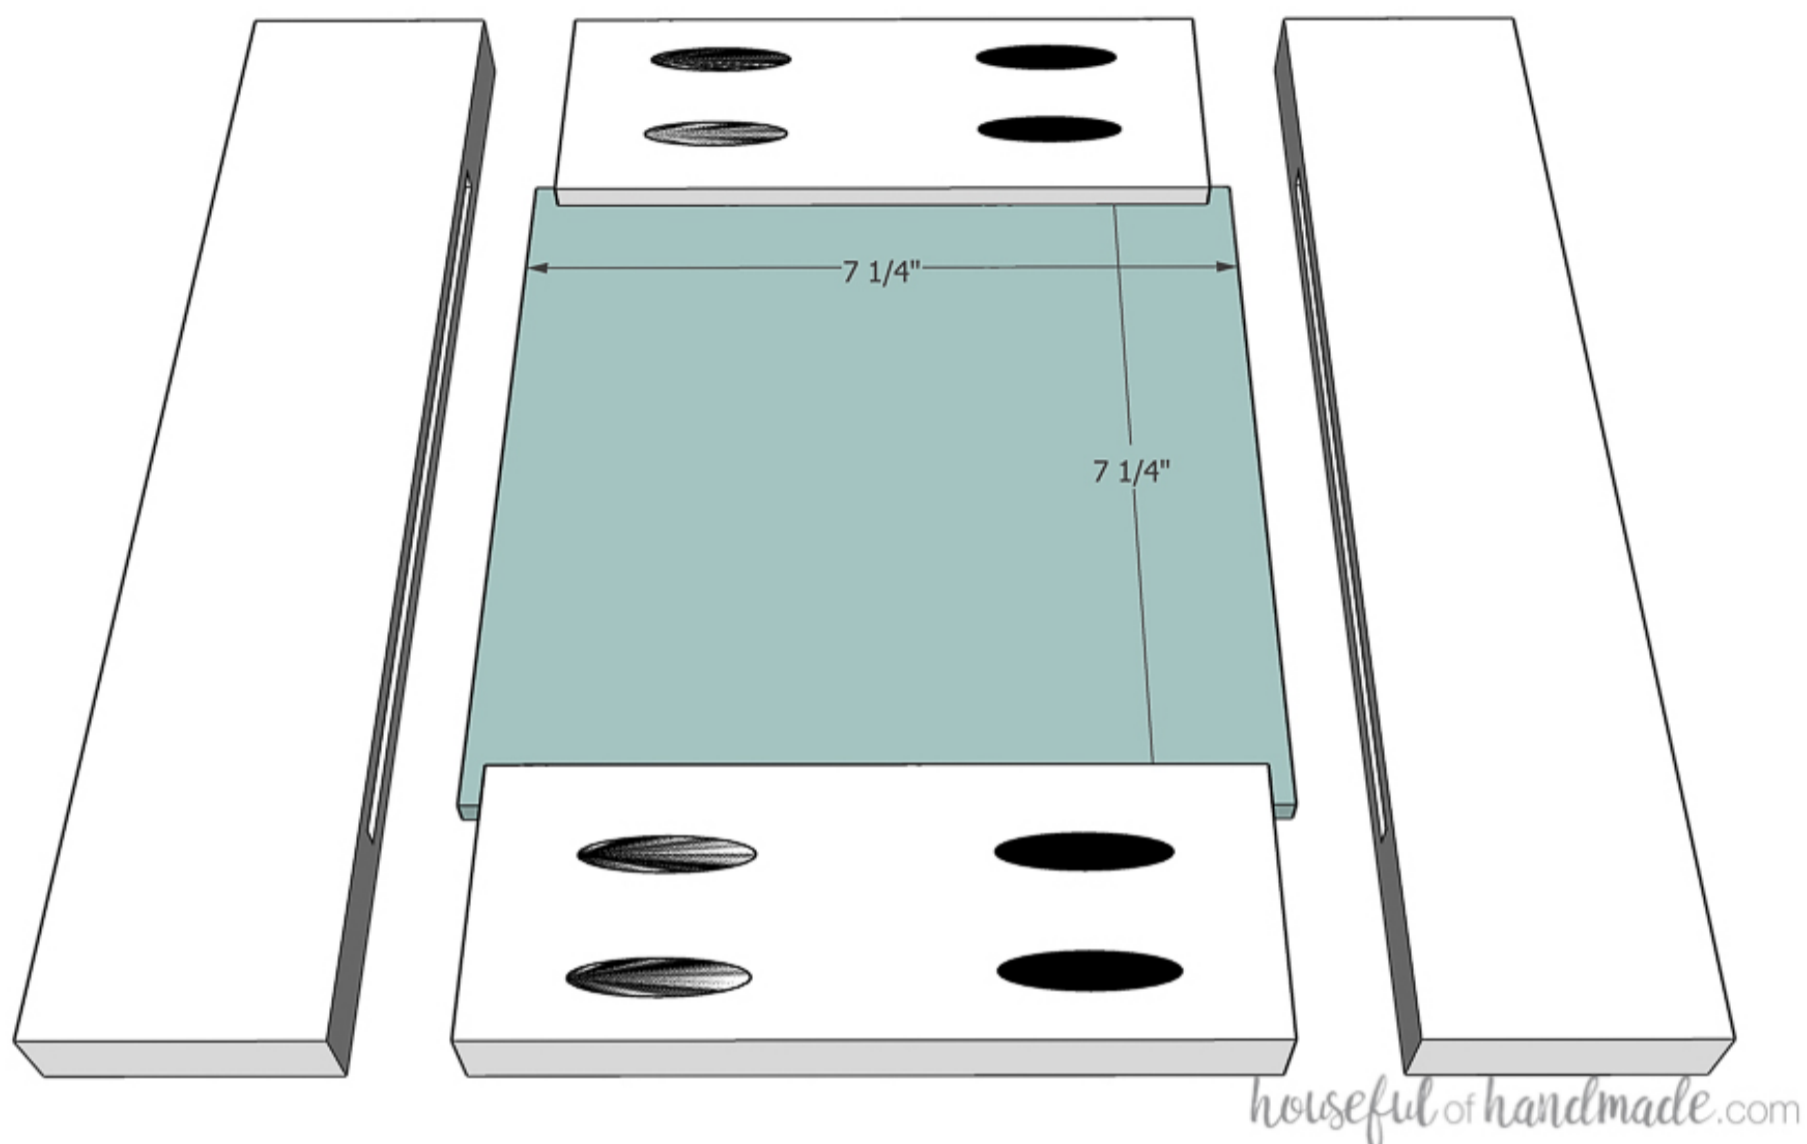

11**Install the drawer**

Install the drawer slides so they are set back $\frac{3}{4}$ " from the front of the completed pedestal (flush with the inside of the face frame) and flush with the front of the drawer box. Attach the drawer front to the front. I share a trick for using the Kreg cabinet hardware jig to align your drawer fronts in my built in desk post ([link in extras](#)).

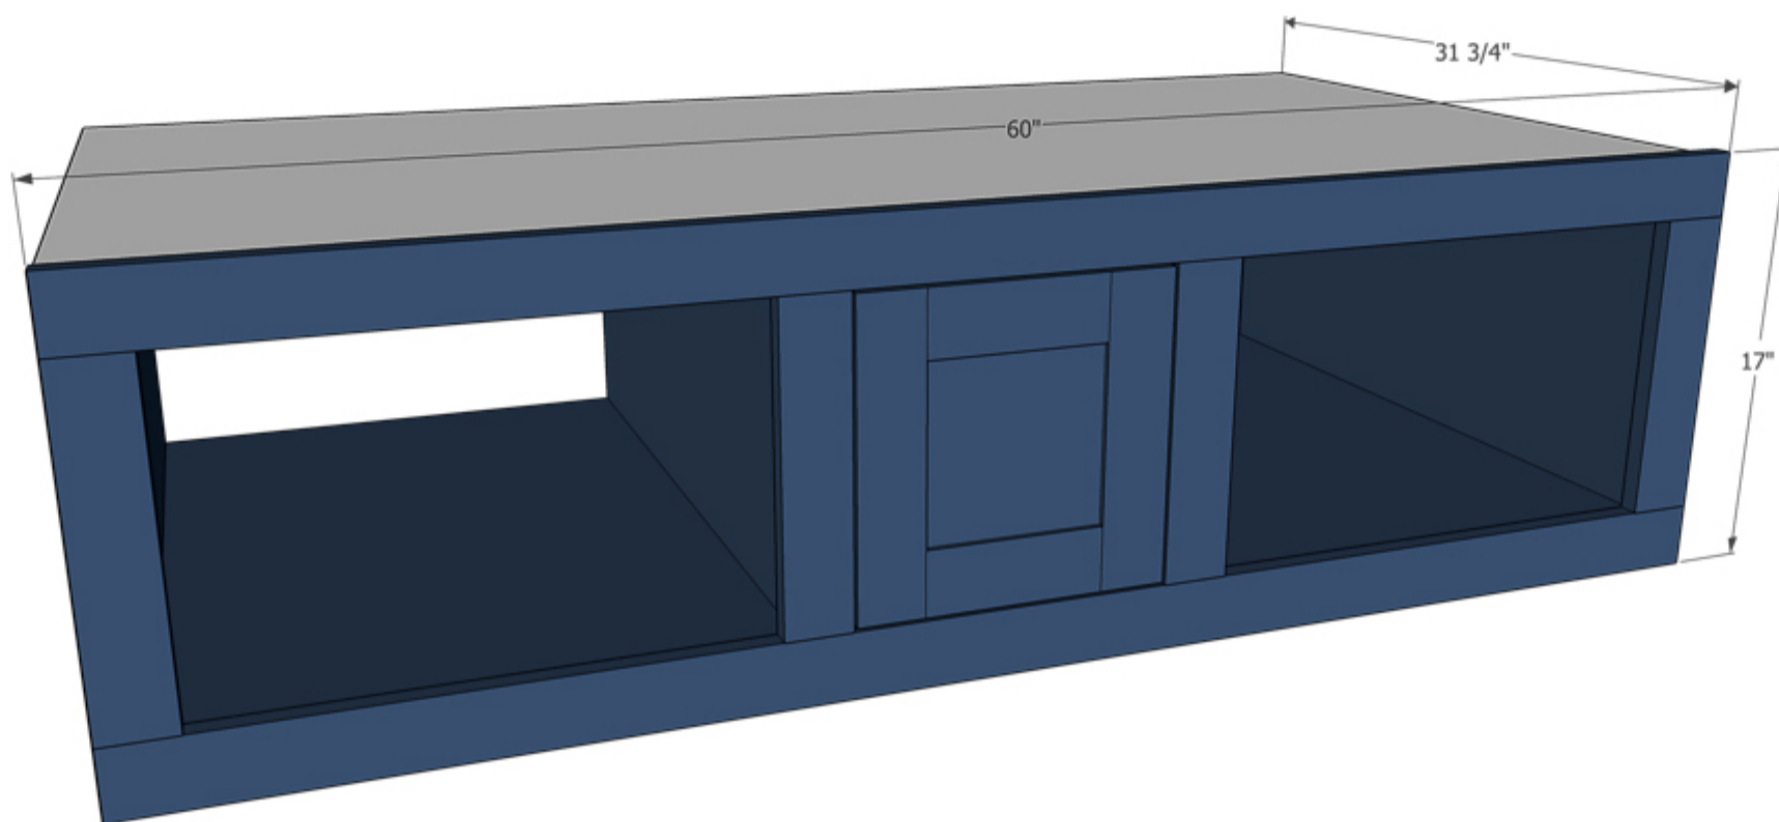

houseful of handmade.com

12**Enjoy!**

Paint/stain your new laundry pedestal. Then place it under your washer & dryer to raise it off the floor. I recommend attaching it to the walls into studs for extra sturdiness. And enjoy doing your laundry without bending over!