


# Barn Doors

By **Woodshop Mike**

Difficulty

Moderate

These barn doors aren't your typical run of the mill variety that are so prevalent across the internet. I built these specifically for the finishing room in my shop and with this in mind I selected my hardware and construction method to fit this application.

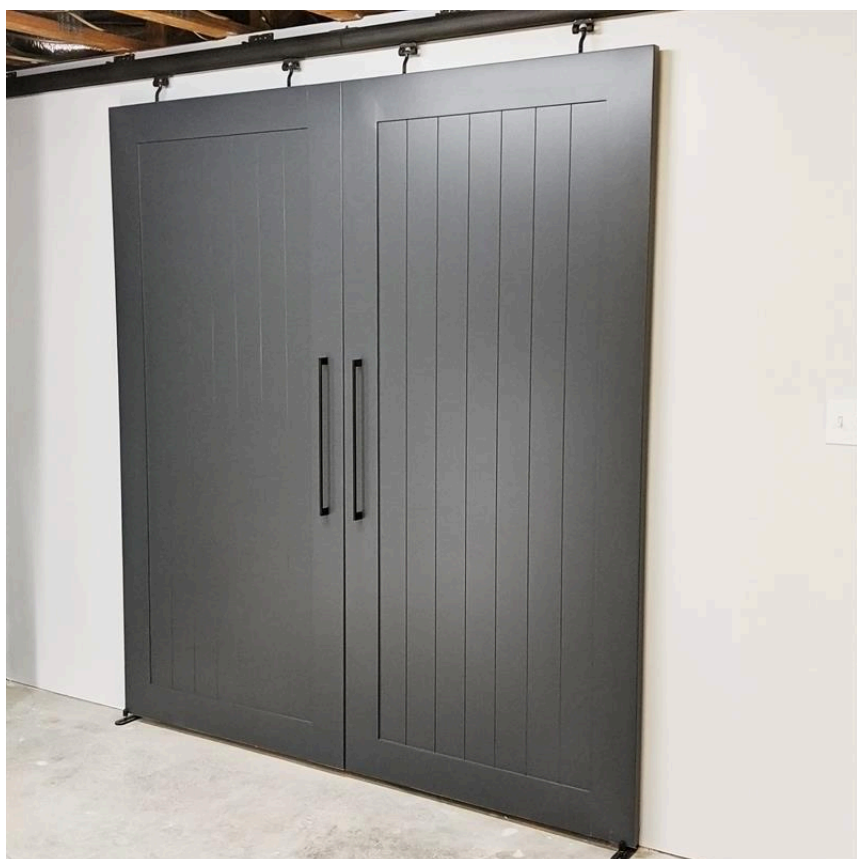

# Tools

## Kreg Tools



[Adaptive Cutting System Saw + Guide Track Kit](#)



[Kreg® Pocket-Hole Jig 720](#)

## Other Tools

Jointer

Miter Saw

Square

Table Saw

Tape Measure

Clamps

Drill (cordless)

Impact Driver

Sander

HVLP

Shop Vacuum

# Materials

## Wood Products

**2**   MDF , 1/2" Thick , Full Sheet

**6**   Board , 2x6 , 96"

## Hardware & Supplies

**24** 2-1/2" Pocket Hole Screws

**4**   Sliding Door Rollers

**2**   8' Track Sections

**1**   Track Union

**2**   Track End Caps

**2**   Bottom Track Guides

**2**   18" Handles

**1**   Elmer's Wood Putty

**2**   General Finishes Primer (Quart)

**3**   General Finishes Milk Paint, Queenstown Gray (Quart)

**2**   General Finishes High Performance Top Coat, Flat (Quart)

# Cut List & Parts

- 2 Top & Bottom Rail , 28-1/2" X 5" X 1-1/2"
- 2 Side Rail , 84-1/2" X 5" X 1-1/2"
- 1 Center Panel , 75-1/2" X 29-1/2" X 1/2"

# Directions

---

1

## Center Panel

To start off this build, I wanted to get the center panel knocked out first. I used the Kreg ACS to first cross cut the sheets to their length and then head over to the table saw to cut it to the final width.



## 2

### Faux Tongue and Groove

I originally wanted to make tongue and groove boards for this door, but since these doors are for my finishing room and the point is to minimize air infiltration, I opted to use a single MDF sheet for the center.

To create this effect, I used my track saw to cut lines into the center panel.





### 3

#### Build the Door Frame

To construct the frame for these doors, I used 2x6 lumber. I wanted to avoid using the planer for this build, so I bought the straightest boards I could find. Often times the 10' boards are better than the 8' boards. If you can't find good boards in the 8' racks, check the 10' boards before settling.

I cut the boards to final length and width and then added the dados as needed.




## 4

### Assembly

To assemble these doors, I went with pocket hole joinery. I used (3) 2-1/2" pocket hole screws per joint. This would also be a good application to use the HD pocket hole jig and screws.

With the pocket holes drilled, I moved on to assembly. I started by setting the panel into the vertical frame pieces (centered) and then tapped the top and bottom rails into place with a mallet.

Once all of the parts are in place, I used 12 2-1/2" pocket hole screws to finish the assembly.

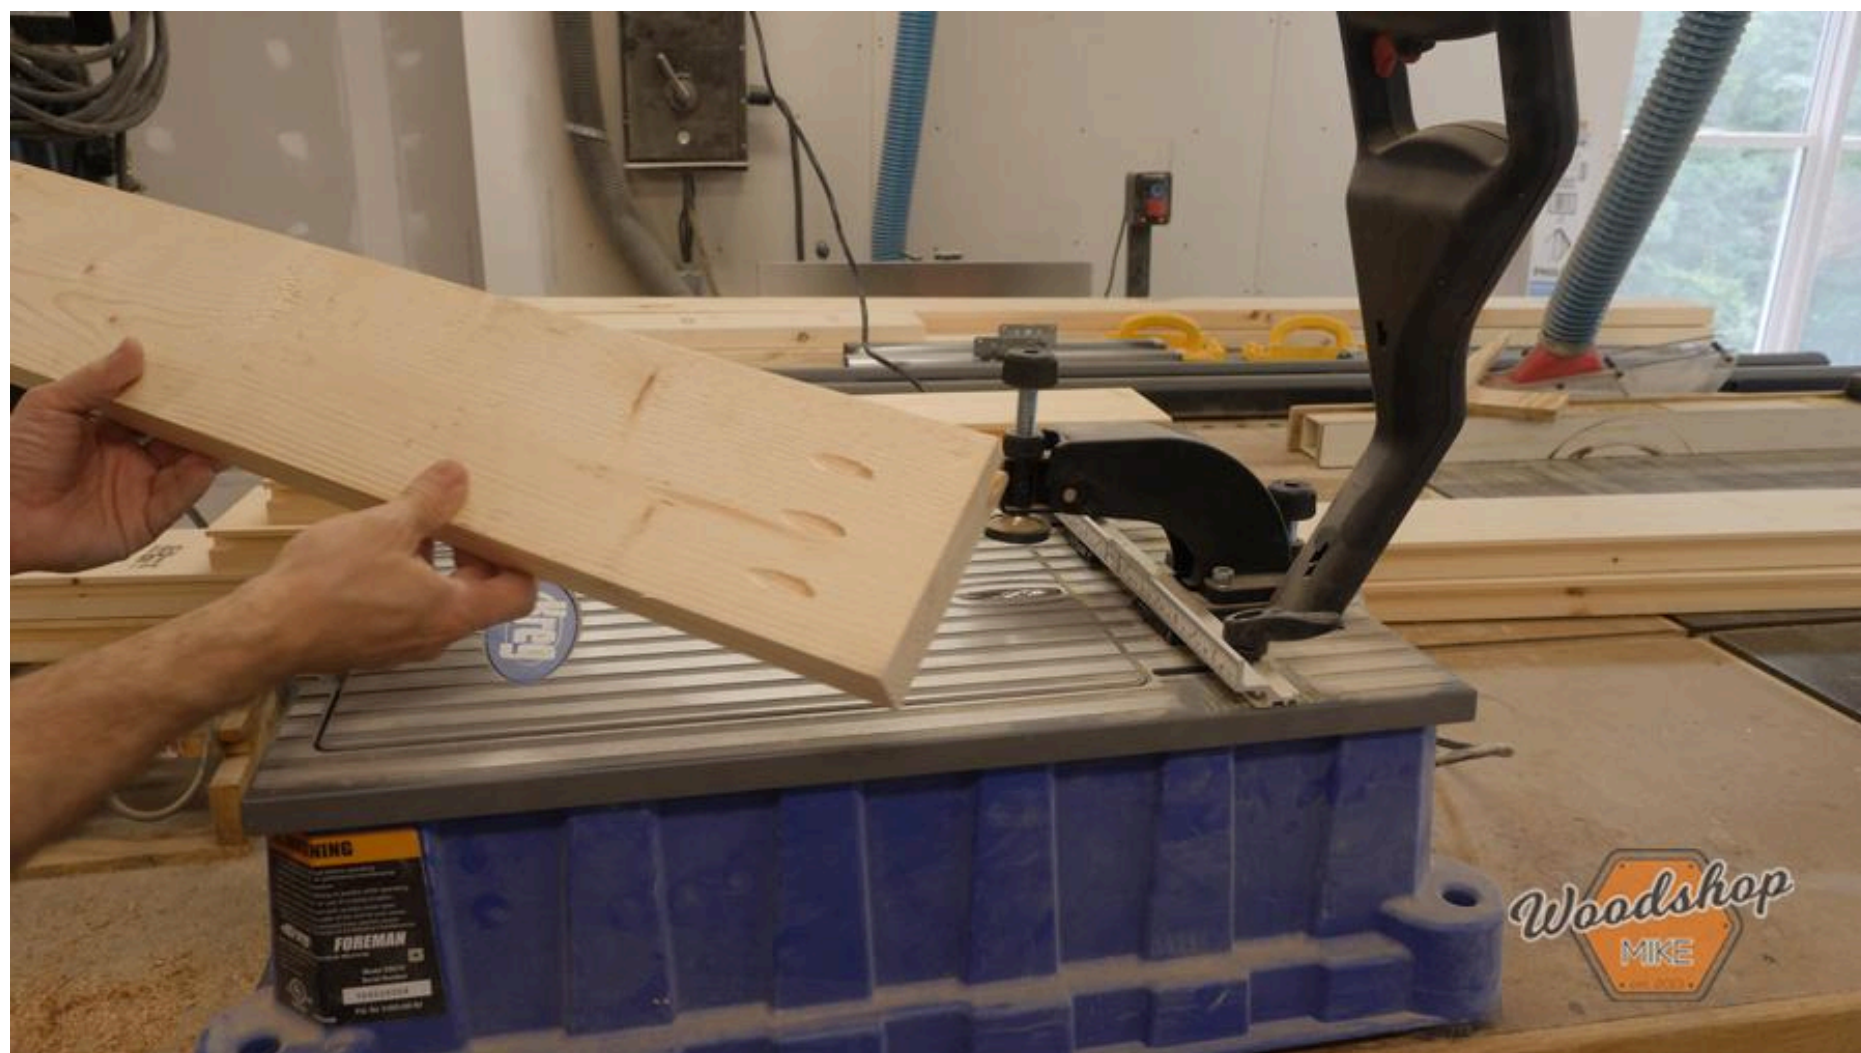




**5**

### Adding Pockets for Door Rollers

For these doors, I used different hardware than what is typically found in sliding barn doors on Pinterest. These rollers attach to the door with a bolt and bracket that I cut a pocket for in the back side of the door using my router and a few templates.

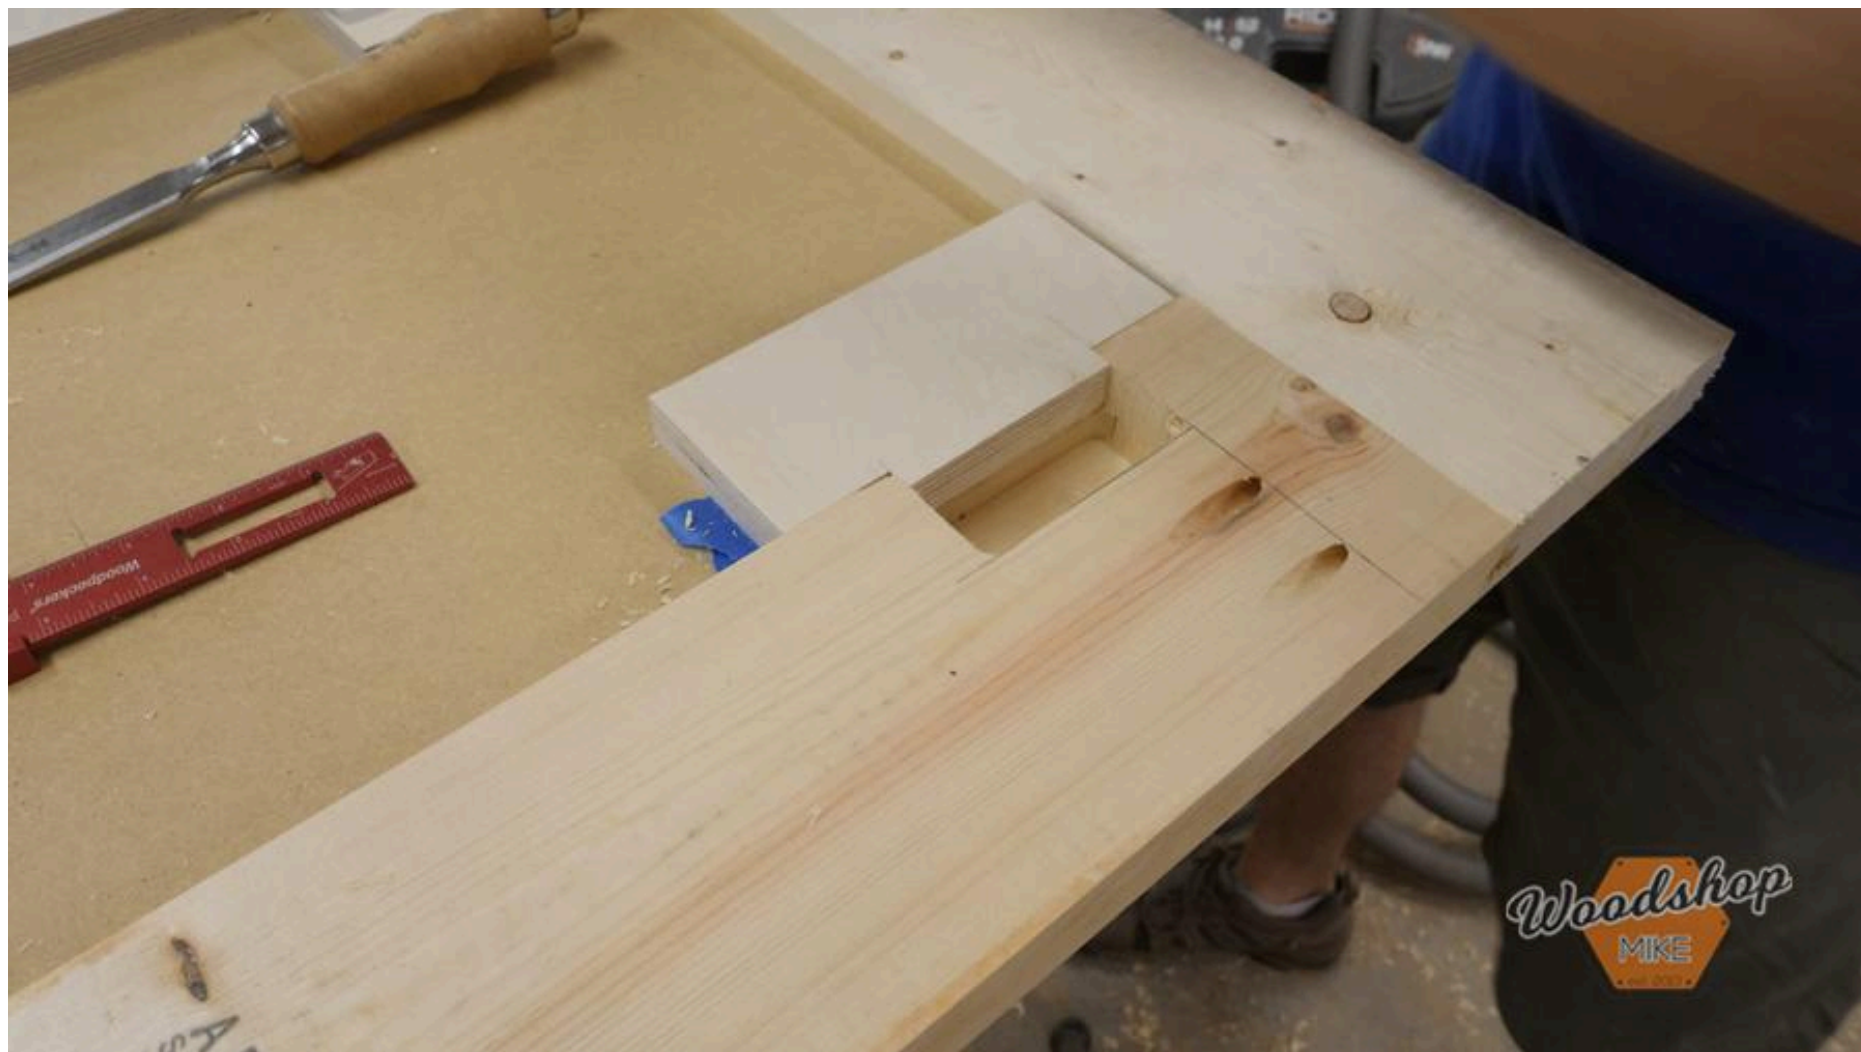**6**

### Paint Prep

I filled any imperfections with Elmer's wood putty and then sanded with 80 grit. Next, I rounded the edges with an 1/8" radius bit in my trim router and finished things off by sanding up to 120 grit.





# 7

## Finishing

When painting MDF, it's very important to seal the material to prevent the fibers from swelling. To produce the best surface, first seal the panels with shellac (I omitted this step since my doors are in the shop). Next I shot 1 coat of General Finishes Primer. Once the primer was cured, I shot two coats of GF Milk Paint in the color "Queenstown Gray" and sanded between coats with 220 grit paper. With the milk paint cured, I then applied one coat of GF High Performance Top Coat to add some additional durability and to make the door a little easier to clean.



## 8

### Install


I then followed the MFG guidelines to install the track and roller hardware. With the door hung, I installed the handles using painter's tape to protect the finished door and to mark the hole locations on.



9

### Watch the Video!

Make sure to check out the build video on this one! (linked in the extras tab) <https://youtu.be/XBCUHfva6G8> I had a blast producing it and I think you'll find it helpful when tackling this project!





10

**woodshopmike.com**

Make sure to check out additional info over on my blog: (also linked in the extras tab) <https://woodshopmike.com/not-your-average-barn-door/> I'd love to know what you all think so let me know! Thanks for reading!

